

1 Maintenance Procedures

System Cabling

Use Hardware Installation Guide

Markup your manuals - return the markups to Beverley Andalora in Tech Pubs (e-mail: andalora@auspex.com, or techpubs@auspex.com).

FRUs - Remove/Replace

Host

External FRUs:

- ▲ Power Supplies
- ▲ Disk Drives

Internal Access FRUs

- ▲ CD-ROM
- ▲ Memory
- ▲ Video Board
- ▲ Diff-SCSI Tape Controller
- ▲ Fans
- ▲ Chassis/Motherboard Subassy



Slidetitle

EBOX (NPFSP)

FRU Listing

Access to EBOX

Power-Off service

Standard FRU locations

EBOX FRU details

- ▲ Mylex (memory module, PCI board)
- ▲ Diff-SCSI Tape Controller
- ▲ NICs
- ▲ AFX8000
- ▲ Memory
- ▲ EM/LCD & ELP
- ▲ EM Transceivers
- ▲ Fans
- ▲ VRMs
- ▲ Logic DCC
- ▲ Motherboard/Chassis FRU



Slidetitle

HDDA

FRU Listing

FRUs Same as NS8000

New FRUs

▲ EM LON PCA

▲ EM LON network connections

Power

FRU Listing

Bulk Power Supplies

Bulk P/S configuration rules

PDU

Power Shelf

EM Power Shelf LON PCA

EM Power Shelf LON cable connections



Slidetitle