

---

# SSO, TWO Technical Documentation

July 7, 1987

This list shows all SSO, TWO user manuals, service manuals, installation notes and related publications actively supported. This list replaces all previous SSO, TWO manual lists.

We try to update and distribute this list regularly. Each new or revised item in the list is indicated by a vertical bar in the left margin. A "@" to the left of the vertical bar denotes a change in the list due to an error on our part, not a change in the document itself. The "Date(ed)" column lists the publication date(s) currently valid. The "Update" column lists any valid update needed with a manual. An "#" identifies an update which is shrink-wrapped with the manual. The current edition of the manual is shown in parenthesis to the right of the date code.

---

## NOTE

In February 1987 SSO, TWO began assembling manuals for customer shipments. They WILL NOT be assembled for internal SSO, TWO orders via an MRT. Manuals ordered internally (other HP Divisions) with an I/O will be assembled. To show which manuals are assembled for customer shipments there will be an "\*" after the binder size code. The assembly of manuals will be a "phased" program by product numbers. As manuals become assembled, We will flag them with "|" and add the "\*" after the size code.

---

## Valid Dates

Any publication date other than those shown are not valid. Only the date(s) shown for each part are valid. If you have a manual with a later date than shown on this list please notify Darrell Einfalt so the list can be corrected.

---

The "Support" column lists either the writer's initials or division currently supporting the part.  
The writers' initials are:

BA	Bill Arnold, 3114
BB	Bart Bobbitt, 2325
BN	Bob Niland
BS	Bill Szmyd, 2060
CE	Clarke Echols, 3194
DA	Dave Arns, 3882
DE	Darrell Einfalt, 2061
DP	Derald Powell, 3999
JA	John Abegg, 2005
JB	John Bowie, 3543
JME	Jaci Engel, 4159
JW	John Woods, 4085
KM	Keith Metcalf, 3111
KS	Karl Stacey, 3687
MA	Mark Archuleta, 2351
MF	Miriam Flood, 2255 (Marcom)
MM	Marc McKenzie, 3488
RA	Rich Artz, 2036
RM	Ray Monson, 3371
SB	Stu Beatty, 2067
TEM	Tricia Matsoukas
SH	Wendy Milner, 2182
FSD	Fort Collins Systems Division
BCD	Boblingen Computer Divison
CVD	Corvallis
RND	Roseville Networks Division

Writers on FSD's documentation SRM system can access this list by looking at:

/STATUS/MLIST.ASC

If you find an error in this list, please call Darrell Einfalt, telnet 1-229-2061.

---

## Key to Binder Size Codes

The following information will help you determine what kind of binding a document has and the part number of the appropriate binder when a spine insert comes with the manual.

CODE	DESCRIPTION
0	Pocket Reference
1	1/2 size looseleaf, w/7/8" spine, order 3-ring binder #9282-1081 Grey
1A	1/2 size looseleaf, w/7/8" spine, order 3-ring binder #9282-1044 Burgundy
1B	1/2 size looseleaf, w/1-1/8" spine, order 3-ring binder #9282-1082 Grey
1C	1/2 size looseleaf, w/1-11/16" spine, order 3-ring binder #9282-1083 Grey
2	8-1/2 x 11 looseleaf, w/1" spine, order 3-ring binder #9282-1077 Grey
3	8-1/2 x 11 looseleaf, w/1-5/8" spine, order 3-ring binder #9282-1078 Grey
4	8-1/2 x 11 looseleaf, w/2-3/8" spine, order 3-ring binder #9282-1079 Grey
5	8-1/2 x 11 looseleaf, w/2-7/8" spine, order 3-ring binder #9282-1080 Grey
6	5-1/2 x 8-1/2 looseleaf, order 6-ring binder, #9282-0683 (CE Handbooks)
7	Saddle Stitch
8	Perfect Bound
9	Wire-0 Bound
10	Comes with Binder(s)
11	5-1/2 X 8-1/2 Looseleaf, 3-hole, <10 pages
12	5-1/2 X 8-1/2 Looseleaf, 3-hole, <100 pages
13	5-1/2 X 8-1/2 Looseleaf, 3-hole, >100 <200 pages
14	6-1/2 X 8-1/2 Looseleaf, 3-hole, <10 pages
15	6-1/2 X 8-1/2 Looseleaf, 3-hole, <100 pages
16	6-1/2 X 8-1/2 Looseleaf, 3-hole, >100 <200 pages
17	7 X 8-1/2 Looseleaf, 3-hole, <10 pages
18	7 X 8-1/2 Looseleaf, 3-hole, <100 pages
19	7 X 8-1/2 Looseleaf, 3-hole, >100 <200 pages
20	8-1/2 X 11 Looseleaf, 3-hole, <10 pages
21	8-1/2 X 11 Looseleaf, 3-hole, <100 pages
22	8-1/2 X 11 Looseleaf, 3-hole, >100 <200 pages
23	8-1/2 X 11 Looseleaf, 3-hole, >200 <300 pages
24	8-1/2 X 11 Looseleaf, 3-hole, >300 <400 pages
25	8-1/2 X 11, 4 Vols, order 2-#9282-0988, 1-#9282-0987, 1-#9282-0989
26	8-1/2 X 11, 3 Vols, order 1-#9282-0987, 1-#9282-0989, 1-#9282-0993

\* Denotes a manual that is assembled for customer shipment.

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
A1017-90601	A1017A Graphics Interface Card Install Note	4/87		JW
5180-5235	FEO Software Envelope	--		-- FEO
5180-5236	7/86 O & R by 5959-1522 4/87 PCO-40S-2805	EOE-6-2-87		
5180-5237	7/86 O & R by 5959-1523 4/87 PCO-40S-2805	EOE-6-2-87		
5180-5238	AI CONTRIB -- Read me First	1/87		17 FSD
5180-5239	AI CONTRIB Information Sheet	1/87		17 FSD
5955-2816	HP-97S Install & Op Mnl	E0381(3)		9 CVD
-2817	HP-97S Service Manual (art in Service)	n/a		7 CVD
-2829	Spare Fuse Operating Note	E0385		20 JW
-2856	HP-97 Operating Manual (French)	E1279(2)		7 CVD
-2863	HP-97 Operating Manual (German)	E1279(2)		7 CVD
-6587	Sales and Service List	Dec 1986		7 DE
5957-0027	98567A/B Monitor Rack-mount Kit Install	9/86		17 KS
-4361	82913A Rack Mount Kit Install Note	E0683		20 JW
-4369	Static Caution Note	E0484		11 CE
-7922	E0585 O & R by 97005-90020 -90602 8/85	PCO-40S-1426	EOE-10-7-85	
-7925	E0585 O & R by 97005-90010 -90601 8/85	PCO-40S-1430	EOE-9-26-85	
-7936	Tektronics 4107/4109 Computer Display			
	Applications Brief HP 9000 Series 500	E0984		20 BS
-7937	Tektronics 4115B Computer Display			
	Applications Brief Hp 9000 Series 500	E0984		20 BS
-7938	Raster Technologies Model one/80			
	Application Brief HP 9000 Series 500	E0984		20 BS
-7939	Silicon Graphics Iris 1000			
	Applications Brief HP 9000 Series 500	E0984		20 BS
-7928	FORTTRAN/9000 Comparison Notes	E1283		7 KM
-7945	VERSATEC V-80 Application Brief S/500	E0385		21 FSD
-7948	Customer Notice	4/86		17 FSD
-7949	Updating Your HP-UX System to 5.0 Release	6/85		15 TEM
-7953	HP 9000 Series 300 Memory Config wheel			-- JB
-7954	HP 9000 Series 200 Memory Config Wheel			-- JB
-7987	5/86 Obsolete PCO-40S-2086			
-7990	S300 HP-UX 5.15 Pascal Compiler Problem	6/86		17 JA
-7997	Obsolete PCO-40S-2626	EOE-2-12-87		

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
5958-4323	HP35721 Display Rack-Mount Kit	E1084(1)		11 KS
-4324	Possible Loss of Data - Cust Caution	E1084(1)		11 KS
-4342	O & R by 5958-4398 4/86 PC0-040-1867	EOE-5-20-86		
-4343	HP 98569A Rack Mount Kit Installation Note	7/85		11 TW
-4344	9/85 O & R by 5959-0027 9/86 PC0-40S-2414	EOE-11-18-86		
-4361	7/85 Obsolete PC0-040-2745	EOE-4-24-87		
-4398	Upgrade Videoboard Installation Note	4/86		11 KS
5959-1520	HP 98550A Device Driver -- Read Me First	5/87		17 DP
-1521	HP 98550A Software Portability Note	4/87		18 DP
-1522	Contrib Read Me First	4/87		20 TEM
-1523	Contrib Data Sheet	4/87		20 TEM
-0027	98567A Monitor Rack-mount Kit Install Note	9/86		17 KS
-0051	Bundled BASIC 5.0 Customer Letter	3/87		20
-0052	Bundled BASIC 5.0/Pascal 3.2 Customer Letter	3/87		20
-1516	Bug Note (S300 HP-UX 5.2 Prog Envirn)	2/87		17 JA
9282-0683	CE Handbook Binder			DMK
-1077	1 inch O-Ring Binder, 3 Ring, 8-1/2 x 11 inch page size			
-1078	1-1/2 inch O-Ring Binder, 3 Ring, 8-1/2 x 11 inch page size			
-1079	2 inch O-Ring Binder, 3 Ring, 8-1/2 x 11 inch page size			
-1080	2-1/2 inch O-Ring Binder, 3 Ring, 8-1/2 x 11 inch page size			
-1081	1 inch D-Ring Binder, 3 Ring, 7 x 8-1/2 inch page size			
-1082	1-1/4 inch D-Ring Binder, 3 Ring, 7 x 8-1/2 inch page size			
-1083	1-1/2 inch D-Ring Binder, 3 Ring, 7 x 8-1/2 inch page size			
9320-5625	O & R by 5955-6587 8/86 PC0-040-2452	EOE-11-19-86		
00097-90001	HP-97 Owner's Handbook & Prog Guide	n/a		CVD
-90011	HP-97 Standard Pac Manual	n/a		CVD
-90013	HP-97 Standard Pac	n/a		CVD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09000-90000	HP 9000 Family Products	E0185		20 JB
-90004	replaced by -90006.			
-90006	replaced by -90007			
-90007	HP-UX Reference (3 Vols)	E0385(1)	(3 Req)1	FSD
-90008	7/85 -90650 O & R by 09000-90008	11/85	-90654 PC0-40S-1593	EOE2-13-86
-90800	8/85 Obsolete PC0 40S-1711	E0E-6-5-86		
-90008	-90654 O & R by 09000-90008	-90657 6/86	PC0-40S-2049	EOE-7-17-86
-90802	2/86 Obsolete PC0-40S-2613	E0E-3-4-87		
-90803	Update for 09000-90008	-90654 11/85	4/86	18 CE
-90008	-90657 6/86 O & R by 09000-90008	-90659 2/87	PC0-40S-2662	EOE-4-22-87
-90806	2/87 O & M into 09000-90008	-90659 2/87	PC0-40S-2662	EOE-4-22-87
-90008	HP-UX Reference for S200	(4 Vols) 2/87	-90659	1B CE
-90009	HP-UX Reference for S300/500/800	(2 Vols) 10/86	-90656	1C CE
-90805	Update to 09000-90009	-90656 10/86	12/86	19 CE
-90010	HP-UX Reference for Series 500	(2 Vols) 4/87	-90665	1C CE
-90020	6/85 -90651 O & R by 09000-90020	-90655 10/85	PC0-40S-1525	EOE-10-24-85
-90020	HP-UX Documentation Package	10/85	-90655	1 JA
-90040	O & R by 09000-90041	-90652 7/85	PC0-040-1323	EOE-8-12-85
-90041	-90652 7/85 O & R by 09000-90041	-90653 10/86	PC0-040-2460	EOE-11-17-86
-90041	Site Preparation Manual S/200/300/500	10/85	-90653	7 BB
-90060	HP 9000 System Support Log	5/86	-90660	1 JW
-90658	Power Supply Upgrade Installation Note	11/86	-90658	10 JW
-90661	Computer Information	5/86		17 JW
09020-11031	System Functional Tests	E1084(1)	U1084	7 CE
-80038	HP 9020 Service Manual Kit			RM
-90000	replaced by 09020-11031	E1084 PC0-0815	EOE-1-21-85	
-90007	O & R by 09020-90601	4/86	PC0-40S-1865	EOE-7-3-86
-90008	replaced by -90007			
-90009	replaced by -90008			
-90010	replaced by -90011.			
-90011	replaced by -90012			
-90012	O & R by 09020-90013	-90600 7/85	PC0-040-1292	EOE-9-9-85
-90013	HP 9020 Installation and Test	7/85	-90600	7 RM
-90030	replaced by -90038.			
-90035	9020 CE Handbook	E0485(1)		6 RM
-90800	7/85 Update for 09020-90035	E0485		
-90036	CS80 Exerciser Installation Note	E0783(1)		21 CE
-90037	Model 520 Service Manual	E0285(1)		4 RM
-90038	replaced by -90037			
-90039	replaced by -90035			
-90046	CS/80 Exerciser for S500 Computers	E0385(1)		1 CE
-90093	Documentation Unpacking Instructions	E1184		20 DP
-90601	HP 9020 Service Documentation Manual Assy	4/86		20 RM
-90694	7/85 O & R by 09020-90696	1/86	PC0-40S-1593	EOE-2-13-86
-90695	10/85 O & R by 09020-90696	1/86	PC0-40S-1593	EOE-2-13-86
-90696	Documentation Unpacking Instructions	1/86		17 DP
-90697	2/86 Obsoleted PC0-40S-2281	EOE-9-18-86		

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09040-80030	530/540 Service Manual Kit			RM
-90010	replaced by 09040-90011	E0185	PC0-40-15173	EOE-2-18-85
-90011	HP 9030/9040 Install and Test Manual	E0185(1)		7 RM
-90030	replaced by -90038			
-90035	HP 9030/9040 CE Handbook	E0385(1)		6 RM
-90038	HP 9030/9040 Service Manual	E0385(1)		3 RM
-90039	replaced by -90035			
-90040	replaced by 09000-90041			
09050-90000	E1284 O & R by 09050-90602 1/86	PC0-040-1689	EOE-2-6-86	
-90010	replaced by -90011			
-90011	HP 9050 Installation and Configuration	5/85	-90600	7 RM
-90035	9050 CE Handbook	5/85	-90601	6 RM
-90038	HP 9050 Hardware Support Document	E1184(1)	U0585#	3 RM
-90039	O & R by 09050-90035 -90601 5/85	PC0-040-1169	EOE-6-3-85	
-90098	Model 550 Hardware Training Info	E0285(1)		20 BB
-90602	Model 550 Unpacking Instructions	1/86		11 RM
09800-10031	O & R by 09800-90001 -90650 7/85	PC0-40S-1490	EOE-10-31-85	
-10051	HPL FFT Utility Manual	E1182(1)		
-10061	replaced by -11001.			
-10071	IBM Data Exchange Utilities Mnl	E0183(1)		2
-10081	Series 200 Terminal Emululator Manual	E0583(1)		2 FSD
-10601	BASIC Utilities Lib Mnl	E1082(1)	U0183#	2
-10611	Replaced by 98613-10030			
-10641	CSUB Preparation Manual	E0283(1)		7
-11001	E1183 Obs & Repl by 09800-90001 -90650 7/85	PC0-40S-1490	EOE-10-31-85	
-11031	Obs & Repl by 09800-90001 -90650 7/85	PC0-40S-1490	EOE-10-31-85	
-90000	E1184 Obs & Repl by 09800-90001 -90650 7/85	PC0-40S-1490	EOE-7-85	
-90001	7/85 O & R by 09800-90001 -90652 1/86	PC0-40S-1601	EOE-2-14-86	
-90001	Test Tools Manual	1/86	-90652	1 BB
-90010	E0285 O & R by 09800-90011 -90655 1/86	PC0-040-1734	EOE-2-24-86	
-90011	Accessory Development Guide	1/86	-90655	2 BB
09815-81010	Manual Kit			
-90000	Operating & Programming Manual	E0479(5)	U1182#	9
-90001	Beginner's Guide	E1178(3)		7
-90010	Quick Reference Booklet	E0779(3)		7
-90011	Program Pad	n/a		8
-90013	98137 Tape Duplication Note	E1078		7
-90015	Service Kit Install Note	n/a		
-90021	Operating & Programming Manual (Fr)	E1175		BCD
-90022	Operating & Programming Manual (Ge)	E1075		BCD
-90023	Operating & Programming Manual (Ital)	E1275		BCD
-90024	Operating & Programming Manual (Span)	1975		BCD
-90030	9815 Service Manual	E0376(2)		7 KS

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09816-90000	replaced by -90011.			
-90001	Model 216 Installation guide	E1084(1)		1 BCD
-90007	E0385 O & R by 09816-90600 PC0-040-1688	E0E-2-6-86		
-90008	replaced by -90007			
-90009	replaced by -90008			
-90010	replaced by -90011			
-90011	replaced by -90001			
-90030	9816 Service Mnl	E1183(2)		10 BCD
-90039	9816 CE Handbook Section	E1183(2)		6 BCD
-90804	Update for 09816-90039	E1183(2)	5/86	BCD
-90039	9816 CE Handbook Section		6/86	6 BCD
-90107	Model 16 Install Mnl, French	n/a		BCD
-90108	Model 16 Install Mnl, German	n/a		BCD
-90109	Model 16 Install Mnl, Ital	n/a		BCD
-90110	Getting Started w/ BASIC, French	n/a		BCD
-90111	Getting Started w/ BASIC, German	n/a		BCD
-90600	Unpacking Instructions		1/86	11 BCD
09817-87921	HP 9817 Service Manual Kit			BCD
-87922	Hardware Training Package			BCD
-90000	Model 217 Installation Guide	E0584(1)		1 BCD
-90009	Model 217 Unpacking Instructions	E0584		11 BCD
-90030	O & R by 09817-90031 -90600 10/85 PC0-040-1515	E0E-11-3-85		
-90031	HP 9817 Hardware Support Document		10/85 -90600	2 BCD
-90038	HP 9817 CE Handbook Section	E1284(1)		6 BCD
-90804	Update for 09817-90038	E1284(1)	5/86	BCD
-90038	HP 9817 CE Handbook Section		6/86	6 BCD
-90039	replaced by -90038			
-90099	HP 9817 Hardware Training Guide	E0685(1)		2 BCD
-90100	Model 217 Installation Guide, German	n/a		BCD
09825-81010	9825 Manual Kit			BCD
-87901	9825B Manual Kit			BCD
-90012	Quick Reference	E0980(2)		9 BCD
-90015	Error Booklet	E1278(5)		9 BCD
-90022	Matrix Programming Manual	E0479(3)		7 BCD
-90032	Extended Testing Package	E0679(2)		7 BCD
-90033	98221/2 Installation Note	n/a		20 BCD
-90034	Keyboard Upgrade Installation Note	E0179		20 BCD
-90037	System Test Booklet	E0581(5)		9 BCD
-90039	9825 CE Handbook	E1082(1)		6 KS
-90041	9863A Operating Note (98032 Opt. 063)	E0476(1)		7 FSD
-90042	9864A Operating Note (98032 Opt. 064)	E0379(2)		7 FSD
-90043	9866A/B Operating Note (98032 Opt. 066)	E0376(1)		7 FSD
-90044	9869A Operating Note (98032 Opt. 069)	E0376(1)		7 FSD
-90045	9871A Operating Note (98032 Opt. 071)	E0479(3)		7 FSD
-90046	9883A Operating Note (98032 Opt. 083)	E0376(1)		7 FSD
-90047	9884B Operating Note (98032 Opt. 084)	E0376(1)		7 FSD
-90048	9881A Operating Note (98032 Opt. 081)	E0177(1)		7 FSD
-90054	98035 Opt. 025 Operating Note	E0479(3)		7 FSD
-90060	Interfacing Concepts	n/a		9 BCD
-90066	9866 Cradle Install Note	n/a		
-90076	2631 Installation Note	n/a		
-90085	Oper & Prog Manual, Italian	Jan77	Nov82	BCD
-90086	Oper & Prog Manual, Spanish	Aug79	Nov82	BCD
-90094	Oper. & Prog Manual, French	Jun81	Nov82	BCD
-90096	Oper & Prog Manual, German	Jun81	Nov82	BCD



Part Number	Manual Title & Comments	Date(ed) Mfg #	Support
09825-90200	9825B Operating & Programming Reference (replaces -90000, -90020, -90021, and -90027)	E0683(3)	4 BCD
-90210	9825B I/O Control Reference (replaces -90023, -90024, -90025 and -90026)	E0585(1)	4 BCD
-90220	9885/9895 Disc Prog Mnl (replaces 09885-90000)	E0880(1)	21 BCD
-91030	9825A/B Service Manual	E0981 (2)	21 BCD
09826-10001	replaced by 09800-10601.		
-10031	BASIC Enhancements Manual	E0981 (1)	21 RA
-10251	replaced by 98821-13111.		
-87902	replaced by 98612-87902.		
-87903	HPL Manual Kit		FSD
-87904	Pascal 1.0 Manual Kit		MA
-90000	replaced by 09836-90000		
-90010	replaced by -90011.		
-90011	replaced by 98613-90011		
-90015	BASIC Graphics Techniques (incl binder)	E0483(1)	3 FSD
-90020	replaced by -90025.		
-90021	replaced by -90025.		
-90022	replaced by -90025.		
-90023	replaced by -90025.		
-90025	replaced by 98612-90025		
-90030	replaced by 09836-90030.		
-90031	Big Mac Installation Note	E0383	20 KS
-90039	9826/36/36C CE Handbook	E0783(3)	6 KS
-90040	replaced by 98614-90010.		
-90045	replaced by 98614-90020.		
-90050	replaced by -90051.		
-90051	BASIC 2.0 (with Ext 2.1) Condensed Ref	E0783(1)	9 FSD
-90055	replaced by -90056.		
-90056	replaced by 98612-90056		
-90060	replaced by 09800-10061		
-90070	Pascal 1.0 Language System User's Mnl	E0482(2)	4 MA
-90071	replaced by 98615-90050		
-90072	Pascal Programming Text (Wiley)	n/a	11
-90073	MC68000 User's Manual (Motorola)	Dec'81 or Nov'83	8
-90074	Pascal 2.0 System Internals Docu (SID)	E0383(1)	10 MA
-90075	Replaced by 98615-90030		
-90080	SRM 1.0 System Manual	In Support Life	4 DMK
-90083	replaced by -90084.		
-90084	replaced by 98619-90050 on 1/84.		
-90088	obsolete 5/83.		
-90098	replaced by 09836-90000.		
-90099	replaced by 09836-90010.		
-90121	replaced by 09836-90111		
-90122	replaced by 09836-90122		

Part Number	Manual Title & Comments	Date(ed) Mfg #	Support
09835-15021	Graphics Stat Manual	E0883(2)	
-81010	9835 Manual Kit	P	
-90000	Operating and Programming	E0481(4)	FSD
-90001	Beginner's Guide	E1179(2)	FSD
-90002	replaced by -90000.		
-90005	Owner's Manual (repl "Read Me First")	E0483(4)	FSD
-90010	replaced by -90015.		
-90015	Quick Reference (replaces -90010)	E1183(3)	FSD
-90030	replaced by -91030.		
-90040	System Exerciser	E0282(2)	FSD
-90050	Plotter ROM Programming	E0782(4)	FSD
-90060	replaced by 09845-93060.		
-90065	replaced by 09845-92065.		
-90066	Structured Programming ROM	E1179(1)	FSD
-90070	replaced by 09845-93070.		
-90080	Assembly Language Quick Reference	E0579(1)	JB
-90082	Assembly Execution ROM	E0583	JB
-90083	Assembly Development ROM	E1181(2)	JB
-90090	Workbook	E0878(1)	FSD
-90600	BASIC Interfacing Concepts	E0681(3)	FSD
-91030	9835 Service Manual	E0181(1)	FSD
09836-10001	replaced by 09800-10601.		
-10051	replaced by 09800-10051.		
-10181	replaced by 09800-10081.		
-10191	BASIC Language Translator Manual	E1183(1)	2
-10601	9836C Color Alignment Operating Note	E0783	20 JB
-10621	Model 236 Color Demo Notes	E0884(1)	20 FSD
-10681	replaced by 09800-10081.		
-87921	HP 9826/9836/9836C Service Manual Kit		KS
-90000	O & R by 09836-90001 E0185 PC0-040-1404 EOE-10-6-85		
-90001	Model 226/236 Installation Guide	E0185(1)	2 KS
-90005	replaced by 09836-90001.		
-90009	O & R by 98143-90600 E0185 PC0-040-1293 EOE-7-3-86		
-90010	replaced by -90011		
-90011	replaced by -90012		
-90012	Model 26/36 Unpacking List	E0285	11 KS
-90015	replaced by -90016		
-90016	Model 36C Packing List	E0185	11 KS
-90030	9826/36/36C Service Manual	E1283(2)	2 KS
-90060	replaced by -90061		
-90061	Model 9836U/9836CU Unpacking Instruct	E0784	11 KS
-90100	BASIC 2.0 Prog Tech Mnl, German	n/a	BCD
-90104	BASIC 2.0 Prog Tech Mnl, French	n/a	BCD
-90105	Model 26/36 HPL Oper Mnl, French	n/a	BCD
-90111	Model 226/236 Op & Prog, German	n/a	BCD
-90112	Model 226/236 Op & Prog, French	n/a	BCD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09837-87921	9837/9920 Service Manual Kit	n/a		JW
-87922	Hardware Training Package			
-90001	Model 237 Installation Guide	E1284(1)		1 JW
	-90800, 12/85 Update for 09837-90001	E1284		JW
-90010	replaced by -90011			
-90011	Model 237 Unpacking Instructions	E0784		11 JW
-90030	O. & R. by 09837-90031 -90600 7/86 PC0-040-2165	EOE-8-6-86		
	-90801, Update for 09837-90030	E0185	5/86	20 JW
-90031	HP, 9837/9920 Hardware Support Document		-90600 7/86	2 JW
-90039	HP, 9837/9920 CE Handbook	E1284(1)		6 JW
-90099	HP, 9837 Hardware Training Guide	E0585(1)		2 BB
-90100	Model 237 Installation Guide, German	n/a		BCD
09845-10181	Async Terminal Emulator Manual	E0380(1)		21 FSD
-10191	RJE Terminal Emulator Manual	E0580(1)		22 FSD
-10211	DS 45/35 User's Guide	E0281(1)		21 FSD
-10241	DSN/DL Manual	E0881(1)		3 FSD
-10261	Assembly Programming Utility Manual	E0581(1)		2
-10271	Graphics System Utilities Reference	E0481		3
-10611	Management Science Forecasting	E0385(C)		3
-10841	7908/11/12 Backup Utility Manual	E0982(2)		21
-12601	Waveform Analysis Manual	E0183(2)		3
-12621	AC Circuit Analysis	E0580(2)		3
-15111	Regression Analysis Manual	E0283(2)		3
-15131	General Statistics Manual	E0183(2)		5
-15141	Nonlinear Regression Manual	E0183(4)		2
-15171	Analysis of Variance	E0183(2)		3
09845-80032	9845 Manual Kit			
-90030	9845A Service Manual	E0178(2)		3 JW
-90039	9845B/C CE Handbook Section	E0484(2)		6 JW
-90635	98035 Programming Techniques	E0380(2)		7 SB
-90669	9869 Programming Note	n/a		
-90671	9871 Operating Note (98032 Opt 371, 471)	E0981(1)		VCD
-90683	9883 Operating Note (98032 Opt 383, 483)	E0279	U1280	FSD
-91030	9845B/C Service Manual	E0282(3)		3 JW
-91050	replaced by -91051.			
-91051	Graphics ROM	E0481(1)		22 FSD
-91055	IMAGE/45 Programming	E1180(2)		22 FSD
-91056	QUERY/45 User's Guide	E0381(2)		22 FSD
-91057	replaced by -91059.			
-91058	Customer Letter (DBM system problems)	Aug '82		20 FSD
-91059	9845/1000 Data Base Design Kit	E1181(2)		7 FSD
-91080	replaced by -91081.			
-91081	Assembly Language Quick Reference	E0481(1)		9 FSD
-91082	Assembly Execution ROM	E0681(2)		7 FSD
-91083	replaced by -91085.			
-91084	Assembly Graphics Supplement	E0381(2)		21 FSD
-91085	Assembly Development ROM (incl -91084)	E0983(1)		4 FSD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09845-91100	9845B/C BASIC Op & Prog Mnl, French	n/a	Jun82	BCD
-91101	9845B/C BASIC Op & Prog Mnl, German	n/a	Jun82	BCD
-91102	9845B/C BASIC Op & Prog Mnl, Italian	n/a	Jun82	BCD
-91103	9845B/C BASIC Op & Prog Mnl, Spanish	n/a	Jun82	BCD
-91110	9845B/C Owners Mnl, French	n/a		BCD
-91111	9845B Monochromatic Graphics Mnl, German	n/a		BCD
-91112	9845B Monochromatic Graphics Mnl, French	n/a		BCD
-91113	9845B/C Owners Mnl, Spanish	n/a		BCD
-91115	9845B Quick Ref Guide, French	n/a	5 sect	BCD
-91117	9845B/C Inst & Wartung, German	n/a		BCD
-91118	9845B Quick Ref Guide, Spanish	n/a	5 sect	BCD
-91131	9845B/C Query Users Guide, French	n/a		BCD
-91132	9845B/C Query Users Guide, German	n/a		BCD
-91137	9845B/C DBM Design Kit, French	n/a		BCD
-91138	9845B/C DBM Design Kit, German	n/a		BCD
-91141	9845B Quick Ref Guide, German	n/a	5 sect	BCD
-91143	9845C Color Graphics Mnl, German	n/a		BCD
-91147	9845C Color Graphics Mnl, French	n/a		BCD
-91148	9845C Color Graphics Mnl, Italian	n/a		BCD
-92000	replaced by -93000			
-92001	replaced by -93000			
-92005	replaced by -93005			
-92015	replaced by -93015			
-92030	9845 Model 200 Service Manual	E0381(1)		3 JW
-92045	Graphics System Users Guide (9845B Opt 270)			3
-92050	replaced by -92051			
-92051	Color Graphics	E0481(1)		23 FSD
-92055	replaced by -93055			
-92060	replaced by -93060			
-92065	replaced by -93065			
-92070	replaced by -93070			
-92090	replaced by -93090			
-90091	replaced by -92091			
-93000	BASIC Programming	E0981(3)		4 FSD
-93005	Installation, Operation and Test	E1282(4)	U1084#	21 FSD
-93015	Quick Reference	E0481(1)		9 FSD
-93050	Monochromatic Graphics	E0381(1)		22 FSD
-93055	Advanced Graphics Utilities	E0481(1)		22 FSD
-93060	I/O ROM Manual	E0481(1)		22 FSD
-93065	Advanced Programming ROM Manual	E0481		21 FSD
-93066	Structured Programming ROM	E0481(1)		21 FSD
-93070	Mass Storage ROM Manual	E0183(4)		22 FSD
-93071	replaced by 98619-90040.			
-93090	Workbook	E0481(1)		21 FSD
-93091	Graphics Workbook	E1282		21 FSD
-93096	ROM Reference Tables and Index	E1282		21 FSD
-93099	Manual Updates (updates for old mnls)	E0381		21 FSD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
09850-90020	Confuiuration Reference Manual (S800)	11/86	-90620	4 FSD
09878-90000	9878 I/O Expander Install & Service Mnl	E0876(1)		7 FSD
09888-90000	9888 Expander Installation Manual	E0183(2)		7 JW
-90009	Packing List	E1283		20 JW
-90039	9888 Expander CE Handbook	E0983(2)		6 JW
-90099	Marketing Reply Card	n/a		JW
09915-10011	Tape Dup & EPROM Software Manual	E0281(1)		7 BCD
-87902	Manual Kit			
-90000	Installation Manual	E0180(1)	U1182	7 BCD
-90010	System Development Manual	E0181(1)		BCD
-90011	Software Notes	E0482		21 BCD
-90021	Operator Interface Supplement	E0281(1)		7 BCD
-90022	Networking Supplement	E0881(1)		21 BCD
-90030	Service Manual Kit			BCD
-90031	Standoff Upgrade Kit Installation Note	E0482(1)		20 BCD
-90035	replaced by -90030			
09920-90000	replaced by 09837-90030			
-90001	Model 220 Installation Guide	E1184(1)		1 FSD
-90800	12/85 Update for 09920-90001	E1184		
-90005	replaced by -90001			
-90009	Model 20A/S Packing List	E0483		20 JW
-90010	replaced by -90011			
-90011	Model 220 Taking Inventory - Unpacking	E1084		11 JW
-90039	HP 9920 CE Handbook	E0683(1)		6 JW
-90060	replaced by -90061			
-90061	Model 9920U Packing List	E0884		20 JW
13279-90001	98279B Color Monitor Operator's Manual	Aug 1 '83		7 BB
-90002	98279B Service Manual	E0484(1)		3 BB
-90039	HP13279B CE Handbook	E0984(1)		12 BB
19509-90600	Obs & Repl by 97099-90600 7/85	PC0-040-1324	EOE-8-15-85	
35062-90101	Model 226/236 Hardware Training Guide			BB
-90121	Model 226/236/236C Hardware Train'g Guide			BB
35142-90101	Model 216 Hardware Training Guide			JS
35148-90101	Model 520 Hardware Training Guide			BB
46080-90000	46080A HP-IL Extension Module	E0684(1)		11 KS
46081-90000	replaced by -90001			
-90001	HP 46081A HP-HIL Speaker Module Install	E1085(1)		11 KS
46082-90000	HP 46082A HP-HIL Extender Module	E0385(1)		11 KS
46083-90000	replaced by -90001			
-90001	HP 46083A Rotary Control Knob Module	E0185(1)		11 KS

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
46084-90600	46084A and 46084-69901 ID Module Install	5/85		11 KS
46085-90600	HP 46085A Control Dial Box Install Note	5/85		11 KS
46086-90000	0 & R by 46086-90600 8/85 PC0-040-1254	E0E-8-15-85		
-90600	HP 46086A Button Box Installation Note	8/85		11 KS
46087-90000	0 & R by 46087-90600 6/85 PC0-040-1665	E0E-7-3-86		
-90030	HP 46087A & 46088A Serv & Training	E0485(1)		7 RM
-90800	Update to 46087-90030 E0485	10/86		20 RM
-90600	HP 46087A A-Size Digitizer Installation	6/85		12 KS
46088-90000	0 & R by 46088-90600 6/85 PC0-040-1665	E0E-7-3-86		
-90600	HP 46088A B-Size Digitizer Installation	6/85		12 KS
46094-90600	HP 46094A HP-HIL Quadrature Port	10/85		11 KS
46095-90600	HP 46095A Installation Note	10/85		11 KS
79200-90000	Obsolete			
-90001	Obsolete			
-90002	Obsolete			
79201-90000	Obsolete			
-90001	Obsolete			
-90009	Obsolete			
79204-90000	Obsolete			
79206-90000	Obsolete			
79207-90000	Obsolete			
79725-90600	HP SQL -- Read Me First	6/87		20 TM
79727-90600	HP Visor/300 -- Read Me First	6/87		17 TM
-90601	HP Visor/300 Addendum	6/87		17 TM
79232-90000	-90600 10/86 0 & R by 79232-90000 -90604	2/87 PC0-40S-2703	E0E-5-8-87	
-90000	HP PROLOG	2/87 -90604	1B* WM	
-90060	HP PROLOG Pocket Reference	12/86 -90660	9 WM	
-90610	11/86 0 & M into 79232-90000 -90604	2/87 PC0-40S-2703	E0E-5-8-87	
79300-10001	Muse Unpacking Instructions	E1184		20 JA
-10010	Muse Documentation Kit	E1183(1) U0984#		JA
		U1183		
-90003	Graphics/1000-II Device Handlers Manual	E0183(4) U0783		24 DP
		U1183		
82320-90001	Programming with the X Window System	1/87 -90601	1B	CVD
-90002	Getting Started with the X Window System	1/87 -90602	1	CVD
-90603	Windows -- Read Me First	1/87	17	JE
92842-90002	Graphics/1000-II 92842 Adv Graphics Pkg	E0183(3)		22 DP
97005-90000	-90600 7/85 0 & R by 97005-90000 -90603	11/85 PC0-40S-1598	E0E-3	? *
-90800	Obsolete PC0-40S-1711	E0E-6-5-86		
-90000	-90603 11/85 0 & R by 97005-90000 -90612	2/87 PC0-40S-2702	E0E-5-22-87	
-90000	Peripheral Installation Guide	2/87 -90612	1B* JB	
-90010	-90601 8/85 0 & R by 97005-90010 -90604	12/85 PC0-40S-1641	E0E-1-22-86	7
-90010	-90604 12/85 0 & R by 97005-90010 -90606	4/86 PC0-40S-1842	E0E-5-19-86	* =
-90010	-90606 4/86 0 & R by 97005-90010 -90608	8/86 PC0-40S-2243	E0E-9-4-86	
-90010	-90608 8/86 0 & R by 97005-90010 -90610	11/86 PC0-40S-2441	E0E-12-16-86	
-90010	-90610 11/86 0 & R by 97005-90010 -90613	4/87 PC0-40S-2812	E0E-6-1-87	
-90010	HP-UX Software Status Bulletin S200/300	4/87 -90613	8 FSD	
-90020	-90602 8/85 0 & R by 97005-90020 -90605	12/85 PC0-40S-1641		
-90801	Obsolete PC0-40S-1711	E0E-6-5-86		
-90020	-90605 12/85 0 & R by 97005-90020 -90607	4/86 PC0-40S-1842	E0E-5-19-86	
-90020	-90607 4/86 0 & R by 97005-90020 -90609	8/86 PC0-40S-2243	E0E-9-4-86	
-90020	-90609 8/86 0 & R by 97005-90020 -90611	11/86 PC0-40S-2441	E0E-12-16-86	
-90020	-90611 11/86 0 & R by 97005-90020 -90614	4/87 PC0-40S-2799	E0E-6-10-87	
-90020	HP-UX Software Release/Status Bulletin S/500	4/87 -90614	8 FSD	

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
97009-90000	Starbase Driver Development Guide	3/86	-90600	1B DP
	-90800 Update to 97009-90000	3/86	-90600	18 DP
97033-87901	HP-UX 5.1 Series 200/300 Manual Kit			10
	-87902 HP-UX 5.2 Series 300 Manual Kit			10
	-90046 -90611 11/85 O & R by 97033-90046	7/86	PCO-40S-2286	EOE-9-22-86
	-90801 5/85 O & M into 97033-90046	7/86	PCO-40S-2320	EOE-10-1-86
	-90046 HP-UX Portability Guide	7/86	-90612	1B DK
	-90049 -90606 12/85 O & R by 97033-90049	7/86	PCO-40S-2119	EOE-9-5-86
	-90800 4/86 Obsolete		PCO-40S-2613	EOE-3-4-87
	-90802 7/86 Obsolete		PCO-40S-2613	EOE-3-4-87
	-90049 HP-UX System Administrator Manual	7/86	-90613	1B JME
	-90600 8/85 O & R by 97033-90696	1/86	PCO-40S-1593	EOE-2-13-86
	-90601 Series 300 READ ME FIRST	8/85		14 JA
	-90602 replaced by 98615-90051			
	-90610 S300 Customer Letter	Oct 85		20 CW
	-90602 O & R by 98615-90051	8/85	PCO-40S-1428	EOE-10-15-85
	-90603 O & R by 97081-90040	8/85	PCO-40S-1429	EOE-9-28-85
	-90608 O & R by 98597-90080	6/86	PCO-40S-2069	EOE-7-14-86
	-90694 7/85 O & R by 97033-90696	1/86	PCO-40S-1593	EOE-2-13-86
	-90695 11/85 O & R by 97033-90696	1/86	PCO-40S-1593	EOE-2-13-86
	-90696 Documentation Unpacking Instructions	1/86		17 DP
	-90698 4/86 Obsolete		PCO-40S-2613	EOE-3-4-87
97040-90000	replaced by -90002.			
	-90001 replaced by -90002.			
	-90002 Series 500 Finstrate Installation Note	E0384(1)		11 RM
97041-90001	replaced by 97040-90002.			
97042-90001	replaced by 97040-90002.			
97043-90000	replaced by 97040-90002.			
	-90001 replaced by 97040-90002.			
	-90002 Floating Point CPU Installation	E1184(1)		11 RM
97044-90000	replaced by 97040-90002.			
	-90001 replaced by 97040-90002.			
97046-90001	1 Mbyte RAM Board Installation Note	E0984(1)		11 RM
97047-90001	512k RAM Board Installation Note	E0584(1)		11 RM
97049-90001	HP 9050 Second IOP Installation Note	E0285(1)		11 RM
97050-80020	BASIC Manual Kit			FSD
	-90000 Model 520 BASIC Programming Techniques	E0185(3)		4 FSD
	-90005 Model 520 BASIC Language Reference	E1184(2)		4 FSD
	-90015 Model 520 BASIC Condensed Reference	E0884(1)		9 FSD
	-90045 BASIC Software Configuration Manual	E0284(2)		21 FSD
	-90090 Where Do I Start With BASIC?	E0285		20 FSD
	-90100 replaced by -90101			
	-90101 replaced by -90102			
	-90102 BASIC Software/Manual Catalog	E1084(1)		7 FSD
97052-90000	Model 520 BASIC Graphics Prog Techniques	E1283(3)		4 FSD
97053-90000	IMAGE/Data Base Programming Techniques	E1183(2)		3 FSD
	-90001 Query User's Guide	E1282(1)	U0283#	22 FSD
	-90002 Data Base Design Kit	E1282(1)		7 FSD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
97055-90000	HP Ada User's Guide	9/86	-90600	8 JA
-90010	HP Ada Language Reference Manual Appendix F	9/86	-90601	21 JA
-90020	-90606 9/86 O & R by 97005-90020 -90611 11/86	PCO-40S-2441		EOE-12-16-86
-90609	HP Reference Pages for HP Ada	9/86		21 JA
-90603	HP Ada Customer Letter & Bug List	9/86		21 JA
-90604	HP Ada Read Me First	9/86		20 JA
-90605	HP Ada Return Upgrade Card	9/86		-- JA
-90610	Reference Manual for the Ada Programming Language			8
-90611	Programming in Ada			8
97057-90600	READ ME FIRST	1/86		17 MS
97058-90000	SRM Supplement for 9000	In Support Life		21 DMK
97060-90001	replaced by -90002.			
-90002	97060 Graphics Processor Install Note	E0584(1)		20 RM
-90030	97060 Graphics Processor Service Manual	E0884(1)		7 RM
-90039	97060 CE Handbook	E0184(1)		6 RM
97061-90000	In Support Life			20 DMK
97062-90001	replaced by -90020.			
-90020	97062A Color Card Install & Serv Mnl	E1283(1)		7 RM
97064-90000	97064A CAD Table Installation & Service	E0484		7 BB
97068-90000	HP-UX Technical BASIC Programming Guide	5/85	-90600	1B MA
-90001	HP-UX Technical BASIC Programming Guide(2Vol)	2/86	-90606	1B MA
-90010	HP-UX Technical BASIC Getting Started Guide	2/86	-90601	1B TM
-90020	HP-UX Technical Implementation Specifics	3/86	-90602	18 MA
-90030	HP-UX Technical BASIC I/O Programming Guide	2/86	-90603	1B KM
-90050	HP-UX Technical BASIC Reference Manual (2Vol)	2/86	-90604	1B TM
-90070	HP-UX Technical BASIC Quick Reference Guide	3/86	-90605	9 TM
-90607	4/86 O & R by 97068-90608 4/86	PCO-40S-2590		EOE-3-4-87
-90608	READ ME FIRST	4/86		17 MA
-90695	O & R by 97068-90696 4/86	PCO-40S-1890		EOE-5-23-86
-90696	Document Unpacking Instructions	4/86		17 MA
97069-90000	-90600 12/85 O & R by 97069-90000 -90604 10/86	PCO-40S-2438		EOE-12-22-86
-90800	Update to 97069-90000 -90600 12/85	8/86		18 MS
-90802	Update to 97069-90000 -90600 12/85	10/86		18 MS
-90000	HP Windows/9000 User's Manual	10/86	-90604	1B* MS
-90001	HP Windows/9000 Documentation	11/86	-90606	1C MS
-90804	Update to 97069-90001 -90606 11/86	6/87		17 DA
-90010	HP Windows/9000 Programmer's Manual	9/85	-90601	1B* MS
-90020	-90602 11/85 O & R by 97069-90020 -90605 10/86	PCO-40S-2439		EOE-12-23-86
-90801	8/86 O & R by 97069-90803 1/87	PCO-40S-2589		EOE-2-18-87
-90803	Update to 97069-90020 -90602 11/85	1/87		18 MS
-90020	HP Windows/9000 Reference	10/86	-90605	1B MS
-90021	HP Windows/9000 Reference	11/86	-90607	1* MS
-90695	O & R by 97069-90696 3/86	PCO-40S-1890		EOE-6-3-86
-90696	Documentation Unpacking	3/86		17 DP
-90700	Spine only for CVD PN 82865-90002	12/85		1B MS
97070-87901	Series 500 HP-UX Documentation Kit			JA
<del>87902</del>	<del>Series 500 5.0 HP-UX Documentation Kit</del>			JA
-87902	Series 500 5.0 HP-UX Documentation Kit			JA
-90090	E0784 Obsoleted PCO-40S-2429			EOE-12-9-86
-90093	Documentation Unpacking Instructions	E1184		20 DP
-90694	7/85 O & R by 97070-90696 1/86	PCO-40S-1593		EOE-2-13-86
-90695	10/85 O & R by 97070-90696 1/86	PCO-40S-1593		EOE-2-13-86
-90696	Documentation Unpacking Instructions	1/86		17 DP
-90697	Documentation Unpacking Instructions	2/86		17 DP



Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
97071-90093	Documentation Unpacking Instructions	E1184		20 DP
-90600	Repl 97071C Fortran Compiler Software Update	10/85		20 JA
-90694	0 & R by 97071-90695 10/85 PC0-40S-2009	EOE-6-3-86		
-90695	10/85 Obsoleted PC0-40S-2281	EOE-9-18-86		
97072-90093	Documentation Unpacking Instructions	E1184		20 DP
-90694	0 & R by 97072-90695 10/85 PC0-40S-2009	EOE-6-3-86		
-90695	10/85 Obsoleted PC0-40S-2281	EOE-9-18-86		
97073-90005	replaced by 97073-90006			
-90006	IMAGE Reference Supplement for HP-UX	E0984		15 MM
97076-90000	replaced by -90001.			
-90001	HP-UX Asynch Communications Guide	E1184(1)		3 JA
97080-90090	replaced by -90092.			
-90092	replaced by -90093			
-90093	Series 500 HP-UX Unpacking Instructions	E1184		20 DP
97081-90001	Fortran/9000 Reference (Series 500 only)	E1284		3 KM
-90010	-90600 6/85 0 & R by 97081-90010 -90606 1/87	PC0-40S-2547	EOE-2-10-87	
-90800	7/86 0 & M into 97081-90010 -90606 1/87	PC0-40S-2547	EOE-2-10-87	
-90010	Fortran 77 Reference Supplement	1/87 -90606	21	TEM
-90020	Fortran 77 Programmers Guide Supplement	6/85 -90601	21	TEM
-90040	8/85 -90603 0 & R by 97081-90040 -90604 11/85	PC0-40S-1668	EOE-2-*	
-90040	Fortran/9000 Reference Manual	11/85 -90604	1B	DA
-90041	Fortran/9000 Reference Manual	3/86 -90605	1B*	DA
-90700	Envelope with spines for 97081-90010/-90020	5/86		JA
97082-90001	Pascal/9000 Language Reference (S/500)	E0585(1)		3 KM
-90003	Pascal/9000 Language Reference (S/500)	7/86 -90600	1B	JA
97084-87901	AGP/DGL Manual Kit			10
-90000	Device-Independent Graphics Lib Prog Ref	E1184(1)		2 DP
-90001	0 & R by 97084-90003 -90600 10/85	PC0-40S-1495	EOE-12-6-85	
-90800	Obsolete PC0-40S-1711	EOE-6-5-86		
-90002	DGL/AGP Demo Instructions (Ser 500 only)	E0683		20 DP
-90003	10/85 -90600 0 & R by 97084-90003 -90606 11/86	PC0-40S-2435	EOE-12-15-87	
-90803	3/86 0 & M into 97084-90003 -90606 11/86	PC0-40S-2435	EOE-12-15-87	
-90003	DGL Supplement for HP-UX Systems	11/86 -90606	21	DP
-90010	DGL Programmer's Manual	9/86 -90602	1B	DP
-90025	replaced by -90026			
-90026	0 & R by 97084-90027 -90601 10/85	PC0-40S-1558	EOE-12-11-85	
-90801	Obsolete PC0-40S-1711	EOE-6-5-86		
-90027	DGL/AGP Device Handler's Manual	10/85 -90601	5	DP
-90802	Update for 97084-90027 -90601 10/85			
-90804	Update for 97084-90027 -90601 10/85	12/86	21	DP
97085-90000	0 & R by 97085-90010 -90601 11/85	PC0-40S-1587	EOE-12-6-85	
-90800	Obsolete PC0-40S-1711	EOE-6-5-86		
-90001	0 & R by 97085/90002 E0185	PC0-40S-0850	EOE-3-8-85	
-90002	Adv Graphics Pkg Supplement - HP-UX Sys	E0185(1)		21 DP
-90801	Obsolete PC0-40S-1711	EOE-6-5-86		
-90003	AGP Supplement for HP-UX Systems	6/85 -90600	21	DP
-90005	AGP Reference Manual	E0683		2 DP
-90802	Update to 97085-90005 E0683	7/86	20	DP
-90006	AGP Reference Manual	9/86 -90602	1B	DP
-90010	Advanced Graphics Package Users Guide	11/85 -90601	2	DP
-90011	Advanced Graphics Package Users Guide	9/86 -90603	1B	DP
-90700	Spine Installation Instructions	3/86	--	DP

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
97086-90002	FORTRAN Applications Migration Package			DSD
97089-87902	0 & R by 97089-87904 PCO-40S-1840	EOE-4-7-86		
-87904	HP-UX Concepts and Tutorials Manual Kit			10
-90000	0 & R by 98597-90610 PCO-40S-2053	EOE-8-5-86		
-90001	replaced by 98680-90025.			
-90002	replaced by -90003.			
-90003	replaced by -90004			
-90004	HP-UX Concepts and Tutorials	E0784(1)		25 DP
-90020	HP-UX Concepts and Tutorials Vol 1	4/85 -90600		1 DP
-90021	-90613 12/85 0 & R by 97089-90022 -90622	8/86 PCO-40S-2359		EOE-10-27-86
-90022	Text Editors and Processors HP-UX C & T	8/86 -90622		1B DK
-90030	HP-UX Concepts and Tutorials Vol 2	4/85 -90601		1 DP
-90031	-90614 12/85 0 & R by 97089-90032 -90632	8/86 PCO-40S-2309		EOE-12-15-86
-90032	Text Formatters HP-UX C & T	8/86 -90632		1B DK
-90039	Series 500 HP-UX CE Handbook	4/85 -90607		6 CE
-90040	HP-UX Concepts and Tutorials Vol 3	4/85 -90602		1 DP
-90041	-90615 1/86 0 & R by 97089-90042 -90642	8/86 PCO-40S-2309		EOE-12-15-86
	-90806 7/86 0 & M into 97089-90042 -90642	8/86 PCO-40S-2613		EOE-12-15-86
-90042	Programming Environment HP-UX C & T	8/86 -90642		1B DK
-90045	replaced by -90047.			
-90046	obsoleted			
-90047	replaced by -90048			
-90048	Series 500 System Administrator Manual	E0784(1)		2 MM
-90049	HP-UX System Administration Manual	4/85 -90608		1 DP
-90050	HP-UX Concepts and Tutorials Vol 4	4/85 -90603		1 DP
-90051	-90616 12/85 0 & R by 97089-90052 -90652	9/86 PCO-40S-2309		EOE-12-15-86
-90052	Device I/O and User Interfacing HP-UX C & T	9/86 -90652		1B JE
	-90809 Update to 97089-90052 -90652	9/86		19 CE
-90059	HP-UX System Administrator Manual S500	7/86 -90623		1B JME
-90059	HP-UX System Administrator Manual S500	4/87 -90629		1B JME
-90060	HP-UX Concepts and Tutorials Vol 5	4/85 -90604		1 DP
-90061	-90617 12/85 0 & R by 97089-90062 -90662	9/86 PCO-40S-2488		EOE-12-9-86
	-90807 7/86 0 & R by 97089-90627 11/86	PCO-40S-2613		EOE-3-4-87
-90062	-90662 9/86 0 & R by 97089-90062 -90663	4/87 PCO-40S-2802		EOE-6-2-87
	-90810 12/86 0 & M into 97089-90062 -90663	4/87 PCO-40S-2802		EOE-6-2-87
-90062	Shells and Misc Tools HP-UX C & T	4/87 -90663		1B CE
-90070	4/85 -90605 Repl by 97089-90070 -90612	9/85 PCO-40S-1458		EOE-10-22-85
-90070	-90612 9/85 0 & R by 98592-90071 -90608	6/86 PCO-40S-2120		EOE-9-3/86
-90081	-90619 11/85 0 & R by 97089-90081 -90626	11/86 PCO-40S-2436		EOE-12-23-86
	-90805 0 & M into 97089-90081 -90626	11/86 PCO-40S-2436		EOE-12-23-86
-90081	Facilities for S 200/300/500 HP-UX C & T	11/86 -90626		1B JME
-90085	Using HP-HIL Devices with HP-UX	8/85 -90610		1 KM
-90093	Documentation Unpacking Instructions	E1184		20 DP
-90620	5.05 Software Update	1/86		17 TEM
-90621	5/86 Obsoleted PCO-40S-2281	EOE-9-18-86		
-90625	HP-UX 5.1 READ ME FIRST	8/86		17 JA
-90627	Shells and Mics Tools HP-UX C & T	11/86		18 JE
-90628	HP-UX 5.2 -- Read Me First	6/87		17 TEM
-90694	7/85 0 & R by 97089-90696 1/86	PCO-40S-1593		EOE-2-13-86
-90695	10/85 0 & R by 97089-90696 1/86	PCO-40S-1593		EOE-2-13-86
-90696	Documentation Unpacking Instructions	1/86		17 DP
-90697	2/86 Obsoleted PCO-40S-2281	EOE-9-18-86		
-90700	Envelope with spines for Concepts & Tutorials	11/86		CE
97090-90001	97090A Thermal Printer Upgrade Note	Jan '83		20 RM
97093-90001	E0583 0 & R by 97093-90600 4/86	PCO-040-2097		EOE-7-21-86
-90600	97093A Field Upgrade Kit Installation	4/86		17 BB

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
97098-90020	97098 I/O Expander Install and Service	E0483(2)		7 RM
97099-90600	HP 97099A EIA Rack Adapter Installation Note	7/85		11 JW
98028-90000	replaced by 98619-90020			
-90001	replaced by 98619-90000			
-90039	Series 200 Discs CE Handbook	E0183(1)		6 KS
98029	covered in 98619-90020.			
98032-90000	16 Bit Installation & Service Manual	E0780(2)		7 FSD
98033-90000	BCD Installation & Service Manual	E0681(4)		7 FSD
98034-90000	replaced by -90001.			
-90001	HP-IB Install & Service Mnl	E0281(1)		7 FSD
98035-90000	Real-time Clock Install & Service Manual	E0281(3)		9 SB
-90010	Battery Replacement Note	E1280		20 SB
98036-90000	replaced by -90001.			
-90001	Serial Install & Service Mnl	E0181(2)		7 FSD
98040-90000	Incremental Plotter Interface Manual	E0980(1)		7 FSD
		E0981(2)		
98041-90000	98041A Disc Interface Installation	E0578(1)		7 FSD
-90030	Disc Interface Install & Service Manual	E0578(1)		9 FSD
		E0982(2)		
98046-90000	replaced by -90005.			
-90005	Datacomm Basics	E0581(1)		7 FSD
-90010	Async Programming Manual	E0380(1)		FSD
-90020	RJE Syn. Programming Manual	E0580(1)		4 FSD
-90030	98046B Installation & Service Manual	E1280(2)		7 FSD
98053-90000	Versatec C2500 Formatter	2/87	-90600	18 DP
-90800	Update to 98053-90000 -90600	2/87		17 DP
98125-90000	98125 Field Installation Kit Note			20 DMK
98131-90000	9871 Printer Operating Manual			7 VCD
-90010	Quick Reference			0 VCD
98132-90000	9862 Plotter Operating Manual	E0676(2)		7 FSD
-90010	Quick Reference	E1275(1)		0 FSD
98133-90000	BCD Interface Operating Manual	E0579(4)		7 FSD
-90010	Quick Reference	E0776(1)		0 FSD
98134-90000	E0579 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90010	E1275 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90011	E1275 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90012	E1275 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90013	E1275 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90014	E1277 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
-90015	E1275 in Support Life FSD til 1-1-93	PC0-040-2142	EOE-8-29-86	
98135-90000	E0579 in Support Life FSD til 1-1-93	PC0-040-2143	EOE-8-29-86	
-90010	E0977 in Support Life FSD til 1-1-93	PC0-040-2143	EOE-8-29-86	
98136-90000	Serial Interface Operating Manual	E0579(2)		7 FSD
-90010	Quick Reference	E1276(1)		0 FSD
98137-90000	Tape Duplication Operating Note	n/a		
98143-90000	replaced by -90002			
-90001	98143P Serial Number Upgrade Kit	E0185(1)		6 KS
-90002	98143U MMU Card Installation Note	E0884(1)		11 KS
-90600	HP 98143A CPU Upgrade Kit Installation	7/85		11 KS
98154-90000	EPROM Installation Note	E0281		20 BCD
98155-90000	Keyboard Operating Note	E0481		21 BCD
98183-90000	HP SPICE User's Guide	E0883		2 EPD
-90005	HP SPICE Reference	E0883		23 EPD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98201-90000	98201A Keypad Interface Install Note	E0383		20 DP
98203-90000	replaced by -90001.			
-90001	98203A/B Keybd Installation Note	E0185		11 CE
-90600	98203C HP-HIL Keyboard Installation Note	6/86		17 KS
-90601	98203C Keyboard Processor Install Note	7/86		18 KS
-90602	BASIC 4.03 Foreign Keyboard Note	7/86		17 MA
98204-90000	E0884 O & R by 98204-90600 9/85 PC0-040-1425	EOE-10-21-85		
-90001	98204B Video Interface Install Note	E0584		11 JW
-90600	98204A Video Interface Install Note	9/85		11 RM
98206-90000	Series 200 Mainframe Tests CE Handbook	E0184(1)		6 CE
98242-90600	5/85 O & R by 98242-90601 12/86 PC0-040-2516	EOE-1-27-87		
-90601	98242A/B I/O Backplane Kit Install Note	12/86		17 KS
98243-90600	HP 98243A Upgrade Processor Board Kit	5/85		11 KS
-90601	HP 98243A Upgrade Processor Installation	8/86		17 KS
98251-90000	98251F Upgrade Installation Note	E0382		20 BCD
98252-90000	98252F Upgrade Installation Note	E0580		20 BCD
98253-90000	98253A EPROM Installation Note	E0483(1)		20 MA
98255-90000	98255A EPROM Card Installation Manual	E0483(1)		7 MA
98256-90000	replaced by 98257-90000.			
98257-90000	O & R by 98257-90600 PC0-040-1888	EOE-4-29-86		
-90600	Transferred to Div 56 PC0-040-1448	EOE-11-1-86		
98258-90601	98258A/B/C RAM Board Installation Note	2/87		21 JB
98259-90000	98259A Bubble Memory Installation Note	E0683		20 RA
98261-90001	ROM HPL Upgrade Note	E1182		20 FSD
-90002	ROM BASIC Upgrade Note	E1182		20
-90003	RAM HPL Upgrade Note	E1182		20 FSD
-90004	RAM BASIC Upgrade Note	E1182		20
98262-90601	Dics Drive Interface Card Install Note	12/86		17 KS
98270-90000	O & R by 98270-90001 -09600 11/85 PC0-040-1574	EOE-1-10-86		
-90800	O & M into 98270-90001 11/85 PC0-040-1574	EOE-1-10-86		
-90001	HP 98270F Powerfail Option Installation	11/85 -90600	7	JW
-90009	98270F Packing List	E0582		20 JW
98286-90039	S300 310/320 DOS Coprocessor Service Hdbook	10/86 -90639	12	KS
-90600	DOS Coprocessor Card Customer Note	6/86		17 KS
98287-90600	98287A/98700H S/300 Interface Installation	7/85		11 JW
98288-90600	7/85 O & R by 98288-90601 10/86 PC0-040-2451	EOE-11-5-86		
-90601	98288A Display Station Buffer Install Note	10/86		17 JW
98322-90000	98322F Memory Installation Note	E0881		20 JW
98401-90000	98401/98402 Upgrade Kit Install Note	E0483		21 JW
98403-90000	98403A Bit-Slice Processor Upgrade Note	E0381		21 JW
98404-90000	98404A Display Upgrade Install Note	E0381		20 JW
98407-90000	1/2 Mbyte Board Installation Note	E0182		20 JW
98515-90000	-90600 12/85 O & R by 98515-90000 -90601 5/86 PC0-40S-2187	EOE-8-26-86		
-90800	4/86 O & M into 98515-90000 -90601 5/86 PC0-40S-2613	EOE-3-4-87		
-90801	5/86 O & M into 98515-90000 -90601 5/86 PC0-40S-2613	EOE-3-4-87		
-90000	Application Execution Environment User's	5/86 -90601	1B	JME
-90001	AXE User's Guide	12/86 -90602	1B*	DK
-90010	AXE Installation Manual	12/86 -90605	7	JE
-90604	READ ME FIRST (AXE)	2/86		17 JA
-90606	AXE Operating System -- Read Me First	1/87		17 JE
-90607	AXE Update System -- Read Me First	12/86		17 JE
-90608	Parity Error Note	2/87		17 JB
-90610	HP-UX 5.3 Defect Fix Release	3/87		17 JE
-90612	Series 300 HP-UX 5.3 Customer Note	6/87		17 RA
-90695	O & R by 98515-90696 5/86 PC0-40S-2028	EOE-6-23-86		
-90696	5/86 Obsolete PC0-40S-2604	EOE-2-12-87		

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98517-90695	0 & R by 98517-90696	5/86	PCO-40S-2028	EOE-6-23-86
-90696	Documentation Unpacking	5/86		17 DP
98518-90604	Attention FORTRAN Users	3/86		17 JA
-90695	0 & R by 98518-90696	5/86	PCO-40S-2028	EOE-6-23-86
-90696	5/86 Obsolete PCO-40S-2626	EOE-2-12-87		
98519-90695	2/86 Obsolete PCO-40S-2627	EOE-2-12-87		
98520-90695	Documentation Unpacking Instructions	2/86		17 DP
98531-90001	DOS Coprocessor Installation Reference	10/86	-90601	1* JB
-90001	DOS Coprocessor Software Installation Guide	5/87	-90609	7 BA
-90002	Using the DOS Coprocessor	10/86	-90602	1* JB
-90002	Using the DOS Coprocessor	5/87	-90610	1B* JB
-90003	MS-DOS User's Reference	10/86	-90603	1* JB
-90803	Update to 98531-90003	-90603 10/86	5/87	18 JB
-90004	MS-DOS Quick Reference	11/86	-90604	7 JB
-90004	MS-DOS Quick Reference	5/87	-90614	7 JB
-90605	Read Me First	10/86		18 JB
-90600	9/86 0 & R by 98531-90606	11/86	PCO-40S-2440	EOE-11-20-86
-90606	11/86 0 & R by 98531-90607	3/87	PCO-40S-2735	EOE-4-2-87
-90607	98531A Installation Picute Guide	3/87		20 KS
-90608	DOS Coprocessor Update -- Read Me First	6/87		17 JB
98546-90600	5/85 0 & R by 98546-90601	4/86	PCO-040-1942	EOE-5-20-86
-90601	HP 98546A Display Compatibility Interface	4/86		11 KS
98547-90600	Hi-Res Video Output Board Installation Note	12/85		11 JW
-90601	98545A/98547A Hardware Notice	4/86		17 MA
98548-90600	98548A Hi Res Color Video Bd Install Note	4/87		17 JW
98549-90000	98549A Graphics Interface Familiarization Gui	5/87	-90601	21 JW
-90600	98549A Hi Res Color Video Bd Install Note	4/87		17 JW
98550-90000	98550A Graphics Interface Familiarization Gui	5/87	-90602	21 JW
-90600	98550A High Resolution Color Video Bd Install	3/87		17 JW

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98560-90601	5/85 Repl by 98560-90605	10/85	PC0-040-1496	EOE-11-11-85
-90602	5/85 Repl by 98560-90606	10/85	PC0-040-1496	EOE-11-11-85
-90603	5/85 Repl by 98560-90607	10/85	PC0-040-1496	EOE-11-11-85
-90604	5/85 Repl by 98560-90608	10/85	PC0-040-1496	EOE-11-11-85
-90605	10/85 0 & R by 98560-90609	4/86	PC0-040-2052	EOE-8-11-86
-90606	10/85 0 & R by 98560-90610	4/86	PC0-040-2052	EOE-8-11-86
-90607	10/85 0 & R by 98560-90612	4/86	PC0-040-2052	EOE-8-11-86
-90608	10/85 0 & R by 98560-90612	4/86	PC0-040-2052	EOE-8-11-86
-90609	Model 310 Installation (LoResB/W)	4/86		20 KS
-90610	Model 310 Installation (LoResColor)	4/86		20 KS
-90611	4/86 0 & R by 98560-90615	8/86	PC0-040-2340	EOE-10-27-86
-90612	Model 320 Installation (HiResColor)	4/86		20 KS
-90613	4/86 0 & R by 98560-90616	8/86	PC0-040-2340	EOE-10-27-86
-90614	4/86 0 & R by 98560-90617	8/86	PC0-040-2340	EOE-10-27-86
-90615	Model 320 Installation	8/86		20 KS
-90616	Model 310 Installation	8/86		21 KS
-90617	8/86 0 & R by 98560-90625	1/87	PC0-404-2595	EOE-3-2-87
-90618	98582M Installation Picture Guide	12/86		20 KS
-90619	98583L Installation Picture Guide	12/86		20 KS
-90620	12/86 0 & R by 98560-90626	3/87	PC0-040-2690	EOE-5-1-87
-90621	12/86 0 & R by 98560-90627	3/87	PC0-040-2690	EOE-5-1-87
-90622	98562A Installation Picture Guide	12/86		21 KS
-90623	12/86 0 & R by 98560-90628	3/87	PC0-040-2690	EOE-5-1-87
-90624	Model 318 Picture Installation Guide	4/87		20 KS
-90625	Model 320 Installation Card	1/87		21 KS
-90626	S300 M350 98582C,98584B Picture Install Guide	3/87		20 KS
-90627	S300 M350 98583C,98585B Picture Install Guide	3/87		20 KS
-90628	S300 M350 98562B,98586B,98587B Picture Install	3/87		21 KS
-90630	S300 98580M Picture Installation Guide	3/87		20 KS
-90631	S300 98581M Picture Installation Guide	3/87		20 KS

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98561-87922	Series 300 Training Kit	Available from CPC only		
-90000	5/85 -90600 0 & R by 98561-90000	-90605 5/86	PC0 040-1941	EOE-6-9-86
-90000	5/86 -90605 0 & R by 98561-90000	-90612 12/86	PC0-040-2269	EOE-1-28-87
-90000	Models 310/320 Installation Reference	12/86 -90612	1	KS
-90020	Configuration Reference Manual	8/85 -90604	4*	BN
-90030	S/300 & 98568A Service Information Manual	6/85 -90601	4	BB
-90800	8/85 Update for 98561-90030	-90601 6/85		
-90030	S/300 & 98568A Service Information Manual	1/86 -90607	4	BB
-90801	Update for 98561-90030	-90607 1/85	5/86	20 KS
-90039	0 & R by 98561-90039	-90608 3/86	PC0-040-1872	EOE-4-28-86
-90039	3/86 -90608 0 & R by 98561-90039	-90613 1/87	PC0-040-2594	EOE-2-20-87
-90802	0 & M into 98561-90039	-90613 1/87	PC0-404-2594	EOE-2-20-87
-90039	98561A/B Service Handbook	1/87 -90613	6	KS
-90099	S300 Self-Paced Hardware Training Guide	12/85 -90606	2	BB
-90609	Model 310 Attention Customer		20	KS
-90610	Model 320 Attention Customer		20	KS
-90611	Model 312 Attention Customer		20	KS
-90615	HP 9000 Series 300 Battery Backup Appl Brief	7/86	7	BB
98562-90099	Models 330/350 Self-Paced Training Guide	1/87 -90699	8	BB
-90010	DIO II Accessory Development Guide	2/87 -90610	2	RM
-90030	Models 330/350 Service Information Manual	12/86 -90630	2	BB
-90039	S300 Models 330/350 Service Handbook	2/87 -90639	6	BB
-90606	M320 to M350 Upgrade Kit Installation Note	4/87	17	KS
-90607	Human Interface Board Configuration Note	4/87	17	JB
-90608	System Interface Board Replacement	5/87	17	KS
98563-90030	Model 318 Service Information Manual	3/87 -90630	2	BB
98563-90039	Model 318 Service Handbook	3/87 -90639	6	BB
98563-90099	Model 318 Self-Paced Hardware Training Guide	3/87	8	BB
98568-90600	5/85 0 & R by 98568-90601	1/86 PC0-040-1687		EOE-2-24-86
-90601	1/86 0 & R by 98568-90602	10/86 PC0-040-2450		EOE-11-21-86
-90602	10/86 0 & R by 98568-90603	12/86 PC0-040-2471		EOE-1-19-87
-90603	12/86 0 & R by 98568-90604	3/87 PC0-040-2696		EOE-4-4-87
-90604	98568A & 98570A Direct Connect Expanders	3/87	18	KS
98580-90610	Model 310 Attention Customer		20	KS
98581-90610	Model 310 Attention Customer		20	KS
98582-90609	Model 320 Attention Customer		20	KS
-90610	Model 320 Attention Customer		20	KS
98583-90610	Model 320 Attention Customer		20	KS
98587-90600	HP98587A Solids Workstation Installation	8/86	20	JW
98592-90010	4/85 -90600 0 & R by 98592-90010	12/85 PC0-40S-1654		EOE-2-6-85
-90010	-90606 12/85 0 & R by 98592-90010	-90614 10/86	PC0-40S-2437	EOE-10-22-86
-90800	5/86 0 & M into 98592-90801	7/86 PC0-40S-2437		EOE-12-22-86
-90801	7/86 0 & M into 98592-90010	-90614 10/86	PC0-40S-2613	EOE-3-4-87
-90010	Starbase Device Drivers Library	10/86 -90614	1B	JME
-90011	Graphics Device Drivers Library	9/86 -90612	1B	JME
-90012	Starbase 5.18 Device Drivers Library	8/86 -90610	1B	JME
-90013	-90616 12/86 0 & R by 98592-90013	-90617 4/87	PC0-40S-2801	EOE-5-18-87
-90803	Update to 98592-90013	-90616 12/86	3/87	18 DP
-90013	Starbase Device Drivers Library Manual	4/87 -90617	1B	DP
-90804	Update to 98592-90013	-90617 4/87	5/87	18 DP
-90030	Starbase C Pocket Reference	5/85 -90602	0	DP
-90040	Starbase FORTRAN Pocket Reference	5/85 -90603	0	DP
-90050	Starbase Pascal Pocket Reference	5/85 -90604	0	DP
-90060	6/85 -90605 0 & R by 98592-90060	-90607 11/85	PC0-40S-1593	EOE-1-22-86

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98592-90060	Starbase Reference	11/85	-90607	1B DP
-90061	-90611 8/86 O & R by 98592-90061-90618	4/87	PC0-40S-2800	EOE-5-22-87
-90802	12/86 O & M into 98592-90061 -90618	4/87	PC0-40S-2800	EOE-5-22-87
-90061	Starbase Reference for Series 300	4/87	-90618	1B DP
-90071	Starbase Graphics Techniques	6/86	-90608	1B DA
-90073	Starbase Graphics Techniques C & T	8/86	-90613	1B DA
-90074	Starbase Graphics Techniques C & T	12/86	-90615	1B DA
98595-90607	SE Update -- Read Me First	1/87		17 JE
98596-90600	32-User Upgrade Installation Note	4/87		17 JE
98597-87901	HP-UX Programming Environment Manual Kit (S200/300)			
-90000	vi Reference Card	12/86	-90615	0 DK
-90020	-90600 3/86 O & R by 98597-90020 -90602	7/86	PC0-40S-2121	EOE-8-20-86
-90800	5/86 Obsolete PC0-40S-2613			EOE-3-4-87
-90020	HP-UX Assembler Reference and ADB Tutorial	7/86	-90602	1B MS
-90049	HP-UX System Administration Manual	12/86	-90614	1C JE
-90080	-90601 O & R by 98597-90080 -90606	6/86	PC0-40S-2069	EOE-7-14-86
-90080	-90606 6/86 O & R by 98597-90080 -90607	12/86	PC0-40S-2545	EOE-2-11-87
-90080	HP-UX Documentation Roadmap	12/86	-90607	9 MS
-90604	READ ME FIRST (HP-UX 5.1)	2/86		17 JA
-90605	5.15 Compiler Update Information	5/86		17 JME
-90610	A Book on C (Introduction to Programming in C)			8
-90611	HP-UX 5.18 Read Me First	9/86		17 JE
-90612	HP-UX 5.18 Upgrad Kit Read Me First	9/86		17 JE
-90613	HP-UX Kernel Source Code -- Read Me First	9/86		17 JA
-90617	Programming Environment -- Read Me First	1/87		17 JE
-90618	HP-UX Installation -- Read Me First	1/87		17 JE
-90620	Introducing UNIX System V			8
-90695	O & R by 98597-90696 5/86	PC0-40S-2028	EOE-6-23-86	
-90696	Documentation Unpacking	5/86		17 DP
98598-90607	FORTRAN 77 -- Read Me First	12/86		17 JE
98599-90607	Pascal -- Read Me First	12/86		17 JE
98751-90601	HP 98751A Installation Note	3/87		20 JW
98752-90601	HP 98752A Installation Note	3/87		20 JW
98600-90607	DGL/AGP -- Read Me First	12/86		17 JE
98601-90000	replaced by 98612-90080			
98602-90000	replaced by 98612-90080			
98603-90600	O & R by 98603-90601 10/85	PC0-40S-1459	EOE-10/28/85	
-90601	10/85 O & R by 98603-90602 11/86	PC0-40S-2489	EOE-12-15-86	
-90602	HP 98603A Installation Note	11/86		17 KS
98604-90000	98604A ROM HPL 2.0 Unpacking Instruct	E0284		11 FSD
98611-90000	O & R by 98612-90080 E1084	PC0-40S-0868	EOE-2-13-85	
-90001	replaced by 98612-90080			
98612-87902	BASIC 2.0 Manual Kit			FSD
-90000	replaced by 98612-90080			
-90009	replaced by 98612-90080			
-90010	Obsolete			
-90011	BASIC Programming Techniques	E0984(1)		4 FSD
-90025	BASIC Interfacing Techniques	E0984(1)		4 FSD
-90056	BASIC Language Reference	E0984(1)		4 FSD
-90070	O & R by 98612-90072 E0984	PC0-40S-0868	EOE-2-13-85	
-90072	BASIC 2.1 Documentation Guide & Index	E0984(1)		3 FSD
-90080	BASIC 2.0 & 2.1 Software & Manual Cat	E1084(1)		20 FSD
-90090	replaced by 98612-90080			
-90095	XV2.1 Driver Programming Note	E1183		20 MA



Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98613-87901	BASIC 3.0 Manual Kit			
-87904	BASIC 4.0 Manual Kit			
-10010	CSUB Preparation Manual for BASIC 3.0	E0584(1)		7 FSD
-10020	O & R by 98613-90091 -90658 7/85	PCO-40S-1880	E0E-5-9-86	
-10030	Loader Utility Manual	E1184(1)		7 FSD
-10301	BASIC 3.0 Demo Instructions	E0684(1)		21 CB
-90001	BASIC 3.0 Software Revision Note	E1184(1)		20 FSD
-90010	O & R by 98613-90011 -90650 7/85	PCO-40S-1880	E0E-5-9-86	
-90011	BASIC 4.0 Programming Techniques	7/85 -90650		4* MA
-90012	BASIC 5.0 Programming Techniques (2 Vol)	1/87 -90631		1&1C* MA
-90020	O & R by 98613-90021 -90651 7/85	PCO-40S-1880	E0E-5-9-86	
-90021	BASIC 4.0 Interfacing Techniques	7/85 -90651		4* MA
-90022	BASIC 5.0 Interfacing Techniques (2 Vol)	1/87 -90632		1&1B* MA
-90030	O & R by 98613-90031 -90652 7/85	PCO-40S-1880	E0E-5-9-86	
-90031	BASIC 4.0 Graphics Techniques	7/85 -90652		3* DA
-90032	BASIC 5.0 Graphics Techniques	1/87 -90633		1 DA
-90040	O & R by 98613-90041 -90663 9/85	PCO-40S-1880	E0E-5-9-86	
-90041	6/85 -90653 Repl by 98613-90041 -90663 9/85	PCO-40S-1459	E0E-10-28-85	
-90800	Obsolete PCO-40S-1711	E0E-6-5-86		
-90041	-90663 9/85 O & R by 98613-90041 -90673 1/87	PCO-40S-2592	E0E-3-23-87	
-90803	3/86 O & M into 98613-90041 -90673 1/87	PCO-40S-2592	E0E-3-23-87	
-90041	BASIC 4.0 User's Guide	1/87 -90673		1 JB
-90042	Installing, Using and Maintaining BASIC 5.0	2/87 -90634		1C* MA
-90050	O & R by 98613-90051 -90654 7/85	PCO-40S-1880	E0E-5-9-86	
-90051	BASIC 4.0 Language Reference	7/85 -90654		4* MA
-90052	BASIC 5.0 Language Reference	1/87 -90635		1&1B* MA
-90060	O & R by 98613-90061 -90655 7/85	PCO-40S-1880	E0E-5-9-86	
-90061	BASIC 4.0 Condensed Reference	7/85 -90655		9 DA
-90062	BASIC 5.0 Condensed Reference	1/87 -90636		9 JB
-90070	O & R by 98613-90071 -90656 7/85	PCO-40S-1880	E0E-5-9-86	
-90071	BASIC 4.0 Documentation Guide & Master Index	7/85 -90656		21 MA
-90072	BASIC 5.0 Documentation Guide & Master Index	2/87 -90637		8 MA
-90080	replaced by -90081			
-90081	Software/Manual Catalog	E1184(1)		7 FSD
-90082	BASIC 4.0 Software Manual Catalog	6/85 -90657		7 MA
-90090	CSUB 4.0 Utility	6/85 -90660		7 MA
-90091	BASIC 4.0 Utilities Library	7/85 -90658		2* MA
-90092	Loader Utilities for Series 200/300	6/85 -90659		21 MA
-90095	BASIC 5.0 CSUB Utility	1/87 -90641		1B TM
-90600	BASIC User's Guide, German	n/a		BCD
-90601	BASIC Programming Techniques, German	n/a		BCD
-90602	BASIC Graphics Techniques, German	n/a		BCD
-90603	BASIC Condensed Reference, German	n/a		BCD
-90662	BASIC Keyboard Overlays Installation Note	7/85		20 MA
-90664	9/85 Obsolete PCO-40S-2613	E0E-3-4-87		
-90668	Autostart note for 3-1/2" discs	12/85		-- MA
-90669	Autostart note for 5-1/4" discs	12/85		-- MA
-90670	Software Manual Notice	12/85		20 MA
-90672	BASIC 4.03 Software Update	8/86		20 MSOpA

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98614-90000	replaced by 98614-90001 and 98604-90000.			
-90001	HPL 2.1 Unpacking Instructions	E0484		20 FSD
-90002	HPL 2.1 Upgrade Kit Note	E1283		20 FSD
-90010	HPL Operating Manual (includes HPL 2.1)	E0184(1)		2 FSD
-90020	HPL Condensed Reference (incl HPL 2.1)	E0184(1)		9 FSD
98615-87902	Pascal 3.0 Manual Kit			
-87903	Pascal 3.1 Manual Kit			
-87970	O & R by 98615-87971 PC0-40S-1749	EOE-3-3-86		
-87971	Pascal 3.0/3.1 System Internals Document Kit			DMK
-90000	Pascal 1.0 Installation Note	E1082		20 MA
-90010	replaced by -90011.			
-90011	Pascal 2.1 Packing List	E0484		20 MA
-90015	E0485 O & R by 98615-90016 -90620 7/85 PC0-40S-2233	EOE-8-25-86		
-90016	Pascal 3.1 Documentation Guide & Index	7/85 -90620		21 MA
-90020	Pascal User's Manual	E0183(1)		3 MA
-90021	E0584 O & R by 98615-90022 -90621 5/85 PC0-40S-2233	EOE-8-25-86		
-90022	Pascal 3.1 Workstations Manual (2 Volumes)	5/85 -90621	2#3*	MA
-90023	Pascal 3.2 Workstation Systems Manual (2Vol)	5/87 -90624	2#4*	MA
-90030	E0984 O & R by 98615-90031 -90622 7/85 PC0-40S-2233	EOE-8-25-86		
-90031	Pascal 3.1 Procedure Library	7/85 -90622		4* MA
-90032	Pascal 3.2 Procedure Library	11/86 -90625		4* RA
-90035	E1184 O & R by 98615-90036 -90603 5/85 PC0-40S-2233	EOE-8-25-86		
	U0385 Update for 98615-90035 E1184			
-90036	Pascal 3.1 Graphics Techniques	5/85 -90603		3* DA
-90037	Pascal 3.2 Graphics Techniques	11/86 -90626		3* RM
-90040	E0485 O & R by 98615-90041 -90604 7/85 PC0-40S-2233	EOE-8-25-86		
-90041	Pascal 3.1 User's Guide	7/85 -90604		1 JB
-90041	Pascal 3.2 User's Guide	1/87 -90627		1B* RA
-90050	E0284 O & R by 98615-90051 -90611 8/85 PC0-40S-2233	EOE-8-25-86		
-90051	6/85 -90605 O & R by -90611 8/85 PC0-40S-1428	EOE-10-15-85		
-90051	8/85 -90611 O & R by 98615-90051 -90629 1/87 PC0-40S-2590	EOE-3-3-87		
	-90801 Update for 98615-90051 -90611 8/85	5/86		21 JME
-90051	HP Pascal Language Reference	1/87 -90629		3* JE
-90052	HP Pascal Language Reference	11/86 -90628		3 RM
-90074	E0285 O & R by 98615-90075 -90615 12/85 PC0-40S-1749	EOE-3-3-86		
	-90800 Obsolete PC0-40S-1711	EOE-6-5-86		
-90075	Pascal 3.0/3.1 System Internals Document	12/85 -90615		DA
			3 vols binders: 3, 4, 5	
-90080	Software Revision Note	E1084		20 MA
-90090	Pascal 2.1 Manual Update Kit	U0583(1)		20 MA
-90606	MC68020 32-Bit Microprocessor User's Manual			8 MA
-90607	MC68881 Floating Point Coprocessor User's Manual			8 MA
-90610	Software Update Model 320 Pascal 3.11	9/85		20 MA
-90612	Software Notice MC68881	9/85		20 MA
-90672	Pascal 3.12 Software Update	8/86		20 MA
98616-87901	BASIC 5.0 Manual Kit			
-90600	BASIC Keyboard Overlay Installation Note	1/87		17 MA
-90601	BASIC 5.0 5-1/4" Autostart Note	2/87		0 DK
-90602	BASIC 5.0 3-1/2" Autostart Note	2/87		0 DK
-90603	BASIC 5.0 -- Read Me First	2/87		17 DK
-90604	SE Tools for BASIC 5.0	2/87		17 MA
-90605	BASIC 5.0 Customer Letter	5/87		20 FSDD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98620-90000	replaced by -90001.			
-90001	98620A/B DMA Card Install Note	E1083(2)		20 CE
-90605	98620 Direct Memory Access Controll Install	6/85		11 JW
98625-90000	Disc Interface Installation Mnl			7 RND
98627-10001	BASIC System Software Supplement	E0282(1)		21
-90000	Color Video Interface Install Manual	E1281(1)		7 RA
-90001	Read Me First	E0285(1)		20 FSD
98629	covered in 98619-90020.			
98630-90000	O & R by 98630-90001 E0385 PC0-040-15185	EOE-4-11-85		
-90001	98630 Breadboard Installation & Prog	E0385(1)		21 MA
98635-90000	replaced by -90001			
-90001	O & R by 98635-90600 4/86 PC0-040-1939	EOE-6-1-86		
-90600	S200/300 Floating Point Math Card Install	4/86		17 KS
98643-90001	LAN Manual			RND
98670-90015	Setting up HP-UX on the Model 217	E1084(1)		2 FSD
-90600	2/86 Obsolete PC0-40S-2423	EOE-3-27-87		
98672-90000	HP-GKS User's Guide	2/86	-90600	1B* DP
-90800	Update to 98672-90000 -90600 2/86	12/86		18 DP
-90010	HP-GKS Device Drivers Library	2/86	-90601	1B* DP
-90801	12/86 O & R by 98672-90802 4/87 PC0-40S-2804	EOE-6-2-87		
-90802	Update to 98672-90010 -90601 2/86	4/87		18 DP
-90040	HP-GKS FORTRAN Pocket Reference	2/86	-90603	0 DP
-90602	ANSI (GKS) functional description			8 FSD
-90607	GKS -- Read Me First	1/87		17 DP
-90695	HP-GKS Graphics Software Unpacking Instruc	3/86		17 DP
98674-90000	Starbase Display List Programmer's Guide	8/86	-90600	1B* DP
-90800	Update to 98674-90000 -90600 8/86	12/86		17 DP
-90601	10/86 O & R by 98674-90602 12/86 PC0-40S-2613	EOE-3-4-87		
-90602	Display List -- Read Me First	12/86		17 DP
98678-87901	LISP Manual Kit			
-90000	-90607 5/86 O & R by 98678-90000 -90613 3/87 PC0-40S-2704	EOE-5-1-87		
-90801	Update to 98678-90000 -90607 5/86	1/87		18 WM
-90000	LISP Installation and Overview	3/87	-90613	1B* WM
-90005	NMODE Mini-Reference	11/86	-90614	0 BA
-90010	-90600 5/86 O & R by 98678-90010 -90616 4/87 PC0-40S-2803	EOE-6-11-87		
-90010	LISP Application Notes	4/87	-90616	1* WM
-90020	-90601 O & R by 98678-90020 -90610 6/86 PC0-40S-2068	EOE-7-17-86		
-90800	5/86 O & M into 98678-90020 -90610 6/86 PC0-40S-2068	EOE-7-16-86		
-90020	-90610 6/86 O & R by 98678-90020 -90611 8/86 PC0-40S-2372	EOE-10-29-86		
-90020	NMODE User's Guide	8/86	-90611	1B* BA
-90025	NMODE Command Reference	5/86	-90608	1B* RA
-90040	LISP Programmer's Guide	3/86	-90603	1B* CB
-90050	-90604 5/86 O & R by 98678-90050 -90609 6/86 PC0-40S-2194	EOE-8-12-86		
-90050	LISP Language Reference (A-L) (M-Z) 2 Vols	6/86	-90609	1B* RA
-90070	LISP Syntax Reference (Pocket Size)	5/86	-90606	9 WM
-90080	-90612 9/86 O & M into 98678-90000 -90613 3/87 PC0-40S-2704	EOE-5-1-87		
-90081	LISP A Gentle Introduction to Symbolic Computation			8
-90082	LISP			8
-90083	COMMON LISP THE LANGUAGE			8
-90615	Common Lisp -- Read Me First	1/87		17 WM
-90695	5/86 Obsolete PC0-40S-2613	EOE-3-4-87		

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98680-84001	Packing Labels for 98680A opt 022			
-85000	Series 200 Keyboard Overlay			
-87901	O & R by 97033-87901 PCO-40S-1840	EOE-4-7-86		
-90000	S/200 HP-UX FORTRAN Update Document	E0385(1)		20 JA
-90010	O & R by 98680-90011 E1284 PCO-40S-1711	EOE-6-5-86		
-90011	Series 200 HP-UX System Administ'r Mnl	E1284(1)		2 FSD
-90015	replaced by 98615-90050.			
-90020	Series 200 FORTRAN/9000 Reference	E1083(1) U0684#		3 KM
-90021	Fortran/9000 Comparison Notes	E0784(1)		21 KM
-90025	Introducing the Unix System, McGraw-Hill	n/a		11 JA
-90027	replaced by -90040			
-90046	-90603 7/85 O & R by 97033-90046 -90612 7/86 PCO-40S-2373	EOE-10-29-86		
-90039	Series 200 HP-UX CE Handbook	E0285(1)		6 JW
-90040	HP-UX Users Guide	E0784(1)		1 KM
-90045	HP-UX Portability Guide	E1084(1)		1 CB
-90050	HP-UX Single to Multi-User Upgrade Kit	E0984(1)		20 MM
-90060	98680 Unpacking Instructions	E0384		20 DP
-90090	HP-UX/9000 Series 200 Release 2.1	E0784(1)		20
-90093	replaced by -90694	E0285		20 FSD
-90601	O & R by 98597-90601 PCO-40S-2591	EOE-5-4-87		
-90694	98680A Unpacking Instructions	9/85		20 DP
-90695	Documentation Unpacking Instructions	2/86		17 DP
98700-90001	O & R by 98700-90002 -90603 8/85 PCO-040-1398	EOE-10-7-85		
-90002	98700H Installation Guide	8/85 -90603		18 JW
-90009	98700H Unpacking Instructions	E0385(1)		11 JW
-90030	HP 98700H Hardware Support Document	8/85 -90600		21 JW
-90039	HP 98700H CE Handbook	8/85 -90601		6 JW
-90602	HP 98700H Graphics Demo Porgram Installation	10/85		20 DP
-90604	HP 98700H Unpacking Instructions	2/86		17 JW
98710-90600	Graphics excellerator Installation Note	5/85		11 JW
98720-90000	98720H Graphics Display Station Installation	6/86 -90600		7 JW
-90000	98720H Graphics Display Station Installation	8/86 -90602		18 JW
-90003	320SRX/350SRX Graphics Demo Guide	1/87 -90603		7 DA
-90030	98720A Hardware Support Document	12/86 -90630		21 JW
-90039	98720A CE Handbook	1/87 -90639		6 JW
-90601	98720A Graphics Display Station Install Card	6/86		20 JW
-98750-90039	98750 CRT CE Handbook	E0982(1)		6 JW
98721-90600	98721A Installation Note	7/86		10 JW
98722-90600	98722A Installation Note	7/86		10 JW
98723-90600	98723A Installation Note	7/86		10 JW
98760-90039	98760 Color CRT CE Handbook	E0384(1)		6
98770-90031	98770 Service Manual	E0183(1)		22 BCD
-90039	98770 Color CRT CE Handbook	E1083(2)		6 BCD

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98771-90000	Color Display Installation Note	E1080		20 JW
98775-90001	Light Pen Installation Note	E0484		11 RM
98776-90000	Video Signals Interface Install Note	E1181		JW
98777-90000	35mm Camera Attachment Install Note	E0782	U0882	7 JW
98780-90030	98780 Service Manual	E0281(1)		2 JW
-90039	98780 CRT CE Handbook	E1283(2)		6 JW
98781-90000	98781 Hardware Support Document	E0684(1)		2 JW
-90009	replaced by -90010			
-90010	98781 Unpacking Instructions	E0784		11 JW
-90039	98781 CE Handbook Section	E0684(1)		6 JW
98782-90001	Replaced by 98782-90603			
-90009	98782A Unpacking Instructions	E0485(1)		11 JW
-90030	98782 Hardware Support Document	5/85	-90600	2 JW
-90039	HP 98782 CE Handbook	5/85	-90601	6 JW
-90603	HP 98782A/B Color Monitor Installation	10/85		20 JW
98783-90000	98783A Desktop Twivel Installation Note	E0485		11 BB
98784-90600	HP 98784A/B Color Monitor Installation Note	12/85		20 JW
-90030	HP 98782A/98784A Hardware Support Document	5/87	-90630	2* JW
98785-90601	7/86 O & R by 98785-90603 1/87 PC0-040-2597	EOE-2-20-87		
-90602	10/86 O & R by 98785-90603 1/87 PC0-040-2597	EOE-2-20-87		
-90603	HP 98785A Installation Note	1/87		20 JW
-90030	HP 98785A Hardware Support Document	4/87	-90630	2 JW
-90039	HP 98785A Service Handbook	4/87	-90639	6 JW
98786-90039	HP 98786A CE Handbook	11/86	-90639	6 JW
-90030	HP 98786A Hardware Support Document	11/86	-90630	2 JW
-90099	98786A Monitor Self-Paced Hardware Trng Guide	1/87	-90600	8 BB
-90601	9/86 O & R by 98789-90602 1/87 PC0-040-2624	EOE-2-20-87		
-90602	HP 98786A Installation Note	1/87		21 JW
98787-90600	HP 98787A Tilt-Swivel Installation	7/86		17 JW
98788-90601	HP 98788A Installation Note	6/87		20 JW
98789-90601	HP 98789A Installation Note	4/87		20 JW
98790-90000	HP 2622 Terminal Emulator Manual	E0384(1)		2 FSD
-90001	O & R by 98790-90002 -90600 4/86 PC0-40S-1992	EOE-5-28-86		
-90100	Obs/Incorp into 98790-90002 4/86 PC0-40S-1992	EOE-5-28-86		
-90002	HP 2392A Terminal Emulator 216/220/236	4/86	-90600	4 TEM
-90010	O & R by 98790-90011 -90601 4/86 PC0-40S-1992	EOE-5-28-86		
-90801	Update for 98790-90010 7/85	4/86		21 TEM
-90011	HP 2392A Term Emulator 217/220/237/310/320	4/86	-90601	23 TEM

Part Number	Manual Title & Comments	Date(ed)	Mfg #	Support
98791-90000	VT100 and HP 2622 Terminal Emulator	E0684(1)		4 FSD
-90001	O & R by 98791-90001 -90600 4/86 PCO-40S-1844	E0E-6-6-86		
-90100	O & M into 98791-90002 -90600 4/86 PCO-40S-1844	E0E-6-6-86		
-90800	Update for 98791-90001	E0285	4/86	TEM
-90002	VT100 Terminal Emulator 216,220,236		4/86 -90600	4 TEM
-90010	O & R by 98791-90011 -90601 4/86 PCO-40S-1844	E0E-6-6-86		
-90801	Update for 98791-90010	7/85	4/86	TEM
-90011	VT100 Term Emulator 217,220,237,310,320		4/86 -90601	4 TEM
98810-11111	VisiCalc Manual	E0385(5)		2 DP
-11112	VisiCalc Condensed Reference	E1282(1)		7 DP
-11113	VisiCalc Packing List	Dec '82		20 DP
98815-12111	replaced by -12112.			
-12112	replaced by -12113			
-12113	HP 98815A Graphics Prsentations	E0784(1)		2 TSC
98816-12111	Computer-aided Graphics Pres Mnl	E0282(1)		3 FSD
98817-12111	replaced by 98817-12112			
-12112	HP 98817A Project Management Manual	E1083(2)		2 TSC
98818-12111	Management Forecasting Manual	E1082(2)		2 JA
98820-13111	O & R by 98820-13112 E0884 PCO-40S-0998	E0E-3-18-85		
-13112	HP 98820A Statistical Library	E0884(1)		4 TSC
98821-13111	replaced by 98821-13112			
-13112	HP 98821A BASIC Numerical Analysis	E0784(1)		3 TSC
98825-14111	AC Circuit Analysis Manual	E1282(2)		2 JE
98826-14111	Linear Systems Analysis Manual	E0283(2)		2 JE
98827-14111	Waveform Analysis Manual	E1082(2)		3 JE
98828-14111	Digital Filter Design Manual	E1082(2)		2 JE