


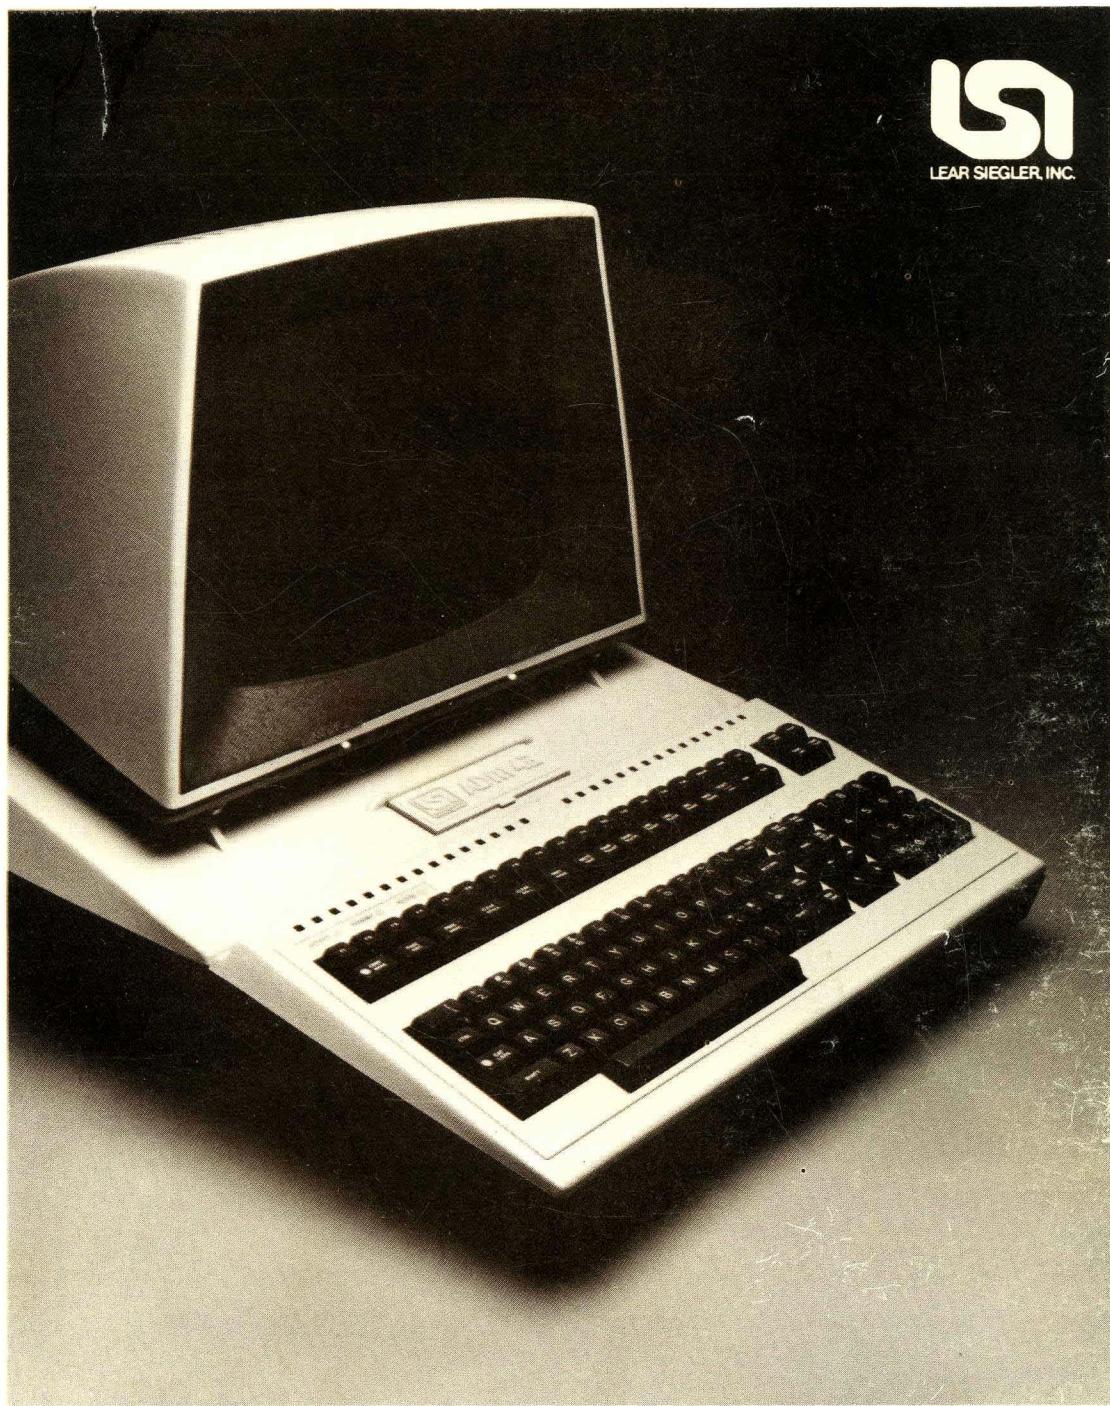

LEAR SIEGLER, INC.



ADM 42 Ergonomic Terminal™ Video Display Unit Maintenance Manual

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

714 NORTH BROOKHURST STREET, ANAHEIM, CALIFORNIA 92803

**ADM-42
Data
Display Terminal**



**MAINTENANCE
MANUAL**

DP3090982F

©1982 LEAR SIEGLER, INC.

SEPTEMBER 1982

TABLE OF CONTENTS

SECTION	PAGE
I GENERAL DESCRIPTION	1-1
1.1 INTRODUCTION	1-1
1.2 PURPOSE AND USE	1-1
1.3 PHYSICAL DESCRIPTION	1-1
1.4 OPERATIONAL DESCRIPTION	1-1
1.5 SPECIFICATIONS.....	1-1
1.5.1 Memory Extension Option	1-1
1.5.2 Direct Connect Option	1-1
1.5.3 Answer Back Memory Option	1-3
1.5.4 Alternate Character Generator Set Option	1-3
1.5.5 TCU Desk Mount Option.....	1-3
1.6 ADDITIONAL OPTIONS	1-3
1.6.1 Standard Option Board Features	1-3
1.6.1.1 Serial Printer Option	1-3
1.6.1.2 31-Character Function Key Option.....	1-3
1.6.2 Polling and Addressing Option	1-4
1.6.3 63-Character Function Key Option	1-4
1.7 RELATED DOCUMENTS.....	1-4
II INSTALLATION.....	2-1
2.1 INTRODUCTION	2-1
2.2 SAFETY REQUIREMENTS	2-1
2.3 SITE REQUIREMENTS.....	2-1
2.4 INITIAL PREPARATION	2-1
2.4.1 Line Voltage Selection	2-1
2.4.2 Configuration Control Dip Switch Settings	2-3
2.4.2.1 Main Board Switches	2-3
2.4.2.2 Option Board DIP Switches	2-3

TABLE OF CONTENTS (cont'd)

SECTION	PAGE
2.5 INTERFACE INFORMATION	2-11
2.5.1 Standard or RS-232C Extension Interface	2-11
2.5.2 Current Loop Interface	2-11
2.5.3 Direct Connect Interface	2-11
2.5.4 Printer Interface	2-11
2.6 INSTALLING THE ADM 42	2-11
2.7 POWER TURN-ON	2-16
2.8 POWER TURN-OFF	2-16
2.9 CARE OF THE ADM 42	2-17
2.9.1 Cleaning	2-17
2.9.2 Inspection	2-17
III FUNCTIONAL DESCRIPTION	3-1
3.1 INTRODUCTION	3-1
3.2 OPERATIONAL DESCRIPTION	3-2
3.2.1 Keyboard	3-2
3.2.2 Control Section (MPU)	3-2
3.2.3 Video Logic and Control	3-2
3.2.4 Interface Section	3-2
3.2.5 System Configuration Switches	3-2
3.2.6 Regulated Power Supply	3-4
3.3 STANDARD CHARACTER FORMAT	3-4
3.4 ADM 42 WORD STRUCTURE	3-4
3.5 DATA TRANSMISSION CHARACTERISTICS	3-4
3.5.1 Conversation Mode Characteristics	3-4
3.5.2 Block Mode Characteristics	3-4
3.5.3 ADM 1 Mode Characteristics	3-7
3.6 PRINT MODE TRANSMISSION CHARACTERISTICS	3-7
3.6.1 Formatted Print Mode	3-7
3.6.2 Unformatted Print Mode	3-8
3.6.3 Copy Print Mode	3-8
3.6.4 Buffered Print Mode	3-9
IV OPERATION	4-1
4.1 INTRODUCTION	4-1

TABLE OF CONTENTS (cont'd)

SECTION	PAGE
4.2 CONTROL CODES AND OPERATING MODES.....	4-1
4.2.1 Standard Control Codes.....	4-1
4.2.2 Escape Sequence.....	4-1
4.2.3 Terminal RESET Operations.....	4-4
4.2.3.1 Power ON RESET	4-4
4.2.3.2 RESET Button	4-5
4.2.3.3 Firmware RESET	4-5
4.2.3.4 Selected Operational RESETS	4-5
4.2.4 Multiple Escape Sequences	4-5
4.2.5 Keyboard Enable/Disable	4-5
4.2.6 Scrolling	4-5
4.2.7 Display of Program Version.....	4-6
4.2.8 Status Line Characteristics	4-6
4.2.8.1 Status Indicator Control.....	4-6
4.2.8.2 Status Line Message Control	4-6
4.3 FUNCTION KEY (FUNKEY) CHARACTERISTICS	4-6
4.3.1 Displaying FUNKEY Messages	4-6
4.3.2 Storing FUNKEY Messages.....	4-6
4.3.3 Linking FUNKEY Messages	4-9
4.3.3.1 Storing Extra-Length FUNKEY Messages	4-10
4.3.3.2 Linking Multiple Commands	4-11
4.3.4 Erasing FUNKEY Messages	4-11
4.3.5 Evoking FUNKEY Messages.....	4-11
4.4 FORMAT CONTROL OPERATIONS	4-11
4.4.1 Program Mode	4-12
4.4.2 Protected Fields and Modes	4-12
4.4.2.1 Write Protect Mode	4-12
4.4.2.2 Protect Mode	4-12
4.4.2.3 Designated Protected Field	4-12
4.4.2.4 Selected Protected Fields	4-12
4.4.3 Auto Page Mode	4-13
4.4.4 Limited Graphics Mode	4-13
4.4.5 Write Character "c" "N" Times	4-13
4.5 CURSOR CONTROL OPERATIONS	4-13
4.5.1 Non-Addressed Cursor Positioning	4-13
4.5.2 Absolute Cursor Addressing.....	4-13
4.5.2.1 Load Cursor Operation	4-13
4.5.2.2 Read Cursor Operations	4-14
4.5.2.3 Go To Page "N" Operations	4-14
4.5.3 Tab Control	4-18
4.5.3.1 Protect Mode Tab Operations	4-18
4.5.3.2 Typewriter Tab Mode Operations	4-18
4.5.3.3 Modulo Tab Mode Operations	4-18

TABLE OF CONTENTS (cont'd)

SECTION	PAGE
4.6 DATA EDITING CONTROL OPERATIONS.....	4-18
4.7 DATA TRANSMISSION CONTROL OPERATIONS	4-21
4.7.1 Block Mode Send	4-21
4.7.2 Dynamic Baud Rate Control	4-21
4.8 PRINT TRANSMISSION CONTROL OPERATIONS	4-23
4.9 PERSONALITY CONTROL	4-23
4.9.1 Display of Personality Codes.....	4-23
4.9.2 Dynamic Personality Change Codes.....	4-23
4.9.2.1 Modification of Escape Lead-In Character	4-23
4.9.2.2 Modification of End Block Character(s).....	4-23
4.9.2.3 Modification of New Line Character(s).....	4-23
4.9.2.4 Modification of Field Separator Character	4-25
4.9.2.5 Modification of FUNKEY Lead-In Character	4-25
4.9.2.6 Modification of Parity Error Replacement Character ..	4-27
4.9.2.7 Modification of Clear/Erase/Insert/Delete Replacement	4-27
4.9.2.8 RTS START Delay Control.....	4-28
4.9.2.9 RTS OFF Delay Control.....	4-28
4.9.2.10 Polling Option Variant Control.....	4-28
4.9.2.11 Polling Transmission Number Limit Control.....	4-28
4.9.2.12 Power-Up Tab Mode Control	4-28
4.9.2.13 Special Function Control Byte E.....	4-31
4.9.2.14 Status Line Attribute Control Byte F	4-31
4.9.2.15 Special Function Control Byte 10	4-31
4.9.2.16 Special Function Control Byte 11	4-31
4.10 VIDEO ATTRIBUTE CONTROL OPERATIONS	4-31
4.10.1 Cursor and Video Control	4-31
4.10.2 Displayable Character Video	4-35
4.10.3 ADM 42/ADM 2 Attribute Mode Control	4-35
V POLLING AND ADDRESSING.....	5-1
5.1 ADM 42 POLLING	5-1
5.1.1 Setting ADM 42 Address	5-1
5.1.2 Establishing Polling Operations	5-1
5.1.2.1 Setting Up Terminal	5-1
5.1.2.2 Monitor Mode Operation	5-2
5.1.2.3 Enabling Keyboard	5-2
5.1.3 Removing Terminal from Polling Status.....	5-2
5.1.4 Initiating Standard Polling Sequence	5-2
5.1.5 POLL Responses.....	5-3

TABLE OF CONTENTS (cont'd)

SECTION	PAGE
5.1.6 SELECT Responses	5-5
5.1.7 SEQUENTIAL SELECT Responses	5-5
5.1.8 FAST SELECT Responses	5-6
5.1.9 BROADCAST SELECT Responses	5-6
5.1.10 SEND Responses	5-6
5.2 SPECIAL POLLING OPERATIONS	5-12
5.2.1 GROUP POLL Operation	5-12
5.2.2 GROUP SELECT Operations	5-13
5.2.3 MULTI-POINT CONTENTION Operations	5-13
5.2.4 Addressable Printer Port Operations	5-13
5.2.5 Polling Communications Buffer Operations	5-14
VI THEORY OF OPERATION	6-1
6.1 GENERAL DESCRIPTION	6-1
6.2 FUNCTIONAL DESCRIPTION	6-2
6.3 DETAILED BLOCK DESCRIPTION	6-5
6.3.1 CPU Section	6-5
6.3.2 External Interface Section	6-11
6.3.3 System Memory Section	6-13
6.3.4 Video Display Section	6-17
6.3.5 Keyboard Section	6-21
6.3.6 System Configuration Switches	6-25
6.3.7 External Bus Buffers	6-26
6.3.8 Option Board	6-26
VII MAINTENANCE	7-1
7.1 INTRODUCTION	7-1
7.2 PREVENTIVE MAINTENANCE	7-1
7.3 SWITCH SETTINGS	7-1
7.4 CORRECTIVE MAINTENANCE	7-3
7.4.1 Problem Identification	7-3
7.4.2 Removal and Replacement	7-5
VIII DRAWINGS	8-1

TABLE OF CONTENTS (cont'd)

LIST OF FIGURES

FIGURE	PAGE	
1-1	ADM 42 Video Display Terminal	x
1-2	ADM 42 Character Format (By Ascending ASCII Codes) with HEX Code ..	1-2
2-1	ADM 42 Mounting Requirements	2-2
2-2	ADM 42 Front Panel Controls and Indicators	2-4
2-3	Connector and DIP Switch Locations on Main Logic Board	2-5
2-4	Connector and DIP Switch Locations on Option Logic Board	2-6
2-5	Typical ADM 42 Application	2-12
2-6	ADM 42 Rear Panel Controls	2-13
2-7	MODEM and RS-232C Extension Interface Logic	2-14
2-8	Current Loop Interface Logic	2-15
2-9	Direct Connect Interface Logic	2-18
2-10	Printer Interface Logic	2-18
3-1	ADM 42 Data Flow Block Diagram	3-3
3-2	Displayable Character Set and Control Codes	3-5
3-3	Word Format Codes with DIP Switch Configurations	3-6
4-1	Chart of Escape Sequences	4-2
4-2	Sample FUNKEY Message Format and Store Codes	4-7
4-3	Limited Graphics Mode Symbols	4-14
4-4	Chart of ASCII Characters vs. Modulo Numbers	4-15
4-5	Absolute Cursor Addressing Operation Codes	4-16
4-6	Display of Standard Personality Byte Values	4-24
4-7	Chart of Recommended RTS OFF Delay Times	4-30
5-1	POLL Function Dialogue, Flow Diagram	5-4
5-2	SELECT Function Dialogue, Flow Diagram	5-7
5-3	SEQUENTIAL SELECT Function Dialogue, Flow Diagram	5-8
5-4	FAST SELECT FUNCTION Dialogue, Flow Diagram	5-9
5-5	BROADCAST SELECT Function Dialogue, Flow Diagram	5-10
5-6	SEND Function Dialogue, Flow Diagram	5-11
6-1	ADM 42 Simplified System Block Diagram	6-3
6-2	CPU Section Detailed Block Description	6-6
6-3	MPU Block Diagram	6-7
6-4	MPU Flow Chart	6-9
6-5	System Timing and Two Phase Clock	6-10
6-6	External Interface Section Block Diagram	6-12
6-7	System Memory Board	6-14
6-8	Video Control Section	6-16
6-9	Keyboard Section	6-23
6-10	PIA Block Diagram	6-24
6-11	System Configuration Switches	6-25
6-12	Option Board Block Diagram	6-27

TABLE OF CONTENTS (cont'd)

LIST OF FIGURES (cont'd)

FIGURE	PAGE
7-1 Removing the Plunger	7-8
7-2 Insertion Tool Guideway	7-9
7-3 Placing the Solid Contact in the Insertion Tool	7-10
7-4 Inserting the Spilt Contact in the Insertion Tool.....	7-11
7-5 Placing the Insertion Tool into the Guide.....	7-12
7-6 Replacing the Plunger	7-13

LIST OF TABLES

TABLE	PAGE
1-1 ADM 42 Specifications	1-5
2-1 Main Logic Board Configuration Control Switch Settings.....	2-7
2-2 Option Logic Board Configuration Control Switch Settings	2-9
4-1 Control Codes Utilized by Standard ADM 42	4-3
4-2 Chart of Assigned Status Line Positions	4-8
4-3 Status Code Control Operation Codes	4-8
4-4 Status Line Message Control Operations	4-9
4-5 Function Key/FUNKEY Characteristics	4-10
4-6 Chart of Cursor Control Operations	4-17
4-7 Data Editing Control Operations	4-19
4-8 Data Transmission Control Operations.....	4-22
4-9 Dynamic Baud Rate Control Operation Codes	4-25
4-10 Print Transmission Control Operations	4-26
4-11 Polling Option Variant Byte B Operations	4-29
4-12 Power-Up Default Modulus Tabs Byte D.....	4-30
4-13 Special Function Control Byte E Operations.....	4-32
4-14 Status Line Visual Attribute Control Byte F Operations	4-33
4-15 Special Function Control Byte 10 Operations	4-34
4-16 Special Function Control Byte 11 Operations	4-35
4-17 Video Attribute Control Operation Codes	4-36
4-18 Operation Codes for ADM 42/ADM 2 Attribute Mode Control.....	4-36
7-1 ADM 42 Troubleshooting Guide	7-4

TABLE OF CONTENTS (cont'd)

APPENDIX A

Operators Quick Reference Guides

APPENDIX B

TTL Data Display Monitor 120/150

APPENDIX C

Factory Service and Maintenance Information

PREFACE

This Maintenance Manual provides all the information required to perform routine and corrective maintenance on the ADM 42 Data Display Terminal. The instructions and information may also be used to aid operational personnel in the installation, operation, and care of the ADM 42. All operator controls are described in detail, and remote programming considerations are presented in sufficient detail to enable an experienced operator to use the equipment efficiently when confronted with non-standard applications.

The major topics described in the manual include:

<i>Section I</i>	<i>General Description</i>
<i>Section II</i>	<i>Installation</i>
<i>Section III</i>	<i>Functional Description</i>
<i>Section IV</i>	<i>Operation</i>
<i>Section V</i>	<i>Polling and Addressing</i>
<i>Section VI</i>	<i>Theory of Operation</i>
<i>Section VII</i>	<i>Maintenance</i>
<i>Section VIII</i>	<i>Drawings</i>
<i>Appendix A</i>	<i>Operator's Quick Reference Guides</i>
<i>Appendix B</i>	<i>TTL Data Display Monitor 120/150</i>
<i>Appendix C</i>	<i>Factory Service and Maintenance Information</i>
	<i>Index</i>

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

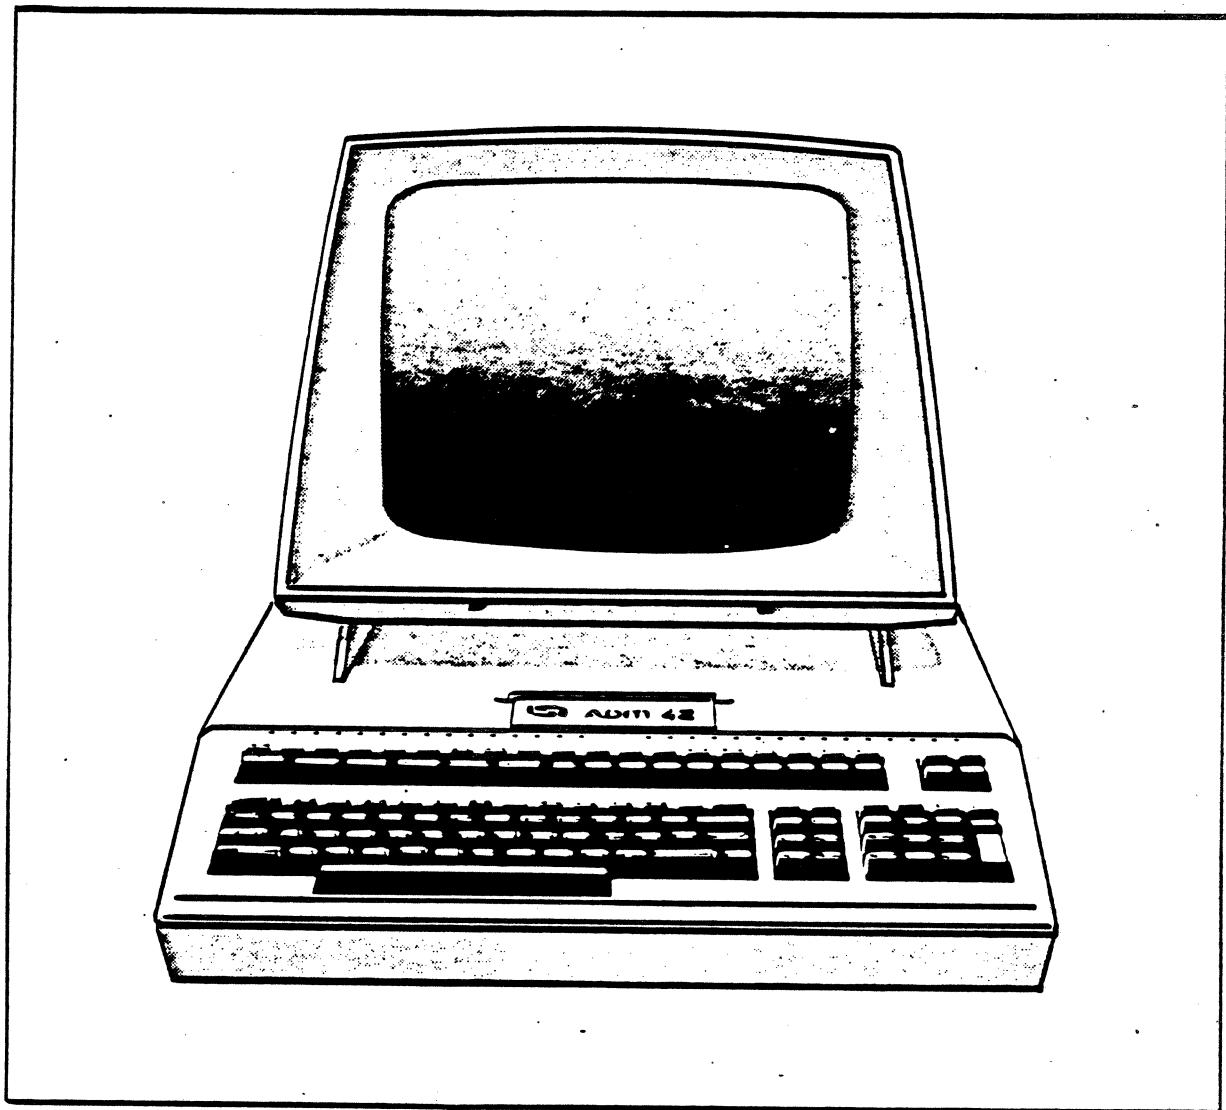


Figure 1-1. ADM-42 Data Display Terminal

SECTION I

GENERAL DESCRIPTION

1.1 INTRODUCTION

This section describes and lists the specifications of the Lear Siegler ADM 42 Ergonomic Terminal™ Video Display Unit (see figure 1-1), along with available options.

1.2 PURPOSE AND USE

There are numerous applications of the ADM 42 all involving the transfer of data. Data transfer, in some applications, may be almost exclusively unidirectional; either from the ADM 42 to the computer, or from the computer to the ADM 42. A more frequent application of the ADM 42, however, is one in which an operator communicates with a computer, and the computer responds in accordance with its stored program.

1.3 DESCRIPTION

The ADM 42 Video Display Unit is a stand-alone terminal, consisting of a Terminal Control Unit (TCU), Keyboard Unit, and Monitor Unit. The TCU contains the logic circuitry, baud rate switches, power supply ON/OFF switch, cabling, and interface connectors. The keyboard and the monitor are self-contained and each may be physically moved several feet away from the TCU without interrupting operations. The monitor display screen is a 15-inch diagonal CRT. The display format consists of 80 characters x 24 lines, plus a 25th status line. Figure 1-2 shows the standard 128-character format for the ADM 42.

1.4 SPECIFICATIONS

Table 1-1 lists the specifications of the ADM 42.

1.5 OPTIONS

The ADM 42 can be equipped with several optional features, each requiring additions and/or alterations to the standard terminal configuration.

1.5.1 Memory Extension Option

The Memory Extension Option extends the basic RAM memory capability from 4 pages (8K-bytes) to 8 pages by the addition of 8-K bytes of memory.

1.5.2 Direct Connect Option

The Direct Connect circuit contains a line interface used to connect CRT data terminals to computer I/O channels. The interface is operated in the half-duplex polling mode. It may be used with up to nine additional interface circuits of the same type connected on one line. The following specification defines the DC interface.

RECEIVER PERFORMANCE

Input (DC LINE)

Maximum Receive Rate	9600 BAUD
Maximum Line Length	1000 FT.
Marking Signal Level	-12±1V
Spacing Signal Level	0+/-2V
Receive Threshold	6±1V

		CTRL FUNCTIONS		ESC FUNCTION	
0F	RT	1F	US	0	0
10	DLE	2F		1	0
11	DC1	3F		2	0
12	DC2	4F		3	0
13	DC3	5F		4	0
14	DC4	6F		5	0
15	NAK	7F		6	0
16	SYN	8F		7	0
17	ETB	9F		8	0
18	CAN	A0		9	0
19	EM	B0		A	0
20	FS	C0		B	0
21	GS	D0		C	0
22	US	E0		D	0
23	SP	F0		E	0
24	DEL	01		F	0
25		02			
26		03			
27		04			
28		05			
29		06			
30		07			
31		08			
32		09			
33		0A			
34		0B			
35		0C			
36		0D			
37		0E			
38		0F			
39		10			
40		11			
41		12			
42		13			
43		14			
44		15			
45		16			
46		17			
47		18			
48		19			
49		1A			
50		1B			
51		1C			
52		1D			
53		1E			
54		1F			
55		20			
56		21			
57		22			
58		23			
59		24			
60		25			
61		26			
62		27			
63		28			
64		29			
65		30			
66		31			
67		32			
68		33			
69		34			
70		35			
71		36			
72		37			
73		38			
74		39			
75		40			
76		41			
77		42			
78		43			
79		44			
80		45			
81		46			
82		47			
83		48			
84		49			
85		50			
86		51			
87		52			
88		53			
89		54			
90		55			
91		56			
92		57			
93		58			
94		59			
95		60			
96		61			
97		62			
98		63			
99		64			
100		65			
101		66			
102		67			
103		68			
104		69			
105		70			
106		71			
107		72			
108		73			
109		74			
110		75			
111		76			
112		77			
113		78			
114		79			
115		80			
116		81			
117		82			
118		83			
119		84			
120		85			
121		86			
122		87			
123		88			
124		89			
125		90			
126		91			
127		92			
128		93			
129		94			
130		95			
131		96			
132		97			
133		98			
134		99			
135		100			
136		101			
137		102			
138		103			
139		104			
140		105			
141		106			
142		107			
143		108			
144		109			
145		110			
146		111			
147		112			
148		113			
149		114			
150		115			
151		116			
152		117			
153		118			
154		119			
155		120			
156		121			
157		122			
158		123			
159		124			
160		125			
161		126			
162		127			
163		128			
164		129			
165		130			
166		131			
167		132			
168		133			
169		134			
170		135			
171		136			
172		137			
173		138			
174		139			
175		140			
176		141			
177		142			
178		143			
179		144			
180		145			
181		146			
182		147			
183		148			
184		149			
185		150			
186		151			
187		152			
188		153			
189		154			
190		155			
191		156			
192		157			
193		158			
194		159			
195		160			
196		161			
197		162			
198		163			
199		164			
200		165			
201		166			
202		167			
203		168			
204		169			
205		170			
206		171			
207		172			
208		173			
209		174			
210		175			
211		176			
212		177			
213		178			
214		179			
215		180			
216		181			
217		182			
218		183			
219		184			
220		185			
221		186			
222		187			
223		188			
224		189			
225		190			
226		191			
227		192			
228		193			
229		194			
230		195			
231		196			
232		197			
233		198			
234		199			
235		200			
236		201			
237		202			
238		203			
239		204			
240		205			
241		206			
242		207			
243		208			
244		209			
245		210			
246		211			
247		212			
248		213			
249		214			
250		215			
251		216			
252		217			
253		218			
254		219			
255		220			
256		221			
257		222			
258		223			
259		224			
260		225			
261		226			
262		227			
263		228			
264		229			
265		230			
266		231			
267		232			
268		233			
269		234			
270		235			
271		236			
272		237			
273		238			
274		239			
275		240			
276		241			
277		242			
278		243			
279		244			
280		245			
281		246			
282		247			
283		248			
284		249			
285		250			
286		251			
287		252			
288		253			
289		254			
290		255			
291		256			
292		257			
293		258			
294		259			
295		260			
296		261			
297		262			
298		263			
299		264			
300		265			
301		266			
302		267			
303		268			
304		269			
305		270			
306		271			
307		272			
308		273			
309		274			
310		275			
311		276			
312		277			
313		278			
314		279			
315		280			
316		281			
317		282			
318					

Output (DCRCV)

TTL Compatible 2 LOADS

Gate Inputs (RTS/ & XRTS/)

TTL Compatible 1 LOAD

TRANSMITTER PERFORMANCE

Input (DC SEND)

Maximum Transmission Rate 9600 BAUD
RS232 Voltage Levels +6 To +12V

Output (DC LINE)

Maximum Line Length 1000 FT.
Marking Signal Level -12+0.5/-0V
Spacing Signal Level 0+0/-0.5V

1.5.3 Answer Back Memory Option

The Answer Back Memory Option allows the ADM 42 to respond to an ENQ input either from the host, or the keyboard. The answer back message is stored in a PROM which is programmed (up to 30 characters in length) in accordance with the user's requirements.

1.5.4 Alternate Character Generator Set Option

The Alternate Character Generator Set Option permits the ADM 42 to display data in many different fonts and languages. A ROM determines the font and/or language to be displayed on the monitor. When necessary, this option is supplemented by replacement key caps.

To provide the ADM 42 with a limited graphics capability, a graphics ROM is available for drawing forms and continuous lines.

1.5.5 TCU Desk Mount Option

The TCU Desk Mount Option allows the three separate ADM 42 assemblies (TCU, Keyboard Assembly, and Monitor Assembly) to be individually mounted on a desk. This option is supplied in kit form only, for customer installation.

1.6 ADDITIONAL OPTIONS

This group of options involve the installation of an option logic board in addition to the main logic board in the ADM 42. Certain standard option board features are included with the installation of the option board. Several other optional capabilities may be selected in addition to these standard features.

1.6.1 Standard Option Board Features

Installation of the option board includes a Serial Printer Port Option and a 31-Character Function Key Option.

1.6.1.1 Serial Printer Option

The Serial Printer Option allows the ADM 42 to be connected to an asynchronous serial printer via the PRINTER port. Included in the option is the ability to program the port so that the printer connected to the port may be controlled directly from the host computer without otherwise affecting ADM 42 operation.

1.6.1.2 31-Character Function Key Option

The 31-Character Function Key Option provides the capability of storing in memory 31 characters under each function key F1 thru F16. Using SHIFT in conjunction with any key F1 thru F16 extends the storage capacity to an additional 16 keys, or 32 in all.

1.6.2 Polling and Addressing Option

The Polling and Addressing Option allows the ADM 42 to accommodate the following polling modes: Standard Poll, Select, Sequential Select, Fast Select, Broadcast Select, Group Poll/Select and Multipoint Contention. Logic-board mounted DIP switches are provided to permit a user selected terminal address consisting of two ASCII characters. When active in a polling environment, the ADM 42 is prevented from initiating transmission of data except under the control of the network control center. The Polling and Addressing Option may be disabled by setting the appropriate DIP switch to OFF.

With Polling Option installed, it is possible for the host to enable or address the PRINTER port (when installed) and send a message to the terminal's addressable print buffer at the terminal's communication rate. The buffered data may then be read out to the printer at the printer

baud rate. No other ADM 42 operation is affected during this operation.

1.6.3 63-Character Function Key Option

The 63-Character Function Key Option provides the capability of storing in memory an additional 32 characters under each function key F1 thru F16, giving a total of 63 characters. Using SHIFT in conjunction with any key, F1 thru F16 extends the storage capacity to an additional 16 keys or 32 in all.

1.7 RELATED DOCUMENTS

- a. ADM 42 Operators Quick Reference Manual DP110.
- b. ADM 42 Maintenance Manual DP309.
- c. ADM 42 Illustrated Parts Catalog DP710

Table 1-1. Specifications

DISPLAY

CRT Screen: 15-inch diagonal, P4 Phosphor with non-glare faceplate

Refresh Rate: 50 Hz or 60 Hz, depending on line frequency, non-interlaced

Horizontal Rate: 19.2 kHz

Four Page Display: 2000 characters per page

Display Format: 80 characters/line by 25 lines

Display Area: 7.25" (18.4 cm) high x 9.75" (24.8 cm) wide

Character Set: 128 ASCII characters

Character Matrix: 7 x 9 dot matrix (plus full 2 dot descenders)

Character Field: 10 x 12 dot matrix (6 mm high x 3mm wide)

Cursor: 10 x 12 dot matrix. Reverse image block cursor

Cursor Controls: Backspace, Forespace, Up, Down, Home, Tab, Return, New Line, Read Cursor, Cursor Addressing, Line Feed, and Back Tab

Visual Attributes: Blink, blank, reverse video, underline. Protected fields are displayed in reduced intensity.

KEYBOARD FUNCTIONS

Keyboard: 26-letter alphabet with upper & lower case, numerics 0 through 9. Punctuation, Break, RUBout (delete), Caps Lock. Most keys are auto repeating (approximately 30 characters per second).

Numeric Key Pad: 15 keys, 0 through 9, Return, Tab, Comma, Period, and Minus

Cursor Control: Individual cursor control keys

Edit Keys: Character insert, character delete, line insert, line delete, line erase, page erase, clear space, clear null, page edit

Functional Command Keys: Break, Start of Message, End of Message, ESCape, Conversation/Block Mode, Program Mode, Write Protect Mode, Protect Mode, Reset/Command, RUBout (delete), Control, New Line, Tab/Back Tab, Page Forward, Page Back, Tab set/clear, Send Line, Send Page, Send Message and Print

Function Keys: 16 function keys shiftable to 32. Each key transmits SOH an ASCII character & carriage return.

FORMATTING AIDS

Protect Mode: Screen formatting of protected & unprotected fields displayed in dual intensity

Program Mode: Displays all control characters

EDITING

Edit Operations: Page/line edit, clear entire screen to spaces, clear unprotected positions to spaces, clear entire screen to nulls, clear unprotected positions to nulls, character insert by line or page basis, character delete by line or page basis, line insert, line delete, erase line to spaces, erase line to nulls, page erase to spaces and nulls. All edit operations can be activated remotely by the host using ESCape sequence.

TERMINAL 25TH STATUS/MESSAGE LINE

Terminal Status Line Displays: Page #, protect mode, write protect mode, keyboard lock, auto page, insert mode, program mode, page edit mode, ADM 1 mode, printing, error messages and user status

TRANSMISSION MODES

Block Transmission: Send line unprotected, send line all (shift), send page unprotected, send page all (shift), send message unprotected, send message all (shift), send cursor coordinate, send function sequence

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 1-1. Specifications (cont'd)

Conversation Mode: Conversation mode/half duplex, Conversation mode/full duplex, dynamic control of block/conversation and duplex mode from remote or keyboard

Control Characters: Control characters may be transmitted to the computer and/or entered on the screen.

Interfaces: RS232-C point-to-point or 20mA current loop, RS232-C extension

Data Rates: 50, 75, 110, 134.5, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, 9600

Parity: even, odd or none

OPERATING ENVIRONMENT

5°C to 50°C (41° to 122°F): 5% to 95% relative humidity, without condensation

Power Requirements:

Standard: 115V +10%, 60 Hz
Optional: 230V +10%, 50 Hz

Heat Dissipation: 534 BTU/HR

Dimensions:

Width: 18.88 inches (48.0 cm)
Depth: 25.38 inches (64.51 cm)
Height: 18.0 inches (45.72 cm)

Weight: 62 pounds (28.12 kg)

OPTIONS

Serial printer port (RS-232C)
Parallel internal system bus interface
Direct Connect Interface
Polling and Addressing
Answerback Memory
Alternate Character Generators:
 United Kingdom
 Limited Graphics: 11 special line drawing characters
Additional memory (4 additional pages)
Programmable function keys (31 or 63 characters)
PC-110 green phosphor
Special Personality
Micro Program Source Code Listing
Output cables
Clear or Blank key caps
Special paint
Key locks
Remote monitor stand
8-foot keyboard cable
6-foot monitor cable

SECTION II INSTALLATION

2.1 INTRODUCTION

Installation procedures involving unpacking, initial set-up, and operational checkout of the ADM42 Video Display Unit are described in this section of the manual.

2.2 SAFETY REQUIREMENTS

No special safety precautions are required for ADM 42 installation.

2.3 SITE REQUIREMENTS

The ADM 42 may conveniently be used in a normal office environment, as no special mounting provisions are required. However, it is recommended that a weather protected environment with an ambient temperature range of 41°F to 122°F (5°C to 50°C), relative humidity not greater than 95% be maintained for equipment use.

Whenever the ADM 42 is physically moved from a cold location to a warmer environment, be sure to allow sufficient time for the equipment temperature to equalize with the warmer location before activating the terminal. Condensation developed by the temperature differential could possibly impair the ADM 42.

CAUTION

Allow the unit to adjust to the new environment when changing locations from one room to another, before energizing the unit. Condensation could develop in the unit and adversely affect its operation.

The physical dimensions of the ADM 42 are shown in figure 2-1. The basic requirements for installation are the following:

- Table or desk mounting
- Standard three-pronged 115-volt or special 230-volt power outlet.
- Cable connection to the computer, modem, serial printer, or other auxiliary device. If connection to a remote computer is desired, a modem or data set is usually required.

2.4 INITIAL PREPARATION

2.4.1 Line Voltage Selection

The ADM 42 is shipped connected for either 115-volt or 230-volt operation, as specified in the purchase order. Any change in line voltage requires changes which can be accomplished only by authorized LSI maintenance personnel.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

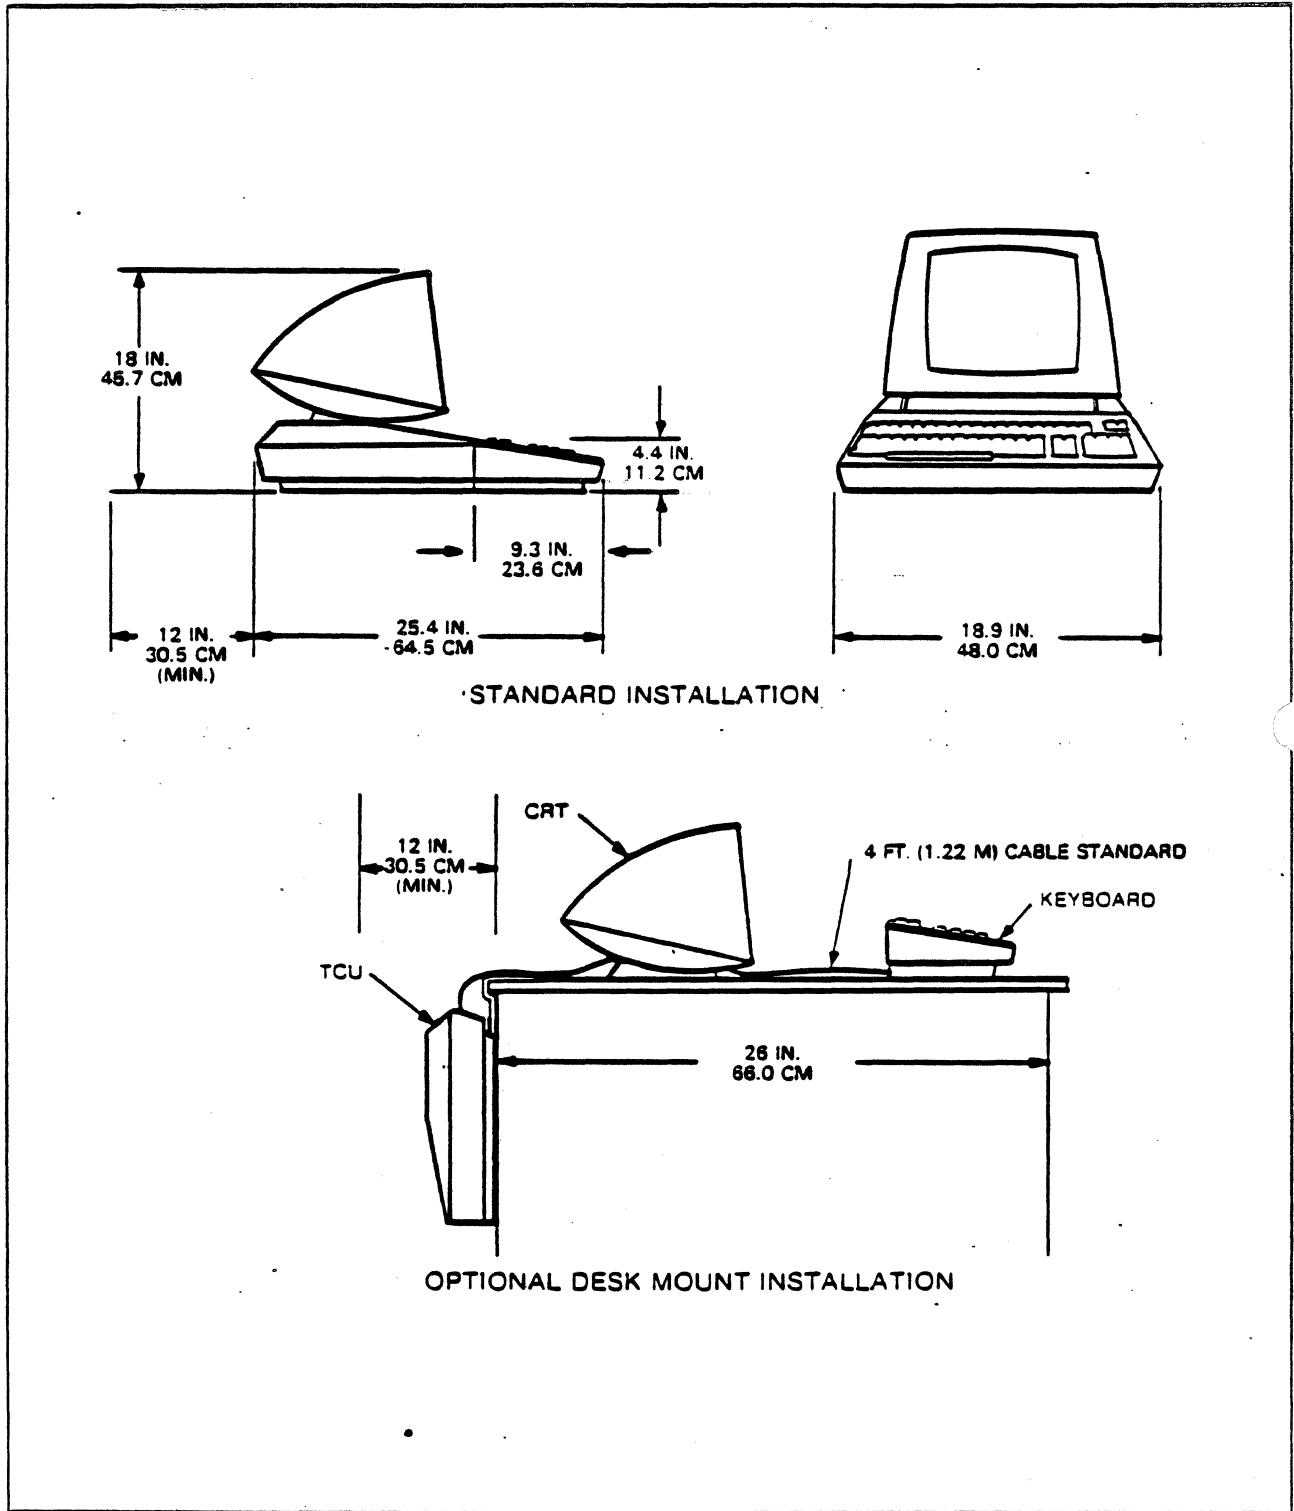


Figure 2-1. ADM 42 Mounting Requirements

2.4.2 Configuration Control DIP Switch Settings

CAUTION

Set DIP switches ON or OFF using DIP Switch Setting Tool 857001. DO NOT use a ball point pen or pencil; the switches could become contaminated with conductive debris.

2.4.2.1 Main Board Switches

Figures 2-2 and 2-3 show the locations and factory settings of the configuration control DIP switches and other front panel controls. Commonly used DIP switches are accessible through the ADM 42 access door on the front panel (see figure 2-2). The functions of all DIP switches are summarized in table 2-1. To gain unrestricted access to all DIP switches, proceed as follows:

1. If the unit is ON, set ON/OFF switch to OFF and remove power cord from its receptacle.
2. Remove monitor power cord from TCU receptacle. Remove monitor from the top of the Terminal Control Unit (TCU) and set the monitor safely aside.
3. Remove keyboard assembly by lifting the assembly straight up. Set the assembly safely aside.

4. Open front panel access cover and release the spring catch while lifting the front of the TCU cover, to expose the main logic board.
5. To return the terminal to service, reverse the above procedure.

2.4.2.2 Option Board DIP Switches

Figure 2-4 shows the locations and the factory settings of the Option Board configuration control DIP switches. Refer to table 2-2 for a summary of the functions of these switches. To gain unrestricted access to these switches, proceed as follows:

1. If the unit is operating, set ON/OFF switch to OFF and remove power cord from its receptacle.
2. Remove all cable connections from the rear of the terminal.
3. Remove monitor and keyboard assembly; set each safely aside.
4. Open front panel access cover and release the spring catch while lifting the front of the TCU cover.
5. From the left side, raise the main logic board to its vertical position using the slots provided. The option board is now exposed.
6. To return the terminal to service reverse the above procedure.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

S5 @ 12M WORD STRUCTURE		S6 @ 14M ATTRIBUTE CONTROL		S7 @ 16M DISPLAY CONTROL	
OFF	ON	OFF	ON	OFF	ON
BRK DIS	<input type="radio"/> 1 <input checked="" type="radio"/> 2	BRK ENA	<input type="radio"/> 1 <input checked="" type="radio"/> 2	ADM-42 ATT MODE	<input checked="" type="radio"/> 1 <input type="radio"/> 2
60 HZ	<input type="radio"/> 2 <input checked="" type="radio"/> 3	50 HZ	<input type="radio"/> 2 <input checked="" type="radio"/> 3	PAGE ATT	<input checked="" type="radio"/> 1 <input type="radio"/> 2
ODD PAR	<input type="radio"/> 3 <input checked="" type="radio"/> 4	EVEN PAR	<input type="radio"/> 3 <input checked="" type="radio"/> 4	BLANK ATT	<input type="radio"/> 3 <input checked="" type="radio"/> 4
1 STOP BIT	<input type="radio"/> 4 <input checked="" type="radio"/> 5	2 STOP BITS	<input type="radio"/> 4 <input checked="" type="radio"/> 5	RESERVED	<input type="radio"/> 4 <input checked="" type="radio"/> 5
8 BITS	<input type="radio"/> 5 <input checked="" type="radio"/> 6	7 BITS	<input type="radio"/> 5 <input checked="" type="radio"/> 6	RESERVED	<input type="radio"/> 5 <input checked="" type="radio"/> 6
NORM RCV BUFF	<input type="radio"/> 6 <input checked="" type="radio"/> 7	EXPAND RCV BUFF	<input type="radio"/> 6 <input checked="" type="radio"/> 7	RESERVED	<input type="radio"/> 6 <input checked="" type="radio"/> 7
SEND BIT 8=0	<input type="radio"/> 7 <input checked="" type="radio"/> 8	SEND BIT 8=1	<input type="radio"/> 7 <input checked="" type="radio"/> 8	RESERVED	<input type="radio"/> 7 <input checked="" type="radio"/> 8
HALF DUPLEX	<input type="radio"/> 8 <input checked="" type="radio"/> 9	FULL DUPLEX	<input type="radio"/> 8 <input checked="" type="radio"/> 9	RESERVED	<input type="radio"/> 8 <input checked="" type="radio"/> 9

● = FACTORY SETTING

CONTRAST slide potentiometer controls the character brightness relative to the background.

BRIGHTNESS slide potentiometer controls overall brightness of display.

ACTIVITY indicator lights when communication network is active on a polling terminal.

TRANSMIT indicator lights when terminal is transmitting data.

RECEIVE indicator lights when terminal is receiving data.

BAUD RATES		
MODEM	PRINTER	POSITION = BAUD RATE
0 = 50	5 = 300	10 = 2400
1 = 75	6 = 600	11 = 3600
2 = 110	7 = 1200	12 = 4800
3 = 134.5	8 = 1800	13 = 7200
4 = 150	9 = 2000	**14 = 9600

* Printer port factory setting
**Modem port factory setting

Figure 2-2. ADM 42 Front Panel Controls and Indicators

Figure 2-3. Connector and DIP Switch Locations on Main Logic Board

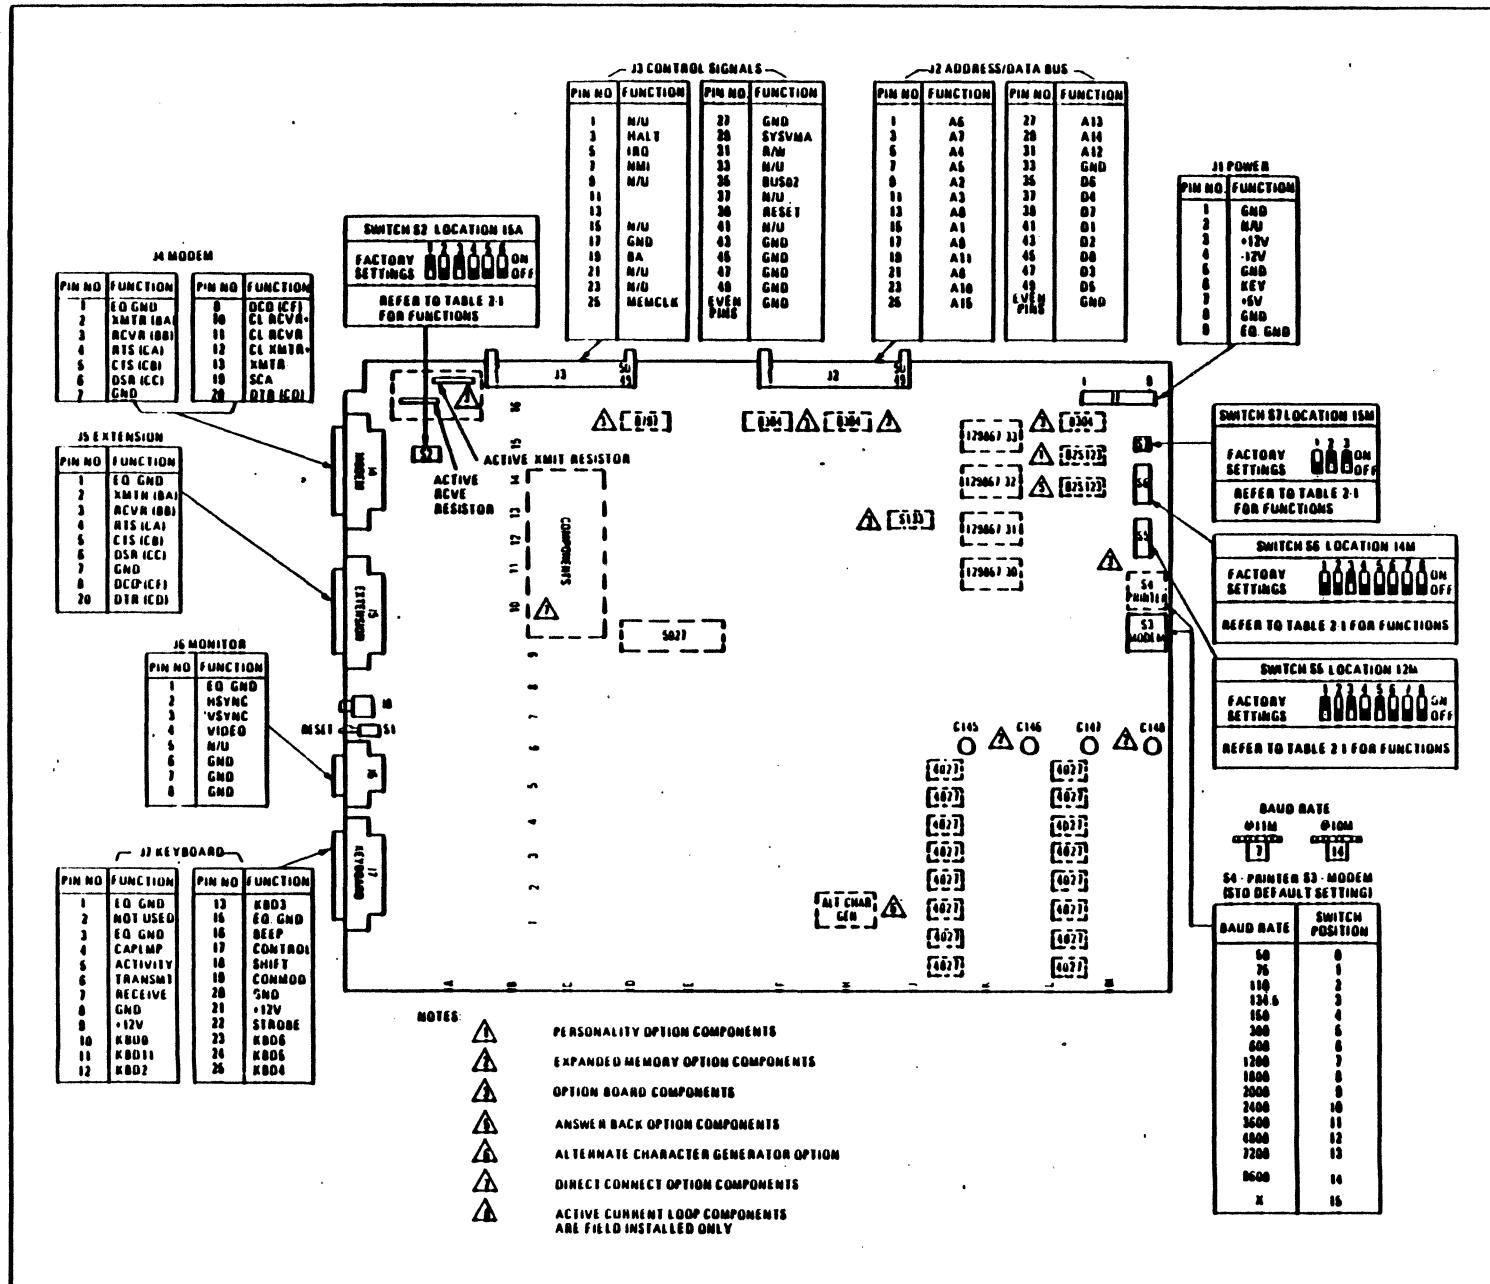


Figure 2-4. Connector and DIP Switch Locations on Option Logic Board

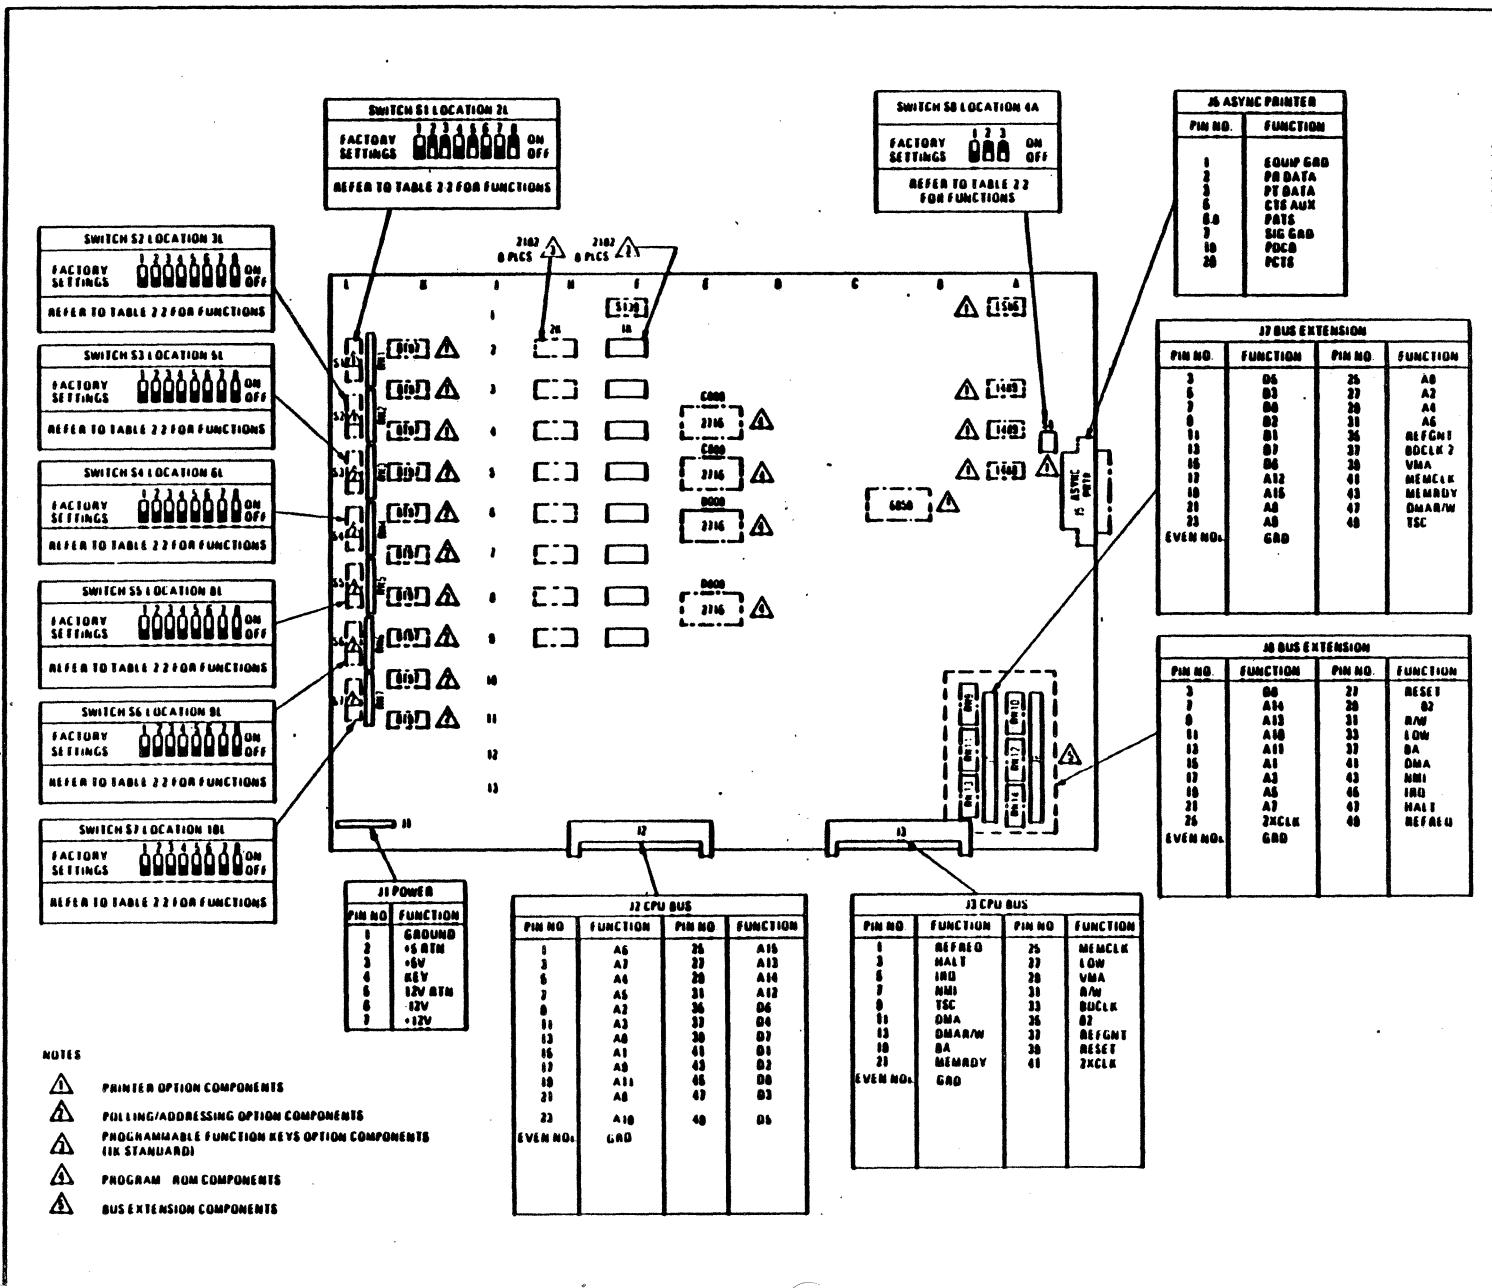


Table 2-1. Main Logic Board Configuration Control Switch Settings

SWITCH BANK S2 @ 15A INTERFACE					OPERATION
<u>SW1</u>	<u>SW2</u>	<u>SW3</u>	<u>SW4</u>	<u>SW5</u>	
ON	OFF	ON	OFF	OFF	*RS-232C enabled; Direct Connect disabled.
OFF	OFF	ON	OFF	ON	Enable Current Loop; Direct Connect disabled.
OFF	ON	OFF	ON	OFF	Enable Direct Connect; Disable RS-232C and Current Loop.
All other SW1, SW2, SW3, SW4, SW5 combinations not allowed					
<u>SW6</u>					*OFF disables secondary channel control (SCF); ON is not defined.
SWITCH BANK S5 @ 12M WORD STRUCTURE			OPERATION		
<u>SW1</u>			*ON enables BREAK key; OFF disables key		
<u>SW2</u>			ON selects 50 Hz monitor refresh rate; *OFF selects 60 Hz monitor refresh rate		
<u>SW5</u>	<u>SW4</u>	<u>SW3</u>	MODEM PORT SELECTION		
ON	ON	ON	Selects 7 DATA bits, even parity, 2 STOP bits		
ON	ON	OFF	Selects 7 DATA bits, odd parity, 2 STOP bits		
ON	OFF	ON	*Selects 7 DATA bits, even parity, 1 STOP bit		
ON	OFF	OFF	Selects 7 DATA bits, odd parity, 1 STOP bit		
OFF	ON	ON	Selects 8 DATA bits, no parity, 2 STOP bits		
OFF	ON	OFF	Selects 8 DATA bits, no parity, 1 STOP bit		
OFF	OFF	ON	Selects 8 DATA bits, even parity, 1 STOP bit		
OFF	OFF	OFF	Selects 8 DATA bits, odd parity, 1 STOP bit		
<u>SW6</u>			ON enables the 2048-byte expanded input buffer; *OFF enables the standard input buffer.		
<u>SW7</u>			ON sends Bit 8 as 1 (mark); *OFF sends Bit 8 as 0 (space), when 8-bit word structure has been selected.		
<u>SW8</u>			ON selects Full Duplex Mode at power-up; *OFF selects Half Duplex Mode. Setting may be modified dynamically from host or keyboard.		

*Indicates standard factory setting.

NOTE: If the position of any DIP switch is changed, a RESET (with power on) must be executed in order for the change to take effect. Depressed side of the switch is the set position.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 2-1. Main Logic Board Configuration Control Switch Settings (cont'd)

SWITCH BANK S6 @ 14M ATTRIBUTE CONTROL	OPERATION
SW1	*OFF establishes ADM 42 Video Attribute Control Mode (requiring ESC G entry code). ON establishes ADM 2 Video Attribute Control Mode (requiring appropriate ADM 2 entry code)
SW2	*OFF causes any Video Attribute Control Sequence (ESC G) to be effective for entire page. ON causes sequence to be effective only to the end of current line.
SW3	Establishes whether blanked fields or underlined fields may be selected using the appropriate Video Attribute Control Sequence (ESC G): OFF = Blanked fields *ON = Underlined fields
SW4 thru SW8	Reserved
SWITCH BANK S7 @ 16M DISPLAY CONTROL	OPERATION
SW1	*OFF causes SPACE to be displayed, instead of the code identifying the attribute selected. ON causes the appropriate attribute code to be displayed.
SW2	OFF allows horizontal segments of adjacent Line Drawing Set symbols to be joined. *ON prevents joining of adjacent horizontal segments. (Settings are applicable only when Alternate Character Generator Option is installed and enabled.)
SW3	OFF causes NULLS to be displayed as NULLS; *ON causes NULLS to be displayed as SPACES.

*Indicates standard factory setting

NOTE: If the position of any DIP switch is changed, a RESET (with power on) must be executed in order for the change to take effect. Depressed side of the switch is the set position.

Table 2-2. Option Logic Board Configuration Control Switch Settings

SWITCH BANK S1 @ 2L SERIAL PRINTER WORD FORMAT			OPERATION
SW1			*OFF enables ASYNCHRONOUS PRINTER port ON enables PARALLEL PRINTER port
SW2			OFF enables communication with the printer via the print buffer (last page of display memory). *ON disables print buffer
<u>SW5</u>	<u>SW4</u>	<u>SW3</u>	<u>PRINTER PORT SELECTIONS</u> ON ON ON Selects 7 DATA bits, even parity, 2 STOP bits ON ON OFF Selects 7 DATA bits, odd parity, 2 STOP bits ON OFF ON *Selects 7 DATA bits, even parity, 1 STOP bit ON OFF OFF Selects 7 DATA bits, odd parity, 1 STOP bit OFF ON ON Selects 8 DATA bits, no parity, 2 STOP bits OFF ON OFF Selects 8 DATA bits, no parity, 1 STOP bit OFF OFF ON Selects 8 DATA bits, even parity, 1 STOP bit } 8th BIT = 0 OFF OFF OFF Selects 8 DATA bits, odd parity, 1 STOP bit
SW6, SW7			Reserved
SW8			OFF enables the ASYNCHRONOUS PRINTER port receive (input) line *ON disables the receive (input) line
SWITCH BANK S2 @ 3L			OPERATION
SW1 thru SW8			Reserved
SWITCH BANKS S3 @ 5L 1ST POLLING ADDRESS			OPERATION
SW1 thru SW7			Define the ASCII code for the 1st Polling Address Character (^A1) *OFF = Logic 1; ON = Logic 0
SW8			*OFF disables Polling function ON enables Polling function
SW1 thru SW7			Define the ASCII code for the 2nd Polling Address character (^A2). *OFF = Logic 1; ON = Logic 0

*Indicates standard factory settings

NOTE: If the position of any DIP switch is changed, a RESET (with power on) must be executed in order for the change to take effect. Depressed side of the switch is the set position.

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

Table 2-2. Option Logic Board Configuration Control Switch Settings (cont'd)

SWITCH BANK S4 @ 6L 2ND POLLING ADDRESS	OPERATION
SW8	*OFF disables Polling communications buffer ON enables buffer (Personality Byte 8 bit X ₈ must be set)
SWITCH BANK S5 @ 8L 1ST GROUP POLL ADDRESS	OPERATION
SW1 thru SW7	Define the ASCII code for the 1st Group Poll Address character (^A ₁). *OFF = Logic 1; ON = Logic 0
SW8	Reserved
SWITCH BANK S6 @ 9L 2ND GROUP POLL ADDRESS	OPERATION
SW1 thru SW7	Define the ASCII code for the 2nd Group Poll Address character (^A ₂). *OFF = Logic 1; ON = Logic 0
SW8	Reserved
SWITCH BANK S7 @ 11L GROUP POLL ADDRESS	OPERATION
SW1 thru SW7	Define the ASCII code for the Group Select Address character (^G _a). *OFF = Logic 1; ON = Logic 0
SW8	Reserved
SWITCH BANK S8 @ 4A PRINTER	OPERATION
SW1	*OFF disables reception of the printer Carrier Detect (DCD) signal via connector J5-20 ON enables reception of DCD via connector J5-20
SW2 SW3	PRINTER BUSY SELECTIONS
ON ON	*Selects BUSY LOW via connector J5-19
ON OFF	Selects BUSY HIGH via connector J5-19
OFF ON	Not allowed
OFF OFF	BUSY not active (Unit senses printer as never BUSY)

*Indicates standard factory settings

NOTE: If the position of any DIP switch is changed, a RESET (with power on) must be executed in order for the change to take effect. Depressed side of the switch is the set position.

2.5 INTERFACE INFORMATION

The ADM 42 may be cabled directly to a local computer, serial printer, or other auxiliary device; or it may be connected via telephone data lines to a remote computer located anywhere in the world. Remote computer connections require the use of a modem or data set. Figure 2-5 shows a typical ADM 42 application, while figure 2-6 shows the rear panel locations of the interface connectors.

2.5.1 Standard or RS-232C Extension Interface

The Standard RS-232C interface consists of connecting a computer directly to the ADM 42 through the MODEM port. The RS-232C extension interface requires the use of the MODEM port. Through the EXTENSION port several terminals or other devices may be daisychained, usually in a polling environment. Figure 2-7 shows the logic associated with these interfaces. Refer to table 2-1 for the settings of DIP switches in switch bank S2 which are required to enable these interfaces.

2.5.2 Current Loop Interface

The ADM 42 can be configured for current loop using the MODEM port, without interfering with normal RS-232C signals required for asynchronous operation. The current loop interface increases the maximum permissible distance between the terminal and connected device. Figure 2-8 shows the logic associated with passive and active current loop interfaces. Refer to table 2-1 for the settings of DIP switches in switch bank S2 which are required to enable Current Loop operation.

2.5.3 Direct Connect Interface

The Direct Connect interface using the MODEM port, is used with many Burroughs-type computer systems operating in Half-Duplex Mode, in a polling environment. The interface can accommodate up to nine terminals connected to the line pair (AWG #24 twisted pair, or larger) having a maximum length of 1000 feet. Figure 2-9 shows the logic associated with this interface. Refer to table 2-1 for the settings of DIP switches in switch bank S2 which are required to enable Direct Connect.

2.5.4 Printer Interface

The PRINTER port is used to connect the ADM 42 directly to an asynchronous serial printer. Figure 2-10 shows the logic associated with this interface. The option logic board must be installed in addition to the main board. Refer to tables 2-1 and 2-2 for the settings of DIP switches on the main board and option board respectively, required to enable the PRINTER interface.

2.6 INSTALLING THE ADM 42

To install the ADM 42, proceed as follows:

1. Connect the data interface cable to the terminal using the appropriate interface information (paragraph 2.5).
2. Check the ON/OFF switch (figure 2-6) to ensure that it is set to OFF.
3. Plug the terminal into a grounded AC outlet of the proper voltage.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

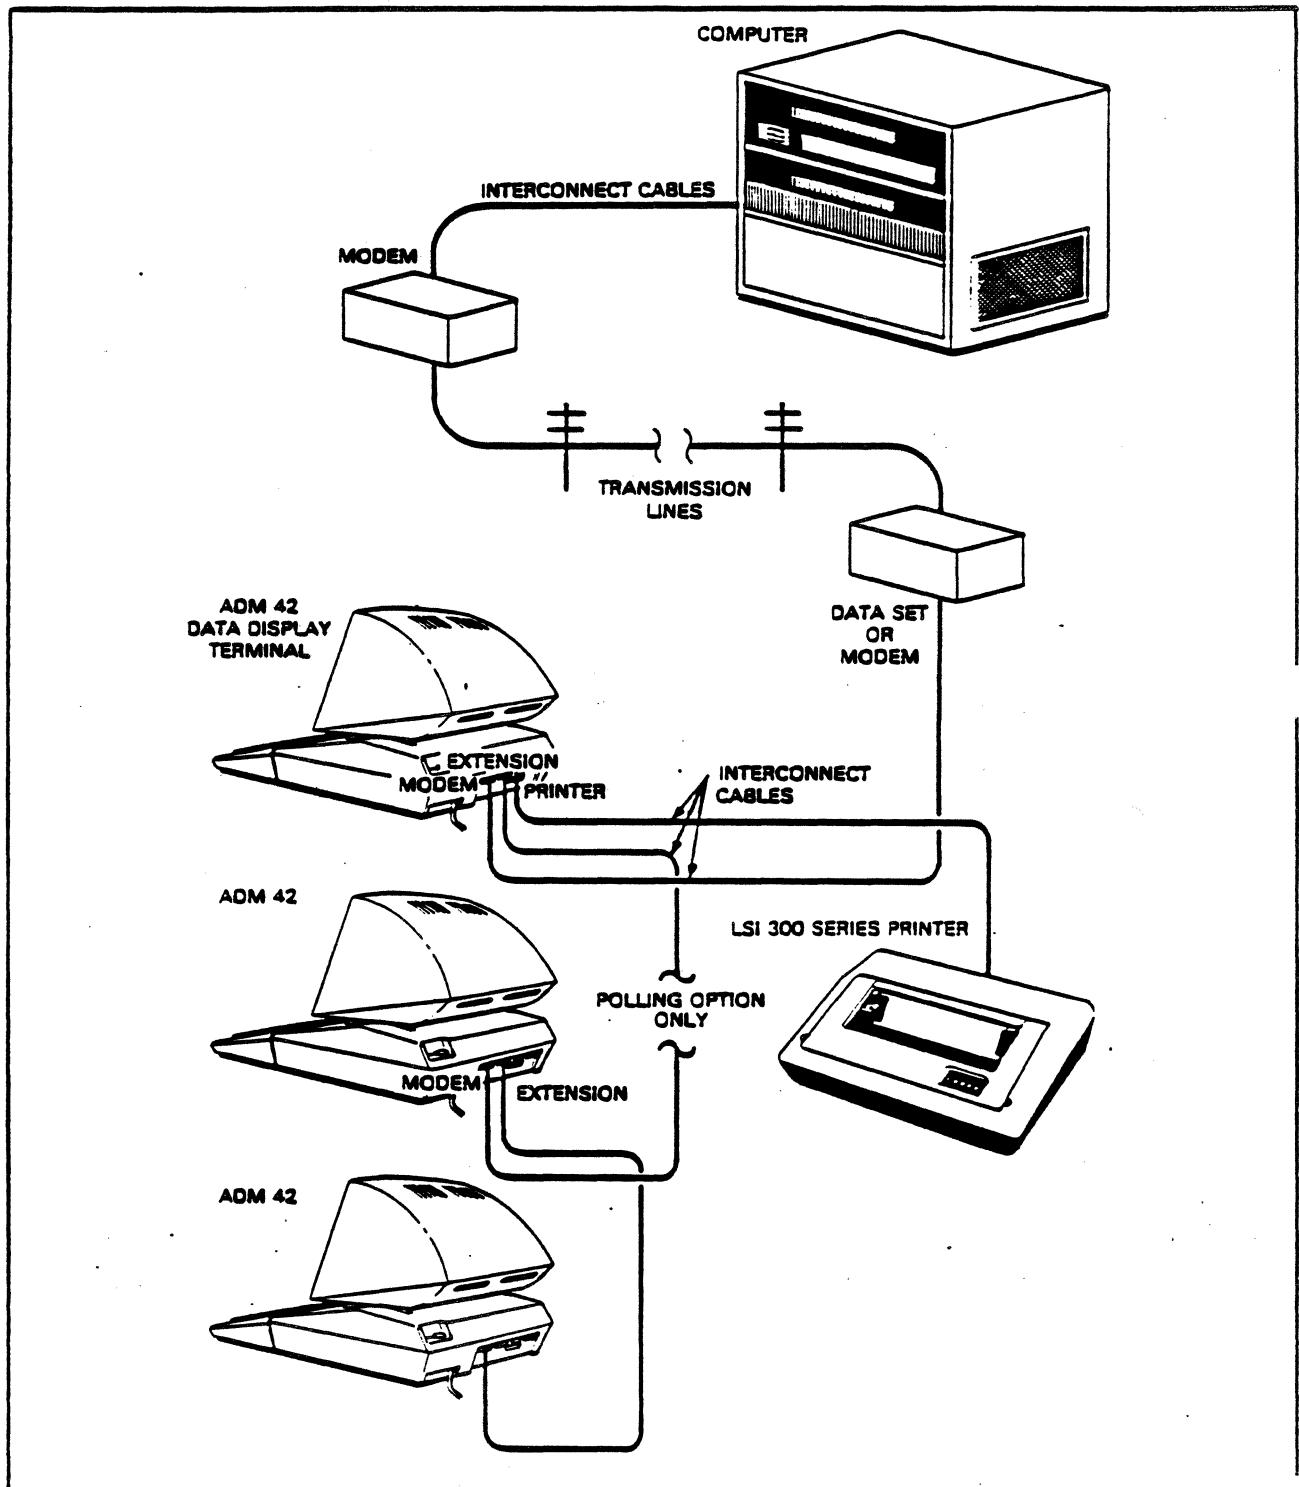


Figure 2-5. Typical ADM 42 Application

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

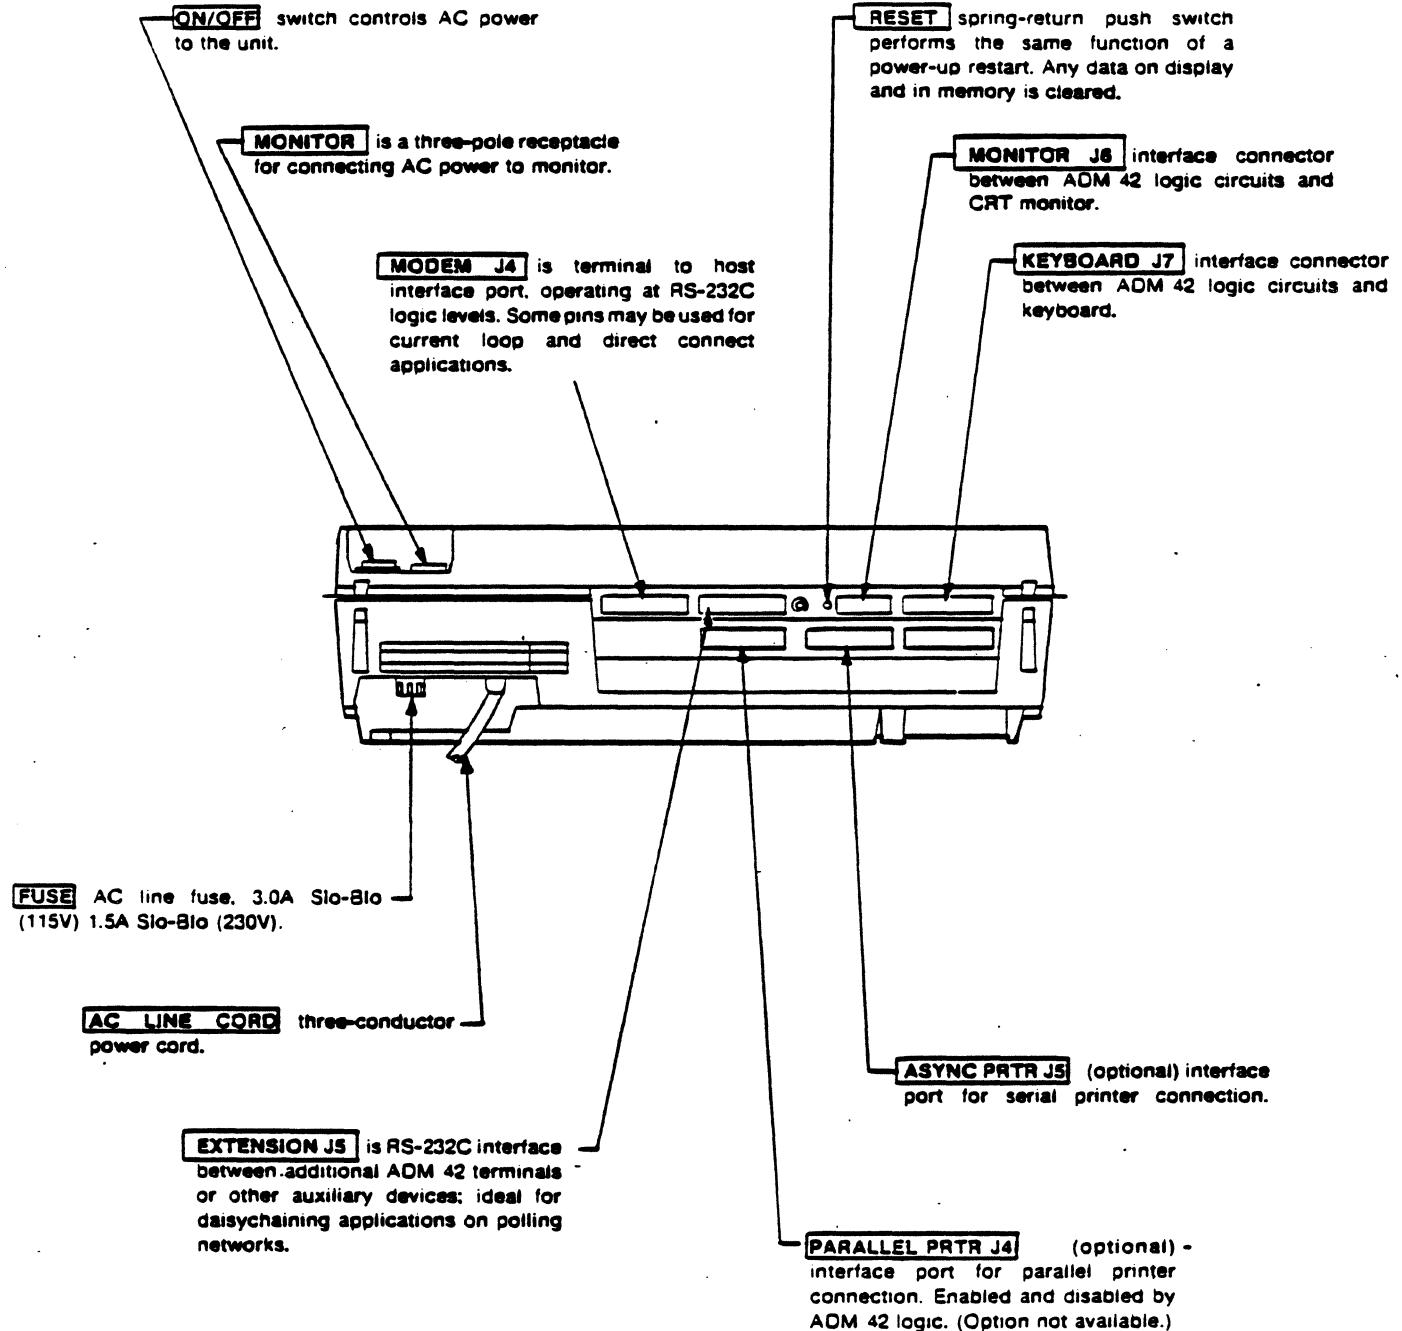


Figure 2-6. ADM 42 Rear Panel Controls

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

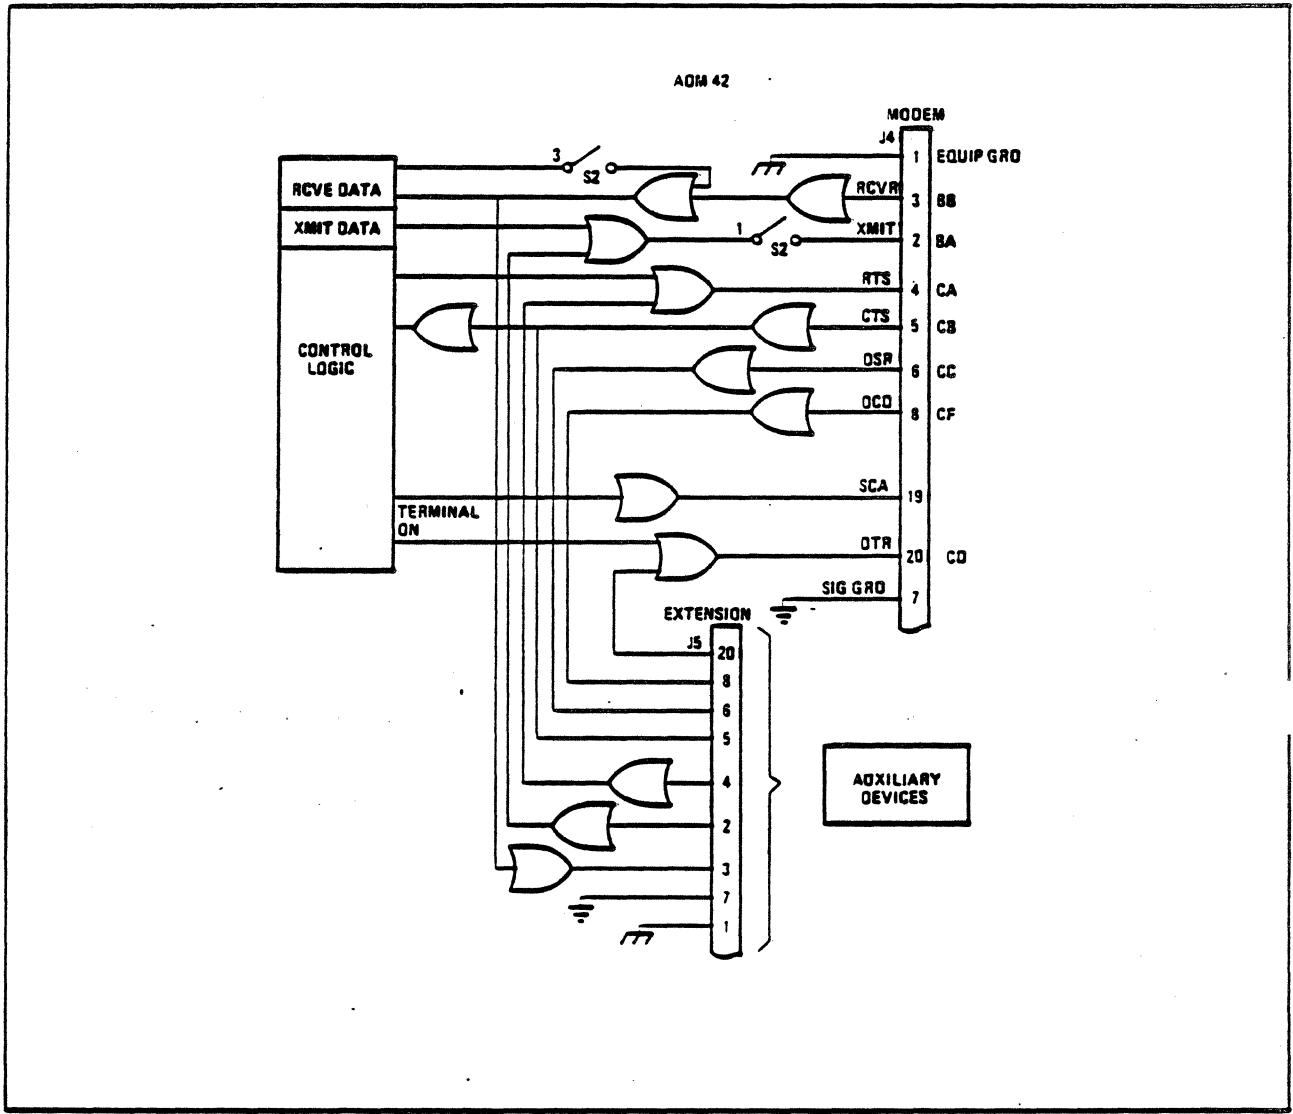


Figure 2-7. MODEM and RS-232C Extension Interface Logic

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

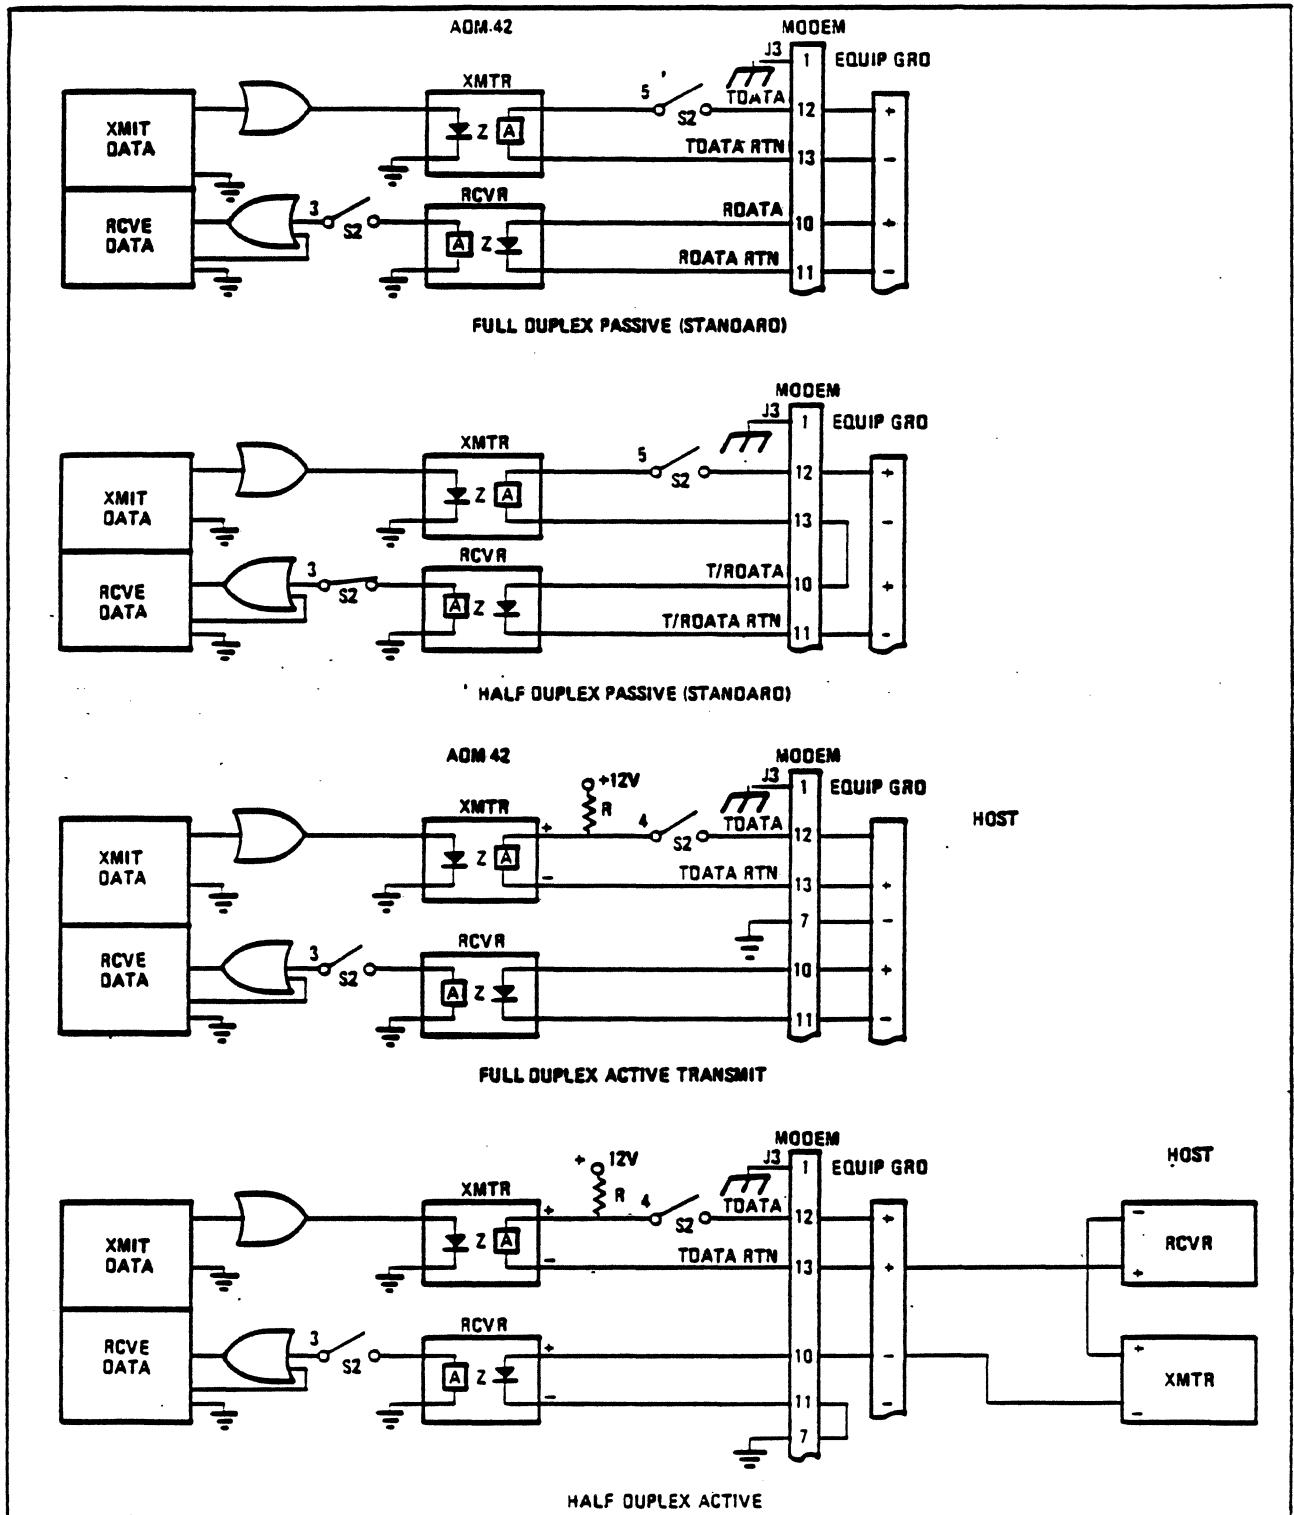


Figure 2-8. Current Loop Interface Logic

4. Set the MODEM and PRINTER (if required) BAUD RATE switches (see figure 2-2) to the desired baud rate.

Note

The BAUD RATE switches are factory set as follows:

Switch	Position	Baud Rate
MODEM	14	9600
PRINTER	7	1200

5. Set the configuration control DIP switches (refer to tables 2-1 and 2-2) to the appropriate positions for controlling the ADM 42 characteristics.
6. Turn on the terminal.

2.7 POWER TURN-ON

1. Set the ON/OFF switch to ON. Blower must be running. (See figure 2-6.)
2. Wait approximately 20 seconds for the unit to warm up and self test. The cursor should appear at the HOME position, and PG=1 should appear in the 25th Status Line.

CAUTION

To avoid damage to the CRT phosphor, it is recommended that the display brightness be reduced when the display remains unchanged for significant periods of time.

3. Adjust CONTRAST and BRIGHTNESS controls (see figure 2-2) for desired display brightness.

4. If the cursor does not appear, or if an error indication appears, execute from the keyboard **[CTRL SHIFT] RESET/CMD**.

5. If the display still does not appear, troubleshoot the monitor, then the terminal electronics, if necessary.
6. If a memory error is present, the display will indicate the source of error (memory location) and the bit(s) in error. For example, assume indication:

"01 0400 80 0800"

- 01 0400 Signifies that the LSB at memory address 0400 is bad.
- 80 0800 Signifies that the MSB at memory address 0800 is bad.
7. Troubleshoot appropriate terminal electronics according to the memory error indication.

8. Terminal operation may continue without interruption without regard for errors detected; however results involving the indicated memory locations are unpredictable.

2.8 POWER TURN-OFF

1. If the terminal contains any information which must be retained, be sure to transmit this information immediately to the host computer. This is necessary, as the display memory is cleared when power is removed from the terminal. As an alternate measure, print the information prior to turning off the terminal.
2. Turn off the ADM 42 by setting ON/OFF switch to OFF.

2.9 CARE OF THE ADM 42

Proper care of the ADM 42 Video Display Unit consists of performing the routine cleaning and inspection procedures listed in the following paragraphs.

2.9.1 Cleaning

At periodic intervals, clean the exterior housing and lightly dust the unit using a soft brush or damp lint-free cloth. However, paper towels may be substituted if desired. Remove smudges from the monitor exterior housing with conventional spray cleaners or alcohol. Do not use petroleum base cleaners such as lighter fluid, as this could be harmful to the painted surface.

This terminal is equipped with a Sun-flex non-glare filtered screen. Observe the following precautions when cleaning the screen:

1. Remove dust from the glare filter surface by lightly rubbing with the treated cloth which is supplied with each terminal.
2. Occasionally shake out excess dust from the cloth.
3. To remove pencil marks, grease pen marks, etc. from the filter, use a clean lint-free cloth (NOT THE CLOTH PROVIDED WITH THE TERMINAL) and plain rubbing alcohol, wiping the filter surface while the filter is in place.

2.9.2 Inspection

Periodically, inspect switches and keyboard assembly for freedom of movement. Determine that the intensity of character trace on the CRT screen has not diminished. Any required mechanical and electrical adjustment shall only be performed by an authorized Lear Siegler Service Representative.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

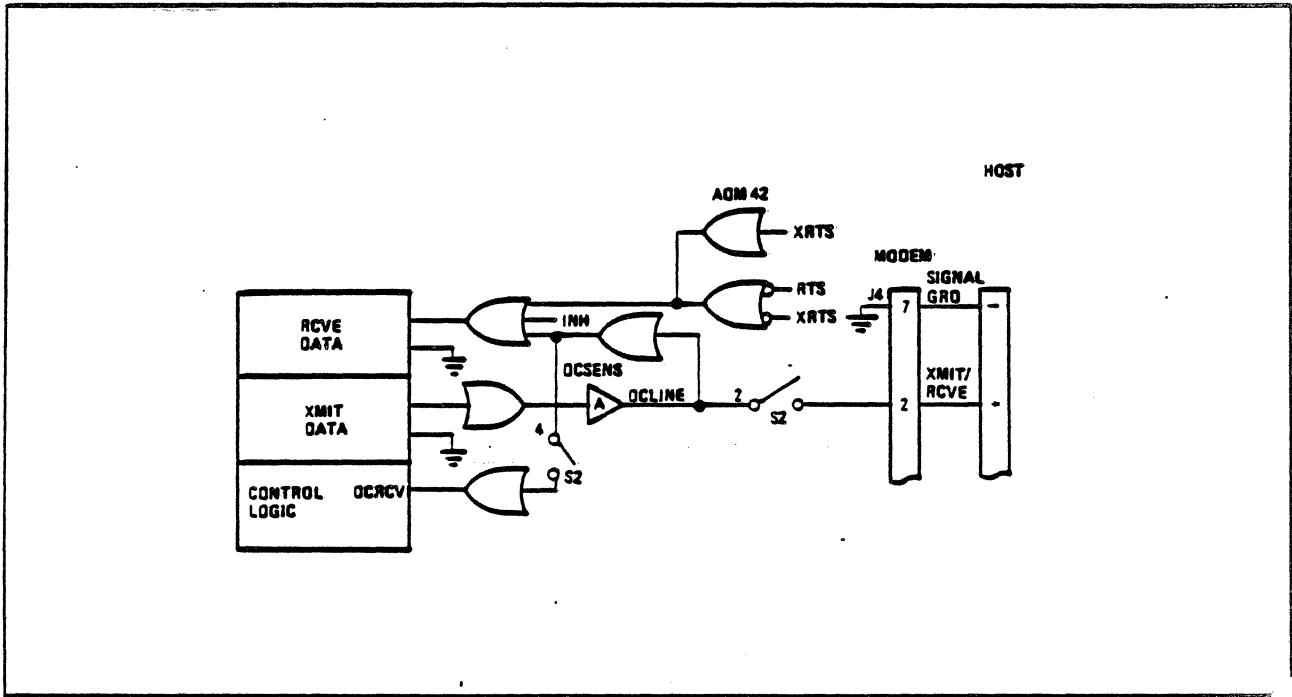


Figure 2-9. Direct Connect Interface Logic

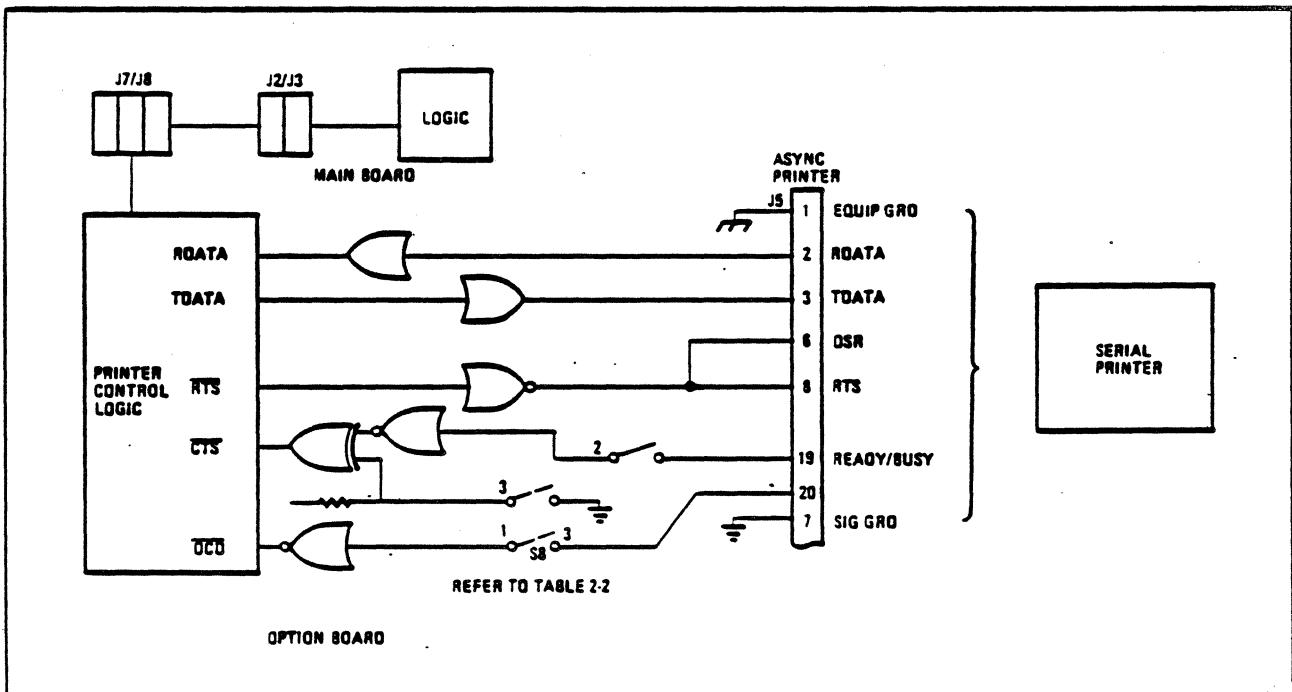


Figure 2-10. Printer Interface Logic

SECTION III FUNCTIONAL DESCRIPTION

3.1 INTRODUCTION

This section describes the functional characteristics of the ADM 42 which contribute to the full operational use of the terminal.

Ordinarily each keystroke typed by the operator is independent of the one preceding or following it.

In fact, the rollover protection feature of the terminal prevents the production of a second character code before the key already typed is released. There are some exceptions, such as when using the **SHIFT** and **CTRL** keys. In this manual, a special convention is used to identify keystrokes and whether successive keystrokes are independent or concurrent, as follows:

KEYSTROKES	DESCRIPTION
ESC Z	Independent keystrokes typed sequentially. This operation code executes a special RESET operation, discussed in Section IV.
SHIFT RESET/CMD	Concurrent keystrokes. The second key must be pressed while holding SHIFT . Refer to Section IV for a discussion of this RESET operation.
CTRL SHIFT RESET/CMD	Three concurrent keystrokes. The sequence in which CTRL and SHIFT are operated is not significant; however, both keys must be held down while typing the third key. Refer to Section IV for a discussion of this RESET operation.

3.2 OPERATIONAL DESCRIPTION

The ADM 42 is a microprocessor-based device which provides a means of communicating with a host computer, and which allows the user full control of the content and format of data entered by means of the keyboard. Figure 3-1 illustrates the flow of data through the functional areas of the ADM 42.

The standard ADM 42 consists of a power supply, keyboard, control section (MPU), video logic and control, monitor display, configuration control switches, and interface logic. The interface logic provides the standard and RS-232C extension interfaces and the serial printer interface.

3.2.1 Keyboard

Data to be processed by the terminal is either entered from the keyboard or is sent from the host computer. Keyboard entry is made using one of the 118 keys on the keyboard. Each keystroke is encoded into an ASCII character which appears on seven data lines connected to the MPU. Accompanying the 7-bit character is a keystroke which alerts the program that a character has been input from the keyboard.

3.2.2 Control Section (MPU)

The Control Section (MPU) contains the microprocessor and various integrated circuits which control all the operations of the ADM 42. These operations include: timing and control, data handling and storage, interpreting and responding to control commands from the keyboard and the computer, video control, I/O interfacing, and status control.

Data entering the terminal is placed on the Data Bus and sent to the MPU section which contains the microprocessor and various other integrated circuits and switches. The MPU, executing a stored read only memory (ROM) program, decodes the input data and reformats it into data and control instructions for the video logic and control section.

3.2.3 Video Logic and Control

The Video Logic and Control section contains the display logic needed to drive the monitor, 8K of random access memory (RAM), and character generation circuits, as well as the video logic and 15-inch monitor. The monitor screen can display 24 lines of data containing as many as 80 characters per line, plus a 25th Status Line. Data from the MPU is written into the video RAM; control instructions from the MPU cause the contents of the RAM to be periodically displayed on the monitor screen.

3.2.4 Interface Section

Data and control information from a remote computer is routed through the MODEM port to the interface section, and then to the MPU. The MPU causes data to be displayed on the monitor in the same manner as the keyboard data. The interface contains the logic circuitry appropriate for interfacing with RS-232C point-to-point signals or 20-ma current loop signals, and modem logic. Optional circuits for an RS-232C serial printer and direct connect interfaces are available. The interface section also contains the baud rate clock and baud rate switches which permit the ADM 42 to receive or transmit data at selected baud rates from 50 to 9600 baud.

The ADM 42 transmits data by retrieving data from the video RAM and placing it on the Data Bus for routing to the MPU. The MPU reformats the data and routes data and control information to the interface section over the Data Bus. Interface logic is used to prepare the data and control information for transmission to the appropriate device connected.

3.2.5 System Configuration Switches

Several banks of system configuration switches are provided to control various attributes and characteristics of the ADM 42. The switches are mounted on the main and option logic boards. The characteristics thus controlled include: mode of transmission/reception, parity, word structure refresh rate, cursor/display attributes, and the polling address (optional).

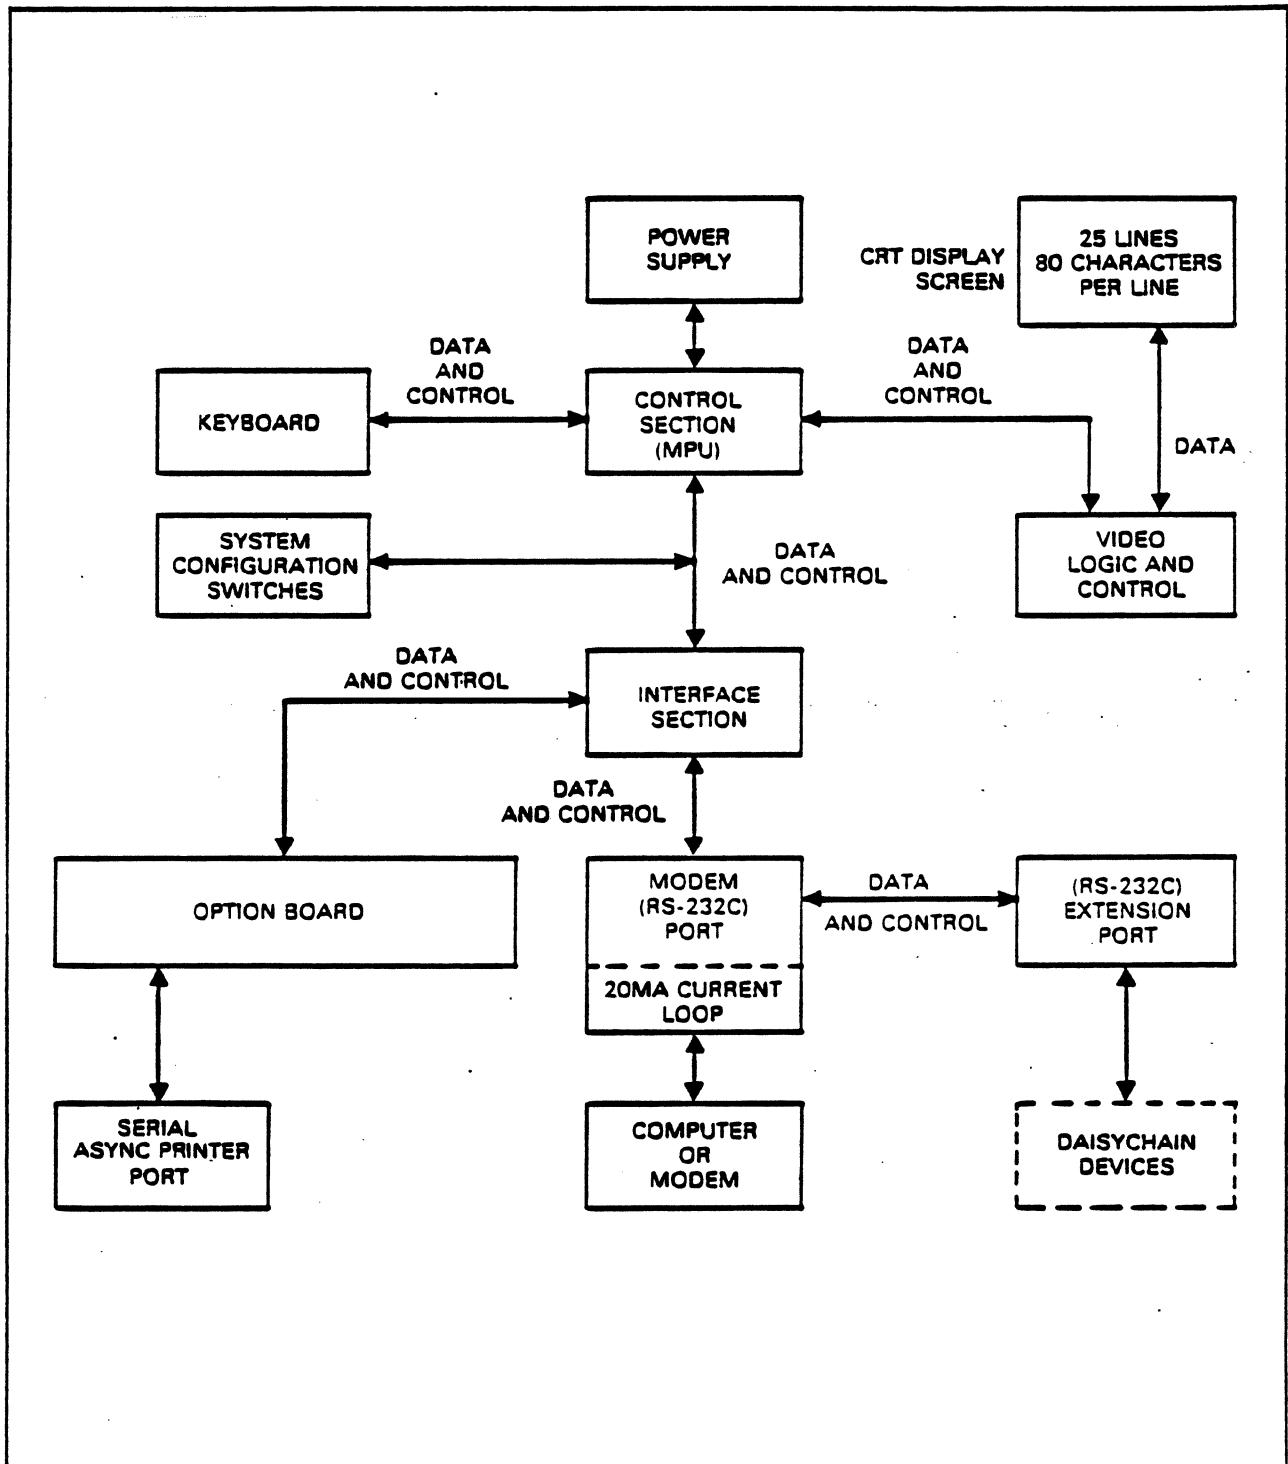


Figure 3-1. ADM 42 Data Flow Block Diagram

3.2.6 Regulated Power Supply

The ADM 42 power supply is a regulated power supply located adjacent to the main printed circuit board assembly. Three regulated dc voltages are provided: +5 volts, and +12 volts. The power supply can accept line voltage inputs of 115 Vac or 230 Vac (with 230-volt power supply option).

3.3 STANDARD CHARACTER FORMAT

The standard ADM 42 character set contains 128 ASCII characters, 32 of which are control characters. (See figure 3-2.) The entire character set may be displayed on the monitor by placing the terminal in Program Mode or by preceding control characters with an ESC code.

3.4 ADM 42 WORD STRUCTURE

The ADM 42 can transmit and receive data characters in any one of the asynchronous character formats shown in figure 3-3. The appropriate word format for the user's application (including the use of a serial printer) is selected by means of the indicated DIP switches.

3.5 DATA TRANSMISSION CHARACTERISTICS

Data which has been written in memory and displayed on the monitor may be transmitted to the host computer either character-by-character as during Conversation Mode operation, or in message blocks, as during Block Mode operation. Transmission is asynchronous, using one of the word formats specified in figure 3-3, and at a transmission rate determined by the application. Using the MODEM BAUD RATE or optional PRINTER BAUD RATE switch on the front panel (see figure 2-2), it is possible to select a data transmission rate of 50, 75, 110, 134.5, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, or 9600 baud. The standard ADM 42 MODEM port is set for 9600 baud at the factory. The factory

setting for the optional ASYNC PRINTER port is 1200 baud.

3.5.1 Conversation Mode Characteristics

Conversation Mode communication between the ADM 42 and the host computer is character-by-character only. Transmission may be in one direction at a time, as in Half-Duplex operation; or in both directions simultaneously, as in Full-Duplex operation. At power-up, the standard ADM 42 is initialized in Block Mode. Refer to Section IV for the modifications possible using personality.

The ADM 42 may receive data over the RCV line (BB) with Carrier Detect (DCD) over line CF. Data for transmission is controlled by Request to Send (RTS) over line CA, and Clear to Send (CTS) over line CB.

Request to Send (RTS) is set (high) to inform the host that the ADM 42 wishes to transmit. Clear to Send (CTS) from the host or modem should be set (high) to initiate ADM 42 transmission. In Full Duplex Mode, RTS is set high and remains high. In Half-Duplex Mode, RTS is reset to low whenever Return (CR), End of Transmission (EOT) or End of Text (ETX) is sensed by ADM 42 logic.

SHIFT|CONV sets ON LINE Mode in which Data Terminal Ready (DTR) is held high. **SHIFT|CONV** also sets OFF LINE Mode in which DTR is held low.

3.5.2 Block Mode Characteristics

In Block Mode, information is transmitted and received as complete messages or blocks of data (compared with character-by-character transmission in Conversation Mode). Complete messages, up to four full pages (optionally, eight full pages) in length may be displayed and stored in display memory. These messages may be edited or otherwise modified from the keyboard before being transmitted to the host and/or to an optional auxiliary device such as a printer. At power-up, the standard ADM 42 is initialized in Block Mode.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

		CONTROL CHARACTERS				DISPLAYABLE CHARACTERS						
HEX BYTE ↓ 2ND	BITS 4321	1ST		0	1	2	3	4	5	6	7	
		BITS 7 6 5	0 0 0	0 0 1	0 1 0	0 1 1	1 0 0	1 0 1	1 1 0	1 1 1		
0	0000		NON	DLE		0	@	P	'	p		
1	0001		SGN	DC1	!	1	A	Q	a	q		
2	0010		STA	DC2	"	2	B	R	b	r		
3	0011		EIX	DC3	#	3	C	S	c	s		
4	0100		EOT	DC4	\$	4	D	T	d	t		
5	0101		ENQ	NAK	%	5	E	U	e	u		
6	0110		ACK	SYN	&	6	F	V	f	v		
7	0111		BEFP	ETB	'	7	G	W	g	w		
8	1000		BS (←)	CAN	(8	H	X	h	x		
9	1001		(FSKTP) RT	EM)	9	I	Y	i	y		
A	1010		FF (↓)	SUB	*	:	J	Z	j	z		
B	1011		FF (↑)	ESC	+	;	K	[k	{		
C	1100		FF (→)	FS	'	<	L	\	l	l		
D	1101		CR	GS	-	=	M]	m	}		
E	1110		SO	(HOME) RS	.	>	N	^	n	~		
F	1111		SI	(NEW LINE) US	/	?	O	—	o	DEL		

CONTROL CODES

- Utilized by Std ADM 42 with Printer Option
- Utilized by Polling ADM42

USE [CTRL] KEY WITH DISPLAYABLE CHARACTER KEYS TO PRODUCE CONTROL CODES

Figure 3-2. Displayable Character Set and Control Codes

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

WORD FORMAT	DIP SWITCH CONFIGURATIONS			WORD STRUCTURE											
	SW5	SW4	SW3	BIT 9	BIT 1	BIT 2	BIT 3	BIT 4	BIT 5	BIT 6	BIT 7	BIT 8	BIT 9	BIT 10	
Eleven-Bit Word with Even Parity and 2 STOP Bits	ON	ON	ON	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								even parity	stop	stop
Eleven-Bit Word with Odd Parity and 2 STOP Bits	ON	ON	OFF	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								odd parity	stop	stop
* Ten-Bit Word with Even Parity and 1 STOP Bit	ON	OFF	ON	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								even parity	stop	X
Ten-Bit Word with Odd Parity and 2 STOP Bits	ON	OFF	OFF	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								odd parity	stop	X
Eleven-Bit Word with No Parity and 2 STOP Bits	OFF	ON	ON	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								always 9 **	stop	stop
Ten-Bit Word with No Parity and 1 STOP Bit	OFF	ON	OFF	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								always 9 **	stop	X
Eleven-Bit Word with Even Parity and 1 STOP Bit	OFF	OFF	ON	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								always 9 **	even parity	stop
Eleven-Bit Word with Odd Parity and 1 STOP BIT	OFF	OFF	OFF	S _{t_{a_{r_t}}}	ACTIVE BITS = 1 OR 9								always 9 **	odd parity	stop

*Factory Standard Setting

**Always 9 for PRINTER port; switch selectable for MODEM port, via S5-SW7

Figure 3-3. Word Format Codes with DIP Switch Configurations

3.5.3 ADM 1 Mode Characteristics

The ADM 42 may be placed in the ADM 1 Mode by typing ESC % at the keyboard. In this mode, the transmission of text is modified as follows:

1. The FS character indicating the presence of protected fields are not sent.
2. The US characters indicating the end of line are not sent.
3. The cursor goes to the first unprotected position on the screen, when Protect Mode is set.

2. When the terminal is ready to transmit data, the printer Request to Send (RTS) line (pins 6 and 8) is set (high).
3. If the printer is READY, it signals not BUSY over the READY line, which alerts the terminal. Depending upon which printer is used, BUSY may be active when high or low on pin 19 of connector J5.
4. When the PRINT command is executed, the word PRINT is displayed in the 25th Status Line as long as not BUSY is indicated.
5. If the PRINT command is executed by the host, the ADM 42 transmits a CR code to the host upon completion of the transmission to the printer.

3.6 PRINT MODE TRANSMISSION CHARACTERISTICS

Print Mode transmission requires an optional Serial Printer Interface installation as described in Section II of this manual. The interface can be used with most RS-232C compatible serial printers, which includes buffered as well as character-by-character printers. With this interface, configuration control DIP switches (refer to table 2-2) are provided to establish: word format, BUSY ON/OFF and polarity characteristics. In addition, the PRINTER BAUD RATE switch on the front panel (see figure 2-2), makes it possible to select a transmission rate of 50, 75, 110, 134.5, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, or 9600 baud, independent of the MODEM port baud rate. The factory setting for the ASYNC PRINTER port baud rate is 1200.

The logical conditions required for proper terminal/printer control are as follows:

1. The Printer Interface and the READY BUSY control lines are enabled as appropriate for the application (see figure 2-10 and table 2-2).

3.6.1 Formatted Print Mode

Formatted Print Mode (Page Format Mode) transmits data to the printer so that it will be printed exactly as displayed on the CRT screen. A set of operation codes permits ALL displayed data to be sent with no distinction made between protected and unprotected data; or permits only unprotected data, as formatted, to be transmitted to the printer, with protected data sent as spaces. Trailing spaces or nulls are not transmitted and operation codes are transmitted as spaces. When a Formatted Print command is executed (refer to Print Transmission Control Operations in Section IV), the following events take place:

1. "PRNT" is displayed in the Status Line.
2. "EM" is written at the cursor position as a STOP code.
3. The cursor moves to the HOME position. If Auto Page is set, the cursor moves to the HOME position on Page 1, and transmission begins.
4. The code sequence CR NULL LF NULL is sent to the printer, followed by the data as formatted on the screen.

5. NULL characters and trailing spaces on a line are not sent. When the last character on each line is sent, the terminal sends CR NULL LF NULL before moving to the next line.

Note:

A STOP (EM) code within the text will cause the printing to stop at that point.

6. Upon reaching the STOP code, the operation is terminated, a final CR NULL LF NULL is sent, and the STOP code (EM) is overwritten with a space.

3.6.2 Unformatted Print Mode

Unformatted Print Mode transmits in a continuous stream, without inserting control characters or internal ADM 42 delays. This mode allows greater flexibility in formatting the printed copy, especially with printers having other than 80-character lines. No distinction is made between protected and unprotected data as displayed. When this PRINT command is executed (refer to Print Transmission Control Operations in Section IV), the following events take place:

1. Control codes for print formatting must be embedded in the text using local coding sequences. Such control codes include: CR, LF, FF, VT, BEL, ESC, BS, FS, GS, RS, and US.
2. A STOP code (EM) may be written at the stopping point designated by the user.
3. The cursor is usually set at the beginning of the data to be transmitted, then the PRINT command is executed.
4. "PRNT" is displayed in the Status Line, and transmission begins.
5. Line control characters (CR, LF, etc.) are not inserted at the end of each ADM 42 line;

transmission continues without delay from line to line, until the EM STOP code, if written, is reached. The STOP code is not overwritten.

6. NULL characters on the screen are sent to the printer, and all trailing spaces are transmitted.

3.6.3 Copy Print Mode

In Copy Print Mode, data is sent to the printer via the ADM 42 print buffer, with or without data being displayed. Operating under the software control, the print buffer is formed by taking over the last page of display memory (Page 4 standard; Page 8 with option installed). Data is transmitted from the buffer in Unformatted Print Mode at a transmission rate determined by the PRINTER BAUD RATE switch setting. Dynamic operation codes permit data to be read into the buffer and retransmitted to the printer either: a) without being displayed; or b) after being displayed and/or acted upon by the ADM 42.

When the Copy Print command is executed (refer to Print Transmission Control Operations in Section IV), the following events take place:

1. "PRNT" is not displayed in the Status Line.
2. The last page is not accessible for display.
3. Data is transmitted at the selected printer baud rate, in accordance with the printer BUSY/READY protocol previously discussed.
4. Control code DC4 from the host resets Copy Print Mode; however, printing from the buffer continues until the buffer is empty.
5. ESC A 0 releases the print buffer if and only if the buffer is empty.

3.6.4 Buffered Print Mode

In Buffered Print Mode, displayed data is transferred to the buffer then sent to the printer.

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

Operating under software control, the print buffer is formed by taking over the last page of display memory (Page 4, standard; Page 8, with option installed). Unless modified by a set of dynamic operation codes, data is transmitted from the buffer in Page Format Mode at a transmission rate determined by the PRINTER BAUD RATE switch setting. The dynamic operation codes permit data to be read into the buffer and retransmitted to the printer in various formats. When the Buffered Print command is executed (refer to Print Transmission Control

Operations in Section IV), the following events take place:

1. "PRNT" is displayed in the Status Line.

2. The last page is not accessible for display.
3. Data is transmitted at the selected baud rate, in accordance with the printer BUSY/READY protocol discussed in paragraph 3.8.
4. ESC A 0 releases the last page; however, printing from the buffer must first be completed.

Note

All Buffered Print commands are inoperative in Polling Mode. Polling uses the addressable printer port.

SECTION IV OPERATION

4.1 INTRODUCTION

This section provides the information necessary for the operator to utilize the ADM 42 to its fullest capabilities. Emphasis is given to the control codes required to initiate and control the various terminal operations, whether they originate at the host or the ADM 42 keyboard. It is assumed that the operator is thoroughly familiar with keyboard operations, which are not discussed herein, except as required to execute a given terminal operation. Refer to the **ADM 42 Operators Quick Reference Guide DP110** for detailed keyboard information.

4.2 CONTROL CODES AND OPERATING MODES

4.2.1 Standard Control Codes

The operational characteristics of the ADM 42 are controlled in part, by a group of control codes which may originate at the host computer or at the terminal keyboard. Control codes are not displayable unless preceded by an ESC character or Program Mode is set. In either case, the

ADM 42 will display but not act upon the recognized control code. Of the 32 standard control codes available for use, the standard (non-polling) ADM 42 utilizes the control codes listed in table 4-1.

4.2.2 Escape Sequence

An escape sequence is formed by executing the ESC code, followed by one or more otherwise displayable ASCII characters. Each escape sequence controls a specific terminal operation. Some operations are one time only or for a specific number of times; others remain operative for as long as power to the terminal is not interrupted or until terminated by another control code.

Escape sequences are used primarily to control ADM 42 operations, but may also be extended to control a printer or other auxiliary device connected to the ADM 42.

Figure 4-1 shows the escape sequences utilized by the ADM 42, whether from the host or from the keyboard. Escape sequences may be initiated from the keyboard using the **ESC** key during Block Mode or Conversation Mode operations, as follows:

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

ESCAPE SEQUENCE											
HEX BYTE → 2ND ↓	2	3	4	5	6	7					
0		0 CLEAR TABS	@ PRINT PROT AS SP	P PRINT PAGE ALL	' POLLING ADDRESS*	P PRINT UNFORMAT					
1	!	FUNKEY PROG*	1 SET TYPWR TABS	A COPY PRINT*	Q INSERT CHAR	a AUX CONTROL*	q SET INS MODE				
2	"	KBD ENA**	2 CLEAR COL OF TABS	B SET BLOCK MD	R DELETE LINE	b STATUS 1 OFF	r CLEAR INS MODE				
3	#	KBD DISA**	3 TYPWR TAB CTRL*	C SET CONV MD	S SEND MSG	c STATUS 1 ON	s SEND MSG ALL				
4	S	CLEAR ADM1 MD	4 SEND FG LINE	D SET DUPLN OR F	T ERASE LINE (PERS)	d STATUS 2 OF F	t ERASE LINE TO NUL				
5	%	SET ADM 1 MD	5 SEND FG PAGE	E INSERT LINE	U SET PGM MODE	e STATUS 2 ON	u CLEAR PGM MODE				
6	&	SET PROTECT	6 SEND ALL LINE	F MESSAGE TO ROW 25*	V SET COL PROT SP AT CURSOR	f STATUS 3 OFF	v SET AUTO PG				
7	'	CLEAR PROTECT	7 SEND ALL PAGE	G ATTRIB CONTROL*	W DELETE CHAR	g STATUS 3 ON	w CLEAR AUTO PG				
8	(CLEAR WPROT	8 WRITE SOM (STX)	H	X CLEAR PGM MODE	h	x				
9)	SET WPROT	9 WRITE EOM (ETX)	I BACK TAB	Y ERASE PAGE (PERS)	i TAB (SKIP)	y ERASE PG TO NULL				
A	*	CLEAR ALL TO NULL	:	J PAGE BACK	Z CLEAR ALL MODES	j	z				
B	+	CLR ALL TO SPACE	:	K PAGE FWD	[BUFFERED PRINT CONTROL*	k	{				
C	'	CLR ALL TO PROT SP	< STATUS 4 ON	L GO TO PAGE N (1-8)*	\ EVOKE FUNKEY*	1	:	BAUD RATE CTRL*			
D	-	LOAD PRC*	= LOAD RC*	M MULT ESC*		m)	WRITE MULT CHAR*			
E	.	CHANGE PERS*) STATUS 4 OFF	N SET PAGE EDIT	^ BLINK CONTROL	n	~	CURSOR VIDEO CTRL*			
F	/	READ PRC**	? READ RC**	O CLEAR PAGE EDIT	- BLANK CONTROL	o	DEL	DISPLAY PERS*			

*Multiple Characters Required

**Remote [from host] Only

Figure 4-1. Chart of Escape Sequences

Table 4-1. Control Codes Utilized by Standard ADM 42

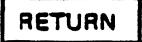
CONTROL CODE		HEX CODE	OPERATION
FROM HOST	FROM KEYBOARD		
CR		03	ETX (End of Text) EOT (End of Transmission), or CR (Carriage Return) are used as line turnaround characters during half-duplex operation.
		04	
		0D	
BEL		07	BEEP - Generates audible alarm.
BS		08	Back Space - Moves cursor to the next unprotected position to the left on the line or on the next previous line, moving from right to left.
HT	 TAB	09	Horizontal Tab - Skips cursor to next tab set position, when Protect Mode is set. If no such position, cursor moves to HOME (or next unprotected position) on page, or other page if Auto Page is set.
LF		0A	Line Feed - Moves cursor to same column position in next lower line, or to next unprotected position in new line or next line, if necessary.
VT		0B	Up Line - Moves cursor to same column position in next previous line, or to next unprotected position (moving from right to left) in new line or next line, if necessary.
FF		0C	Forespace - Moves cursor to the next unprotected position to the right on the line, or to the first unprotected location on the next lower line, moving from left to right.
CR		0D	Return - Moves cursor to first unprotected position in line containing the cursor.
DC4		14	From host only, control code resets Copy Print Mode. Printing from the buffer continues until buffer is empty.
EM	SPECIAL OPERATION	19	Special Print Mode control code used to designate STOP code during Formatted Print Mode operations, and optionally as a STOP code during Unformatted Print Mode operation.

Table 4-1. Control Codes Utilized by Standard ADM 42 (cont'd)

CONTROL CODE		HEX CODE	OPERATION
FROM HOST	FROM KEYBOARD		
ESC	ESC	1B	Escape - Recognized by ADM 42 as code extension character which must be followed by otherwise displayable character(s) to invoke a specific terminal operation. Also used preceding a control code to cause control code to be displayed instead of acted upon
FS	SPECIAL OPERATION	1C	Field Separator - Used to designate protected fields in a block send operation.
RS	HOME	1E	HOME - Moves cursor to first character position on page, even if Auto Page is set. If HOME is protected, cursor moves to first unprotected position on affected page.
US	NEW LINE	1F	New Line - Causes a combined Return (CR) and Line Feed (LF) to be executed. Cursor moves to first unprotected position on next line.

- **Block Mode** - Each escape sequence is immediately acted upon by the terminal, unless the sequence is preceded by an additional ESC character, or Program Mode is set. In either case, the escape sequence will be displayed but not acted upon, and transmitted along with the block of data.

Note

Control codes may also be imbedded in the text (by preceding the control code with ESC) for transmittal along with the block of data.

- **Conversation Mode, Full Duplex** - ESC is transmitted directly to the host and is utilized by the ADM 42 only when echoed by the host.

4.2.3 Terminal RESET Operations

The ADM 42 may be RESET in several ways, depending upon the purpose and extent of RESET desired.

4.2.3.1 Power ON RESET

CAUTION

Power ON RESET should be used only if the following RESET operations do not effect the desired reset. When recycling power using the ON/OFF switch, wait 10 seconds between the OFF and ON operations.

A Power ON RESET consists of a complete recycling of all ADM 42 functions, including power. This is accomplished by setting the ON/OFF switch to OFF, waiting 10 seconds, then setting the switch to ON. All display and other memory are erased by powering down. Upon power-up, the terminal is subject to the complete Power Turn-ON procedure specified in Section II.

4.2.3.2 RESET Button

The RESET button resets the microprocessor and causes all Power ON RESET functions to be performed, without shutting down power.

4.2.3.3 Firmware RESET

A firmware RESET consists of resetting all display and other memory without powering down. In addition to resetting the memories to their default status, Firmware RESET causes the current position of the configuration control DIP switches and baud rate switches to be read. Each time a DIP switch or baud rate switch position is changed a Firmware RESET should be executed in order for the change to take effect. Execute at the keyboard **[CTRL|SHIFT|RESET/CMD]**.

Note

Any RESET may be used to read DIP switch positions; however, a Firmware RESET is recommended.

4.2.3.4 Selected Operational RESETS

Several RESET operations are available, using special keys, for resetting specific operational conditions in the terminal:

- Type **[RESET/CMD]** to reset a keyboard LOCK condition. **[RESET/CMD]** also swaps the 25th Status Line display with the Status Line message in memory as described further along in this section.

- Type **[SHIFT|RESET/CMD]** to clear a parity error from the 25th Status Line, and to abort all Send and Print operations.

4.2.4 Multiple Escape Sequences

Any number of escape sequences may be executed one after another without preceding each operation with an ESC character, thus facilitating operations which require more than one escape sequence. This operation is activated as follows:

1. Execute ESC M.
2. Execute only the action character of each desired escape sequence. For example, assume it is desired to set Protect Mode and Send Page Foreground. The sequence would be: ESC M & 5.
3. Terminate the operation by executing CR, LF, HOME, or any other control code.

4.2.5 Keyboard Enable/Disable

The ADM 42 keyboard is always active unless disabled by an ESC # sequence. The keyboard on a polling terminal is disabled unless Compose (LOCAL) MODE is set. Once disabled, the keyboard may be enabled by an ESC " sequence from the host only, or by executing **[RESET/CMD]** at the keyboard.

4.2.6 Scrolling

In the ADM 42, data is entered into display memory starting at HOME position on each page (except as modified by certain restrictions when protected fields are involved), and continuing through Position 80 in Line 24. When Position 80 is filled, the display is shifted upwards one line and data entry continues, starting with Position 1 in the new Line 24. The original top line is lost. Scrolling on each page continues indefinitely, unless Auto Page is set; if so, scrolling is inhibited. Also scrolling is inhibited if Protect

Mode is set. Scrolling and automatic New Line, when Position 80 is filled (Auto Line Wrap) may be inhibited by a dynamic personality change sequence (described later in this section).

4.2.7 Display of Program Version

The firmware program installed varies with its level of enhancement and with customer requirements. The program version installed is V2.03; it may be displayed by executing ESC o 9.

4.2.8 Status Line Characteristics

Various kinds of status information are displayed in Status Line 25, shown in table 4-2. Display is in normal video, except status indicators S1, S2, S3, and S4, which are in reverse video. S4 is also blinking.

4.2.8.1 Status Indicator Control

Status Indicators S1, S2, S3, and S4 may be used to alert the ADM 42 operator to the existence of a user-specified condition. This condition could be "message waiting," or "garbled transmission," or any such condition.

The Status Indicators are displayed in designated positions in Status Line 25 (refer to table 4-2) in reverse video, by means of the operation codes listed in table 4-3. Status S4 appears in reverse video, blinking, and usually specifies a special condition of some kind.

4.2.8.2 Status Line Message Control

An override message may be placed in Status Line positions 2 thru 80 at any time by the host. Any data residing in the Status Line will be temporarily replaced by this message and stored in memory. Any host initiated or keyboard entry which affects the status line (refer to table 4-2) will recall the original Status Line data from memory and place the Status Line message in

memory. The Status Line display and Status Line message in memory (if any) may be swapped by typing [RESET/CMD] at the keyboard. Table 4-4 lists the Status Line message control operations.

4.3 FUNCTION KEY (FUNKEY) CHARACTERISTICS

Function keys F1 thru F16 are used to store and/or transmit specific messages to the host upon command from the host or the keyboard. These messages may be used for any purpose specified by the user. In the standard ADM 42, the stored message is always a fixed three- or four-character code (refer to table 4-5) which is different for each function key. This code may be transmitted to the host at any time by typing the appropriate key [F1] thru [F16], with or without [SHIFT].

The stored message may be increased to 31 or 63 characters, maximum, with the installation of 31 or 63-Character (Programmable) Function Key Option. The information that follows concerns FUNKEY operations on terminals equipped with the programmable function key option.

4.3.1 Displaying FUNKEY Messages

To display all of the FUNKEY messages stored in the terminal execute ESC ! 1 or ESC ! 2 from host or keyboard. Figure 4-2 shows a sample FUNKEY message display format in which each recorded message depicts a significant characteristic of each message. An unprogrammed function key displays an "X".

4.3.2 Storing FUNKEY Messages

1. Storing FUNKEY messages may be accomplished from the keyboard or the host.
2. Each message must start in position 1 on a new line to be accepted.

Figure 4-2. Sample FUNKEY Message Format and Store Codes

4-7

FUNKEY STORE CODES		
KEYBOARD	HOST	
	UNSHIFTED	SHIFTED
CTRL F1 •	ESC I @	ESC I ^
CTRL F2 •	ESC I A	ESC I a
CTRL F3 •	ESC I B	ESC I b
CTRL F4 •	ESC I C	ESC I c
CTRL F5 •	ESC I D	ESC I d
CTRL F6 •	ESC I E	ESC I e
CTRL F7 •	ESC I F	ESC I f
CTRL F8 •	ESC I G	ESC I g
CTRL F9 •	ESC I H	ESC I h
CTRL F10 •	ESC I I	ESC I i
CTRL F11 •	ESC I J	ESC I j
CTRL F12 •	ESC I K	ESC I k
CTRL F13 •	ESC I L	ESC I l
CTRL F14 •	ESC I M	ESC I m
CTRL F15 •	ESC I N	ESC I n
CTRL F16 •	ESC I O	ESC I o

SAMPLE DISPLAY

- K THIS IS A SAMPLE OF A COMPLETE DISPLAY, CALLED UP BY ESC I 1
- K FOR UNSHIFTED FUNKEY CODES, OR ESC I 2 FOR SHIFTED CODES,
- K WITH THE 63-CHARACTER PROGRAMMABLE KEY OPTION INSTALLED.
- K TO ENTER THIS LINE, CLEAR SCREEN THEN TYPE: K (MSG) CTRL F4
- K EACH MESSAGE MUST START WITH K, H, OR A TO BE ACCEPTED.
- K "K" AT START OF EACH MESSAGE MEANS: DISPLAY ON TERMINAL CRT.
- K "K" MESSAGE WILL ALSO BE XMITTED TO HOST IF CONV MODE IS SET.
- K "H" AT START OF MESSAGE MEANS: XMIT TO HOST; DO NOT DISPLAY.
- K "A" AT START OF MESSAGE MEANS: XMIT TO PRTR; DO NOT DISPLAY.
- K TO LINK EXTRA LENGTH MSG TO NEXT ADDR (J), WRITE ESC I J,
- K WITHIN 63-CHARACTER LIMIT. AT END OF MESSAGE, TYPE CTRL F11.
- K TO CALL UP EXTRA LENGTH MESSAGE, TYPE F10 (HOST ESC I II).
- K TO ERASE THIS FUNKEY MSG: CLR SCRN; TYPE CTRL F13 (HOST ESC I L).
- K TO ERASE ALL FUNKEY STORAGE. TYPE SHIFT CTRL RESET (HOST ESC I .X).
- K "X" INDICATES UNPROGRAMMED FUNKEY LOCATION.

X

SAMPLE DISPLAY

*Type SHIFT CTRL [F_i] to store data in shifted F_i locations

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 4-2. Chart of Assigned Status Line Positions

CHARACTER POSITIONS	DISPLAY	STATUS INFORMATION
1-5	PG=X	Current Page No. X, where "X" may be 1 thru 8.
6-10	APG	Auto Page ON
11-15	EDIT	Edit Mode ON
16-20	PROG	Program Mode ON
21-25	PROT	Protect Mode ON
26-30	WPRT	Write Protect Mode ON
31-35	INSM	Insert Mode ON
36-40	LOCK	Keyboard Locked
41-45	ADM 1	ADM 1 Mode ON
46-50	PRNT or PBSY	"PRNT" denotes Print Mode ON "PBSY" denotes printer busy
51-60	PARITY ERR	Error message
2-80	(User Msg)	Override message from host; replaces current Status Line display which is stored in memory.
66-67	S1	Status Line indicators which are used to specify any user-determined condition.
70-71	S2	
74-75	S3	
78-79	S4	S4 (blinking) points to a special condition.

Table 4-3. Status Code Control Operation Codes

STATUS INDICATOR	S1	S2	S3	S4
ON	ESC c	ESC e	ESC g	ESC <
OFF	ESC b	ESC d	ESC f	ESC >

Table 4-4. Status Line Message Control Operations

OPERATION	SOURCE	OPERATION CODE	ACTIVITY
Initiate Override Message	Host	ESC F Message CR*	Message placed in Status Line positions 2 thru 80, overriding, but not erasing, current display.
Clear Override Message	Host Keyboard	ESC Z, ESC %, etc. RESET/CMD	Message is cleared from display but retained in memory by any operation code which affects Status Line.
Erase Override Message	Host	ESC F CR*	Message is erased from screen and memory; original Status Line display is restored.
Recall Status Line Message	Keyboard	RESET/CMD	Status Line display and Status Line message are swapped each time key is typed.

*Any control character (CR, LF, HT, etc.) may be used.

3. Each message must start with a "K", "H", or "A" destination code, where:
 - K - Designates a message for CRT display, when evoked. If Conversation Mode is set, the message will also be transmitted to the host.
 - H - Designates a message for transmission to host, with no CRT display, when evoked.
 - A - Designates a message for transmission to a printer, with no CRT display, when evoked.
4. Block Mode should be set to avoid unintentionally transmitting data to the host when storing data at the keyboard.

5. Immediately following the last character of the message, execute the appropriate FUNKEY Store Code (see figure 4-2). The cursor will backspace one space to indicate acceptance of the message.

4.3.3 Linking FUNKEY Messages

FUNKEY messages stored under different function keys may be linked together to form a single message, as when a message is too lengthy to be stored under one key. The linking capability can also be used to link two or more operations under one command.

Table 4-5. Function Key/FUNKEY Characteristics

EVOKING OPERATION		UNPROGRAMMED CODE TRANSMITTED	EVOKING OPERATION		UNPROGRAMMED CODE TRANSMITTED
EVOKE CODE	KEYBOARD		EVOKE CODE	KEYBOARD	
ESC \ @	F1	SOH @ CR*	ESC \ \	SHIFT F1	SOH \ CR*
ESC \ A	F2	SOH A CR*	ESC \ a	F2	SOH a CR*
ESC \ B	F3	SOH B CR*	ESC \ b	F3	SOH b CR*
ESC \ C	F4	SOH C CR*	ESC \ c	F4	SOH c CR*
ESC \ D	F5	SOH D CR*	ESC \ d	F5	SOH d CR*
ESC \ E	F6	SOH E CR*	ESC \ e	F6	SOH e CR*
ESC \ F	F7	SOH F CR*	ESC \ f	F7	SOH f CR*
ESC \ G	F8	SOH G CR*	ESC \ g	F8	SOH g CR*
ESC \ H	F9	SOH H CR*	ESC \ h	F9	SOH h CR*
ESC \ I	F10	SOH I CR*	ESC \ i	F10	SOH i CR*
ESC \ J	F11	SOH J CR*	ESC \ j	F11	SOH j CR*
ESC \ K	F12	SOH K CR*	ESC \ k	F12	SOH k CR*
ESC \ L	F13	SOH L CR*	ESC \ l	F13	SOH l CR*
ESC \ M	F14	SOH M CR*	ESC \ m	F14	SOH m CR*
ESC \ N	F15	SOH N CR*	ESC \ n	F15	SOH n CR*
ESC \ O	F16	SOH O CR*	ESC \ o	SHIFT F16	SOH o CR*

*If established by a Dynamic Personality Change operation, a second transmission terminator (End Block character) is also transmitted. The first End Block character (CR) may also be changed via personality.

4.3.3.1 Storing Extra-Length FUNKEY Messages (See Figure 4-2).

- An extra-length FUNKEY message is one which is greater than 31 characters if the 31-character option is installed, or greater than 63 characters if the 63-character option is installed.
- Store the extra-length message in the same manner as for shorter messages, except:

- Within the 31- or 63-character limit, display ESC \ (ASCII), where (ASCII) is the location of the next FUNKEY memory.
- Immediately following the (ASCII) character, above, execute CTRL F_x, where F_x is the function key to be programmed.
- Before continuing the message, execute New Line and enter the desired destination code to start the message.
- Continue the message to its completion. If necessary, extend the message to any memory location in accordance with a, b, and c, above.

- e. Immediately following the last character of the message, execute the appropriate Store Code (see figure 4-2) of the FUNKEY to be linked. The cursor will backspace one space to indicate acceptance of the message.
2. To erase a specific FUNKEY message from the host, execute ESC ! (ASCII), where the (ASCII) is the address of the FUNKEY memory location to be erased (see figure 4-2).

4.3.3.2 Linking Multiple Commands

Upon occasion it may be required to execute a terminal operation requiring a specific operation code in conjunction with sending data to the host. For example: assume that it is desired to send only "LIST CR" to the host many times; the CRT screen must be cleared before writing the message. The operation would be as follows:

1. Clear the screen to spaces.
- E Execute: **H I S T ESC RETURN** (Typing **ESC** causes CR to be displayed).
3. Execute: **CTRL F1** to store H LIST CR under FUNKEY **F1**.
4. Execute: **NEW LINE**.
5. Execute: **K ESC ESC @**, to write **K EC*** on the screen.
6. Execute: **ESC ESC \ @**, to write **EC \ @** on the screen.
7. Execute: **CTRL F2** to store **EC * EC \ @** under FUNKEY **F2**.
8. Now, whenever **F2** is called for, the CRT screen will be cleared and LIST CR will be sent to the host.

4.3.4 Erasing FUNKEY Messages

1. To erase a specific FUNKEY message from the keyboard: Clear screen, then type **CTRL F***, where **F*** is the FUNKEY memory location to be erased.

3. To erase all FUNKEY messages, execute **ESC ! X**.

4.3.5 Evoking FUNKEY Messages

A FUNKEY message is "evoked" when it is recalled from memory and transmitted. Its destination is determined by the "H", "K", or "A" destination code at the beginning of the message. FUNKEY messages may be evoked in one of the following ways:

Note

"K" designated messages will be displayed and transmitted to the host if CONV MODE is set.

1. Type appropriate key **F1** thru **F16** unshifted or shifted, or
2. Execute appropriate Evoke code (refer to table 4-5).
- a. To evoke a complete extra-length FUNKEY message, execute the Evoke Code associated with the initial memory address. Example - **ESC \ I** or **F10** would evoke the complete I - J message in figure 4-2.
- b. To evoke a selected portion of an extra-length FUNKEY message, execute the Evoke Code associated with the 2nd or 3rd, etc. portion of the message. Example - **ESC \ J** or **F11** would evoke only the following message:

"WITHIN 63-CHARACTER LIMIT AT END OF MESSAGE, TYPE **CTRL F11**."

4.4 FORMAT CONTROL OPERATIONS

Certain ADM 42 operations are concerned primarily with formatting or controlling the manner in which data is formatted, whether it is input from the host or from the keyboard.

4.4.1 Program Mode

Program Mode is typically used for transparent operation. In Program Mode control characters (CR, LF, FS, etc.) are written and displayed as they are received or keyed but are not acted upon. Program Mode is set by typing **[PROG MODE]** once (PROG appears in Status Line). Program Mode is terminated by typing **[PROG MODE]** again.

4.4.2 Protected Fields and Modes

Areas in the ADM 42 display may be designated as protected fields. These fields appear at reduced intensity and have the following characteristics:

- Protected fields cannot be overwritten as long as Protect Mode is set.
- Forms appearing on the display initiated by the computer are usually in protected characters.

4.4.2.1 Write Protect Mode

Write Protect Mode is set by typing **[SHIFT] [WRITE PROT]**. (WPRT appears in Status Line). Characters written while Protect Mode is set are immediately protected. Write Protect Mode is terminated by typing **[WRITE PROT]**.

4.4.2.2 Protect Mode

Protect Mode is set by typing **[PROT MODE]** (PROT appears in Status Line). Protect Mode is terminated by typing **[PROT MODE]** again.

4.4.2.3 Designated Protected Field

The operator has complete control over any character typed into display memory. Consequently, the operator may elect to protect or

leave unprotected any character entered from the keyboard. To enter protected characters Write Protect Mode must be set. Usually Protect Mode is also set so that the characters are protected as they are written. The ESC) and ESC (codes are used during a Send All operation as delimiters for protected fields in a line, page, or message.

4.4.2.4 Selected Protected Fields

The (‘) character may be used to establish a special protected field in which characters which have been written protected will be transmitted along with unprotected characters in a message. While operating in Write Protect Mode a (‘) character will establish the field and another (‘) character will terminate the field. Any character bracketed by the (‘) character will thus be transmitted as though unprotected during a Send Line, Send Page, or Send Message routine. The bracketed field will not be erased by a Clear to Foreground routine. The selected protected field is cleared along with and in the same manner as any other protected field.

The following is an example of this special operation:

1. Assume that the terminal is in Write Protect Mode (with Protect Mode set).
2. The operator enters a combination of protected (P) characters, specially protected (p) characters, and unprotected (U) characters, as follows:

PPP ‘ ppp UU ppp ‘ PPP · UU

3. If Send Line, Send Page, or Send Message is commanded, the following will be transmitted. (An FS character is sent in the place of each protected field not sent.

FS ppp UU ppp FS UU

4.4.3 Auto Page Mode

Auto Page Mode is set by typing **SHIFT PAGE BACK** (APG appears in Status Line), and terminated by typing **SHIFT PAGE FWD**. This mode connects all memory pages (4 or 8) together to form one continuous page, with the current page retaining its page status. When Auto Page is set, several modifications to terminal operations take place:

- Cursor Position - The cursor goes to HOME position on the next page in a Page Forward operation or to the last position on the previous page in a Page Back operation.
- Scrolling - Scrolling is inhibited. When data is entered in the last position of the current page, data entry continues in the HOME position or the first unprotected position of the next page. When data is entered into the last position of the last page, cursor goes to HOME on first page.

4.4.4 Limited Graphics Mode

When an optional Line Drawing Alternate Character Generator is installed in the ADM 42, the terminal is equipped to produce simple line drawings in Limited Graphics Mode. In this mode, the characters on seven terminal keys are modified to produce eleven graphic symbols (see figure 4-3). Transmission of the graphics constructed from these keys is the same ASCII character as the original character. Limited Graphics Mode is established by ESC G 8.

4.4.5 Write Character "c" "N" Times

Any displayable character "c" may be written any specified number of times "N", using operation code ESC m N c. The number of times "N" is expressed by a modulo number which is in turn expressed by a single otherwise displayable ASCII character. Figure 4-4 is a chart of the 96 displayable characters and the modulo numbers they represent. Example: To write the character "D" 29 times, execute ESC m = D.

4.5 CURSOR CONTROL OPERATIONS

4.5.1 Non-Addressed Cursor Positioning

The cursor may be moved to any unprotected position on the screen under the remote or local control of the operator; its position signifies the next character position in the display. When data is being entered, the cursor moves one position to the right on the line or to the first unprotected position in the next line each time a character is written under its present position. The cursor cannot stop in a protected field. The operation codes and keyboard operations required to control the non-addressed and absolute (addressed) cursor positions are listed and described in table 4-6.

4.5.2 Absolute Cursor Addressing


Absolute cursor addressing consists of commanding the cursor to a specific display location or reading out the exact cursor location, using operation codes. Commanding the cursor to a specific location (loading the cursor) may be executed by host or keyboard commands; reading the cursor may be executed only by the host, and the position codes are sent only to the host. The load/read commands are executed by means of multiple character escape sequences in which the exact page, row, and column location of the cursor is expressed in a set of ASCII characters, as shown below. See figure 4-5 for the ASCII characters assigned to each row and column location.

4.5.2.1 Load Cursor Operation

When the Load Cursor operation is initiated, the cursor moves to the commanded position, except that if Protect Mode is set, the cursor will not stop in a protected field; it will perform in the same manner as described for Horizontal Tab in table 4-6. The operation codes required to load the cursor are as follows:

KEY	SYMBOL (UNSHIFTED)	SYMBOL (WITH SHIFT)	KEY	SYMBOL (UNSHIFTED)	SYMBOL (WITH SHIFT)
22 - 8	Ø	—	42 { [└	L
24 ~ ^	±	—	43 }]	—	—
25 : /	+		75 < ,	,	—
			76 > ■	■	F

Figure 4-3. Limited Graphics Mode Symbols

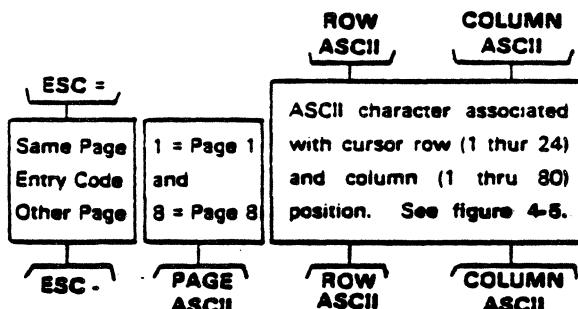

Example: Operation code ESC - 2 M commands the cursor to Page 2, Row 19, Column 46.

4.5.2.2 Read Cursor Operations

The Read Cursor operation consists of the read command from the host only and an immediate response from the terminal defining the cursor position, regardless of whether Conversation Mode or Block Mode is set. If the page in which the cursor rests is known, the host executes ESC ?, and the terminal responds with the appropriate Row ASCII and Column ASCII characters followed by CR. If the page in which the cursor rests is not known, the host executes ESC /, and

the terminal responds with the appropriate Page ASCII, Row ASCII and Column ASCII, followed by CR. Example: To read the position to which the cursor was commanded, above, the operation code sequence is as follows:

From Host	ADM 42 Response
Page Known	ESC ?
Page Unknown	ESC /

4.5.2.3 Go To Page "N" Operations

Any page may be called up for display at any time by executing ESC L, followed by the desired page number. The appropriate page will be displayed and the cursor will go to the last known position on that page. If Auto Page is set, the cursor will go to the same column position of the top row on the selected page. Example: To call up page 4 for display, execute ESC L 4.

Note

If the last known position or HOME is protected, the cursor goes to the first available unprotected position.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

ASCII CHARACTER	MODULO NUMBER	ASCII CHARACTER	MODULO NUMBER	ASCII CHARACTER	MODULO NUMBER
SPACE	0	@	32	.	64
!	1	A	33	a	65
"	2	B	34	b	66
#	3	C	35	c	67
\$	4	D	36	d	68
%	5	E	37	e	69
&	6	F	38	f	70
'	7	G	39	g	71
(8	H	40	h	72
)	9	I	41	i	73
.	10	J	42	j	74
+	11	K	43	k	75
,	12	L	44	l	76
-	13	M	45	m	77
:	14	N	46	n	78
/	15	O	47	o	79
0	16	P	48	p	80
1	17	Q	49	q	81
2	18	R	50	r	82
3	19	S	51	s	83
4	20	T	52	t	84
5	21	U	53	u	85
6	22	V	54	v	86
7	23	W	55	w	87
8	24	X	56	x	88
9	25	Y	57	y	89
:	26	Z	58	z	90
<	27	^	59	~	91
=	28	\	60	DEL	92
>	29]	61		93
	30	[62		94
	31	-	63		95

Figure 4-4. Chart of ASCII Characters vs. Modulo Numbers

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

OPERATIONAL CODES	POSITION		OPERATIONAL CODES	POSITION		OPERATIONAL CODES	POSITION	
	ROW	COL		ROW	COL		ROW	COL
SPACE	1	1	:	28		V	55	
!	2	2	<	29		W	56	
"	3	3	=	30		X	57	
#	4	4	>	31		Y	58	
\$	5	5	?	32		Z	59	
%	6	6	@	33		[60	
&	7	7	A	34		\	61	
Same Page Load:	8	8	Same Page Load:	B	35	Same Page Load:	I	62
ESC [9	9	ESC [C	36	ESC [^	63
Same Page Read:	10	10	Same Page Read:	D	37	Same Page Read:	-	64
ESC ?	11	11	ESC ?	E	38	ESC ?	\	65
*Nth Page Load:	12	12	*Nth Page Load:	F	39	*Nth Page Load:	a	66
ESC - N	13	13	ESC - N	G	40	ESC - N	b	67
*Nth Page Read:	14	14	*Nth Page Read:	H	41	*Nth Page Read:	c	68
ESC / N	15	15	ESC / N	I	42	ESC / N	d	69
/	16	16	J	43		e	70	
0	17	17	K	44		f	71	
1	18	18	L	45		g	72	
2	19	19	M	46		h	73	
3	20	20	N	47		i	74	
4	21	21	O	48		j	75	
5	22	22	P	49		k	76	
6	23	23	Q	50		l	77	
7	24	24	R	51		m	78	
8	25	25	S	52		n	79	
9	26	26	T	53		o	80	
:	27	27	U	54				

*N = Selected page 1 thru 4 (standard) or 1 thru 8 (optional)

Figure 4-5. Absolute Cursor Addressing Operation Codes

Table 4-6. Chart of Cursor Control Operations

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Cursor HOME	RS	HOME	Cursor moves to upper left corner position on page or if protected, to first unprotected position on page.
Downline	LF	or LINE FEED	Cursor moves one increment in the specified direction. If the new position is protected, cursor moves to first unprotected position in the specified line (for Backspace, the next previous position is selected). Character under cursor or character passed over is not erased.
Upline	VT		
Backspace	BS		
Forespace	FF		
Return	CR	RETURN	Cursor moves to the first unprotected position in the line containing cursor.
New Line	US	PAGE/NEW/LINE	Cursor moves to the first unprotected position in the new line (combined CR and LF).
Horizontal Tab or Skip	HT or ESC i	BACK TAB/TAB	Operational only when Protect Mode or Typewriter Tab Mode is set. Tab moves cursor forward to the next unprotected position on the page. If there is no such position, cursor moves to HOME or the next unprotected position following HOME.
Backtab	ESC I	SHIFT BACKTAB/TAB	Backtab moves cursor backwards to the last previous unprotected position after a protected field on the page. If there is no such position, cursor moves to the end of the page.
Load Cursor: Same Page, Row, Column	ESC =	ROW ASCII COL ASCII	Refer to paragraph 4.5.2.1 for details.
Page N, Row, Column	ESC -	PAGE ASCII ROW ASCII COL ASCII	
Rear Cursor: Known Page, Row, Col	ESC ?	Terminal Response ROW ASCII COL ASCII CR	Refer to paragraph 4.5.2.2 for details.
Unknown Page, Row, Column	ESC /	PAGE ASCII ROW ASCII COL ASCII CR	

4.5.3 Tab Control

4.5.3.1 Protect Mode Tab Operations

At the keyboard, **BACK TAB/TAB** is used to tab forward, and **SHIFT BACK TAB/TAB** to tab backwards to preset tab positions, with Protect Mode set. From the host, the HT or ESC I code commands forward tab, and ESC I commands backward tab. Protect Mode tabs are established by setting a vertical column of protected spaces from the cursor position down: execute ESC V or type **SHIFT TAB/SET/CLEAR**. Protect Mode is automatically set. The tab stop is the unprotected position immediately following the protected position. Protect Mode tabs (and Protect Mode) are cleared by any Clear All operation.

4.5.3.2 Typewriter Tab Mode Operations

In Typewriter Tab Mode, tab stops may be set, cleared and utilized in much the same way as with an ordinary typewriter. If Protect Mode is set, Typewriter Tab Mode is inhibited; however, setting Protect Mode does not clear any typewriter tabs which have been set. The tab stop is the actual cursor position at the time the tab set command is executed. (For Protect Mode tabs, the tab stop is the next unprotected position.)

ESC 3 p establishes Typewriter Tab Mode, if Protect Mode is not set. If Auto Page is set either before or after Typewriter Tab Mode, is set, the conditions established apply to every page. While Typewriter Tab Mode is set, the following operation codes are active:

- ESC 0 Clears all Typewriter Tabs, but not Modulo Tabs.

- ESC 1 Sets a column of tabs at the cursor position for the entire page.
- ESC 2 Clears column of tabs at cursor position for the entire page.
- ESC 3 SPACE Clears Typewriter Tab Mode (and all modulo tabs).

4.5.3.3 Modulo Tab Mode Operations

In Modulo Tab Mode, multiple columns of tabs at regular intervals for the entire page may be established using an ESC 3 (ASCII) sequence. The ASCII character entered defines the number of character positions in each interval. This character expresses a modulo number from 0 to 79, which is the value of the interval. See figure 4-4 for character vs modulo values. Example: To set tab stops every 10 character positions on every line, execute ESC 3 *.

- ESC 3 (ASCII) sets modulo tabs.
- ESC 3 Space resets Modulo Tab Mode (and Typewriter Tab Mode).

4.6 DATA EDITING CONTROL OPERATIONS

The ADM 42 is equipped with extensive data editing capabilities, most of which may be executed from the host and from the keyboard. Table 4-7 lists and describes all the data editing operations available on the terminal, along with the operation codes and/or keyboard operations required to execute them. Clear and Erase commands apply only to the current page, even if Auto Page is set.

Note

If DIP switch S7-SW3 at location 15M is set to ON, NULL codes will not be displayed.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 4-7. Data Editing Control Operations

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Clear ALL to NULL*	ESC *	SHIFT CLEAR NULL	All displayed data, unprotected and protected, is cleared and replaced with null codes. Cursor goes to HOME.
Clear ALL to SPACES (Personality)	ESC +	SHIFT CLEAR SPACE	All displayed data, unprotected and protected, is cleared and replaced with space or personality codes. Cursor goes to HOME.
Clear ALL to Protected SPACES	ESC ,	ESC ,	All displayed data is cleared and replaced with protected spaces. If Protect Mode is set at this time, the last space on the screen becomes unprotected, and cursor may rest there.
Clear Foreground to NULL*	ESC :	CLEAR NULL	Unprotected data is cleared and replaced with null codes. Cursor goes to HOME or first unprotected position on page.
Clear Foreground to SPACES (Personality)	ESC :	CLEAR SPACE	Unprotected data is cleared and replaced with spaces or personality codes. Cursor goes to HOME or first unprotected position on page.
Set/Clear Page Edit Mode	Set: ESC N (EDIT appears in Status Line) Clear: ESC O (EDIT removed from Status Line)	PAGE EDIT PAGE EDIT	Modifies movement of data for CHAR INSERT and CHAR DELETE operations.
Set/Clear Auto Page	Set: ESC v (APG appears in Status Line) Clear: ESC w (APG removed from Status Line)	SHIFT PAGE BACK SHIFT PAGE FWD	All memory pages (4 or 8) connected together to form one continuous page; current page retains its page status. For additional information, refer to paragraph 4.4.3.
Set/Clear Insert Mode	Set: ESC q (INSM appears in Status Line) Clear: ESC r (INSM removed from Status Line)	SHIFT CHAR INSERT SHIFT CHAR INSERT	In the line containing the cursor, a string of characters may be written under cursor, without first writing a space. All following characters move one space to the right for each insertion. Insertions are inhibited when inserted characters fill the line (previous characters following the cursor are lost), or protected field occupies last space in the line.

*Nulls are not displayed when switch S7-SW3 at location 15M is set to ON.

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

Table 4-7. Data Editing Control Operations (cont'd)

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Line Insert	ESC E	LINE INSERT	Line containing the cursor and all lower lines shift downwards one-line. Deleted line is replaced with unprotected spaces and cursor moves to first position in the line. When screen is full, bottom line is lost. If Write Protect Mode is set, Line Insert resets that mode. If Protect Mode is set, Line Insert cannot be performed.
Line Delete	ESC R	LINE DELETE	Line containing cursor is erased, simultaneously, all lower lines shift upwards one line. Cursor moves to the first position of the line that moves upwards, and the bottom line is filled with unprotected spaces. If Protect Mode is set, Line Delete cannot be performed.
Line Erase	ESC T	LINE ERASE	Starting with the cursor position, all characters in the line (or current field, if Protect Mode is set) are erased and replaced with space or personality codes. Write Protect Mode is not reset (Refer to Personality Byte 10).
Line Erase to Null	ESC t	SHIFT LINE ERASE	Starting with the cursor position and continuing to the end of the line, all data, unprotected and protected, is erased and replaced with unprotected null codes. If Write Protect Mode is set it is not reset (Refer to Personality Byte 10).
Page Erase	ESC Y	PAGE ERASE	Starting with the cursor position and continuing to the end of the page, all unprotected characters are erased and replaced with unprotected space or personality codes. If Write Protect Mode is set, it is not reset (Refer to Personality Byte 10).
Page Erase to Nulls*	ESC y	SHIFT PAGE ERASE	Starting with the cursor position and continuing to the end of the page, all data, unprotected and protected is cleared and replaced with unprotected null codes. If Write Protect Mode is set, it is not reset (Refer to Personality Byte 10).

*Nulls are not displayed when switch S7-SW3 at location 15M is set to ON

Table 4-7. Data Editing Control Operations

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Page Back	ESC J	PAGE BACK	
Page Forward	ESC K	PAGE FWD	Each time a Page Forward or Page Back command is executed, the current page and cursor position are memorized (unless Auto Page is set). Data which is resident on a page is retained when another page is called up. During a Page Forward operation, the shift is to Page 1 when the last page (4 or 8) is reached. There is no shift from Page 1 during a Page Back operation.
Character Insert	ESC Q	CHAR INSERT	Writes a space under the cursor; all following characters move one space to the right. If line is full, last character in the line is lost, unless character is protected or Page Edit is set. If Page Edit is set, last character in each line wraps around to the next line, and so on to the end of the page. Operation terminates when line is filled with inserted spaces or a protected field is encountered.
Character Delete	ESC W	CHAR DELETE	Deletes character under cursor; all characters that follow in the field or line move one space to the left to fill deleted position. A space is written at the end of the field or line (or page if Page Edit is set). When Page Edit is set, the first character in the following line moves up to fill the deleted last position in the previous line; characters that follow move one space to the left, and so on, to the end of the page. Protected positions are not disturbed.

4.7 DATA TRANSMISSION CONTROL OPERATIONS

4.7.1 Block Mode Send

Data Transmission or Send operations are associated most directly with Block Mode or optional Polling transmissions to the host computer. Table 4-8 lists and describes all the Data Transmission operations available, along with the operation codes and/or keyboard operations required to execute them. For additional Data Transmission information, refer to paragraph 3.5.

4.7.2 Dynamic Baud Rate Control

The baud rate at which the MODEM port and ASYNC PRINTER port transmissions occur are independently controlled. The standard or default baud rate for each port is established by the MODEM and PRINTER BAUD RATE rotary switches on the front panel. This default setting can be dynamically modified by executing an appropriate ESC: (ASCII) operation code, where the (ASCII) character corresponds to the desired baud rate listed in table 4-9. The table also shows the equivalent BAUD RATE switch position for each dynamic setting. Any Power ON, RESET button, or Firmware RESET operation terminates all dynamic baud rate settings.

Table 4-8. Data Transmission Control Operations

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Start of Message		SOM	Imbeds STX code in displayed message; used to designate start of message during Send Message operations (Block Mode only).
End of Message		EOM	Imbeds ETX code in displayed message; used to designate end of message during Send Message operations (Block Mode only).
Send Line Foreground	ESC 4	SEND LINE	Sends line of unprotected data, starting at beginning of line containing cursor and ending at the cursor position.
Send Page Foreground	ESC 5	SEND PAGE	Sends only unprotected data on page, starting with first unprotected character and continuing to cursor position. If Auto Page is set, unprotected data on all pages, up to cursor position, is sent.
Send Line All *	ESC 6*	SHIFT SEND LINE	Sends line of unprotected and protected data, starting at the beginning of the line containing the cursor and ending at cursor position. Protected fields are bracketed by ESC) and ESC (.
Send Page All *	ESC 7	SHIFT SEND PAGE	Sends all data on page, starting with HOME and continuing to cursor position. Protected fields are bracketed by ESC) and ESC (. If Auto Page is set, all data on all pages, up to cursor position, is sent.
Send Message Foreground	ESC 8	SEND MSG	Sends unprotected data in message displayed which is bracketed by STX - ETX (SOM EOM) codes. If no STX code is encountered, cursor starts at HOME or first unprotected position following HOME. If no ETX code is encountered, transmission stops at end of page (end of last page if Auto Page is set).
Send Message All *	ESC 9	SHIFT SEND MSG	Sends all data, unprotected and protected, in message which is bracketed by STX - ETX (SOM EOM) codes. If no STX code is encountered, cursor starts at HOME or first unprotected position following HOME. If no ETX code is encountered, transmission stops at end of page (end of last page if Auto Page is set). Protected fields are bracketed by ESC) and ESC (.

*Operation is modified by ADM 42/ADM 2 Attribute Control operations.

4.8 PRINT TRANSMISSION CONTROL OPERATIONS

Table 4-10 lists and describes all the Print Transmission operations available, along with the operation codes and/or keyboard operations required to execute them. For additional Print Transmission information, refer to paragraph 3.6.

4.9 PERSONALITY CONTROL

The ADM 42 personality has the capability of allowing certain terminal characteristics to be altered. These characteristics or traits may be "permanent" or "dynamic" (temporary). Dynamic operation codes may be executed from the host or the keyboard.


4.9.1 Display of Personality Codes

Figure 4-6 shows a coding chart for all the personality codes available in the ADM 42. This chart may be called up to the screen by executing ESC o 0. The displayed codes are HEX codes which have the following significance. The ADM 42 personality has the capability to allow certain terminal characteristics to be altered.

- a. HEX code 00 means NULL or NO-OP.
- b. The HEX codes for Bytes No. 0 thru No. 8 define the actual ASCII characters used in the applicable operation.
- c. The HEX codes for Bytes No. 9 and No. A have special significance for RTS ON Delay and RTS OFF Delay control operations as described in the paragraphs which follow.
- d. The HEX codes for Bytes No. B thru No. F and No. 10 and No. 11 have hexidecimal values which are defined during the following discussion of Dynamic Personality Change Codes.

4.9.2 Dynamic Personality Change Codes

Dynamic (temporary) personality modifications may be made by means of personality change operation codes. Dynamic modifications are reset during power-up of the ADM 42. The operation codes are escape sequences having the following structure:

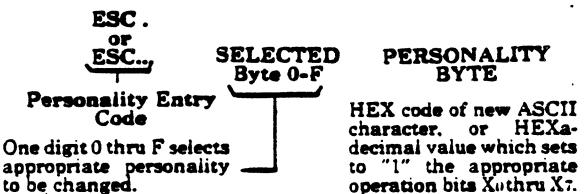

4.9.2.1 Modification of Escape Lead-in Character

As shown in figure 4-6, the standard or default Escape Lead-In Character is ESC (HEX 1B). Personality Byte 0 (ESC . 0) can modify the lead-in sequence to replace the normal ESC code with another ASCII character, which then would be used as an escape sequence lead in. SHIFT ESC then may also be used to execute an escape sequence from the keyboard.

4.9.2.2 Modification of End Block Character(s)

Figure 4-6 shows that the standard 1st End Block (transmission terminator) character is CR (HEX 0D), and the 2nd End Block character is NUL (HEX 00). Personality Byte 1 (ESC . 1) is used to modify the 1st terminator, and Byte 2 (ESC . 2) is used to modify the 2nd terminator. These characters are transmitted at the end of all Block Mode transmissions.

4.9.2.3 Modification of New Line Character(s)

Figure 4-6 shows that the standard 1st New Line character is US (HEX 1F) and the standard 2nd End Block character is NUL (HEX 00). Personality Byte 3 (ESC . 3) is used to modify the 1st New Line character, and Byte 4 (ESC . 4) is used to modify the 2nd New Line character. Example - It is desired to transmit LF and CR instead of the standard US character: execute: ESC . 3 0A, followed by ESC . 4 0D.

Figure 4-6. *Display of Standard Personality Byte Values*

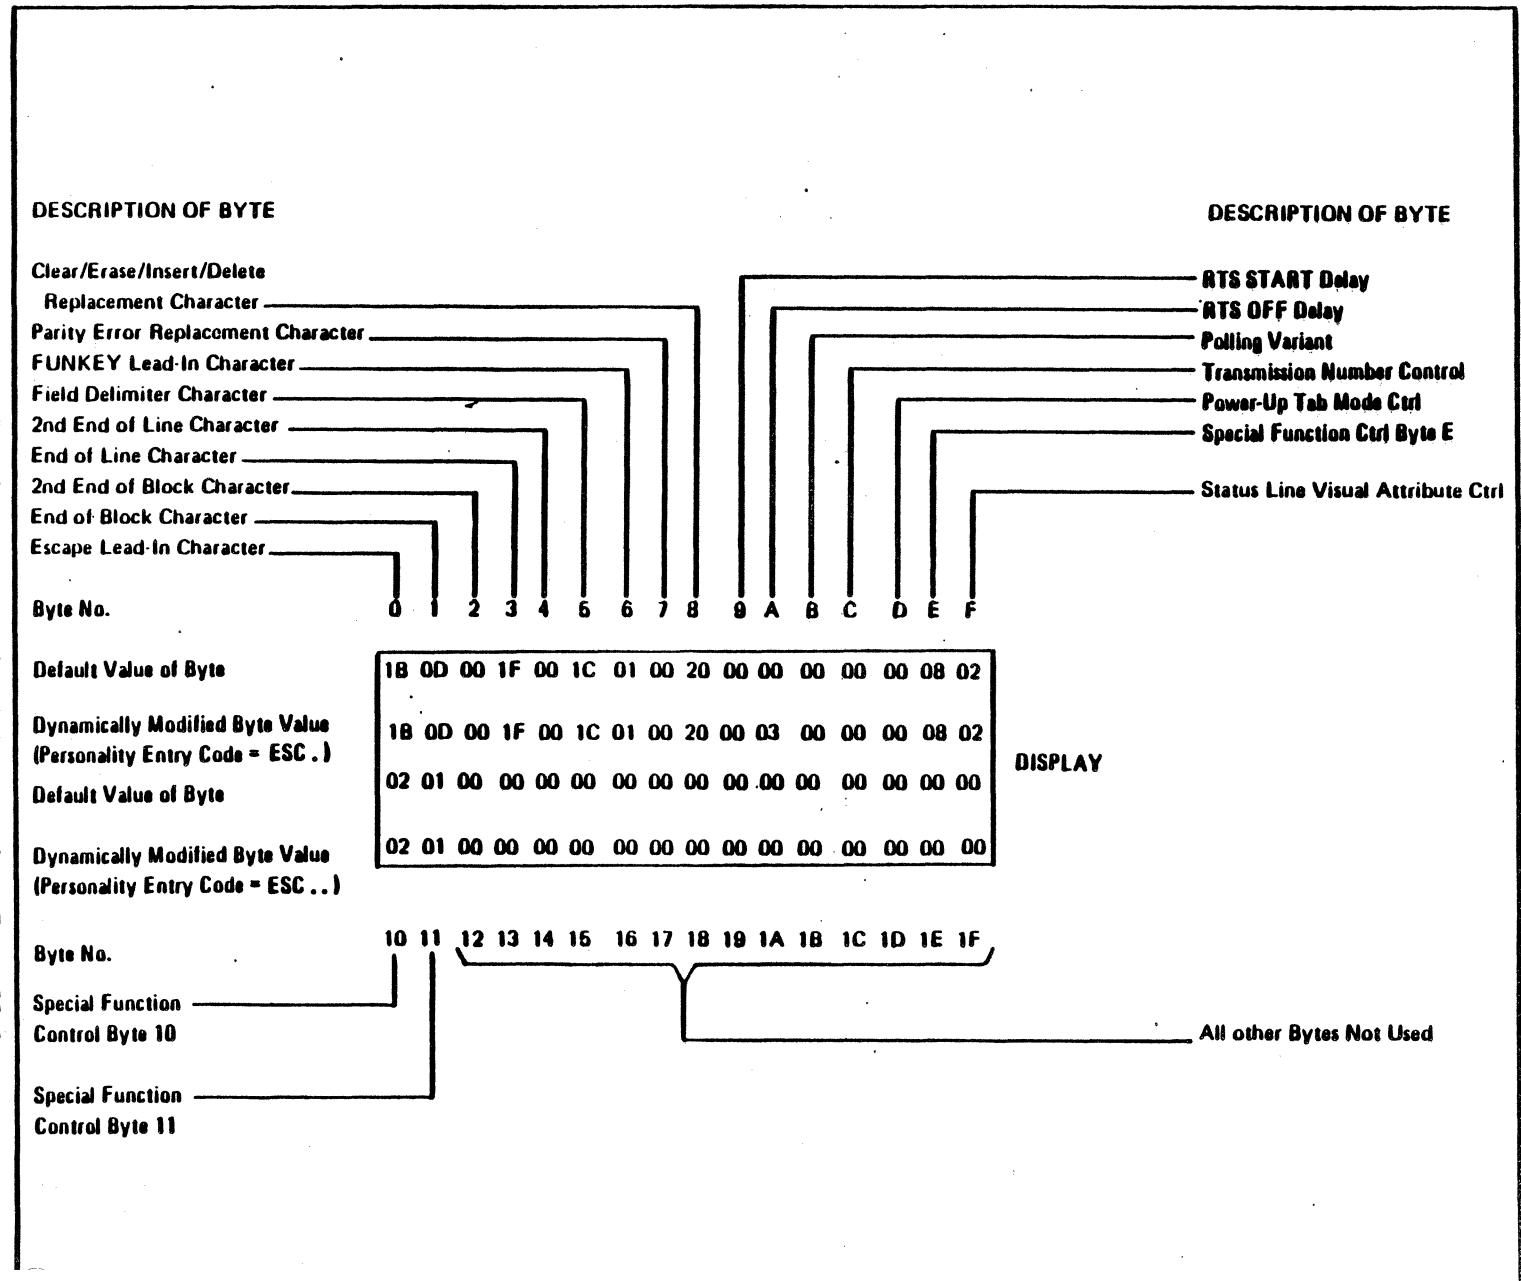


Table 4-9. Dynamic Baud Rate Control Operation Codes

DESIRED BAUD RATE	MODEM PORT	PRINTER PORT	EQUIVALENT BAUD RATE SWITCH POSITION
50	ESC:@	ESC:\`	0
75	ESC:@A	ESC:@a	1
110	ESC:@B	ESC:@b	2
134.5	ESC:@C	ESC:@c	3
150	ESC:@D	ESC:@d	4
300	ESC:@E	ESC:@e	5
600	ESC:@F	ESC:@f	6
1200*	ESC:@G	ESC:@g	7
1800	ESC:@H	ESC:@h	8
2000	ESC:@I	ESC:@i	9
2400	ESC:@J	ESC:@j	10
3600	ESC:@K	ESC:@k	11
4800	ESC:@L	ESC:@l	12
7200	ESC:@M	ESC:@m	13
9600**	ESC:@N	ESC:@n	14

* Standard (default) baud rate for PRINTER port

** Standard (default) baud rate for MODEM port

4.9.2.4 Modification of Field Separator Character

Figure 4-6 shows that the standard Field Separator character is FS (HEX 1C). Personality Byte 5 (ESC . 5) is used to modify this character. Field separators are usually employed when Protect Mode is set to delimit protected fields. Example - To change the Field Separator character from FS to EM, execute: ESC . 5 19.

4.9.2.5 Modification of FUNKEY Lead-In Character

Figure 4-6 shows that the standard FUNKEY Lead-In character for unprogrammed function keys F1 thru F16, without or with SHIFT, is SOH (HEX 01). Personality Byte 6 (ESC . 6) is used to modify this character. Example - To change the SOH character to the STX character, execute: ESC . 6 02.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 4-10. Print Transmission Control Operations

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Print Page Formatted	ESC P	PRINT	Sends all data on page, up to cursor position to be transmitted in Page Format Mode (refer to paragraph 3.6). If Auto Page is set, print data on all pages up to cursor position, is sent.
Print Page Unformatted	ESC p	SHIFT PRINT	Sends all data on page, from cursor to EM code or end of page, in Unformatted Page Mode (refer to paragraph 3.6). If Auto Page is set, print data on all pages is sent. Space and null codes are transmitted along with all trailing spaces.
Print Protected Data as Spaces	ESC @	ESC @	Unprotected data is sent, with protected data sent as spaces. Nulls or trailing spaces are not transmitted and attribute codes are transmitted as spaces. If Auto Page is set, print data on all pages, up to cursor position, is sent.
Copy Print Without Display	Set: ESC A 1 Reset: DC4	ESC A 1	Data is read into print buffer (last page) at terminal baud rate and transmitted at printer baud rate in Unformatted Print Mode (refer to paragraph 3.6). Meanwhile, normal ADM 42 operations continue on other pages. Data is lost if buffer overflows.
Copy Print With Display	Set: ESC A 2 Reset: DC4	ESC A 2	Data is read into print buffer (last page) and displayed on current page(s) at terminal baud rate; transmitted at printer baud rate in Unformatted Print Mode (refer to paragraph 3.6). Data is lost if buffer overflows.
Unbuffered Print Page Format	ESC [O P	ESC [O P	All data on page is transmitted to printer, just as displayed on screen.
Unbuffered Print Protected Data as Spaces	ESC [O @	ESC [O @	All unprotected data on page is transmitted to printer, with protected data sent as spaces. Trailing spaces or nulls are not transmitted, and attribute control codes are transmitted as spaces
Buffered Print Page Format	ESC [2 P	ESC [2 P	Print buffer (last page of display memory) enabled. Data in page format is transferred to print buffer, then from the buffer to printer at printer baud rate.

Table 4-10. Print Transmission Control Operations (cont'd)

OPERATION	HOW TO EXECUTE		DESCRIPTION
	FROM HOST	KEYBOARD	
Buffered Print Protected Data as Spaces	ESC [2 @	ESC [2 @	Print buffer enabled. All unprotected data on page is transferred to print buffer with protected data sent as spaces. Trailing spaces or nulls are not transferred, and attribute control codes are sent as spaces. Contents of buffer are then transmitted to printer at printer baud rate.
Unbuffered Print Unformatted Data	ESC [0 p	ESC [0 p	All data on page, from cursor to EM code or end of page is transmitted unformatted, in one continuous stream. Line control codes and internal ADM 42 delay codes are omitted. SPACE and NULL codes are transmitted, along with trailing spaces.
Buffered Print Unformatted Data	ESC [2 p	ESC [2 p	Print buffer enabled. All data on page, from cursor to EM code or end of page is transferred unformatted, in one continuous stream to print buffer. Line control codes and internal ADM 42 delay codes are omitted. SPACE and NULL codes are transmitted, along with all trailing spaces. Contents of buffer are then transmitted to printer at printer baud rate.
Release Print Buffer	ESC A 0	ESC A 0	Print buffer is released but only after buffer is emptied and mode is reset.

4.9.2.6 Modification of Parity Error Replacement Character

As shown in figure 4-6, the standard parity error replacement character (the character written on the screen when the ADM 42 senses a parity error). Thus, whatever is received in a message is displayed. Personality Byte 7 (ESC . 7) is used to modify this character. Example - To change the replacement character to NAK, execute: ESC . 7 95. Upon receipt of parity error, a NAK is displayed as a replacement character and PARITY is displayed in Status Line 25, if Bit X₇ of Personality Byte 7 is set.

4.9.2.7 Modification of Clear/Erase/Insert/Delete Replacement

As shown in figure 4-6 the standard Clear/Erase/Insert/Delete replacement character is SPACE (HEX 20). Personality Byte 8 (ESC . 8) is used to modify this character. (Operation bits X₆ and X₇ of Personality Byte 10 modify the use of this character.) Example - To change the Clear/Erase/Insert/Delete character to NUL, execute: ESC . 8 00.

4.9.2.8 RTS START Delay Control

The time delay in milliseconds from when Request To Send (RTS) goes high and the actual start of transmission (CTS) during a Block Mode transmission is the RTS START Delay time. Personality Byte 9 (ESC . 9) is used to establish a different time delay than that inherent in the terminal. HEX 00 (see figure 4-6) means no change in the inherent value. Any other HEX code, when converted to a decimal value, would express 1/2 the desired delay time in milliseconds. Example - To establish an RTS START Delay time of 115 milliseconds; execute: ESC . 9 3A. (HEX 3A=Decimal 58.)

4.9.2.9 RTS OFF Delay Control

The time delay, in milliseconds, from the end of transmission until RTS is turned OFF (RTS goes low), during Block Mode transmission, is the RTS OFF Delay time. Personality Byte A (ESC.A) is used to establish a different RTS OFF Delay time than that automatically established under firmware control (proportional to baud rate). Any other value desired should be established in accordance with the RTS OFF Delay times recommended by the chart in figure 4-7. Example - To establish an RTS OFF Delay time of 9 milliseconds (approximately 2x the number of interrupts required at 1800 baud,) execute: ESC . A 05.

4.9.2.10 Polling Option Variant Control

Personality Byte B (ESC . B) controls the optional Polling Option variables listed in table 4-11. Each operation is either set to ON or OFF depending upon the logical condition (1 = ON; 0 = OFF) of the operation bit controlling that operation. The HEX code of this byte (ESC . B) is the HEXdecimal value of all the operation bits X₀ thru X₇, which must be set to ON at the same time. (Refer to table 4-11). Example - To establish a Polling operation in which: a) headers are required; b) any key may be used to establish Local Mode; and c) FAST SELECT is conditional, other polling operations are standard. Operation bits X₂X₁X₀ must be set; execute ESC . B 0 7.

Note

For detailed information on Polling and Addressing, refer to Section V of this manual.

4.9.2.11 Polling Transmission Number Limit Control

The transmission number is the number of Polling transmissions that will be counted before recycling the count. This number is imbedded in the Polling header (refer to Section V) when operation bit X₀ of Personality Byte B (table 4-11) is set to ON. Personality Byte C (ESC . C) controls the transmission number limit. The default value (00) of this byte (see figure 4-6) specifies that the transmission number will not be sent. Other transmission number limits may be established as follows:

- ESC . C 01 specifies transmission number alternating between 01 and 00.
- ESC . C 02 thru ESC . C 09 counts transmission number 02 thru 09 before recycling.

4.9.2.12 Power-Up Tab Mode Control (See figure 4-6.)

Power-Up Tab Mode Control Byte D (ESC . D) establishes whether or not Modulo Tab Mode is automatically set at power-up. Operation bits X₀ thru X₄ of this byte are set to ON to express an ASCII character which determines the modulo tabbing interval, in accordance with the ASCII vs. modulo values in figure 2-4. When bits X₀ thru X₄ are all OFF, Modulo Tab Mode is not set at power-up; modulo tabs can be set only by executing ESC 3 (ASCII), as described in paragraph 4.5.3.3. Modulo Tab Mode (and Typewriter Tab Mode) are reset by ESC 3 Space.

Bit X₅ of byte D is used as specified in table 4-12 to control whether Modulo tabs or Protect Mode tabs may be reset by the Clear All (ESC * and ESC +) commands.

Table 4-11. Polling Option Variant Byte B Operations

OPERATION		ESC . B (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Reserved	80	Reserved	
X ₆	Communications Buffer Control	40	ON= Polling Communications Buffer (last two pages) is reserved (DIP Switch S4-SW8 ON). Incoming data held in buffer until message is completed. If no errors, message goes to screen. OFF= Polling Communications Buffer disabled; incoming data goes directly to screen.	OFF
X ₅	Addressable Print Buffer Control	20	ON = Addressable Print Buffer (last page display memory) enabled (see Section V). OFF= Addressable Print Buffer disabled.	OFF
X ₄	Transmit Last Character	10	ON = Transmission of last character (under cursor) is inhibited. OFF= Last character (under cursor) is transmitted.	OFF
X ₃	Return to Local/Idle State	08	ON = Terminal automatically returns to Local State upon completion of Polling message. OFF= Terminal automatically returns to Idle State upon completion of Polling message.	OFF
X ₂	FAST SELECT Control	04	ON = FAST SELECT is conditional; terminal must be in Idle State to receive data. OFF= FAST SELECT is unconditional; terminal is commanded to Idle State and must respond.	OFF
X ₁	Local Mode Control	02	ON = Any key may be used to establish Local State. OFF= CONV required to establish Local State (Compose Mode).	OFF
X ₀	Headers Required	01	ON = Headers are required in all communications. OFF= Headers are not required.	OFF

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

RECOMMENDED RTS OFF DELAY TIMES

RTS DELAY (MILLISECONDS)	BAUD RATE	OPERATION CODE	RTS DELAY (MILLISECONDS)	BAUD RATE	OPERATION CODE
343	50	ESC . A AC	9	1800	ESC . A 05
229	75	ESC . A 73	9	2000	ESC . A 05
175	110	ESC . A 58	7	2400	ESC . A 04
127	134.5	ESC . A 40	7	3600	ESC . A 04
115	150	ESC . A 3A	5	4800	ESC . A 03
57	300	ESC . A 1D	5	7200	ESC . A 03
29	600	ESC . A 0F	5	9600	ESC . A 03
15	1200	ESC . A 08			

Figure 4-7. Chart of Recommended RTS OFF Delay Times

Table 4-12. Power-Up Default Modulus Tabs Byte D-

OPERATION		ESC . D (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Typewriter Tab Clear	80	ON = Clear all typewriter tabs with Clear All (ESC * and ESC +) commands. OFF= Only Protect Mode tabs cleared by Clear All command. Typewriter Tabs and Modulo Tabs are cleared in normal manner.	OFF
X ₆	Power-Up Tab Mode	40	Bits ON or OFF as required to define the ASCII character selected which may be used at Power-Up time to initialize Modulo Tab Mode, without executing ESC 3. Nominally, character utilized is the same used when the sequence ESC 3 is used.	ALL OFF
X ₅		20		
X ₄		10		
X ₃		08		
X ₂		04		
X ₁		02		
X ₀		01		

4.9.2.13 Special Function Control Byte E (See Figure 4-6)

Several miscellaneous operations are controlled by Personality Control Byte E, as shown in table 4-13. The HEX value of this byte determines which operations are set to ON. The default value of this byte (08) specifies that video is not automatically turned off after approximately 20 minutes of no change in the display. Example - Execute ESC . E 89 to set operation bits X₇X₁X₀ which specify: a) personality changes from the keyboard are inhibited; b) automatic video off is inhibited; and c) programming of function keys and display of FUNKEY messages are inhibited. Other default operations are not affected.

4.9.2.14 Status Line Attribute Control Byte F

The personality byte (Byte F) controls the visual attribute of the message in Status Line 25, as shown in table 4-14. The HEX value of the byte determines which operation bits are set to ON. Also, operation bit X₀ is further controlled by DIP switch S6-SW3 at location 14M, which defines whether the Status Line field will be underlined (SW3 ON) or blanked (SW3 OFF). The default value of this byte is 02 (see figure 4-6) which specifies that the 25th Line message will be blinking when entered. Example - Execute ESC . F 07 to set operation bits X₂X₁X₀ and specify that the Status Line entry shall be reversed, blinking and underlined (SW3 set to ON position).

4.9.2.15 Special Function Control Byte 10

Several miscellaneous operations are controlled by Personality Byte 10, as shown in table 4-15. The HEX value of the personality byte determines which operations are set to ON. The default value of this byte is 02 (see figure 4-6) which specifies that the Erase Page operation when used, will terminate Write Protect (WPRT). Example - Execute ESC .. 0 62 to set operation bits X₆X₅X₄ which specify: a) for Clear operations, the replacement character is as specified in Personality Control Byte 8. The Erase Line, Scrolling, New Line, and Erase to Spaces operations are normal; b) protected field delimiter, FS, is imbedded after an unprotected field; and c)

Erase Page operation terminates Write Protect.

4.9.2.16 Special Function Control Byte 11

Several power-up conditions are controlled by Personality Byte 11, as shown in table 4-16. The HEX value of the byte determines which operations are set to ON. The default value of this byte is 01 (see figure 4-6) which specifies that CAP LOCK is set when power-up is complete.

4.10 VIDEO ATTRIBUTE CONTROL OPERATIONS

Video attributes highlight or otherwise call attention to selected portions of the display. The underlining or blanking video is selected by means of DIP switch S6-SW3 at location 14M.

4.10.1 Cursor and Video Control

The sequence for modifying the cursor and video is ESC ~ (ASCII), where (ASCII) defines the modification. The modification applies to every display page and remains in effect until the terminal is RESET or is further modified by an ESC ~ operation code. The cursor and video modification operation codes are as follows:

- ESC ~ 0 Video OFF (data entered is retained)
- ESC ~ 1 Video ON; cursor OFF
- ESC ~ 2 Video ON; cursor steady
- ESC ~ 3 Video ON; cursor blinking

4.10.2 Displayable Character Video

The video attributes for displayable characters (including displayed control codes) may be modified by ESC G (0 thru F), where (0 thru F)

Table 4-13. Special Function Control Byte E Operations

OPERATION		ESC . E (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Keyboard Personality Changes	80	ON = Inhibit personality changes from the keyboard. OFF= Personality changes from keyboard are accepted.	OFF
X ₆	Line Erase With CR	40	ON = CR erases remainder of current line before executing normal CR operation. OFF= Normal CR operation.	OFF
X ₅	New Line With CR	20	ON = Executing CR also executes New Line. OFF= Normal CR operation.	OFF
X ₄	Auto Line Wrap	10	ON = Auto Line Wrap is inhibited. Operator must use CR ,NL , etc. to get to next line. OFF= Auto Line Wrap - New Line automatically executed when position 80 is filled.	OFF
X ₃	Auto Video Shut Off	08	ON = CRT video not shut off after approximately 20 minutes of no display activity. OFF= CRT video automatically shut off after approximately 20 minutes of no display activity.	ON
X ₂	Pseudo Send	04	ON = PRINT sends SOH P CR SHIFT PRINT sends SOH p CR SEND LINE sends SOH Q CR SHIFT SEND LINE sends SOH q CR SEND PAGE sends SOH R CR SHIFT SEND LINE sends SOH r CR SEND MSG sends SOH S CR SHIFT SEND MSG sends SOH s CR OFF= Disables mode ; normal SEND or PRINT operations	OFF

Table 4-13. Special Function Control Byte E Operations (cont'd)

OPERATION		ESC . E (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₁	Load Cursor Skip	02	ON = Cursor skips out of protected field if position is specified during a Load Cursor operation. OFF= Cursor remains in protected field if position is specified during a Load Cursor operation.	OFF
X ₀	FUNKEY Programming/ Display	01	ON = Inhibit programming of function keys and display of FUNKEY messages. OFF= Normal FUNKEY operations.	OFF

Table 4-14. Status Line Visual Attribute Control Byte F Operations

OPERATION		ESC .. F (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Reserved	80	Reserved	OFF
X ₆		40		
X ₅		20		
X ₄		10		
X ₃		08		
X ₂	Reversing Control	04	ON = Status Line message reversed. OFF= Status Line message in normal or personality video.	OFF
X ₁	Blinking Control	02	ON = Status Line message blinking. OFF= Status Line message in normal or personality video.	ON
X ₀	Underlining or Blanking Control	01	ON = Status Line message underlined (S6-SW3 @ 14M set to ON) or blanked (S6-SW3 at OFF). OFF= Status Line message in normal or personality video.	OFF

Table 4-15. Special Function Control Byte 10 Operations

OPERATION		ESC..0 (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Erase to Spaces Replacement Character	80	ON = Erase to Spaces operation uses replacement character specified by Personality Byte 8. OFF= Normal Erase to Spaces operation.	OFF
X ₆	Clear to Spaces Replacement Character	40	ON = Clear to Spaces operation uses replacement character specified by Personality Byte 8. OFF= Normal Clear to Spaces operation.	OFF
X ₅	FS vs. Protected Field Control	20	ON = Protected field delimiter, FS, is imbedded after unprotected field. OFF= Protected field delimiter, FS, is imbedded before unprotected field.	OFF
X ₄	Transmit NL Control	10	ON = Inhibit transmission of 1st and 2nd New Line characters (Personality Bytes 3 and 4) OFF= Normal transmission of 1st and 2nd New Line characters.	OFF
X ₃	Scrolling Control	08	ON = Scrolling of an unprotected page is inhibited. OFF= Normal Scrolling operation.	OFF
X ₂	Reserved	04	Reserved	OFF
X ₁	Erase Page vs. Write Protect	02	ON = Erase Page operation resets Write Protect Mode. OFF= Normal Erase Page operation.	ON
X ₀	Erase Line vs. Write Protect	01	ON = Erase Line operation resets Write Protect Mode (WPRT). OFF= Normal Erase Line operation.	OFF

Table 4-16. Special Function Control Byte 11 Operations

OPERATION		ESC . . 1 (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Reserved	80	Reserved	ALL OFF
X ₆		40		
X ₅		20		
X ₄		10		
X ₃		08		
X ₂	Power-Up Conv Mode Control	04	ON = Conversation Mode is set when power-up is completed. OFF = Block Mode is set when power-up is completed.	OFF
X ₁	Reserved	02	Reserved	OFF
X ₀	Power-Up CAP LOCK Control	01	ON = CAP LOCK is set when power-up is completed. OFF = CAP LOCK is not set when power-up is completed.	ON

defines the attribute. (Refer to table 4-17.) The attributes apply to the area bracketed by the operation code, or to the end of the current page (DIP switch S6-SW2 OFF) if a closing operation code is not entered. (DIP switch S6-SW2 ON causes the attribute to be effective only to the end of the current line.) The operation is not changed if Auto Page is set.

Note

When the optional Line Drawing character generator is installed, the Standard Character Generator is also available for use.

4.10.3 ADM 42/ADM 2 Attribute Mode Control

Main logic board DIP switch S6-SW1 provides a means of selecting ADM 42 Attribute Mode (S6-

SW1 OFF) or ADM 2 Attribute Mode (S6-SW1 ON) for special control of the blanking and underlining attributes. Table 4-18 lists the various operation codes required to select the attributes. If any of these special attributes is selected, the Send Line All, Send Page All, and Send Message All operations (table 4-8) are modified as follows:

- ADM 42 Attribute Mode - ESC G (*) is sent for the attribute code, where (*) is the appropriate ASCII from table 4-17.
- ADM 2 Attribute Mode - Between the ESC) and ESC (codes which bracket protected fields, BEL is sent for the BLINK delimiter, and CAN is sent for the BLANK (UNDERLINE) delimiter.

Note

When the ADM 2 Attribute Mode is set, the ADM 42 attributes are inhibited.

Table 4-17. Video Attribute Control Operation Codes

FUNCTION	STD CHAR. GENERATOR	ALT. CHAR. GENERATOR
Reset to Normal Video	ESC G 0	ESC G 0
Limited Graphics Mode Enable		ESC G 8
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) of area	ESC G 1 or ESC -	ESC G 9 or ESC -
Blinking of Area	ESC G 2 or ESC ^	ESC G A or ESC ^
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Blinking of Area	ESC G 3	ESC G 8
Reversing of Area	ESC G 4	ESC G C
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Reversing of Area	ESC G 5	ESC G D
Blinking and Reversing of Area	ESC G 6	ESC G E
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Reversing of Area	ESC G 7	ESC G F

NOTE: The above operations apply when ADM 42 Attribute Mode is selected (S6-SW1 OFF). If ADM 2 Attribute Mode is selected (S6-SW1 ON), the above operations are inhibited; the attribute codes will be displayed but not acted upon.

Table 4-18. Operation Codes for ADM 42/ADM 2 Attribute Mode Control

FUNCTION	ADM 42 MODE	ADM 2 MODE
Blanking for entire page	ESC G (Space)	ESC G !
Blanking to end of line	ESC G "	ESC G #
Underlining for entire page	ESC G \$	ESC G %
Underlining to end of line	ESC G &	ESC G '

SECTION V POLLING AND ADDRESSING

5.1 ADM 42 POLLING

When the Polling Option is installed in the ADM 42, the terminal may then act as a polling terminal in a multi-point communications network. Group Poll, Group Select, and Multi-Point Contention polling activities are also available. When active in a polling environment, the ADM 42 is prevented from initiating transmission of traffic (data) except under the control of the network control center. All message transmission is between the network control center and the selected terminal or terminals; these messages, as well as control of the entire communications network, are controlled entirely by a polling/addressing dialogue initiated by the control center. Within the dialogue, the control center periodically asks or "polls" each device to see if any messages are waiting; if so, the device is commanded to transmit its message in a prescribed format. The control center may also send messages to a specified terminal or terminals at any time.

5.1.1 Setting ADM 42 Address

The ADM 42 Polling Address is a two-character code (A₁A₂) which must be ASCII characters and not control characters. The terminal will recognize and respond to only the specified address. The address is preset by means to two banks of DIP switches (locations 5L and 6L) on the option board (see figure 2-4). Each switch in the bank represents one bit in the 7-bit address: SW1 OFF sets bit 0 (LSB) = 1; SW2 OFF sets bit 1 = 1; etc. SW8 (location 5L only) ON enables the polling option. SW8 ON at location 6L enables the Polling

Communications Buffer, which must be selected by setting bit X₆ of Personality Byte B. The preset switch settings establish the Polling Address for the ADM 42. This address may be displayed by executing ESC 'A from the keyboard.

5.1.2 Establishing Polling Operations

5.1.2.1 Setting Up Terminal

The information to be transmitted when the terminal is polled must be entered on the ADM 42 display prior to being polled. Proceed as follows:

1. Type **CONV MODE** to lighted state, to enable data entry from the keyboard.

Note

This requirement may be modified by setting bit X₆ of Personality Byte B.

2. Enter the data just as it is to be transmitted. All editing and embedding of control characters must be done at this time.
3. Select and execute the appropriate activity to enable the ADM 42 response to a POLL inquiry, as follows:
 - **SEND LINE**, to cause the ADM 42 to send all unprotected characters from the beginning of the line through the cursor position. To send protected as well as unprotected characters, type **SHIFT SEND LINE**. This operation is the same as the forced Send v or Send x from the computer.

Note

Setting bit X of Personality Byte B will inhibit transmission of the character position under the cursor.

- **SEND PAGE**, to cause the ADM 42 to send all unprotected characters from the beginning of the page through the cursor position. To send protected, as well as unprotected characters, type **SHIFT | SEND PAGE**. This operation is the same as the forced Send w or Send y from the computer.

Note

Setting bit X of Personality Byte B will inhibit transmission of the character position under the cursor.

- **SEND MSG**, to cause the ADM 42 to send all unprotected characters in the display bracketed by STX and ETX codes. If no STX is encountered, transmission will start at the HOME position; if no ETX is encountered, transmission will stop at the end of the page. To send protected, as well as unprotected characters, type **SHIFT | SEND MSG**. This operation is the same as the forced Send z or Send . from the computer.

4. The terminal is now ready to transmit. It waits to be polled. (The CONV MODE light is out).

5.1.2.2 Monitor Mode Operation

The ADM 42 may be set up for Monitor Mode operation by executing **ESC | M** from the keyboard. This operation causes all data (including line control data) on the RCV line to be displayed, whether addressed to this terminal or not. This mode is usually employed as a troubleshooting activity. Monitor Mode is reset by executing **SHIFT | RESET** from the keyboard or by an unconditional polling sequence from the host computer.

5.1.2.3 Enabling Keyboard

To enable the ADM 42 keyboard for data entry, type **CONV MODE** to its lighted state. If this operation does not return the terminal to keyboard operation, type **SHIFT RESET**. The lighted **CONV MODE** key indicates when control has been returned to the keyboard. The computer can override local keyboard operation by executing **FAST SELECT**, or **BROADCAST SELECT**.

5.1.3 Removing Terminal from Polling Status

To set Non-Polling Mode, execute **ESC | R** from the keyboard. The ADM 42 will no longer respond as a polling terminal. To re-establish Polling Mode, execute **ESC | S** from the keyboard. Polling Mode may also be disabled by setting option board DIP switch S3-SW8 @ 5L to OFF.

5.1.4 Initiating Standard Polling Sequence

All polling operations are initiated by the network control through a standard control sequence. This sequence consists of the following:

1. EOT Character (EOT).
2. Two Address Characters (A₁A₂). In order for the terminal to respond, these characters must match the two address characters established by option board DIP switches S3 @ 5L and S4 @ 6L.
3. Function Code. This code is an ASCII character, used to identify the operation to be performed by the terminal. It may be one of the following:

p POLL

q SELECT

- r SEQUENTIAL SELECT
- s FAST SELECT
- t BROADCAST SELECT
- v SEND LINE FOREGROUND
- w SEND PAGE FOREGROUND
- x SEND LINE ALL
- y SEND PAGE ALL
- z SEND MSG FOREGROUND
- { SEND MSG ALL
- 4. ENQ Character (ENQ). This character is present only when a POLL(p), SELECT(q), or SEND (v, w, x, y, z, {) operation is called for.

5.1.5 POLL Responses (See Figure 5-1)

The POLL sequence is initiated by the control center to inquire the ADM 42 whether there is data to be sent. When the ADM 42 is sent the sequence "EOT AA:p ENQ" the terminal will respond as follows:

1. If there is no message waiting to be sent (traffic), the terminal sends an EOT character to the control center and then returns to the Idle state.
2. If there is traffic, the terminal sends the message to the control center in accordance with how the message is prepared, the instructions in the Function Code and the personality of the terminal.
 - a. If the poll message is to be taken from the screen or a programmed FUNKEY, the terminal response is as follows:

- *SOH Character (SOH).
- *Two Address Characters (A₁A₂). These characters are the preset terminal address.
- *Transmission Number (#). This number may be inhibited by executing ESC . C 00, and thus not appear. If enabled, the maximum number of transmissions counted (re-transmissions are not counted) may be between 1 and 9, depending upon the value selected by Personality Byte C (ESC . C).
- STX Character (STX). This character identifies the beginning of the message to be transmitted.
- Text. This is the message which is written on the screen or stored under a FUNKEY. The message is sent in one of two formats, depending on whether or not Protect Mode is set, as follows:
 1. Protect Mode OFF. All characters except NUL are sent. A US character is inserted in the string as the cursor moves from the end of one line to the beginning of the next.
 2. Protect Mode ON. All foreground characters are sent; each protected field is designated by an FS character. A US character is transmitted as in 1 above.
 3. If the Function Code is a Send code (v, w, x, y, z, or {) instead of "p" the terminal complies with the instruction as described under Send Responses.
- ETX Character (ETX). This character designates the end of the polled message.
- LRC Character (LRC). This character represents the modulo 2 sum of the text transmitted, plus the ETX character. It is used by the control center to determine whether or not the text was received correctly.
- b. If the polling message is to be taken from an unprogrammed function key F1 thru F16

*Headers are not part of the standard ADM 42 polling response. Header characters will be present only, if selected by setting bit X₀ of Personality Byte B.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

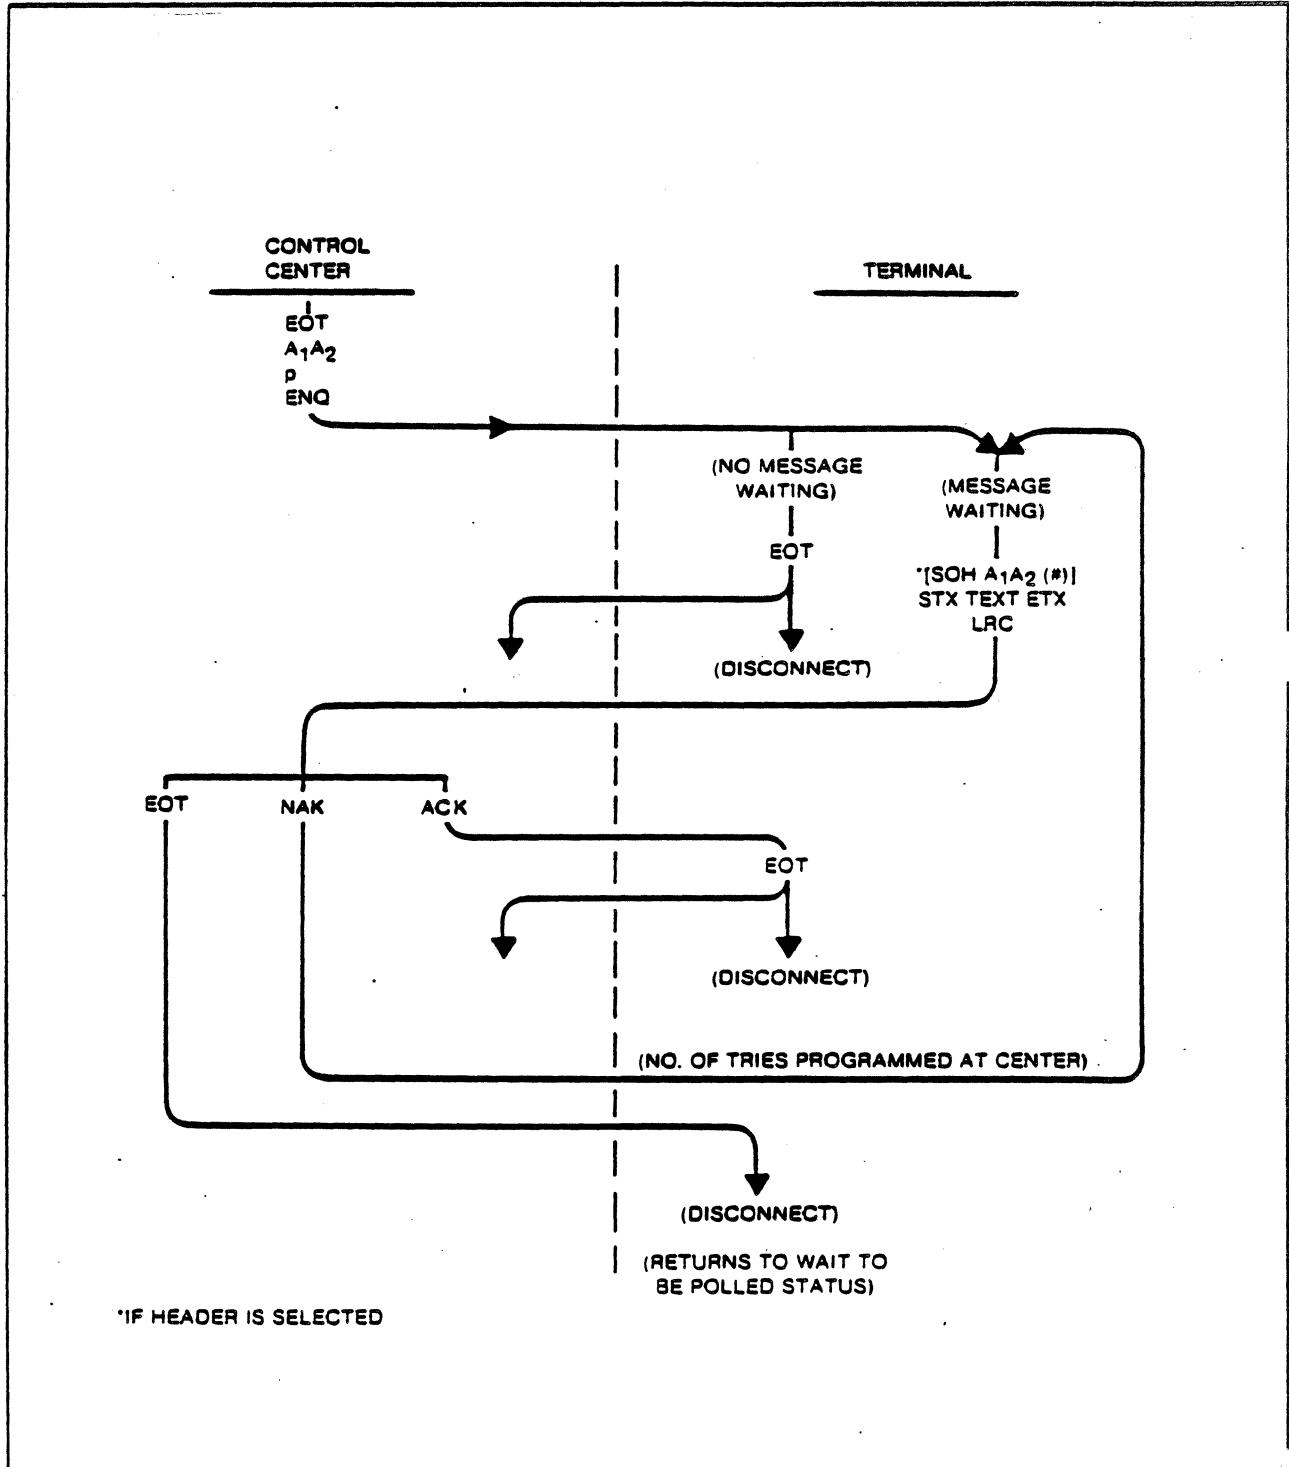


Figure 5-1. POLL Function Dialogue, Flow Diagram

and headers are not selected, the terminal responds: "SOH (character) ETX LRC". Note that "SOH" replaces the normal STX character and the (character) is the assigned F1 thru F16 character.

- c. If the polling message is to be taken from an unprogrammed function key F1 thru F16 and headers are selected, the terminal responds: "SOH A₁A₂ (#) STX DLE (character) ETX LRC". Note that DLE (or some character other than SOH, STX, EOT, ETX, or LRC) replaces the normal SOH character.
- 3. After the ADM 42 has sent the LRC character, it positions the cursor at the original location and waits for the control center to acknowledge receipt of the message. The acknowledgement will consist of one of the following:
 - ACK. The message was received correctly. The terminal respond by transmitting "EOT" and disconnecting.
 - NAK. The message was received with errors. The terminal will respond by retransmitting the message (transmission number is not incremented) and again waiting for control center acknowledgement. The control center will determine how many transmissions will be called for.
 - EOT. Retransmission is required. The terminal responds by positioning the cursor at the original location and awaiting polling.

5.1.6 SELECT Responses (See Figure 5-2)

The SELECT sequence is used when the control center wishes to send a message to a single addressed terminal. When the ADM 42 is addressed by the sequence "EOT A₁A₂q ENQ" the terminal responds as follows:

*Headers are not part of the standard ADM 42 polling response. Header characters will be present only, if selected by setting bit X₀ of Personality Byte B.

- 1. If the terminal is BUSY, it sends a NAK character, beeps to alert the operator that a message is waiting, then disconnects. BUSY is defined as any of the following states:
 - The terminal is waiting to be polled.
 - The operator is entering data.
 - The terminal is sending data to the printer.
- 2. If the terminal is not BUSY, it sends an ACK to the control center, and waits for the center to send "[SOH A₁A₂(#)] STX TEXT ETX LRC". If there is an EOT in the message, the terminal will disconnect to Idle state.
- 3. After the selected header is received, the following events occur:
 - If there are no errors, the ADM 42 sends an ACK to the control center, then disconnects to the Idle state.
 - If there are errors, the ADM 42 sends a NAK character to the control center and awaits retransmission of the message.
 - The control center may then retransmit the message, starting with the selected header. If the control center decides not to retransmit, it sends an EOT instead of the selected header; the ADM 42 disconnects to the Idle state.

5.1.7 SEQUENTIAL SELECT Responses (See Figure 5-3)

The SEQUENTIAL SELECT operation is used to sequentially address a number of terminals with a single extended control message. The header sequence is "EOT A₁A₂r B₁B₂r...N₁N₂s". Note that the FAST SELECT(s) Function Code is sent to the last terminal addressed. This code is always

followed by "[SOH N₁N₂(#)] STX TEXT ETX LRC." The following events take place:

1. All terminals except the last terminal (N₁N₂) test their BUSY status. If BUSY, each terminal will disconnect without responding.
2. Last terminal (N₁N₂) connects unconditionally and waits for an STX character. All addressed terminals which are not BUSY connect and wait for an STX character.
3. Following receipt of "...ETX LRC" all addressed terminals except last terminal (N₁N₂) disconnect without responding. Terminal N₁N₂sends either an ACK or NAK to the control center, then disconnects to Idle or personality state. The control center decides whether or not to retransmit if NAK is returned.

5.1.8 FAST SELECT Responses (See Figure 5-4)

The FAST SELECT function is used when the control center requires fast, unconditional (see note) selection of a specific terminal. Upon receiving the header sequence (EOT N₁N₂s), the terminal will unconditionally connect and wait for the message block. The terminal will not respond until after it has received the LRC character. the complete message block code is "[SOH N₁N₂(#)] STX Text ETX LRC". After receiving LRC, the terminal sends either ACK or NAK to the control center, then disconnects to Idle (or personality) state. The control center decides whether or not to transmit if NAK is returned.

Note

*Setting bit X₂of Personality Byte B
will cause FAST SELECT to be
conditional only if terminal is in Idle
state.*

*Headers are not part of the standard ADM 42 polling response. Header characters will be present only, if selected by setting bit X₂of Personality Byte B.

5.1.9 BROADCAST SELECT Responses (See Figure 5-5)

The BROADCAST SELECT function is used when the control center requires fast, unconditional selection of a number of terminals. All terminals on the line receive the same message under the header sequence. When each terminal receives the sequence "EOT N₁N₂t" followed by "[SOH N₁N₂(#)] STX Text ETX LRC" it will connect unconditionally, whether BUSY or not. Following receipt of the sequence, all terminals except the addressed terminal disconnect to the Idle (or personality) state without responding. The addressed terminal will send either ACK or NAK to the control center, then disconnect to the Idle (or personality) state. The control center decides whether or not to retransmit if NAK is returned.

5.1.10 SEND Responses (See Figure 5-6)

One of six characters specifies the information that the addressed terminal is to send. The function character (v, w, x, y, z, or t) is transmitted in place of the "q" in the standard header. The six possible Send functions are as follows:

1. Send Line Foreground (v). The terminal will send all foreground unprotected data in the line in which the cursor rests from beginning of line to the cursor position. NUL characters are not transmitted. The terminal marks each protected area in the line by sending an FS character.
2. Send Page Foreground (w). The terminal will send all foreground data in the page, starting at the HOME location and ending at cursor position. NUL characters are not transmitted. The terminal marks each protected area in the page by sending an FS character. Each end of line is indicated by US character.

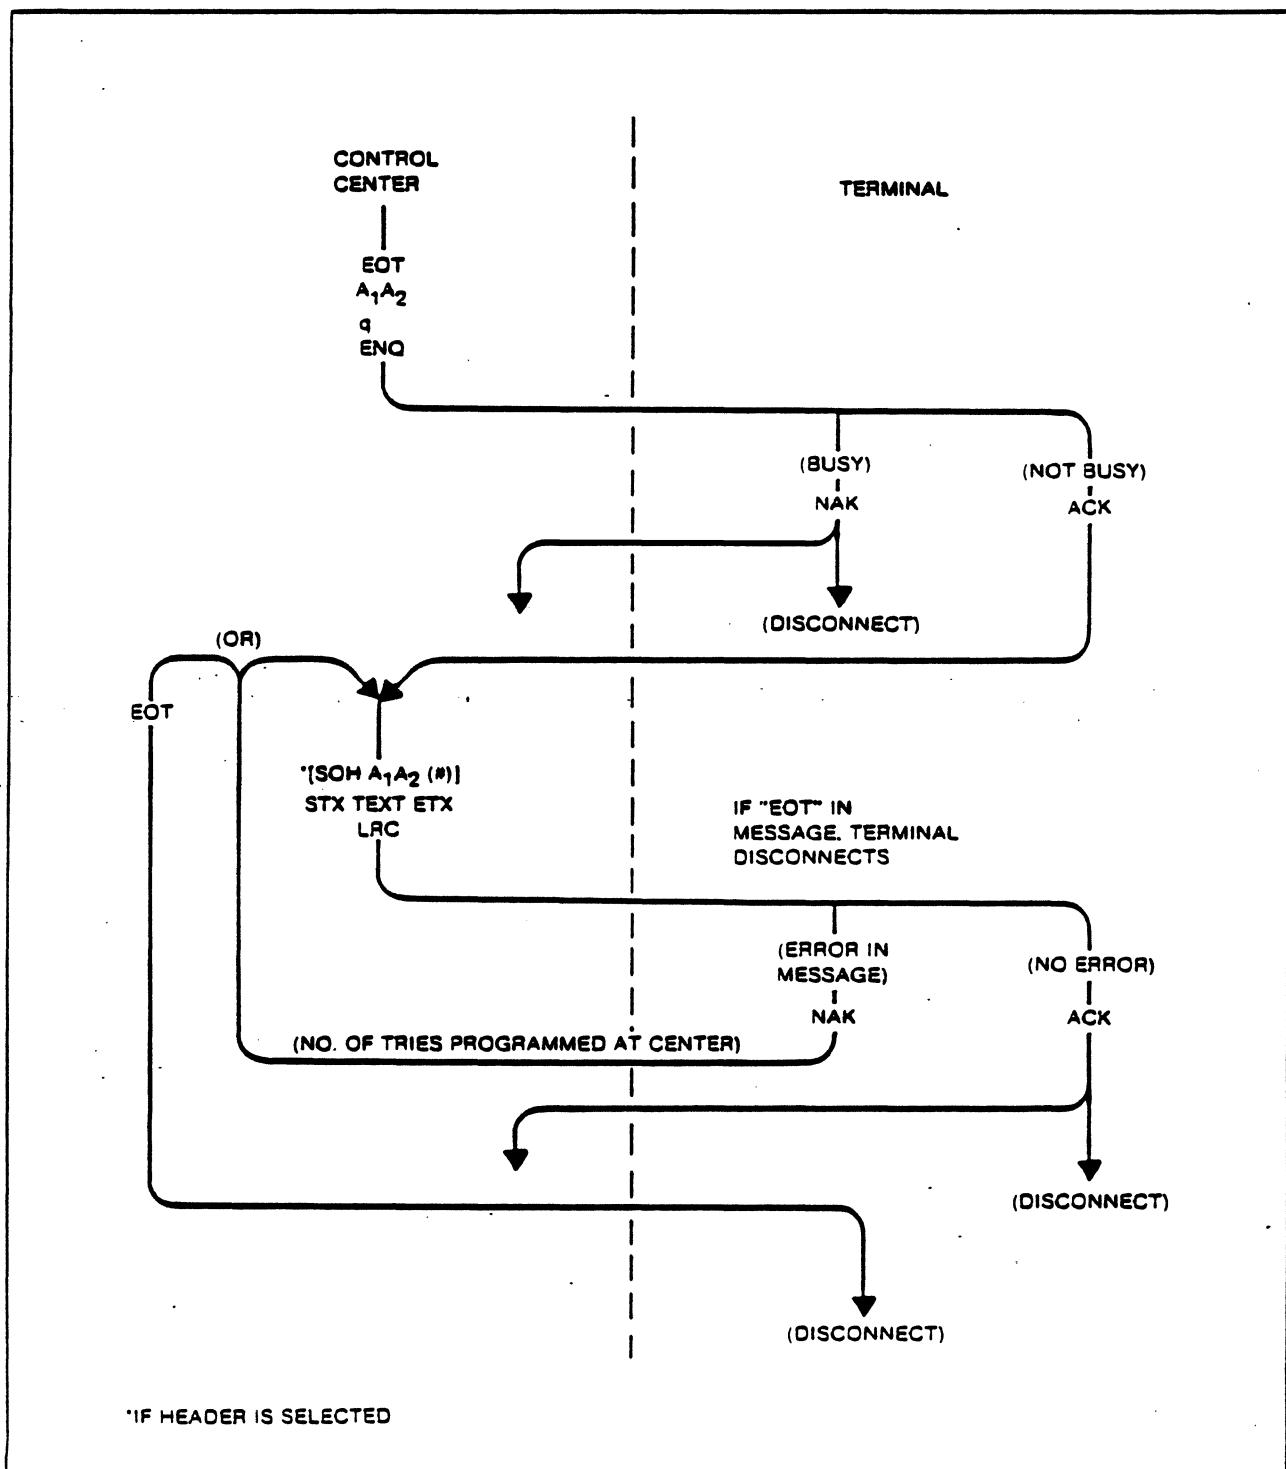


Figure 5-2. SELECT Function Dialogue, Flow Diagram

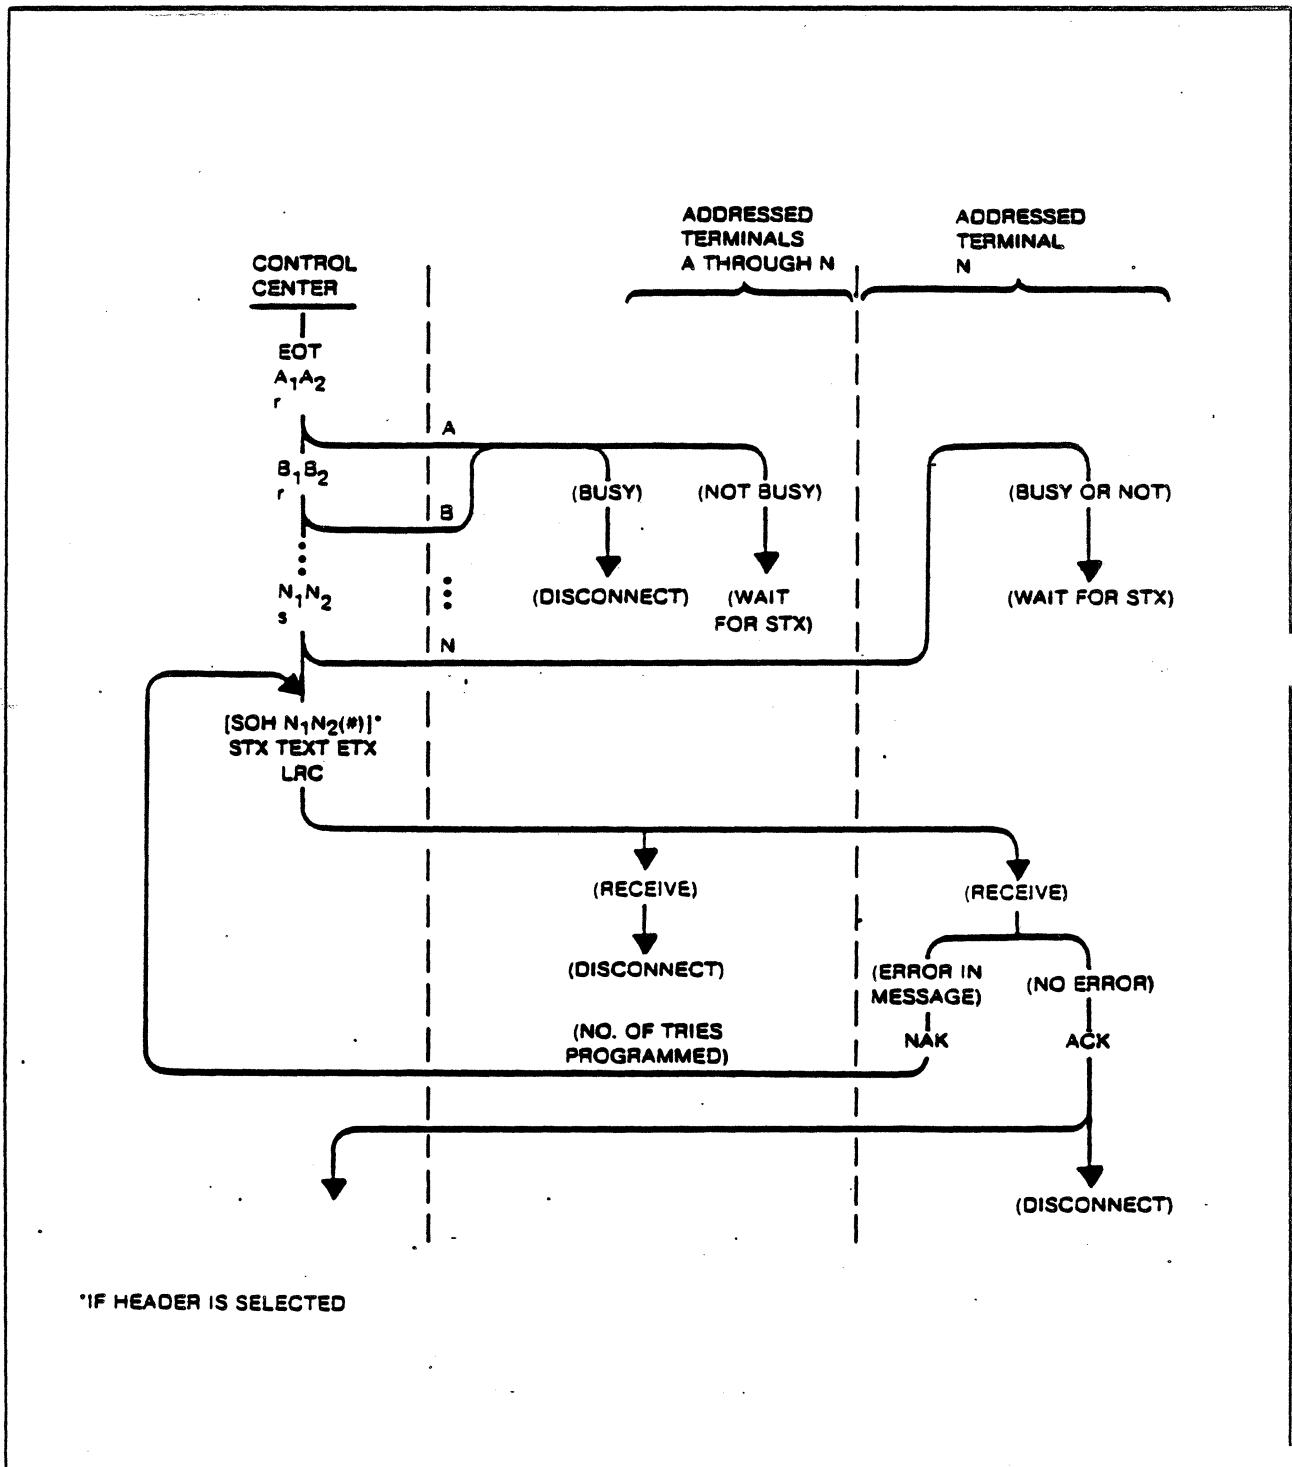


Figure 5-3. SEQUENTIAL SELECT Function Dialogue, Flow Diagram

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

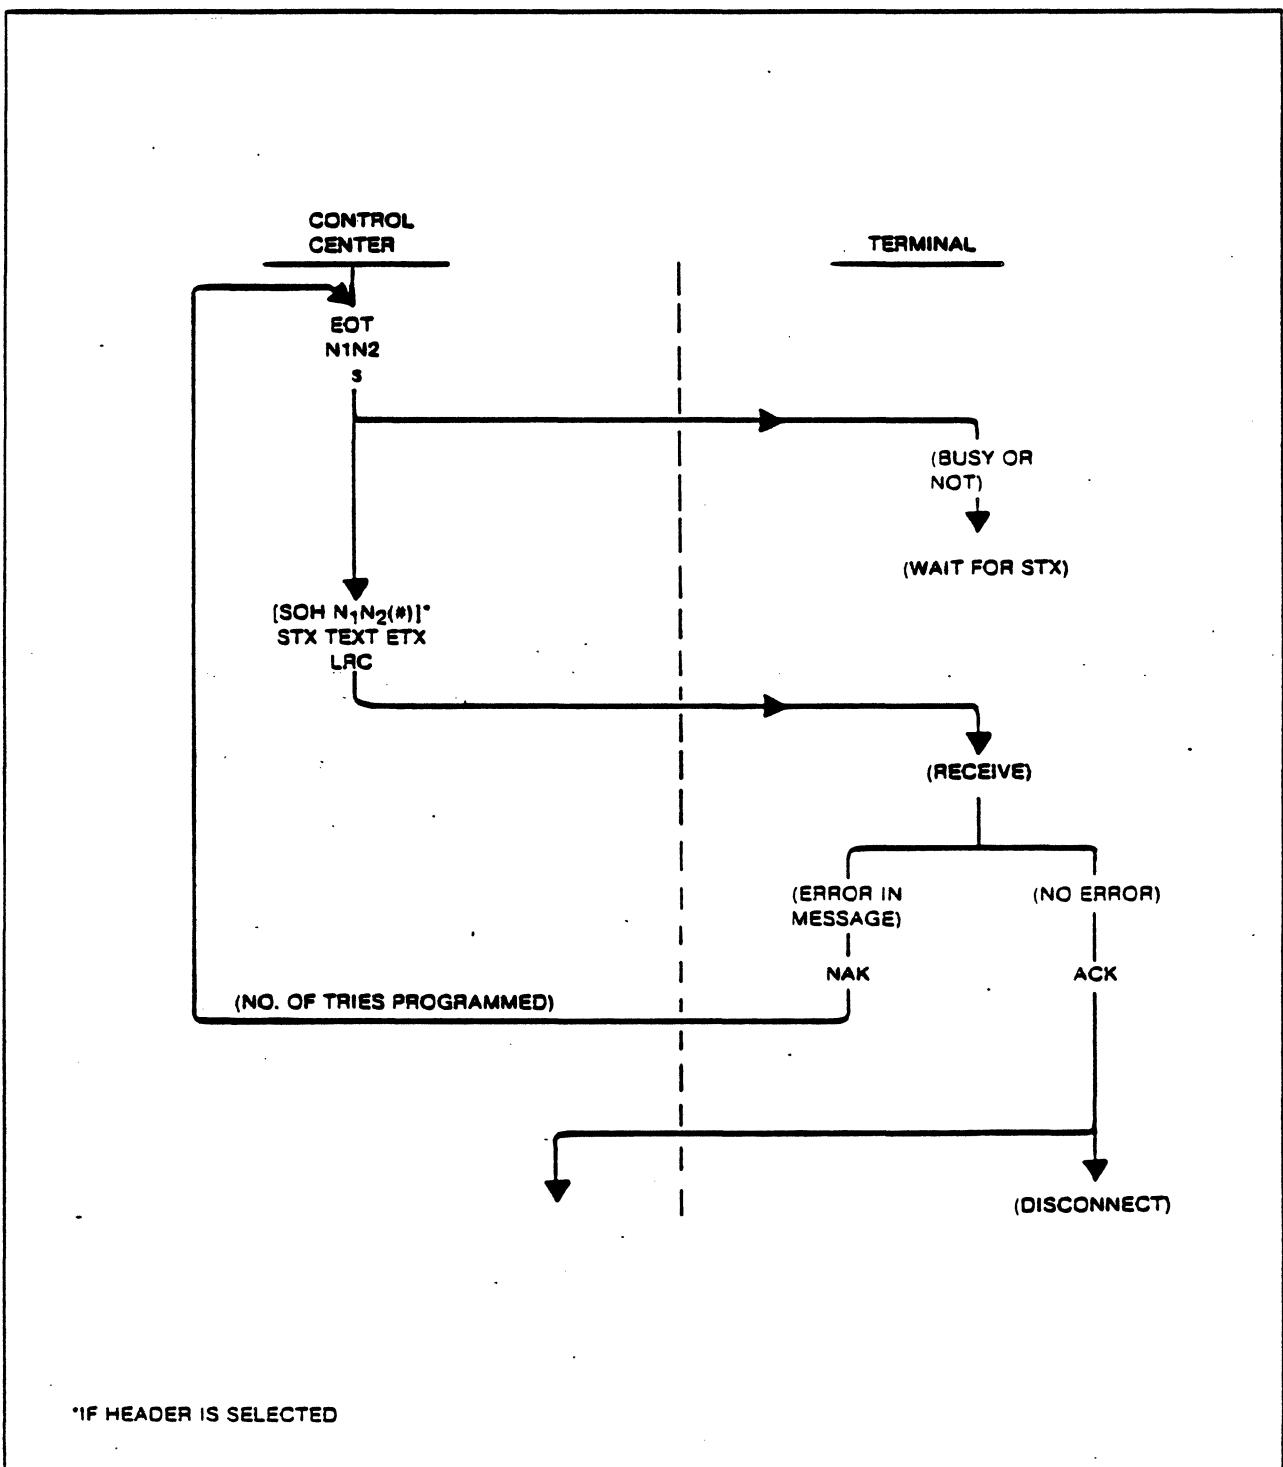


Figure 5-4. FAST SELECT Function Dialogue, Flow Diagram

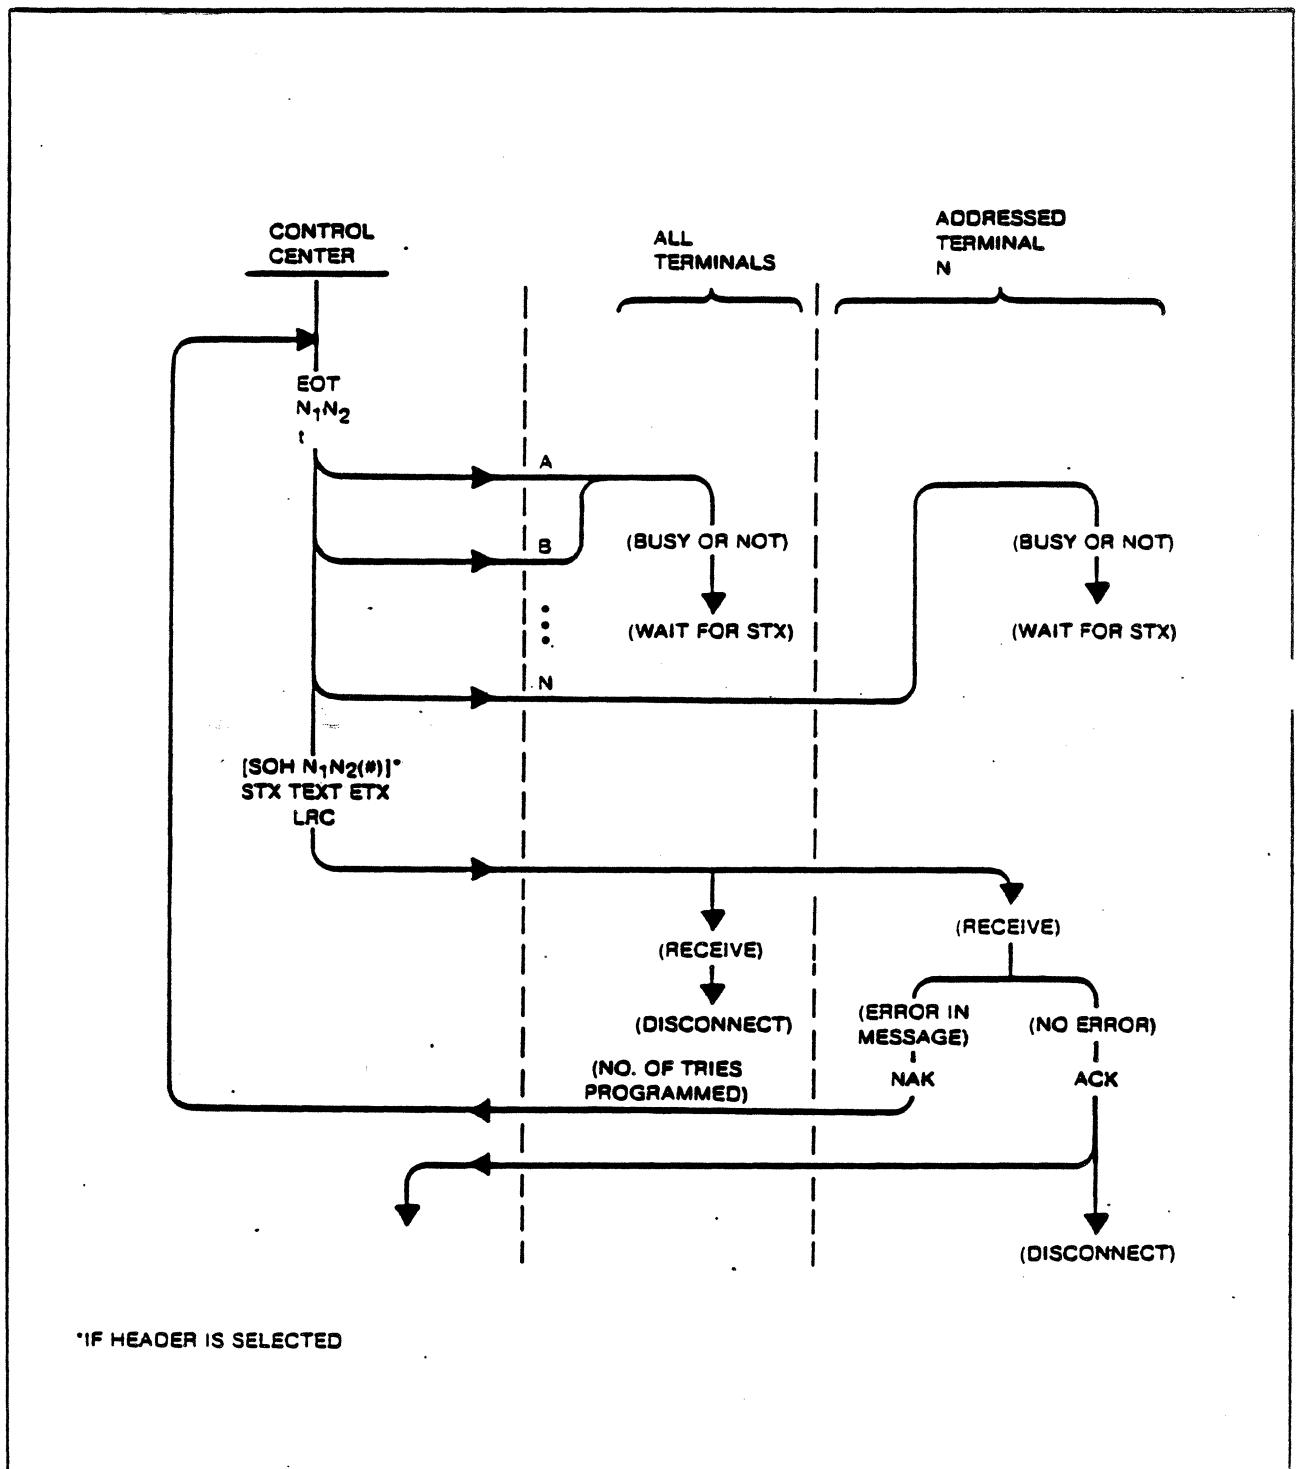


Figure 5-5. BROADCAST SELECT Function Dialogue, Flow Diagram

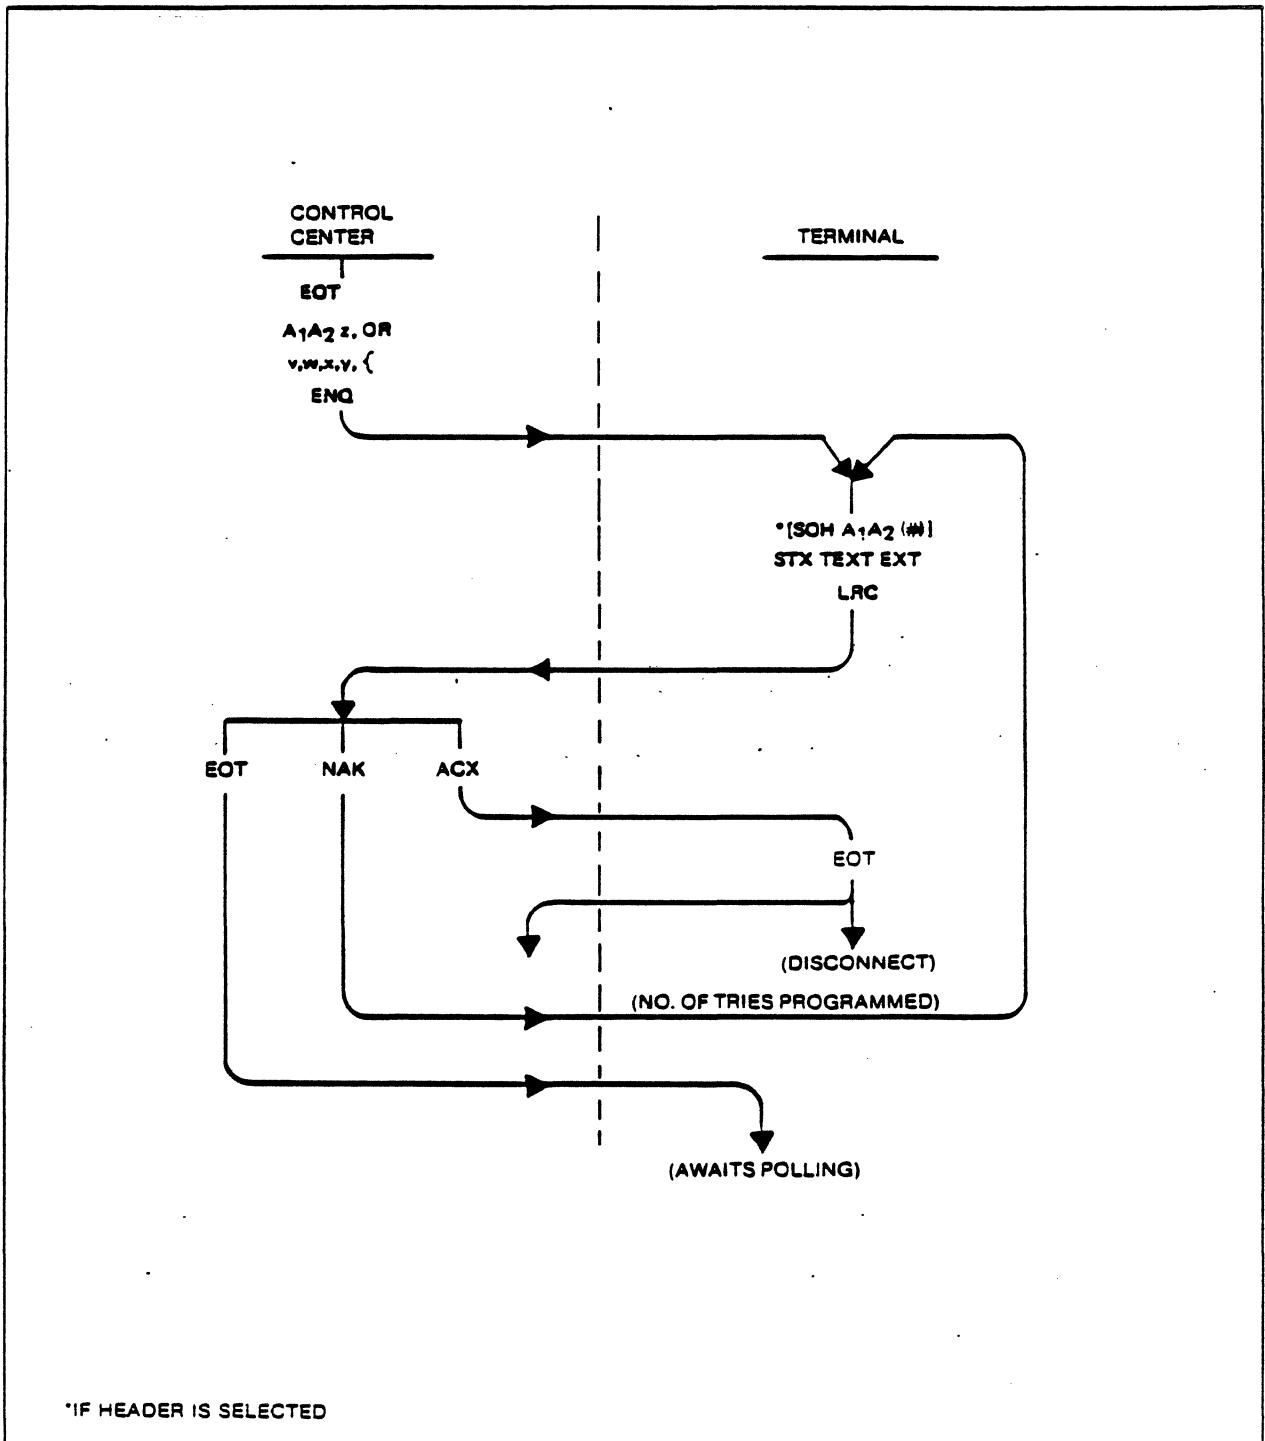


Figure 5-6. SEND Function Dialogue, Flow Diagram

3. Send Line All (x). The terminal will send all data, protected and unprotected, in the line in which the cursor rests and stops at cursor. All characters are transmitted, with the operation code ESC) preceding the first character of a protected field, and the operation code ESC (following the last character of a protected field.
4. Send Page All (y). The terminal will send all data, protected and unprotected, in the page, beginning at the HOME location, stopping at cursor. All characters are transmitted, with the operation code ESC) preceding the first character of a protected field, and the operation code ESC (following the last character of a protected field.
5. Send Message Foreground (z). The terminal will send all foreground data following an STX code and ending with an ETX code. NUL characters are not transmitted. The terminal marks each protected area within the STX/ETX brackets by sending an FS character. If no STX is on the screen, transmission starts at HOME. If no ETX is on the screen, transmission stops at last position on the screen.
6. Send Message All (t). The terminal will send all data, protected and unprotected, between the STX/ETX codes. All characters are transmitted with the operation code ESC) preceding the first character of a protected field, and the operation code ESC (after the last character of a protected field. If no STX is on the screen, transmission starts at HOME. If no ETX is on the screen, transmission stops at the last position on the screen. (STX is written on the screen by typing [SOM] ; ETX is written by typing [EOM].)

Control and operation codes may be imbedded in memory by preceding the control code by an ESC; i.e. [ESC] [RETURN] will cause CR character to be written to the screen rather than being interpreted as a RETURN operation.

5.2 SPECIAL POLLING OPERATIONS

The ADM 42, with the Polling Option installed, may perform in several special polling environments. These environments consists of GROUP POLL, GROUP SELECT, MULTIPOLL, and ADDRESSABLE PRINTER operation. The paragraphs which follow describe these operations in terms of their differences from standard polling operations.

5.2.1 GROUP POLL Operations

GROUP POLL is essentially the same as standard POLL operations, except that the GROUP POLL address is the same for each terminal. All terminals are daisychained via their EXTENSION/MODEM ports. Each terminal responds as would an individual terminal under ADM 42 POLL. The GROUP POLL address for each terminal on the line is set up using option board DIP switch banks S5 @ 8L and S6 @ 9L in the same manner as for ADM 42 POLL (using switches S3 @ 5L and S4 @ 6L). Typing ESC 'A from the keyboard will display all polling addresses.

Note

The GROUP POLL address should not be the same as the standard POLL address on any terminal in the group.

GROUP POLL is functional only when groups of terminals are concatenated (daisychained). Headers must be used. The following is a typical GROUP POLL operation; with three or more terminals on a line connected to a modem or data set:

1. First terminal receives GROUP POLL command; if it has data to transmit, it sends data to control center and waits for ACK. (If NAK, operations proceed as described for POLL Responses, paragraph 5.1.5.) When ACK is received, first terminal sends CTS to next terminal.

2. If first terminal has no data to send, it checks for DTR (Data Terminal Ready) high on EXTENSION port, which is connected to the MODEM port of the next terminal. Finding DTR high, it sends CTS to second terminal.
3. If second terminal has data, it sends data to the control center and waits for ACK. When ACK is received, it looks for DTR high on its EXTENSION port and sends CTS to the next terminal.
4. If second terminal has no data, it checks for DTR high on EXTENSION port and sends CTS to the next terminal.
5. Process is repeated until last terminal in line fails to find DTR high on its EXTENSION port; terminal sends EOT (End of Transmission) to the control center and disconnects.

Note

If no terminal in the chain has data to send only the last terminal will respond with an "EOT".

5.2.2 GROUP SELECT Operations

GROUP SELECT is essentially the same as BROADCAST SELECT operations, except that the GROUP SELECT address (G_a) is inserted in the header in place of the "t". The complete address thus becomes: "EOT N₁N₂ G_a SOH N₁N₂(#) STX TEXT ETX LRC". (G_a is an upper case alpha character, A to Z.) Also:

1. The GROUP SELECT address resides in option board DIP switch S7 @ 10L.
2. Several groups may be selected by means of different terminal addresses. Every terminal in a group must be on the same line, but the line does not have physical limitations.
3. All terminals on line will connect unconditionally, with the addressed terminal responding as specified for BROADCAST SELECT.

5.2.3 MULTI-POINT CONTENTION Operations

MULTI-POINT CONTENTION is a polling mode which is selectable only by the control center, using the following control characters: "EOT NUL NUL BEL". In this mode, the control center CPU notifies all terminals on the line that the CPU will not poll until it has a message to be sent or until a polling terminal signifies that it has a message for the CPU. Terminal sends "EOT A₁A₂ p ENQ" to notify the CPU it has a message to send.

5.2.4 Addressable Printer Port Operations

The Addressable Printer Port operations are used to permit the ADM 42 to receive CPU output messages at the selected transmission rate, store the message, and retransmit the message in the prescribed format to a printer. The operation is as follows:

1. Bit X₅ of Personality Byte B must be set.
2. With the ADM 42 set up for standard polling, the control center calls for SELECT, as follows: "EOT A₁A₃ q ENQ". Note that the second terminal address (A₂) is incremented to A₃; this causes the ADM 42 to enable the print buffer (highest page) for operation. A buffer-not-empty condition will cause a terminal BUSY response.
3. The terminal responds to SELECT in the same manner as described in paragraph 5.1.6. Also, a NAK may be sent upon completion of a message not only because of an incorrect LRC, or terminal BUSY; a printer buffer overflow will also cause the entire message to NAK.
4. Once the terminal responds to the message with an ACK the ADM 42 disconnects, returns to the polling Idle (or personality) state, and begins outputting to the printer. Printing proceeds at the baud rate determined

by the PRINTER BAUD RATE switch on the front panel, and continues until the buffer is empty. The terminal operates in the **Buffered Print Mode** format established by appropriate operation codes (refer to **Print Transmission Control Operations** in **Section IV**).

5. Once printing from the buffer begins, no further messages from the control center may be received by the print buffer until the buffer is empty. (The terminal responds BUSY only to a print message.)

5.2.5 Polling Communication Buffer Operations

The Polling Communications Buffer is selected by setting option board DIP switch S4-SW8 to ON and setting bit X₄ of Personality Byte B.

1. With the buffer selected, the last two pages of memory (3 & 4) or (7 & 8) are reserved as the buffer.
2. All RCV data is stored in the buffer; only if the message is correct will the data be sent to the display.
3. If the message LRC is incorrect, a NAK is sent to the host and nothing is displayed.

SECTION 6

THEORY OF OPERATION

6.1 GENERAL DESCRIPTION

This section contains theory of operation information concerning the ADM-42 Interactive Data Display Terminal. The section is divided into three subsections: General, Functional, and Detailed descriptions.

The ADM-42 Data Display Terminal is an interactive, micro-program-controlled, video display device designed to communicate either unidirectionally or bidirectionally with a remote computer. The terminal has a detachable keyboard at which the operator enters or edits information, and a cathode-ray-tube (CRT) on which information is displayed.

Physically, the ADM-42 consists of three interconnected modules:

Monitor Module - This module contains the CRT display screen and the analog electronics used to control the display.

Keyboard Module - This module is a detachable, 118-key keyboard containing alphabetic and numeric characters, symbols, and special purpose keys which control the ADM-42 operation.

Electronics Module - This module contains the control, display memory and input/output (I/O) sections, the power supply assembly, and the cooling fan assembly.

Functionally, the ADM-42 is divided into seven sections:

CPU - containing the system clock, M6800 MPU, system timing control, address buffers and decoders.

External Interface - containing the interface logic for an external port, modem port, current-loop port, polling address port, and a separate buffer and interface for the special option board.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Keyboard - containing the keyboard matrix, keyboard interface adaptor, and keyboard timing logic.

Video Display - containing CRT control and character generation logic.

Display Memory - containing 8K-bytes of EPROM, 1K bits of RAM, and up to 16K-bits of RAM Refresh Memory.

Configuration Electronics - containing various switches and associated circuitry used to determine the system configuration.

Option Board - containing a parallel printer port, serial printer port, synchronous communication port, polling address logic; data, address and control buffers; 3K-bits of SRAM, and up to 8K-bytes of additional EPROM, PROM or ROM.

6.2 FUNCTIONAL DESCRIPTION (Figure 6-1)


The ADM-42 is an interactive data display device used to communicate with a remote computer. The communication may be unidirectional to or from the computer, or bidirectional to and from the computer.

Information is presented to the display area of the terminal from one of two sources; the keyboard or the remote computer.

If the information is from the keyboard, the data is sent to the CPU directly via the Data Bus. From the CPU, the data is sent to the Video section and written into the Video Data Refresh RAM, to be displayed upon the CRT.

If, however, the information originates at the remote computer, the data is delivered to the ADM-42 in one of two ways., If the host computer is considered to be "local" (50 feet or less in distance from the ADM-42), the data is sent through an RS-232C interconnect cable to the External Interface, via the Data Bus to the CPU, then to the Refresh RAM and to the CRT. If the data transmission is from a truly "remote" station and the data must be transmitted via telephone lines, a modem or dataset (one at each end of the transmission line) must be used. These devices merely condition the data for transmission along standard telephone lines. The data route after it reaches the External Interface is the same as in the local mode of transfer.

Figure 6-1. ADM-42 Simplified System Block Diagram

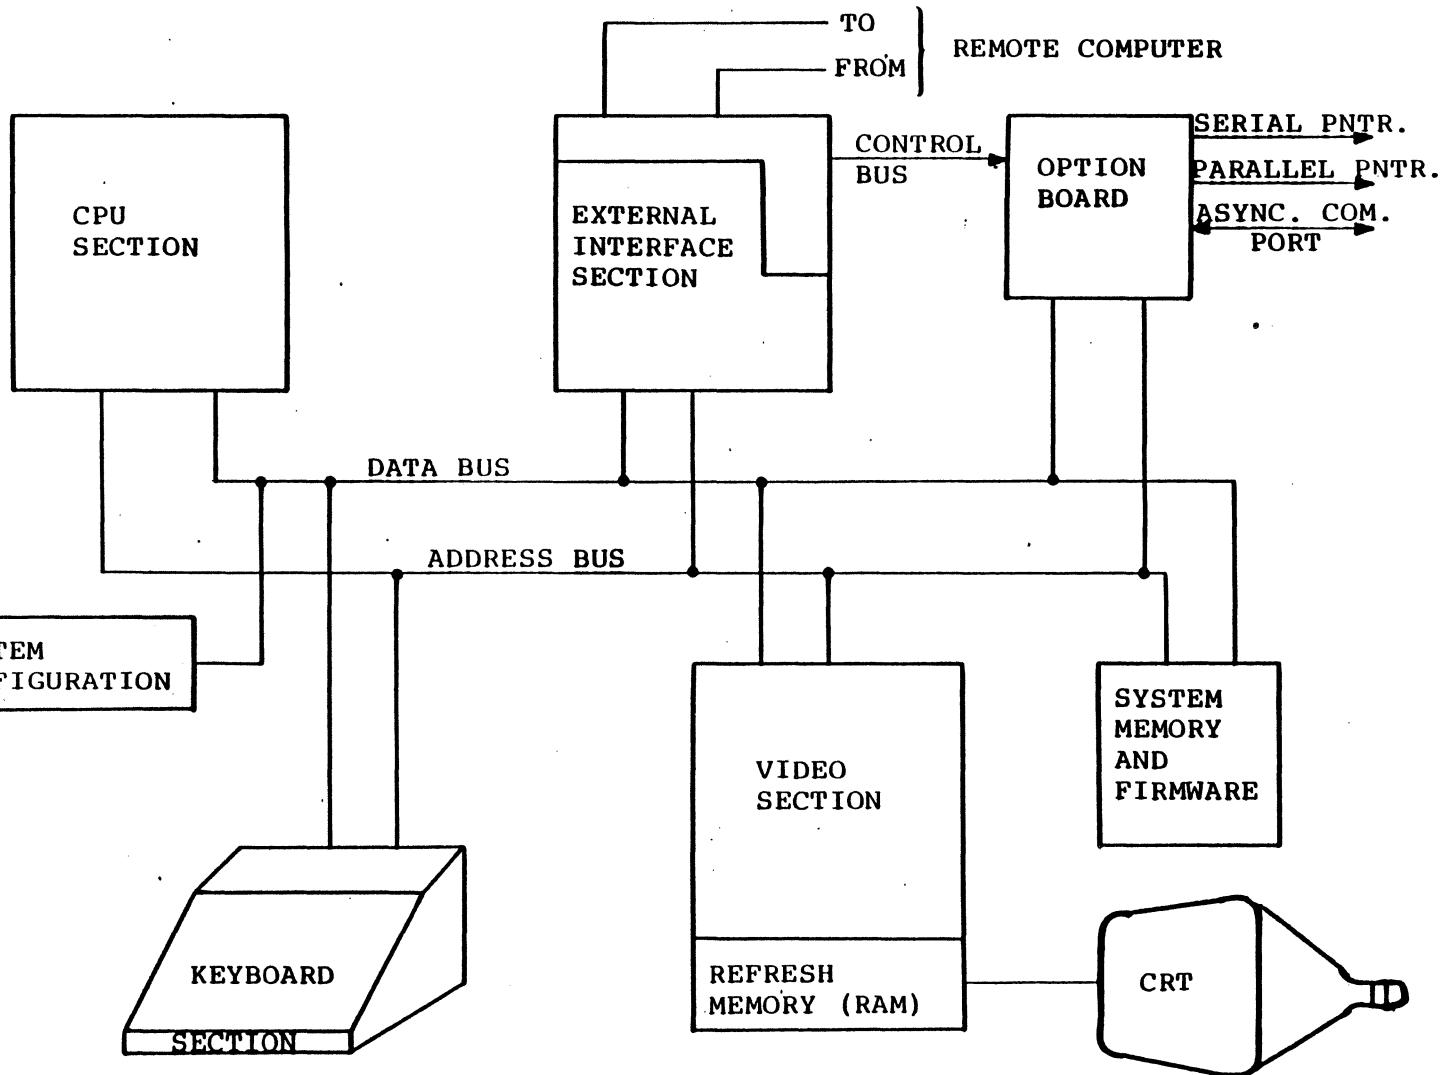

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

The ADM-42 transmits data by "reading" the information from the Refresh RAM and sending it via the Data Bus to the CPU. From the CPU, the data is placed again on the Data Bus and sent to the External Interface, where it is output from one of the ports. From this point, the "local"/"remote" conventions are applicable, depending upon the distance the data must travel to the host computer.

It should be noted that, in the ADM-42, no data transfer is accomplished without the data being routed through the CPU.

CPU Section

The CPU section contains the M6800 MPU, associated addressing logic, and the system timing logic. The CPU performs all addressing, data manipulation and arithmetic functions of the ADM-42. Any data to be moved to or from this device will be routed through the CPU section.

External Interface Section

The External Interface section provides the capability to interface with RS-232C point-to-point signals, 20 mA current loop signals, and modem interface signals. The interface also contains the Baud Rate clock and switches, allowing the ADM-42 to receive or transmit data at selected baud rates from 50 to 9600 baud.

Video Display Section

This section contains the video display logic, including the display memory, two character generators (one standard and one alternate), and the circuitry to condition the data for display on the CRT.

System Memory Section

This section contains 8K-bytes of EPROM and 1K-bits of RAM. The 8K-bytes of EPROM comprise the firmware area where the system programs are maintained. The 1K bits of RAM make up the temporary (scratchpad) storage where data manipulation takes place.

Configuration Electronics

Contained in this section is the Personality ROM which contains the preset system configuration information, and the configuration switches which allow operator configuration of the system.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Keyboard

The keyboard provides operator availability to the ADM-42 and to the remote computer. The keyboard consists of a detachable, 118-key keyboard having alphabetic and numeric characters, symbols, and special control keys. The functional components are the keyboard matrix, scan and control logic, timing logic, and associated indicator lamps.

6.3 DETAILED BLOCK DESCRIPTION

6.3.1 CPU Section (Figure 6-2, Schematic Sheet 2)

The CPU section is comprised of the Microprocessing Unit (MPU), the System Timing Logic, and the System Address Buffers and Decoders..

MPU (Figures 6-3 and 6-4)

The MPU is a Motorola M6800 microprocessor. It is a bidirectional, bus-oriented, 8-bit parallel LSI machine with a 16-bit address capability. Its function is to coordinate the activities of the system and to perform all addressing, data manipulation, and arithmetic functions.

The processor has two 8-bit accumulators which are used to hold operands and results from the Arithmetic Logic Unit (ALU). The 16-bit index register stores 16-bits of memory address for the index mode of memory addressing. The stack pointer is a 2-byte (8 bits per byte) register that contains the address of the next available location in external memory. The program counter is a 16-bit register that contains the program address. A condition code register (flag register) contains 16 bits of condition codes; the condition codes indicate the results of an ALU operation, Negative (N), Zero (Z), Overflow (V), Carry from bit 7 (C), and Half Carry from bit 3 (H). These bits of the condition code register are used as testable conditions for the conditional branch instructions. Bit 4 is a mask bit. The unused bits of the condition code register (bits 6 and 7) are always ones.

The minimum instruction time is 2 us. Processor control lines include RESET, which automatically restarts the processor (see flow chart, Figure 6-4), as well as Interrupt Request (IRQ) and Non-Maskable Interrupt to monitor peripheral status.

There are Tri-State Control (TSC), Data Bus Enable (DBE), and HALT control lines which can be used for Direct Memory Access or multiprocessing.

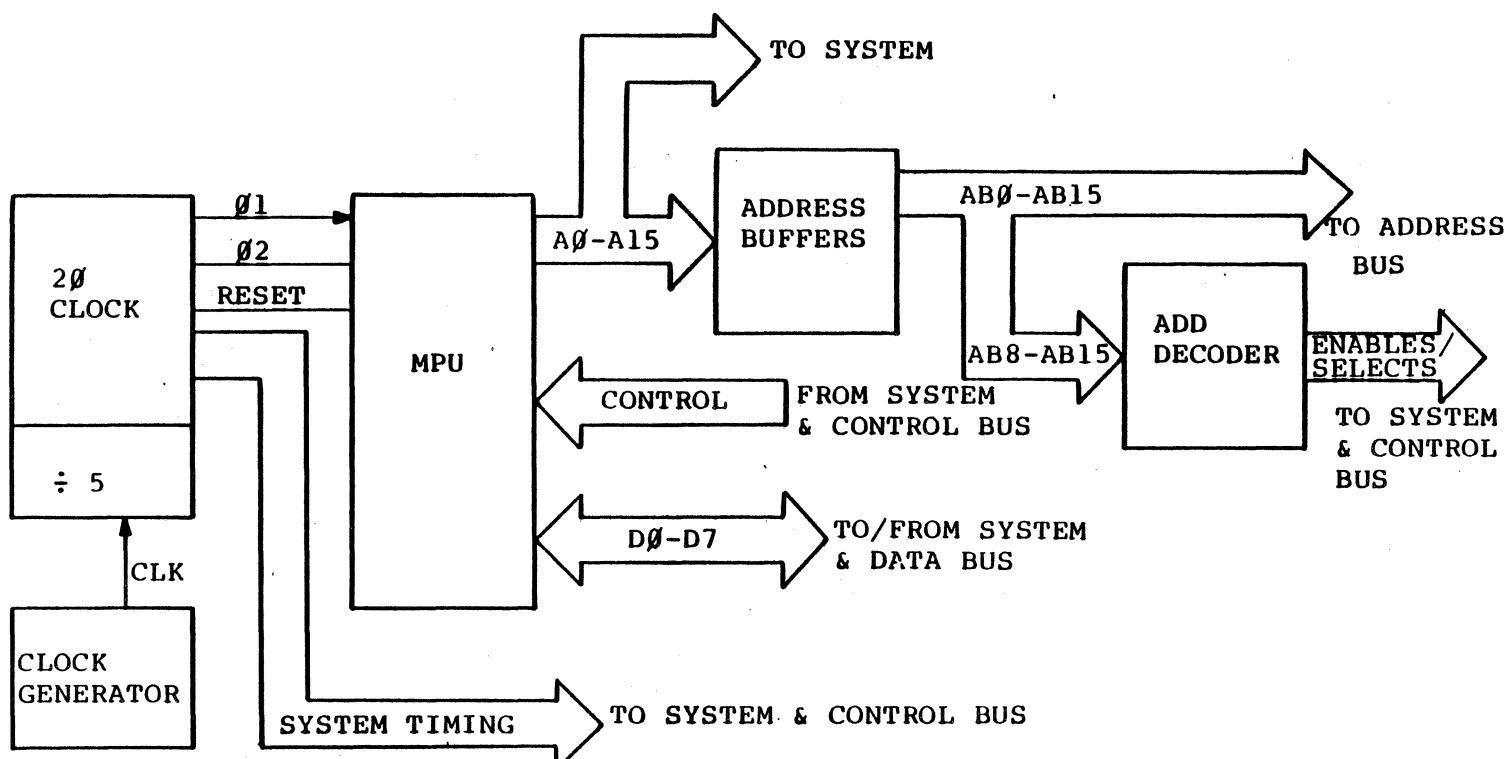


Figure 6-2. CPU Section Detailed Block Description

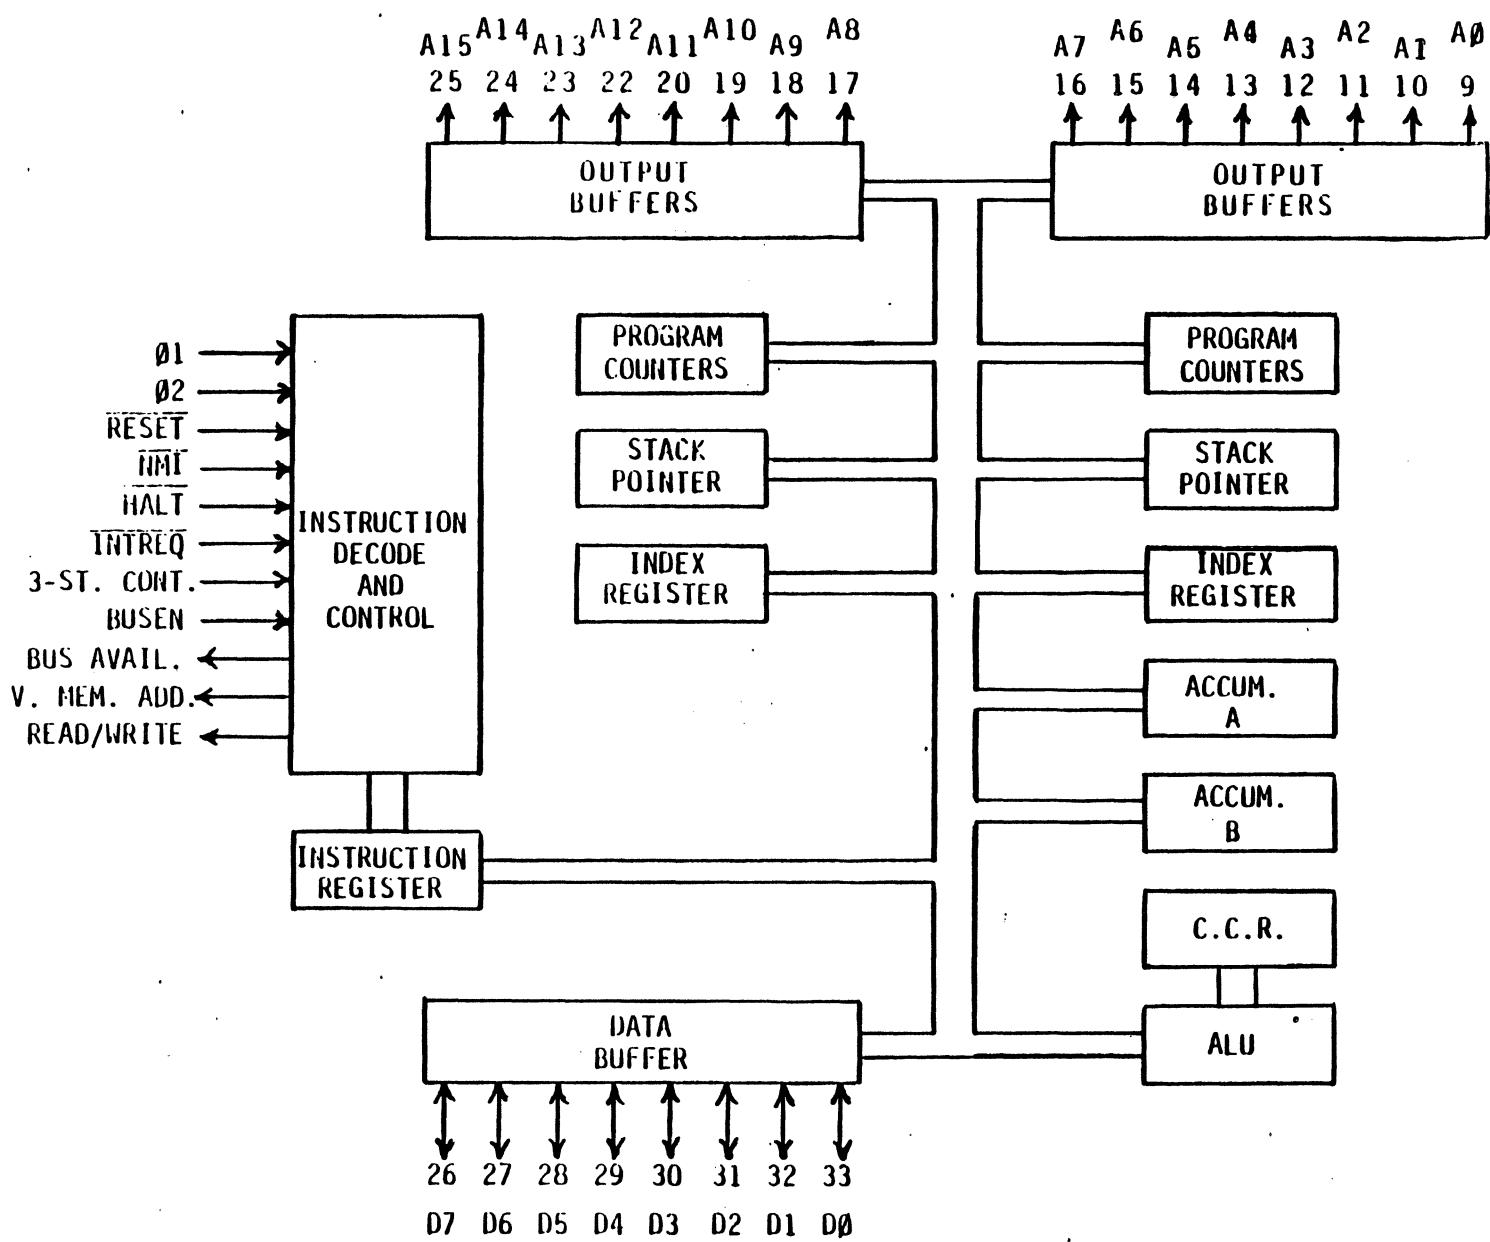


Figure 6-3. MPU Block Diagram

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

System Timing and Two-Phase Clock (Figure 6-5)

MPU and system timing is accomplished by the System Timing Control and the Two-Phase (ϕ) Clock. The two-phase, non-overlapping clock (ϕ_1 and ϕ_2) is used to control the MPU timing. All data transfers are accomplished when DATA BUS ENABLE is active and on the trailing edge of ϕ_2 of the clock. At this time, the bus drivers are enabled. During an MPU read cycle, the data bus drivers are disabled internally.

The master oscillator in the system timing logic generates the master clock term, CLK/ \bar{CLK} . CLK is divided by 5 to produce MPUCLK, which, in turn, feeds the two-phase clock, to produce the two non-overlapping clock pulses, ϕ_1 and ϕ_2 , used for MPU timing. The two-phase clock also produces the rest of the system timing signals, as follows:

- **REFGNT** (Refresh Grant): A synchronous output used to synchronize the refresh operation to the MPU.
- **REFREQ** (Refresh Request): A synchronous input used to freeze the MPU clocks in the ϕ_1 high, ϕ_2 low state for dynamic memory refresh.
- **MCLK** (Memory Clock): A clock signal in phase with ϕ_2 , which free-runs during a refresh request cycle.
- **ϕ_2 TTL** (Bus ϕ_2): This clock signal, in phase with ϕ_2 , is buffered through the Bus Buffers as ϕ_2B onto the CPU Bus and to the Extension Bus.
- **MEMRDY** (Memory Ready): An asynchronous input used to freeze the MPU clocks in the ϕ_1 low, ϕ_2 high state for slow memory interface.
- **MPUCLK** (MPU Clock): Used to synchronize the MPU with the remote computer.
- **2XCLK** (Two-Times Clock): A free-running clock at two times the MPU clock rate which is sent to the VTAC in the Video section and used to establish the basic character clock rate.

Address Buffers

The System Address Bus Buffers consist of three tri-state bus drivers driving the 16-line Address Bus (AB0 - AB15). The Address Bus provides the address interconnect between the CPU and the Address Decoders, the External Interface section, the Memory section, the Video section, and the Keyboard section.


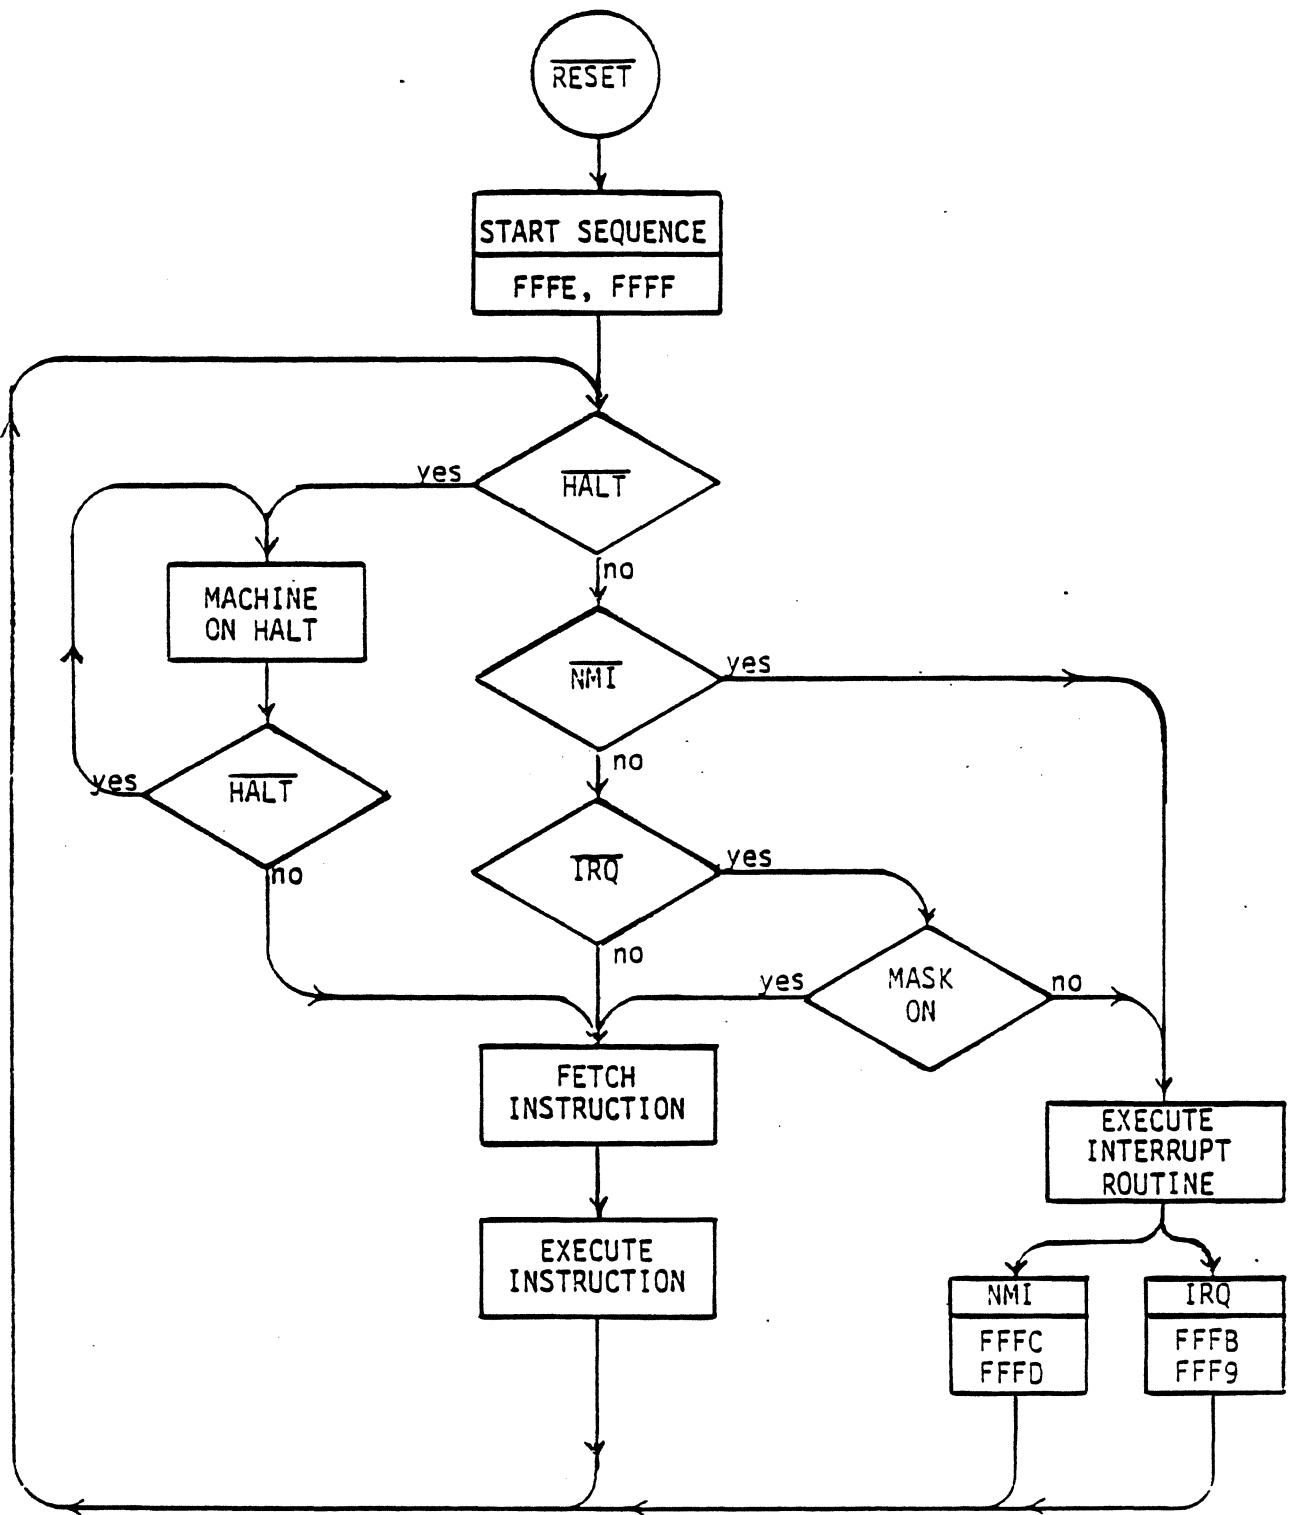


Figure 6-4. MPU Flow Chart

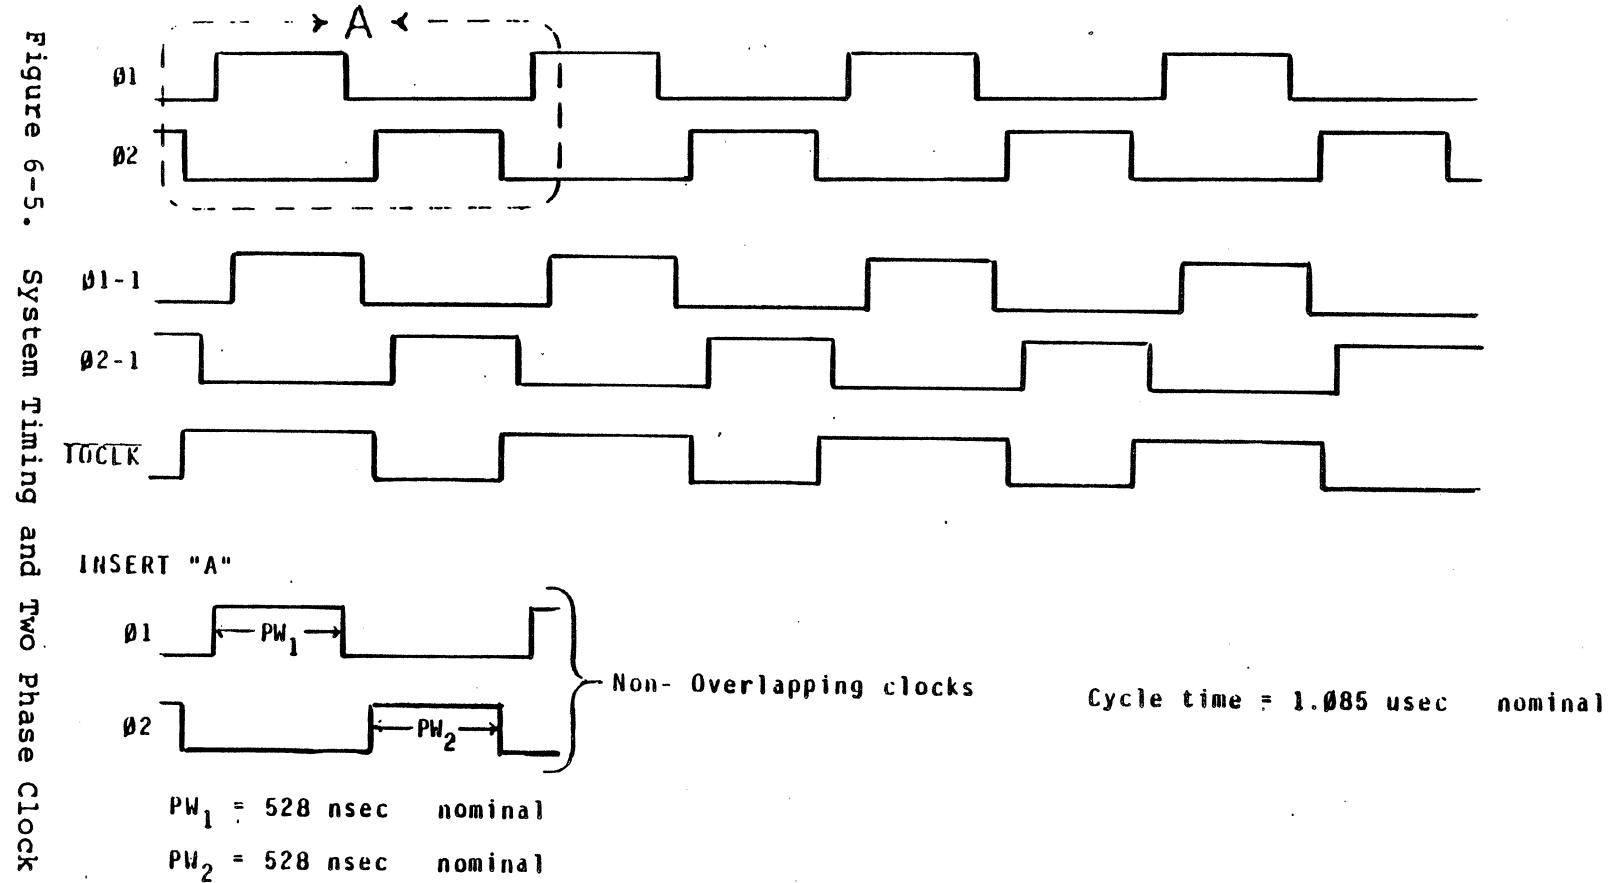

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Address Decoders

The Address Decoders decode address lines AB8 through AB15 as chip enable/select terms for the system RAM, ROM, Peripheral Interface adaptors (PIA1, PIA2), Asynchronous Communication Interface adaptor (ACIA1), Personality ROM (PERROM), Configuration Switch bank (SWBNK1), and Baud Rate Control (BRCLD).

**6.3.2 External Interface Section (Figure 6-6;
Schematic Sheet 9)**

The External Interface provides the interconnect between the ADM-42 and any external system or peripheral devices that are working with it.

The ADM-42 provides a standard EIA RS-232C voltage interface, a 20 ma current-loop interface and a modem interconnect. Interface control is accomplished by a Motorola MC6850 Asynchronous Communications Interface Adapter (ACIA). The ACIA provides data formatting and control to interface serial asynchronous data communications information to the bus-organized MPU.

Included in this section is the baud rate-determining logic and a configuration switch bank.


ACIA

The ACIA provides a special-purpose serial interface for asynchronous communications. It handles all formatting tasks such as insertion and detection of start, stop, and parity bits, and accomplishes the serial-to-parallel/parallel-to-serial conversion. It further provides the modem control signals, such as Clear-to-Send (CTS), Request to Send (RTS), and Data Carrier Detect (DCD).

Serial data from the remote computer is received as RCVR, shifted through the ACIA and presented to the MPU as parallel data, D0 through D7. Conversely, parallel data from the MPU is presented to the ACIA as D0 - D7 and loaded. This data is shifted through the ACIA and is transmitted out serially as XMIT. The term that enables the loading of the parallel data (D0 - D7) to or from the MPU is VMAB, the Valid Memory Address term.

The direction of data flow through the ACIA is established by BR/W, the Read/Write term. If the line is high, the ACIA's output drivers are turned on and a selected internal register is read. If the line is low, the output drivers are turned off and the MPU writes into a selected register.

Figure 6-6. External Interface Section Block Diagram

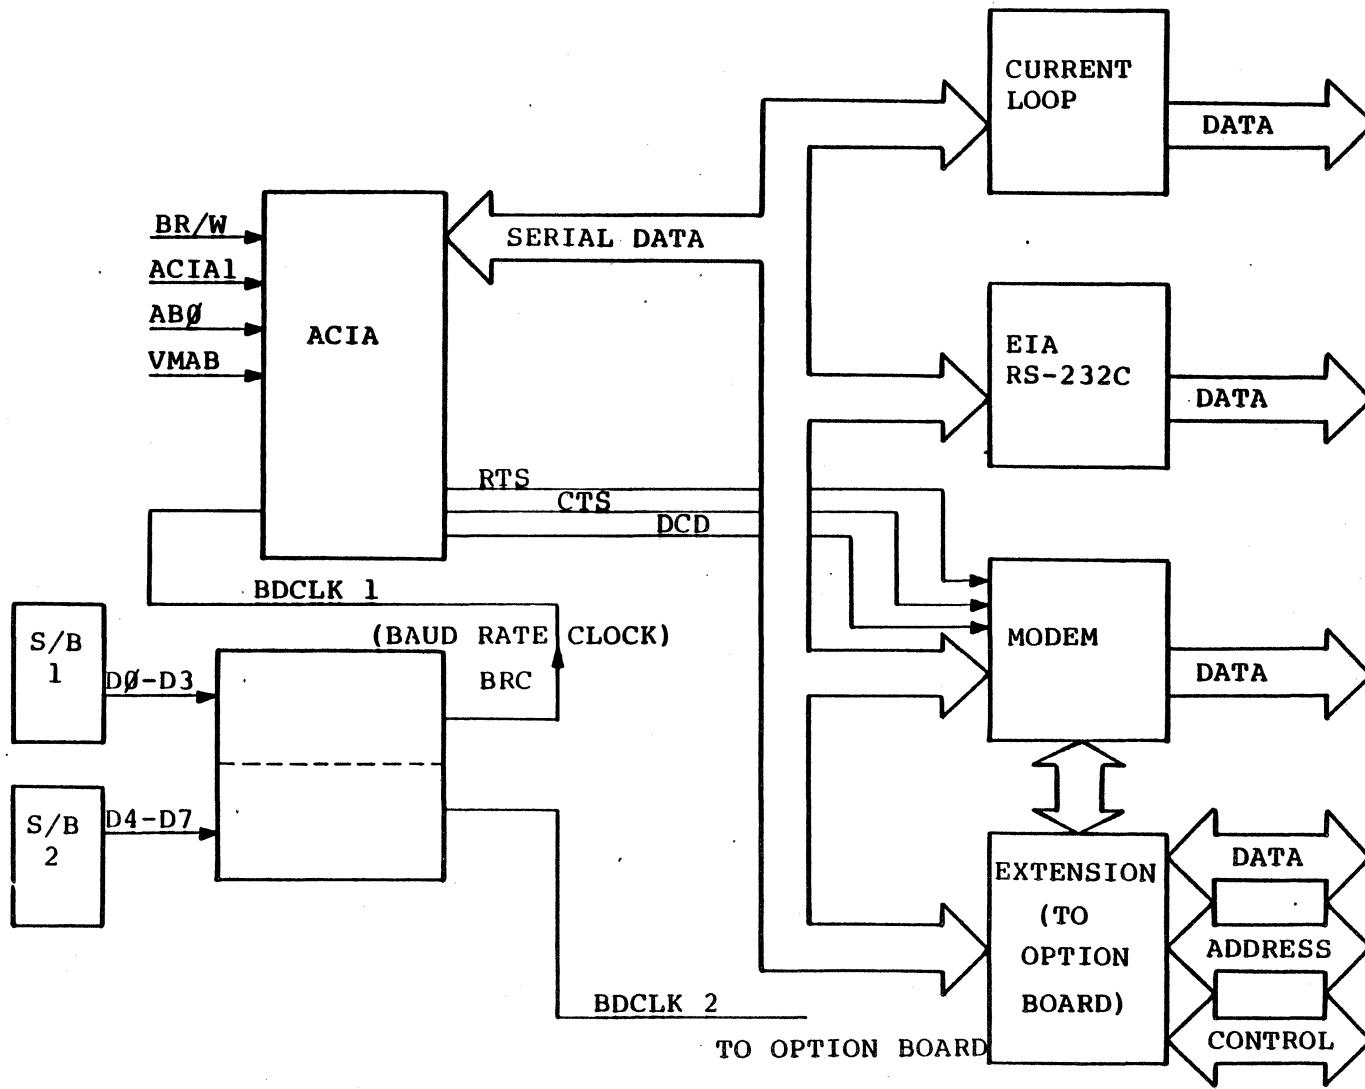

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

BDCLK1, generated by the Baud Rate Clock, is used to determine the rate of data transfer to and from the selected port. The Interrupt Request (\overline{IRQ}) is low when an external device is requesting service from the MPU.

The term ACIA1 is used in conjunction with the pulled-up CS0 and CS1 inputs to the ACIA to select the chip. When ACIA1 goes low, the chip is selected and the control and data inputs become effective.

ABC is the register select term. If the line is high, the Transmit/Receive Data Registers are selected, and if it is low, the Control/Status Registers are selected. This line is used with the Read/Write line to select the read-only or write-only register in each register pair.

Baud Rate Select Logic

The Baud Rate Switches and the Baud Rate Clock select both the transmit and receive Transmission rates (baud rates). These rates are established during installation of the ADM-42.

There are two switch banks used in determining baud rates. Each switch bank generates a unique code to the Dual Baud Rate Generator. The first bank of switches generate the code D0 - D3. This four-bit code selects a baud rate frequency from 50 to 9600 baud (BDCLK1), which is then sent to the ACIA where it establishes the transmit/receive baud rate. The second bank of switches generate the code D4 - D7, which also goes to the Dual Baud Rate Generator to produce BDCLK2. This term is sent to the option board to set up the baud rates for the serial printer port ACIA.

Configuration Switch Bank

Data transfer parameters are set up by this bank of eight switches. The parameters are suffered and placed on the data bus as D0 - D7.

**6.3.3 System Memory Section (Figure 6-7;
 Schematic Sheet 8)**

The System Memory Section consists of 8K-bytes of EPROM firmware, 1K-bits of temporary (scratchpad) RAM, Data Buffers, and the chip enable logic.

Firmware EPROMs

The 4 2K-byte EPROMs contain the ADM-42 operating system and related firmware. Each of the four ROM chips is selected by either ROMA, ROMB, ROMC, or ROMD, the four chip enable terms produced by the decoding of ROM1, ROM2 (the chip enable

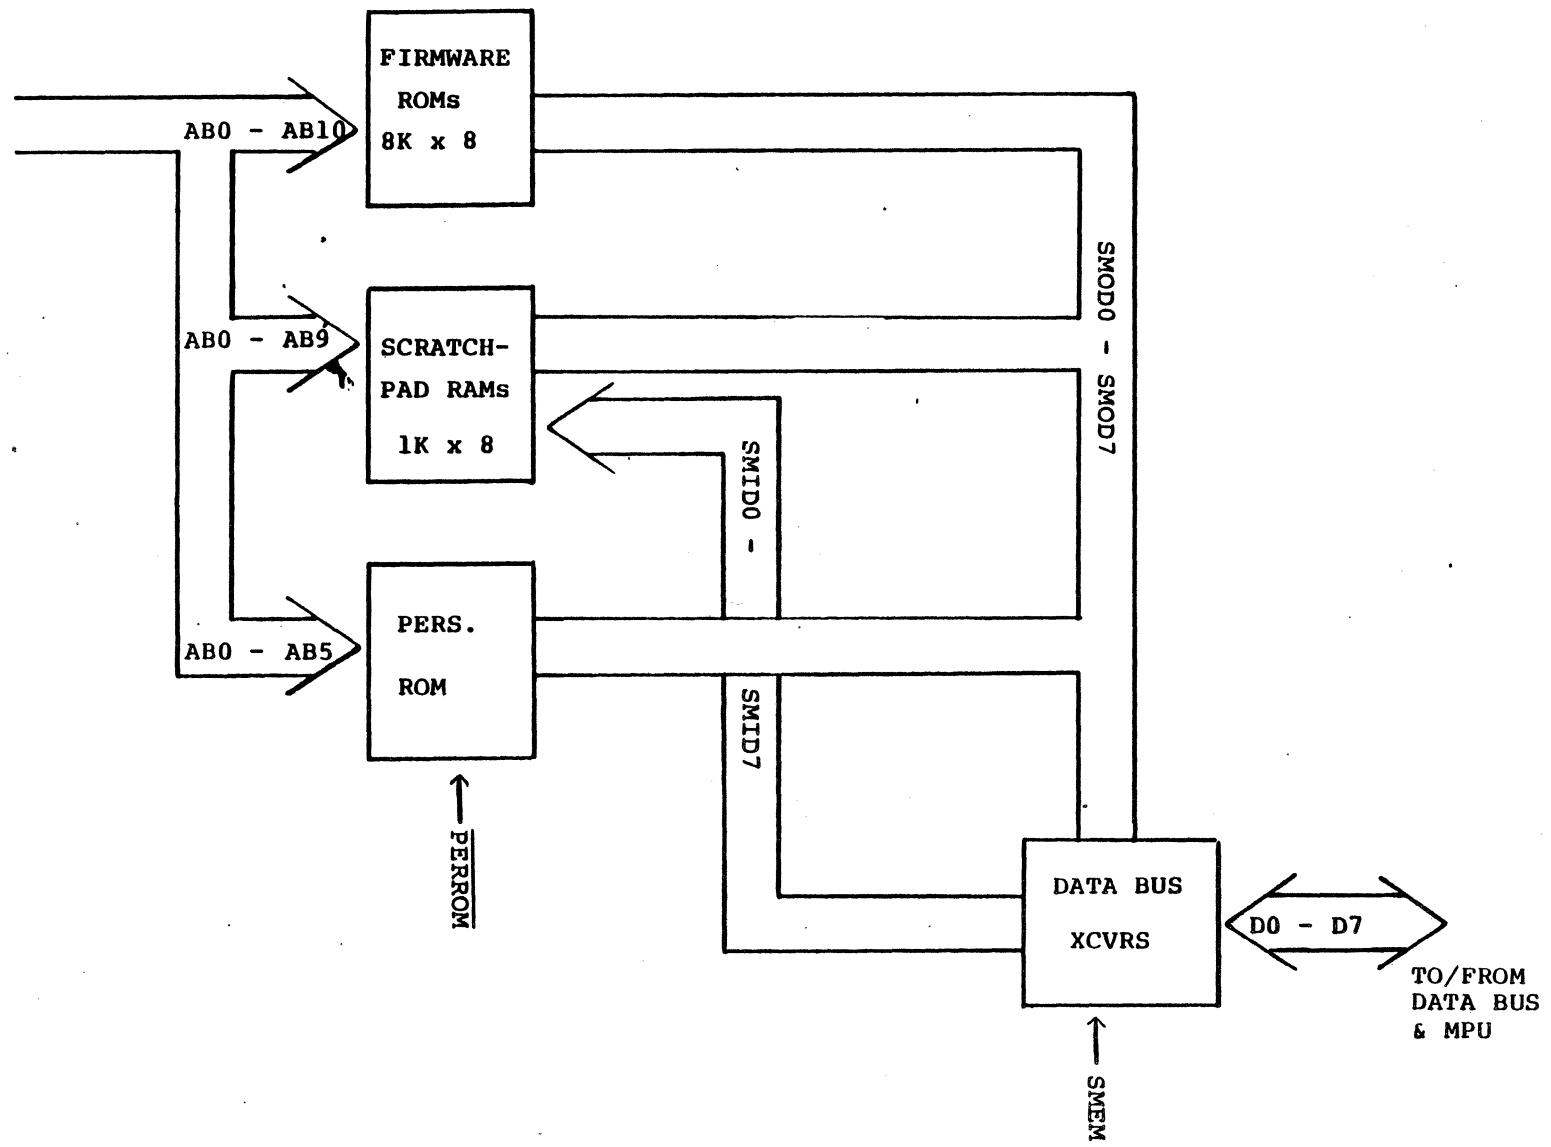


Figure 6-7. System Memory Board

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

terms from the Address Decoders in the CPU section) and address bit AB11. When the chip is selected, the data from the location specified by the address bus bits AB0 - AB10 is placed on the memory output lines, SMOD0 - SMOD7. These outputs are routed to Data Bus via the memory bus transceivers as D0 - D7, to be sent to the MPU.

Scratchpad RAMs

These eight 1K-bit RAMs provide temporary storage where the calculations and data manipulations for the ADM-42 are accomplished. They are configured to provide 1K-byte of static, random-access storage.

Chip select is done by the decoding of RAM (from the chip enable logic in the CPU Section--see above) and the two address bits, AB10 and AB11. When the eight chips are simultaneously enabled by RAM1, and if the R/W line is low, the data contained in the input data byte, SMID0 - SMID7 is loaded into the location specified by the address lines, AB0 - AB9. This input data byte comes from the memory bus transceivers which received it from the Data Bus as D0 - D7. If the R/W line is high, a read operation is initiated, and the data in the locations specified by the 10-bit address (AB0 - AB9) is read out and placed on the same output data lines as the firmware outputs. This output data is placed on the Data Bus in the same manner as the firmware data.

Data Bus Transceivers

These bidirectional, tri-state transceivers buffer the input and output memory data to and from the Data Bus.

Depending upon the state of the select term, SMEM, the transceivers are switched either to or from the Data Bus. In the low state, data is taken from the Data Bus and routed to the Scratchpad RAMs. In the high state, data from either the system firmware EPROMs or the scratchpad RAMs is buffered onto the Data Bus.

Personality ROM

The Personality ROM contains system configuration information and is enabled by the term PERROM. Data from this device is read from the location specified by address lines AB0 - AB5 as SMOD0 - SMOD7. This byte of configuration information is placed on the Data Bus in the same manner as the System Firmware and Scratchpad Memory output information.

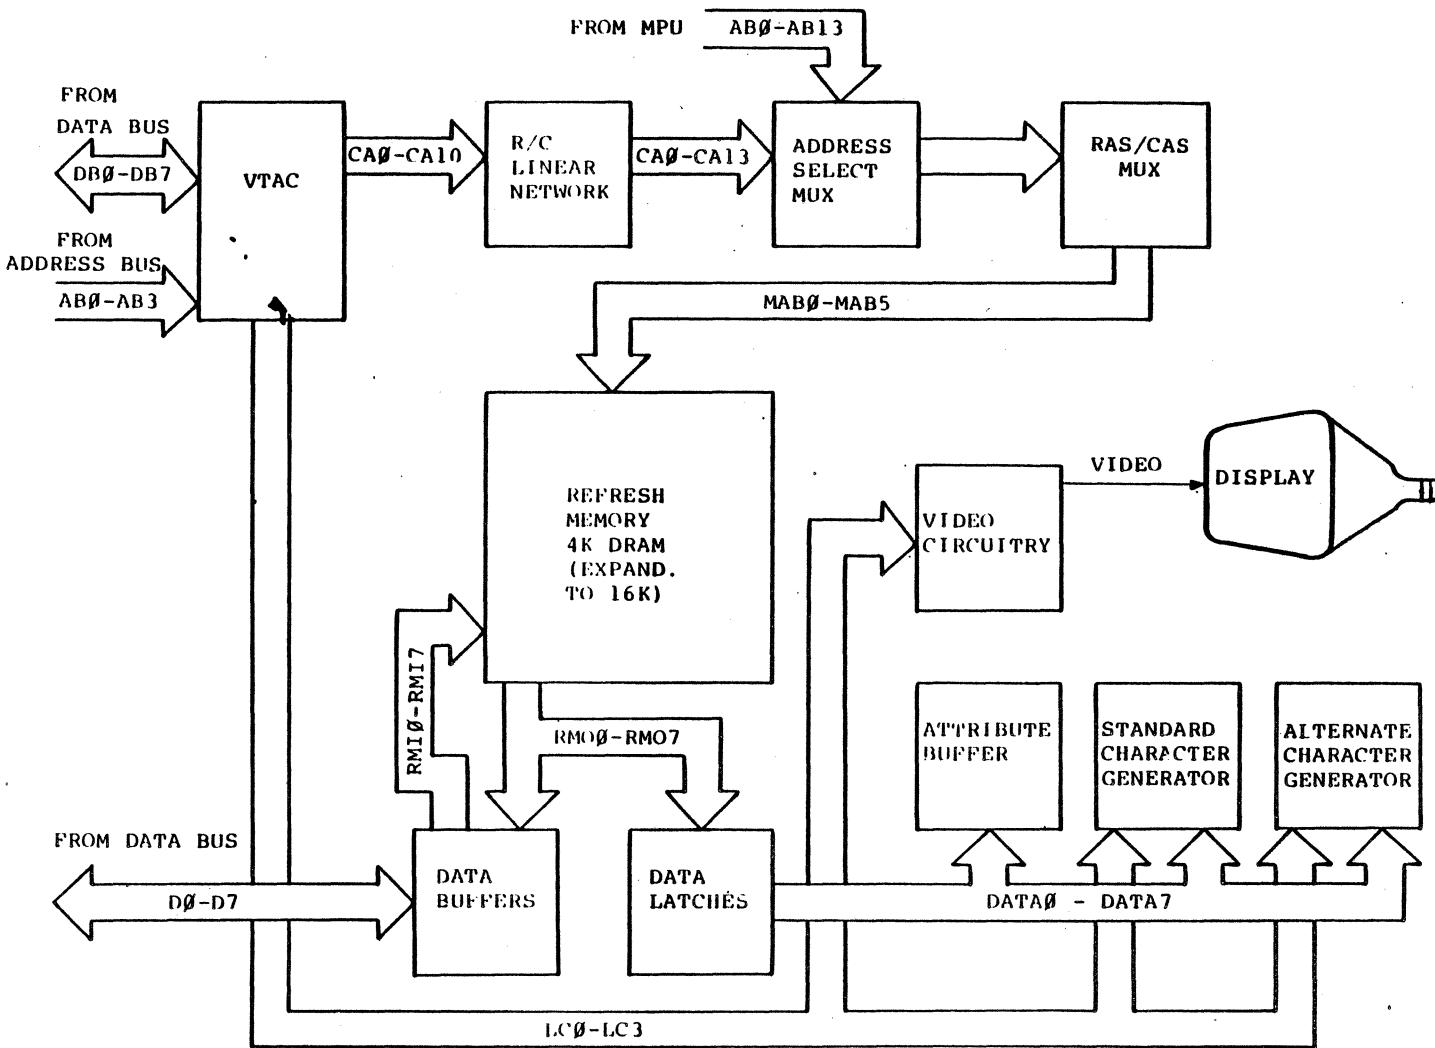


Figure 6-8. Video Control Section.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

6.3.4 Video Display Section (Figure 6-8)

The Video Section controls and conditions information to be displayed by the ADM-42 CRT monitor.

This section consists of 4K-bytes (expandable to 16K-bytes) of dynamic RAM Refresh Memory, CRT Video Timer/Controller (VTAC), R/C Linear Address Network, Address Select Multiplexer, Row Address Strobe (RAS)/Column Address Strobe (CAS) Multiplexer, Data Buffer and Latches, Standard (and Alternate) Character Generator, the Video Logic and the CRT Monitor.

Data Flow Overview

Data and address information from the Data and Address Buses are presented to the VTAC; here vertical and horizontal formatting is accomplished. Vertical drive (VDRIVE) and horizontal synchronizing (HSYNC) is also generated here.

The row/column address information from the VTAC is converted to linear address information by the R/C Linear Address network. This linear address data is routed to the Address Selection Multiplexer and on to the Row/Column Address Selection Multiplexer.

The resultant address information is used to specify a location in the Refresh RAMs to which or from which data is to be transferred. Data to the RAMs from the Data Bus and from the RAMs to the Data Bus is routed via the Data Buffers, and data to be displayed is routed from the RAMs to the Character Generators via the Data Latches. The Data Buffers are bidirectional drivers to and from the Data Bus and the CPU. The Data Latches are unidirectional to the Character Generators and the Attribute Buffers. The information is then conditioned by the Video Logic to be displayed on the CRT Monitor.

Refresh Memory (Schematic Sheet 4)

The Refresh Memory consists of 4K-bytes (expandable to 16K-bytes in 4K-byte increments) of dynamic random-access MOS memory. All data to be displayed by the CRT is stored in Refresh Memory in ASCII coding.

The six linear address lines (MAB0 - MAB5) assert the 12-bit (11 address bits and one protect bit) RAM address to the RAMs. The first six bits are the row address and are loaded by RAS. The next six bits (five address bits and one protect bit) are the column address and are loaded by CAS. This 12-bit row/column address specifies the location in the Refresh Memory that the data is to be read from or written into. The Read/Write function select is accomplished by the term WE from the Address

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

Selector. WE determines whether data will be written into or read out of the RAMs; high for read, low for write. The PAGE 12 term selects the lower 4K-byte bank; the term means pages 1 and 2. If one of the optional upper 4K-byte banks (pages) is to be selected, the term will be PAGE 34, PAGE 56, or PAGE 78. Input information (RMD10 - RMD17) is routed from the data bus to the RAMs via the bidirectional Data Buffer. Output information (RMD0 - RMD07) is routed from the RAMs to either (or both) the data bus or the Character Generators and the Attribute Buffer (and ultimately, the CRT monitor).

CRT Video Timer-Controller (VTAC; Schematic Sheet 7)

The VTAC is a programmable MOS/LSI device containing the logic functions required to generate all the timing signals for the presentation and formatting of video data on a CRT monitor. All frame formatting, such as horizontal, vertical, and composite sync, characters per data row, data rows per frame, and raster scans per data row and per frame are totally programmable.

The control byte is taken from the data bus as DB0 - DB7. This byte comes from the MPU, system memory or the remote computer. This 8-line data bus (DB0 - DB7), being bidirectional, is also used for cursor addressing as an output.

The lower four bits (AB0 - AB3) of the MPU-generated address are used by the VTAC as register address for selecting one of the seven control registers or either of the cursor address registers.

The term VTAC signals the VTAC chip that is being addressed.

VMAB, the Valid Memory Address line from the MPU, acts as the data strobe which strobes the data bus (DB0 - DB7) into the appropriate register in the VTAC. It also may output the cursor character or cursor address onto the data bus.

2XCLK, from the Two-Phase clock, functions as a Dot Counter carry, establishing the basic character clock rate for the VTAC.

The output CUR is the cursor video signal and defines the cursor location in the data field.

The Scan counter outputs (LC0 - LC3) provide row selection for the character generator. The least significant bit (LC0) defines the odd and even fields so as to select the even scan line during the even field and the odd scan line during the odd field.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

The three sync outputs are defined as follows:

HSYNC - Horizontal sync: Initiates the horizontal retrace (flyback)

VDRIVE - Vertical Drive: Initiates the vertical retrace.

CSYNC - Composite sync: Synchronizes the composite video by providing a true RS-170 composite sync waveform.

The Character Counter outputs are used with the Data Row Counter outputs to provide the linear address via the R/C Linear network. This makes the ADM-42 code-independent. That is to say, by the use of the R/C linear network, the ADM-42 can process and display information coded in virtually any of the standard character codes.

Row/Column Linear Address Network (Schematic Sheet 7)

This logic group consists of one 256-bit, bipolar, programmable ROM, and two 4-bit adders. This network simply converts the Data RAM row/column address form produced by the VTAC to the linear form used by the Address Selector and the Row/Column Address Mux logic, thus allowing the ADM-42 to be character code-independent.

Address Select Multiplexer (Schematic Sheet 3)

This logic group consists of four quad, 2 to 1 multiplexers (data selectors). On the inputs of the Address Select Multiplexer are two 14-bit addresses; one (AB0 - AB13) from the MPU via the System Address Bus Buffers, and one (CA0 - CA13) from the VTAC via the R/C Linear network. The select term, CRTRAM, determines whether the address to be strobed through the mux is to be the RAM address that the MPU wants to write into, or the RAM address that the VTAC wants to display on the monitor. It is generated by the CPU section by a valid memory address and either address bit AB14 or AB15. The strobe or enable line is held active, allowing the output (MA0 - MA13) to be always enabled.

Row/Column Address Multiplexer (Schematic Sheet 3)

The R/C Address Mux consists of two quad, 2 to 1 multiplexers (data selectors). On the inputs are the 12 low-order bits (MA0 - MA11) of the 14-bit output of the Address Selector Mux. These 12 bits are enabled through the R/C Address Mux alternately; MA0 - MA5 on the first select and MA6 - MA11 on the second select;

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

six bits at a time, by SELRAS. SELRAS is enabled by RAS, the term which strobes the first six bits of RAM address into the RAMs. Stated simply, when SELRAS (RAS) is active, the first six bits are strobed through, and when SELRAS is not active (CAS active), the second six bits are strobed through. This places the 6-bit row address on the RAM address lines when RAS is true, and the 6-bit column address on the RAM address lines when CAS is true.

Page Select (Schematic Sheet 3)

This demultiplexer/decoder decodes the upper two address bits (MA12 and MA13) of the Refresh RAM address from the Address Selector for memory page selection. The coding is as follows:

<u>MA12</u>	<u>MA13</u>	<u>Page</u>
0	0	1,2
0	1	3,4
1	0	5,6
1	1	7,8

Data Buffer And Latches (Schematic Sheet 5)

The Data Buffer consists of two, bidirectional, tri-state bus transceivers and a 2 to 1 multiplexer. Data from the RAMs to be driven to the Data Bus is asserted as RMD00 - RMD07 and, by selecting the drivers, is driven to the bus as D0 - D7. If data from the Data Bus is to be written into the RAMs, the receivers are selected and the bus data (D0 - D7) is routed to the RAMs as RMD10 - RMD17. The term which selects the direction of data through the buffers is BR/W.

The Data Latches consist of two, quad D-type flip-flops. The data from the RAMs to be displayed by the monitor is asserted on the inputs as RMD00 - RMD07. The output data to the Character Generators is DATA0 - DATA6. This 7-bit data block defines a stored character in the Character Generator which is to be displayed on the CRT. Also, output from the latches is the inverse DATA0 - DATA7. This information, along with a portion of the positive-true output (DATA0 - DATA7) is used to establish the display attributes.

Character Generators (Standard And Alternate) (Schematic Sheet 6)

The Character Generators are EPROMs programmed with 128 displayable characters (upper and lower case) in the ASCII code. The character is specified by DATA0 - DATA6 and the actual raster line count is contained in LC0 - LC3. The ASCII character information is contained in the output byte, CG0 - CG7.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

The chip select term is ALTNCG, which selects either the Standard or Alternate character generator. The Standard generator is the one normally used. The Alternate is used for foreign language or special character generation.

Video Logic (Schematic Sheet 7)

This logic group conditions the binary data containing the character and attributes of the character and the display into a form (COMPOSITE VIDEO) capable of being displayed on the CRT. Also available in this section are the sync signals (Hsync and Vsync) needed to synchronize the display with the information to be displayed.

The COMPOSITE VIDEO is applied directly to the CRT. The sync signals are sent to the monitor electronics.

The character generator information (CB0 - CG7) is asserted on the parallel inputs to an 8-bit shift register. They are loaded by SHLOAD and clocked out the serial output as CVID.

The Null Detect circuit gives the user the option of displaying or inhibiting the display of a null character. This circuit decodes DATA0 - DATA6 to make that determination depending upon the state of the DISNUL switch.

DATA7 is used by the Video Logic to produce the PROTECT BIT (PROBIT) signal. If a character is to be displayed in a protected area of the CRT, the seventh bit of the character code is set high. This causes the monitor to display that character at a reduced intensity.

6.3.5 Keyboard Section (Figure 6-9)

The Keyboard provides the operator interface between the ADM-42 and the remote computer. It is a detachable, 118-key keyboard containing alphabetic and numeric characters, symbols, and special keys which control the ADM-42 operations. The 16 special-function keys can be used with the SHIFT key to produce 16 additional functions.

The Keyboard section consists of the keyboard matrix, a Peripheral Interface Adapter (PIA), an 8 to 1 mux, a 4 to 16 decoder, timing logic, and associated indicator lamps.

Keyboard Matrix (Schematic Sheet)

The keyboard matrix consists of a 16 x 8 (128 intersections) matrix with 118 of the intersections being occupied by the ADM-42 character (alphabetic and numeric), symbol, and control keys. The MPU generates a binary count cycle (scan) and routes

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

it to the PIA as DB0 - DB7. The PIA generates KB0 - KB6 and routes the lower four bits (KBD0 - KBD3) to the 4-to-16 decoder and the upper three bits to the 8-to-1 mux. Using the decoder and the multiplexer the MPU (via the PIA) scans each intersection of the matrix. If a key is pressed, the next scan that polls that intersection senses the key and generates STROBE at that "X" and "Y" coordinate address. STROBE is routed to the PIA, stops the scan, locks the address at STROBE time, and produces DEBTRG (Debounce Trigger). DEBTRG triggers the NE 555 Timer and 10 ms later, DEBDLY (Debounce Delay) is produced. If the key is still sensed by the time DEBDLY comes true, the address of that key is decoded as to the character in the Look-Up table located in the system memory and the appropriate ASCII character code is generated to the Character Generator (the Video Section), to be displayed. If, however, the key is not sensed at DEBDLY time, the look-up is aborted and the scan is restarted.

Peripheral Interface Adapter (PIA) (Figure 6-10)

The PIA is a universal interface device that controls the transfer of data from the keyboard to the CPU and the monitor.

The binary count cycle (scan) is received via the data bus as DB0 - DB7). The PIA generates the actual scan code, KBD0 - KBD3 (X axis) and KBD4 - KBD6 (Y axis) for the keyboard matrix. When a key is sensed (or suspected), STROBE is generated, after having stopped the scan and stored the address present at the time that STROBE came true. After 10 ms, DEBDLY is returned to the PIA, and if STROBE is still true, the stored address is routed to the MPU as DB0 - DB7 and decoded into the appropriate ASCII character code from the Look-Up table in System Memory. It is then routed to the video section where it is displayed on the monitor CRT.

If STROBE is not true when DEBDLY is returned to the PIA, the stored address is released and the keyboard scan is continued.

Four to Sixteen Decoder

This device does a binary decode of the lower four bits (KBD0 - KBD3) of the scan count furnished by the PIA such that one output line is selected each time the 4-bit binary number is incremented, placing a low level on the corresponding vertical matrix line.

Eight-to-One Multiplexer

This device does a binary decode of the three upper bits (KBD4 - KBD6) of the scan count such that one of the eight horizontal matrix lines is addressed each time this 3-bit

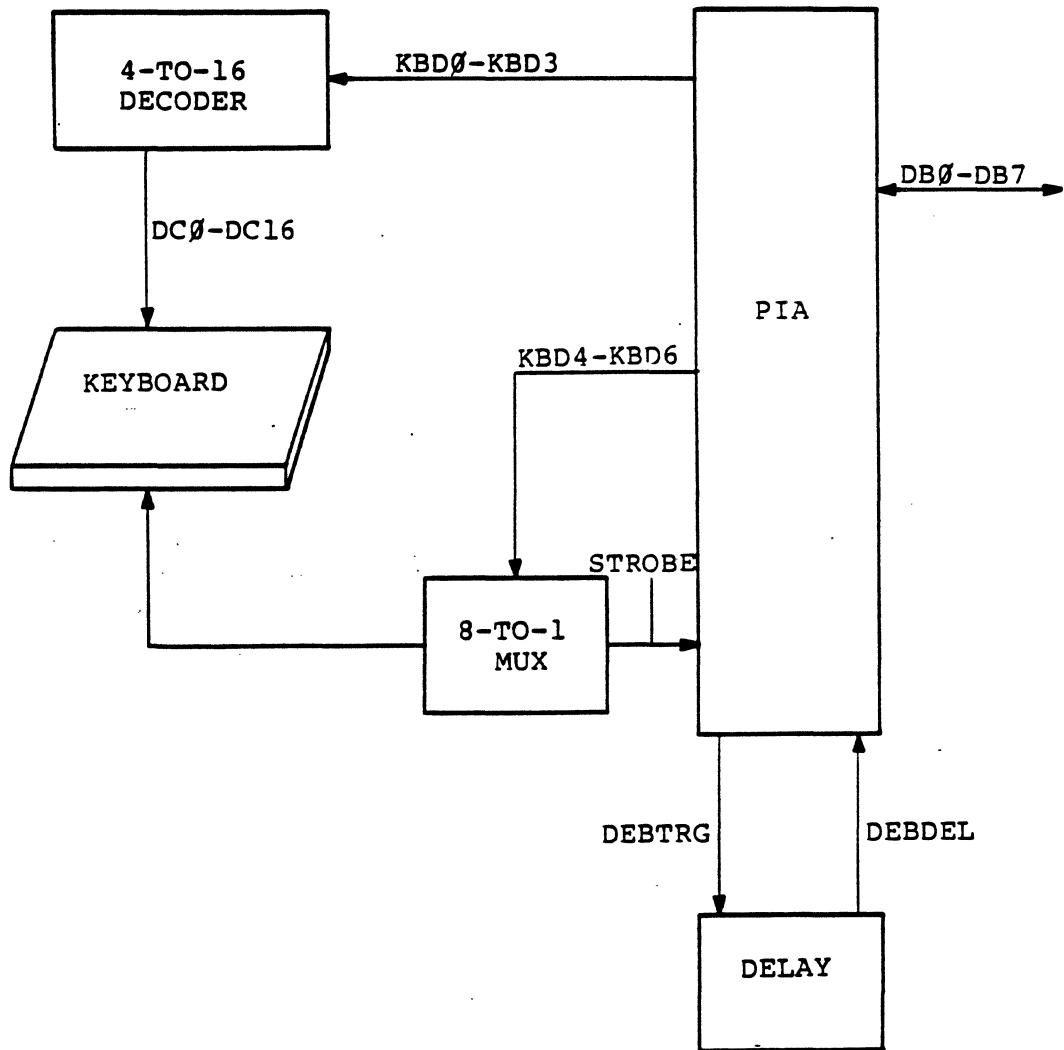


Figure 6-9. Keyboard Section

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

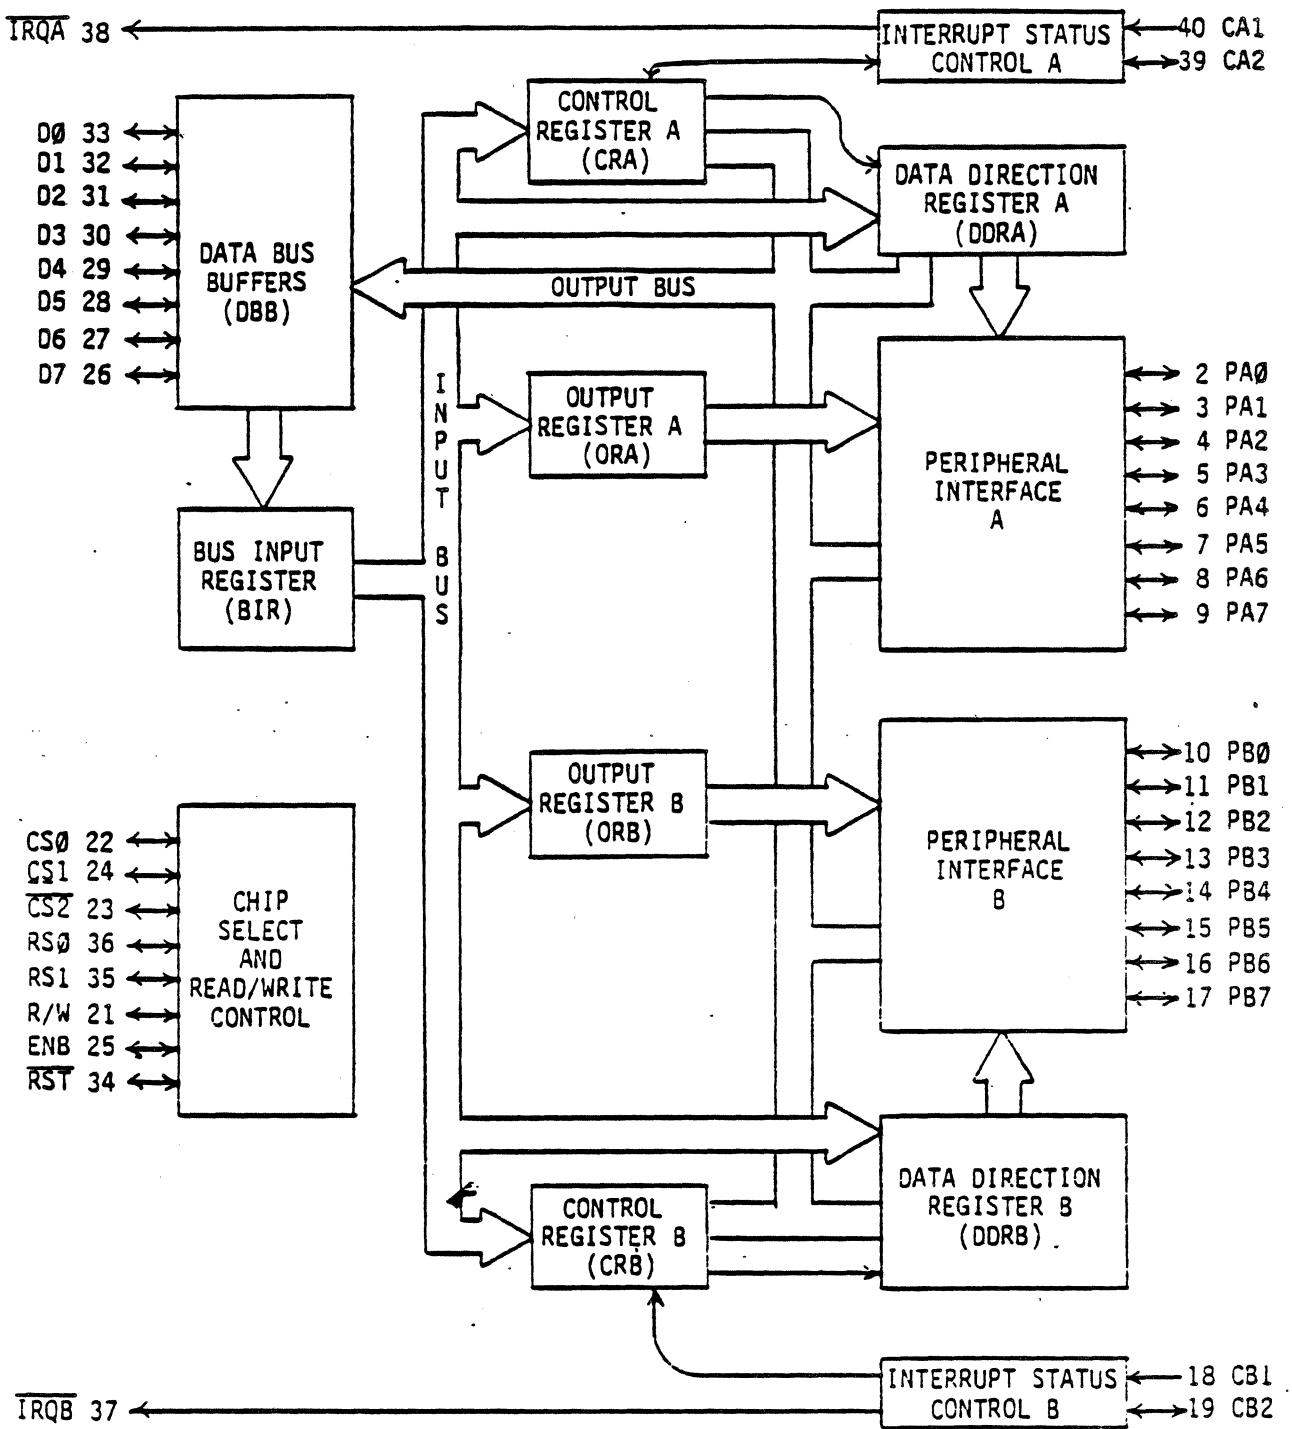


Figure 6-10. PIA Block Diagram

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

binary number is incremented. If a key is pressed, the low level on the intersecting vertical line is passed down the addressed horizontal line and out to the PIA as STROBE. The key provides a connection between the two intersecting lines.

**6.3.6 System Configuration Switches (Figure 6-11;
Schematic Sheet 9)**

The System Configuration Switches consist of eight single-pole, single-throw (On-Off) switches and two 4-bit, tri-state bus drivers feeding the Data Bus.

The switches are used to determine data transmission parameters, such as Break Enable/Disable, even or odd parity, number of stop bits (1 or 2), etc.

The enabling term for the switch buffers is SWBNK1.

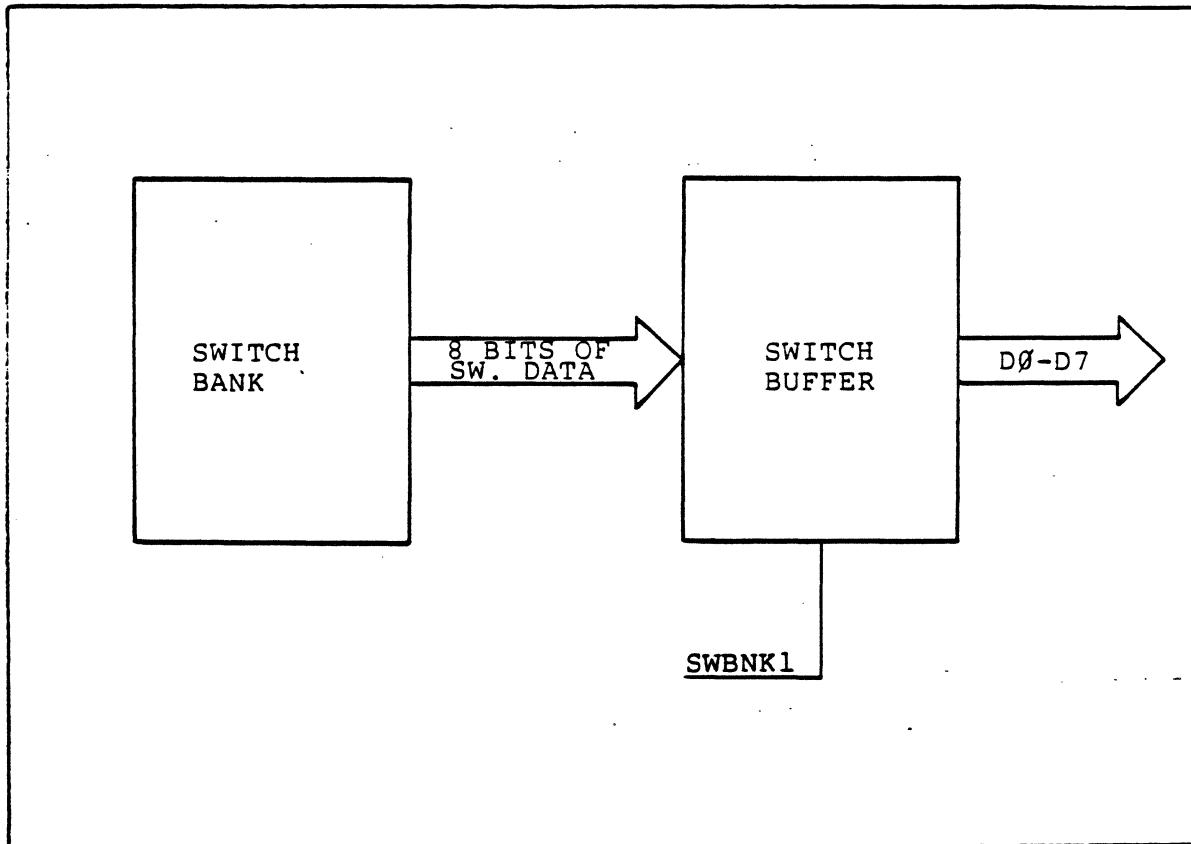


Figure 6-11. System Configuration Switches

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

6.3.7 External Bus Buffers (Schematic Sheet 11)

The Address (A0-A15) and Data D0 - D7) Busses are buffered on and off the main circuit board by bidirectional tri-state bus transceivers.

The address buffers are normally in a transmit state, that is, off the board. These gates may be enabled to a receive state if Direct Memory Access (DMA) is available and active.

The data buffers are controlled directionally by memory and/or I/O activity. If data is to be transmitted to an external device, the data buffers are enabled to write to the bus, and conversely, if an external device is to write to the MPU, the buffers are enabled to read from the bus.

The Control Bus is maintained in much the same manner, except that it is constantly enabled in the output state, since the tri-state drivers are unidirectional. This bus feeds the Option board.

Certain incoming communication lines are available here, such as REFREQ, HALT, IRQ, etc.

6.3.8 Option Board (Figure 6-12; Schematic 2 (Option Board), Sheet 1-8)


The ADM-42 Option Board is a separate printed circuit board containing a parallel printer port, a serial printer port, a synchronous communications port, polling address logic, data/address/control buffers, 3K-bits of static RAM, and up to 8K-bytes of additional ROM.

The Option Board is supplied by three separate busses: an 8-bit data bus, a 16-bit address bus (these two are system busses), and a control bus carrying 18 control terms. Modem communication lines are wired point-to-point.

Option Board Interface Buffers (Schematic 2, Sheet 2)

The data buffers consist of two sets of 8-bit, tri-state bus transceivers. The first set, enabled by READ A, buffers D0 - D7 into and out of the option board. The second set, enabled by READ B, converts (switches) incoming data (D0 - D7) into memory data (MDI0 - MDI7) and routes it to the optional memory section. The second set further converts data read from the optional memory (MDO0 - MD07) to data to be placed on the data bus and routed to the MPU (D0 - D7).

Figure 6-12. Option Board Block Diagram

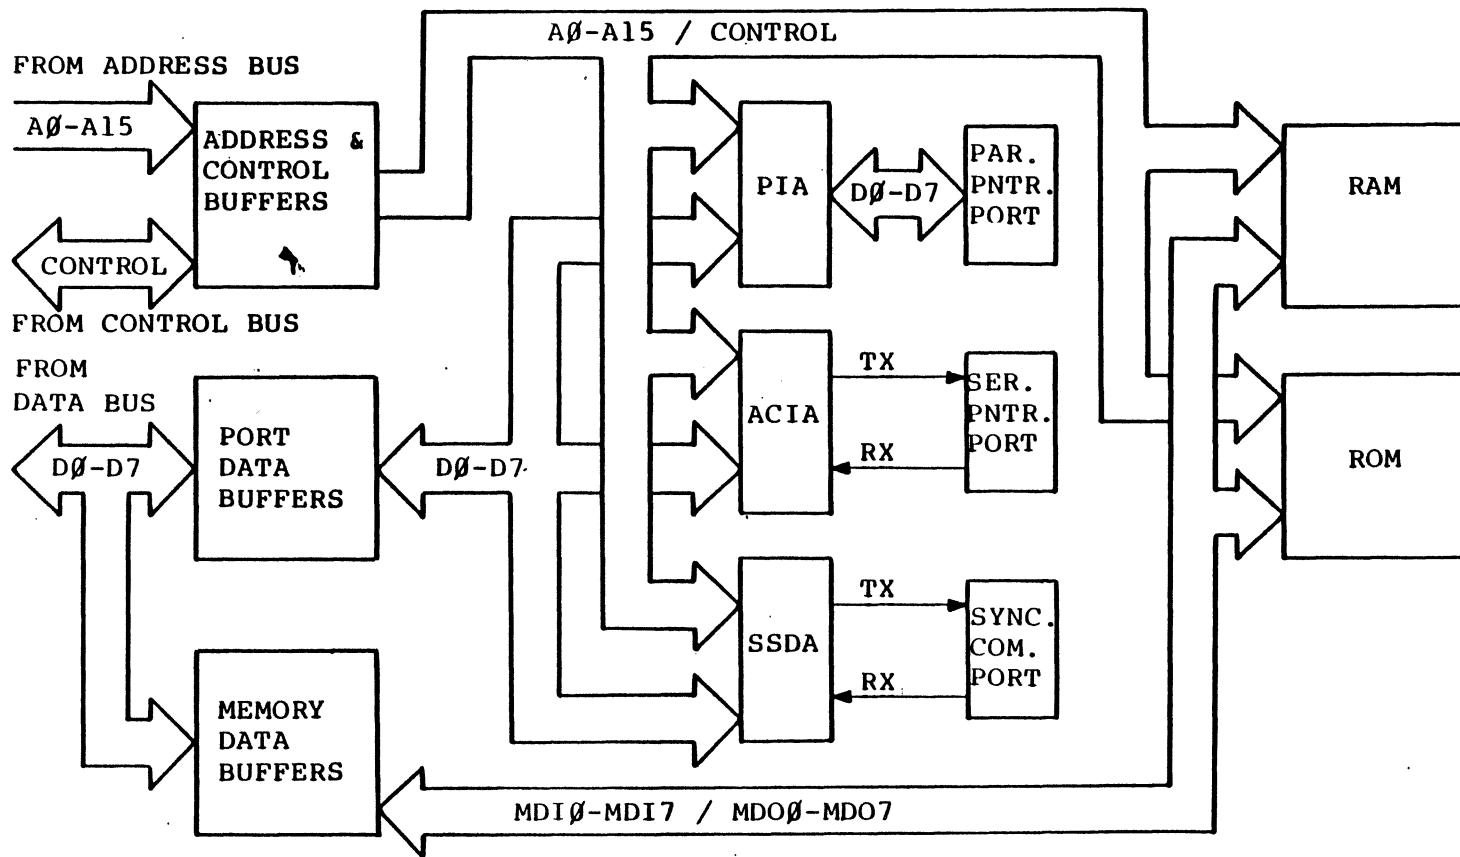

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

The address buffers are uni-directional, 16-bit, tri-state bus drivers receiving the address bus information and passing it to the option board as A0 - A15.

Eight of the 18 control signals are buffered into the option board (VMA, R/W, RESET, MEMCLK, LOW, O2, BDCLK2, and 2xCLK). IRQ is buffered out of the option board. The remaining nine (BA, MEMRDY, REFGNT, REFREQ, HALT, TSC, DMA, DMAR/W, and NMI) are available at the extension bus for use by the customer.

Address Decoders (Schematic 2, Sheet 3)

The address information (A7 - A15) is decoded in this section to generate the select terms for the option board functions. Bits A7 and A8 select the ports with the terms, PNTASY (asynchronous printer port), PNTPAR (parallel printer port), and SYNCOM (synchronous communications port). Bits A7 - A10 enable the polling and port attribute switch banks. Bits A10 and A11 select the optional ROM and RAM chips. Bits A12 - A15 generate the enabling terms for ROM, RAM, and I/O selection.

Asynchronous Printer Port (Schematic 2, Sheet 4)

The asynchronous, or serial printer port consists of an ACIA and a word-configuration switch bank. The incoming printer data (PRDATA) is received onto the option board through pin 3 of the communications line and routed to the ACIA for conditioning (deserializing). The outgoing printer data (PTDATA) is routed from the ACIA to the printer via the communications line, pin 2. The port control terms (PRTS, PCTS, and PDCD) are also routed to the printer and the MPU via the communications lines.

The word configuration information (D0 - D7) is returned to the MPU (as with all data transfer in the ADM-42) for processing and return to the ACIA. The enabling term for the switch bank is SWBNK3.

Parallel Printer Port (Schematic 2, Sheet 5)

The parallel printer port consists of a PIA receiving data from the Data Bus (D8 - D7) and transferring the data in parallel mode to the attached printer as DATA 1 - DATA 2. Certain control signals, such as DATA STROBE, PAPER OUT, BUSY, ON LINE, etc., are handled by the PIA.

Synchronous Communication Port (Schematic 2, Sheet 6)

This port consists of a Synchronous Serial Data Adapter (SSDA) and a word-configuration switch bank.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

The SSDA differs from the ACIA in that a transmitter clock (SYNTCK) and a receiver clock (SYNRCK) are provided to synchronize the transmission and reception rates with the I/O device involved. The serial data lines are SYNCRX (receive) and SYNCTX (transmit).

The modem control terms are buffered into this section via the standard communications lines.

The switch bank functions in the same manner as the one described in the Asynchronous Printer Port discussion, except that the enabling term is SWBNK4.

Polling (Schematic 2, Sheet 7)

The polling option consists of five 8-bit DIP switches feeding tri-state buffers to the Data Bus and the MPU. The polling information is set into the switches and enabled onto the bus by the terms SWBNK5 - SWBNK9.

RAM/ROM (Schematic 2, Sheet 8)

The memory section consists of 2K-bytes of EPROM provided for future system expansion, and 3K-bytes of SRAM; 2K-bytes for optional programmable functions and 1K-byte for future expansion.

Addressing for the EPROMs is accomplished by A0 - A10. The SRAMs are addressed by A0 - A9.

Data into the SRAMs is MDI0 - MDI7, and data out of both the SRAMs and the EPROMs is MDO0 - MDO7.

The chip enables for the EPROMs are ROMA, ROMB, ROMC, and ROMD, respectively. The lower 1K of RAM is enabled by RAM2, the next 1K is enabled by RAM3, and the remaining 1K is enabled by RAM4.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

SECTION 7

MAINTENANCE

7.1 INTRODUCTION

This section contains information and instructions for performing routine and corrective maintenance for the ADM-42.

7.2 PREVENTIVE MAINTENANCE

The only preventive maintenance required on the ADM-42 is the occasional cleaning of the exterior surfaces, and periodic visual inspections.

The ADM-42 casing should be cleaned using a household cleaner and a paper towel or a soft, lint-free cloth. NEVER use lighter fluid or other petroleum based solvents to clean the casing. Damage to the plastic or painted surfaces could result. In addition, avoid wiping dust into the keyboard and do not let spray cleaner run between the keys.

Periodically, inspect switches and keyboard assembly for freedom of movement. Determine that intensity of character trace on the CRT screen has not diminished. Any required mechanical and electrical adjustment shall only be performed by an authorized Lear Siegler service representative.

7.3 SWITCH SETTINGS

The ADM-42 contains four switch banks used to establish certain system configuration characteristics. Two of these switch banks are located on the logic board (CPU switches), and two are located under an access cover on the front of the ADM-42 casing, just below the display screen (word attribute and baud rate switches).

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

CPU Switches (Logic Board)

Switches one and two are used for determination of communication mode and are configured per the following:

<u>SWITCH 1</u>	<u>SWITCH 2</u>	<u>FUNCTION</u>
On	Off	Current Loop
Off	ON	Secondary Channel

Switches 3, 4, and 5 are configured as follows:

<u>SWITCH 3</u>	<u>SWITCH 4</u>	<u>SWITCH 5</u>	<u>FUNCTION</u>
on	off	on	These switches must be in this configuration for ADM-42 operation.

Attribute Switches (Logic Board)

These four DIP switches are configured as follows:

<u>SWITCH #</u>	<u>FUNCTION</u>	<u>ON</u>	<u>OFF</u>
1	Underline/Blank	blank	underline
2	Attribute Code	display code	blank code
3	Graphics	disable	enable
4	Null Code	display null	blank null

Word Structure Switches (External Switch Panel)

THE FUNCTIONS OF THIS SWITCH BANK TO BE ASSIGNED UPON COMPLETION OF SOFTWARE.

Baud Rate Switches (External Switch Panel)

These two 16-position rotary switches determine the data transmission rate for the Serial Printer Port and the Asynchronous Communications Port (Modem). The left-most switch controls the Modem baud rate, and the right-most switch controls the Serial Printer port baud rate as follows:

<u>SWITCH POSITION</u>	<u>BAUD RATE</u>
0	50
1	75
2	110
3	134.5
4	150
5	300
6	600
7	1200

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

<u>SWITCH POSITION</u>	<u>BAUD RATE</u>
8	1800
9	2000
10	2400
11	3600
12	4800
13	7200
14	9600
15	DO NOT USE

7.4 CORRECTIVE MAINTENANCE

This section contains information for performing corrective maintenance on the ADM-42 Display Terminal.

7.4.1 Problem Identification

When it is determined that the ADM-42 is not functioning correctly, the following procedures and the procedures shown in Table 7-1 should be followed:

1. Determine the state of the machine when the fault occurred. Check for operator error, blown fuses, loose connectors; modem or computer failure. Often times failure is caused by one or more of these items.
2. Operate the ADM-42 to determine which functions have failed. For example, does the terminal transmit but not receive? Are characters correctly displayed on the screen? Has a single function such as Backspace or Insert Line failed?
3. Isolate the cause of the failure to a specific module such as the Keyboard assembly, CRT, or Main Circuit Board.
4. Perform the required adjustments or replace the malfunctioning module.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 7-1. ADM-42 Troubleshooting Guide

<u>SYMPTOM</u>	<u>CAUSE</u>	<u>ACTION</u>
Terminal will not power up	No AC power to terminal Fuse Blown	Check power connection to wall Replace fuse.
Monitor dark or cursor does not appear in upper left corner of screen after 20 second warm-up period.	Video screen not properly adjusted or faulty Monitor board. Main logic board.	Press HOME key. Adjust brightness and contrast controls. Check cable connections between Monitor and Main Circuit board... Replace Monitor board.
Character entered from keyboard not displayed on CRT screen.	Faulty keyboard switch.	Check operation of key. If necessary remove and replace tact. Replace Monitor board. Check for foreign material between keys.
Incorrect or random characters displayed on screen.	Incorrect Baud Rate switch settings. Faulty modem.	Set Baud Rate switches to correct position. Check operation of modem.
Display not vertically aligned on screen.	Video screen vertical drive improperly adjusted.	Perform vertical adjustments described in this section.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

Table 7-1. ADM-42 Troubleshooting Guide (Cont.)

<u>SYMPTOM</u>	<u>CAUSE</u>	<u>ACTION</u>
Display not horizontally aligned on screen.	Improper horizontal adjustment.	Perform horizontal adjustments described in this section.
Display out of focus.	Focus control incorrectly adjusted.	Adjust focus as outlined in this section.
Raster improperly centered.	Ring magnets incorrectly adjusted.	Follow procedures outlined in this section.
Editing functions not working.	Possible CPU or system ROM malfunction.	Replace main circuit board.
Terminal will not transmit or receive data.	Malfunctioning modem.	Check modem operation. Check operation of remote computer.

7.4.2 Removal and Replacement

Keyboard

Keyboard Cover Removal

1. Turn off power.
2. Detach keyboard from main electrical housing by lifting up and pulling out on the keyboard assembly.
3. Use a key or screwdriver to depress latch on top cover and lift keyboard cover off.

Keyboard Assembly Removal

1. Disconnect connector at rear of board.
2. Lift out board.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

3. Reverse procedure to replace.

Key Switch Contact Replacement

The tools required to remove the key switch contacts from the keyboard are:

Insertion tool and guide

Soldering iron (low temperature)

Wicking device

Short needle-nose pliers with serrated jaws

The procedure is as follows:

1. Remove the Main Circuit board.
2. Remove the solder from the contact (dewick) with a low-heat soldering iron so as not to damage circuit pads. The contacts will protrude about 1/32 inches beyond the back of the logic board. Make sure that the contacts are completely free of any solder by brushing them with your finger. The contacts should move freely.
3. Turn the board over so that the keyboard is up.
4. Remove the key top whose contacts need to be replaced.
5. With the pliers, firmly grasp the plunger in the corner (see Figure 7-1). Pull straight up firmly.

CAUTION:

The plunger is fragile; pulling to the side can break plunger or housing.

6. Remove the spring..
7. With the pliers, grasp the contact and pull vertically; remove both contacts.
8. Place the insertion tool guide in the switch housing making sure that the keyway is toward the front of the keyboard (see Figure 7-2).

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

9. Insert the solid contact (P/N 373-30052-2) in the insertion tool with the bend to the outside and the solder end up (see Figure 7-3). Insert the split contact (P/N 373-30053-2) with the split end in first (see Figure 7-4).
10. Place the insertion tool into the guide matching keyway slot and key. Press the tool firmly straight down until the contacts are seated and the tool clicks (see Figure 7-5).
11. Remove the tool and the guide.
12. Replace the spring.
13. Replace the plunger making sure that the bar is parallel with the contact opening. Work the plunger down slowly, separating the contacts with the crossbar of the plunger (see Figure 7-6).
14. Press the plunger firmly down until it is seated. The plunger will click.
15. Replace the key top.
16. Turn the board over and verify that the contacts extend about 1/32 inche past the board.
17. Resolder the contacts in place.

Replacing Keyboard Cover

1. Place plastic tabs on front of keyboard assembly in slots on bottom of keyboard assembly.
2. Rock the cover back and press gently until latch clicks.

Monitor

Removing Monitor Housing from Main Electrical Housing

1. Disconnect monitor power cord from electrical housing.
2. Disconnect video connector from main electrical housing.
3. Pull monitor housing straight up until it is clear of the pins on the electrical housing and remove.

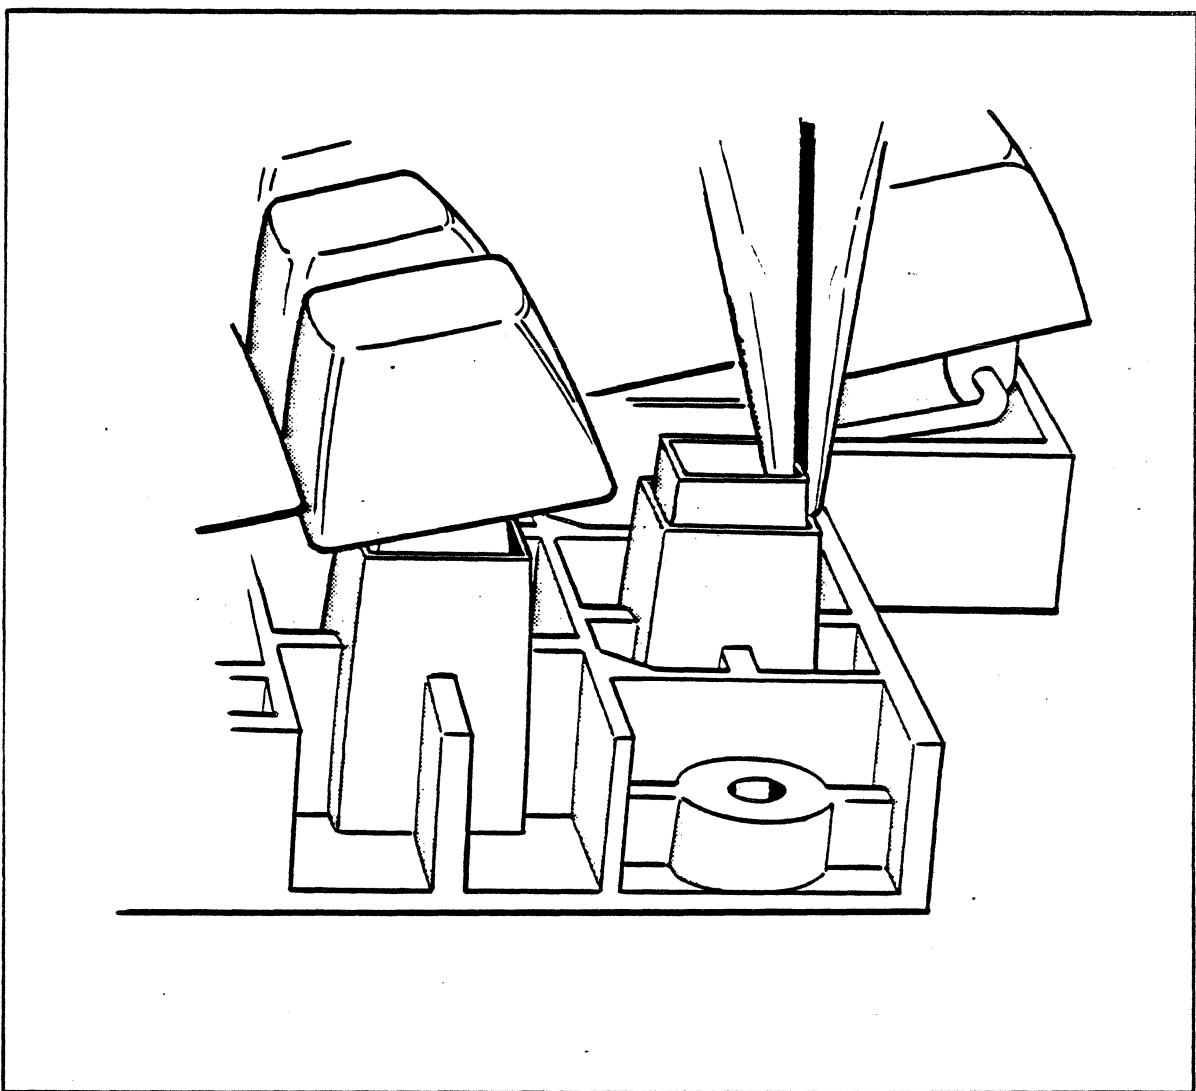


Figure 7-1. Removing the Plunger

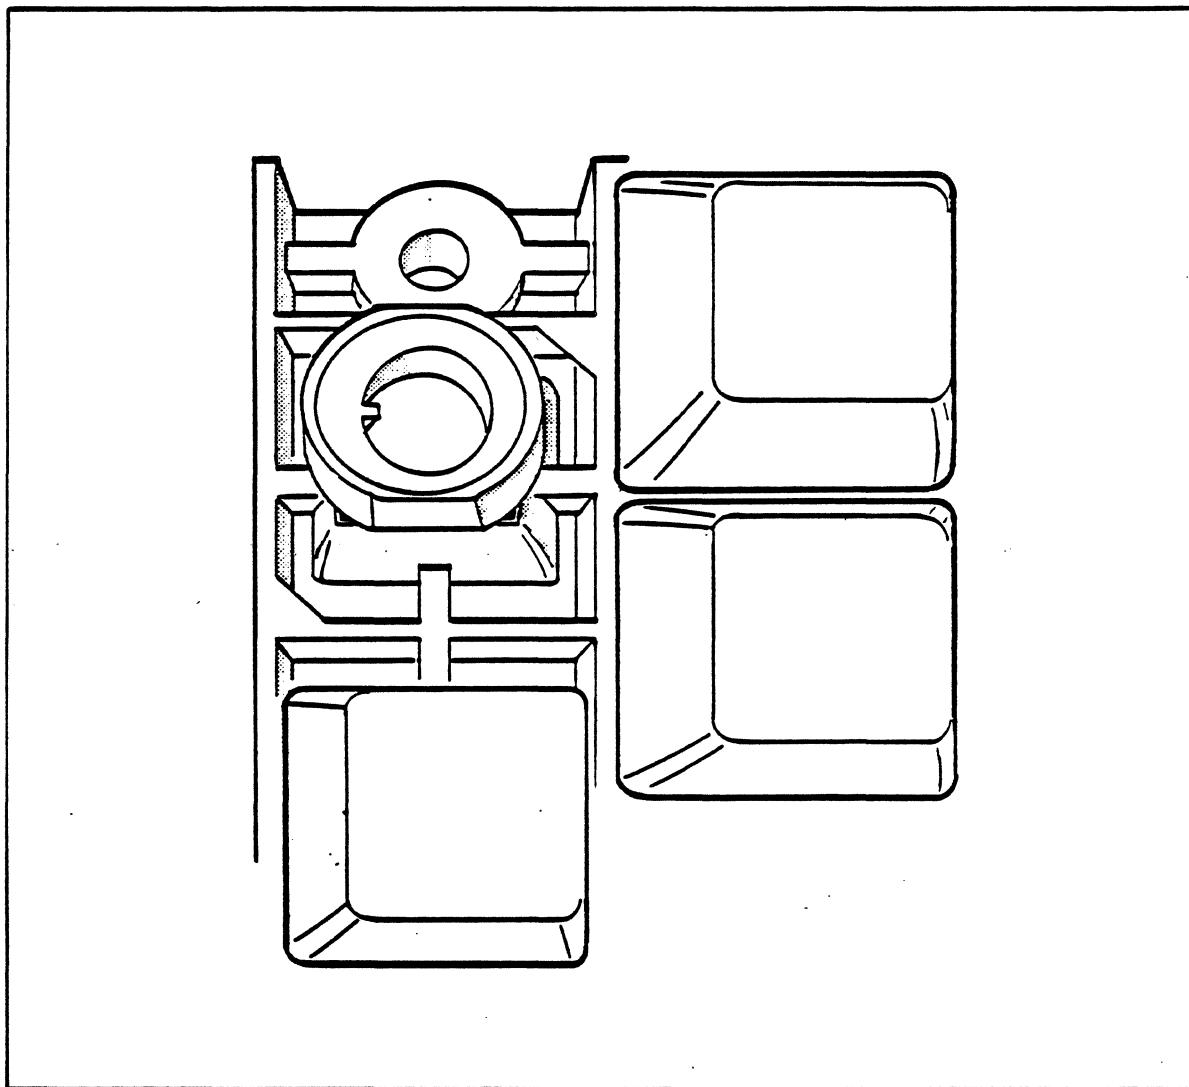


Figure 7-2. Insertion Tool Guideway

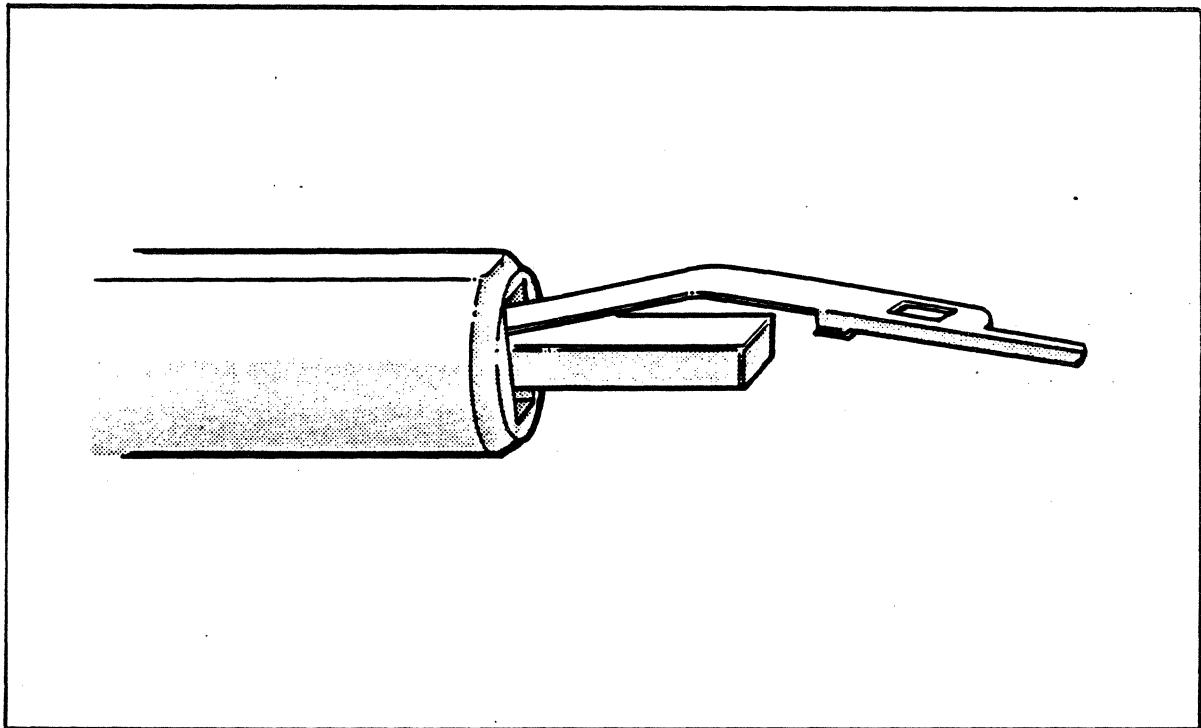


Figure 7-3. Placing the Solid Contact in the Insertion Tool

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

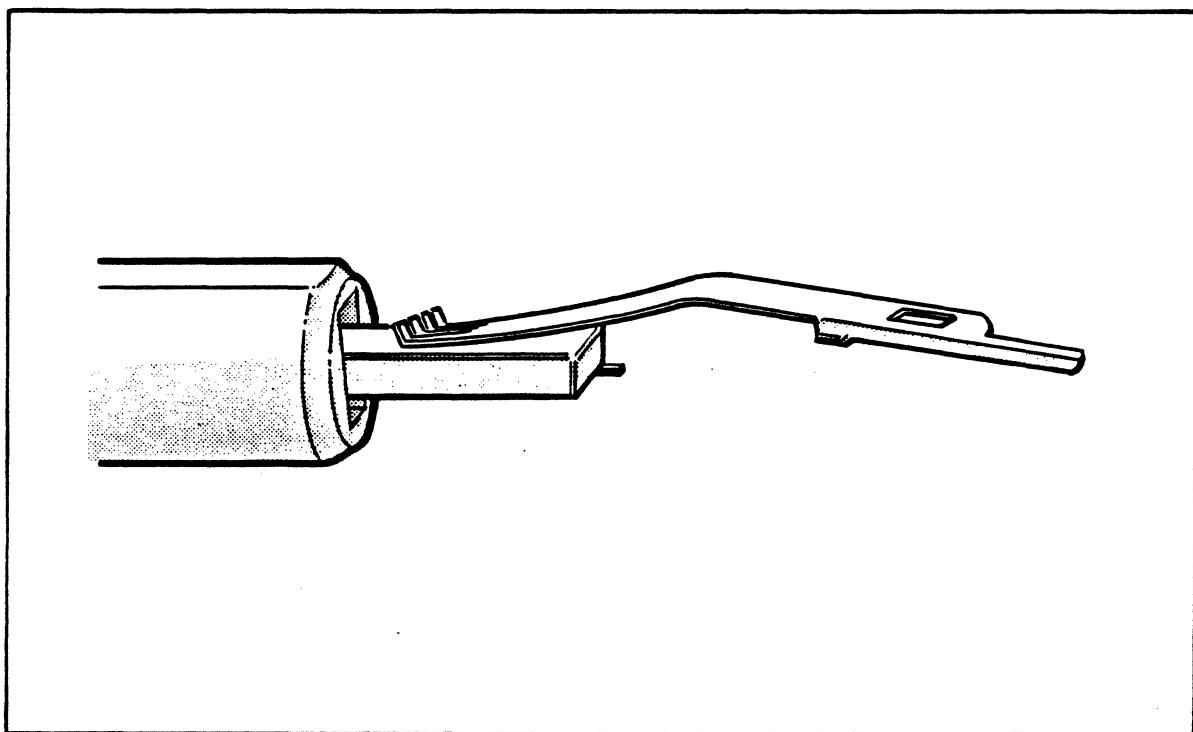


Figure 7-4. Inserting the Split Contact in the Insertion Tool

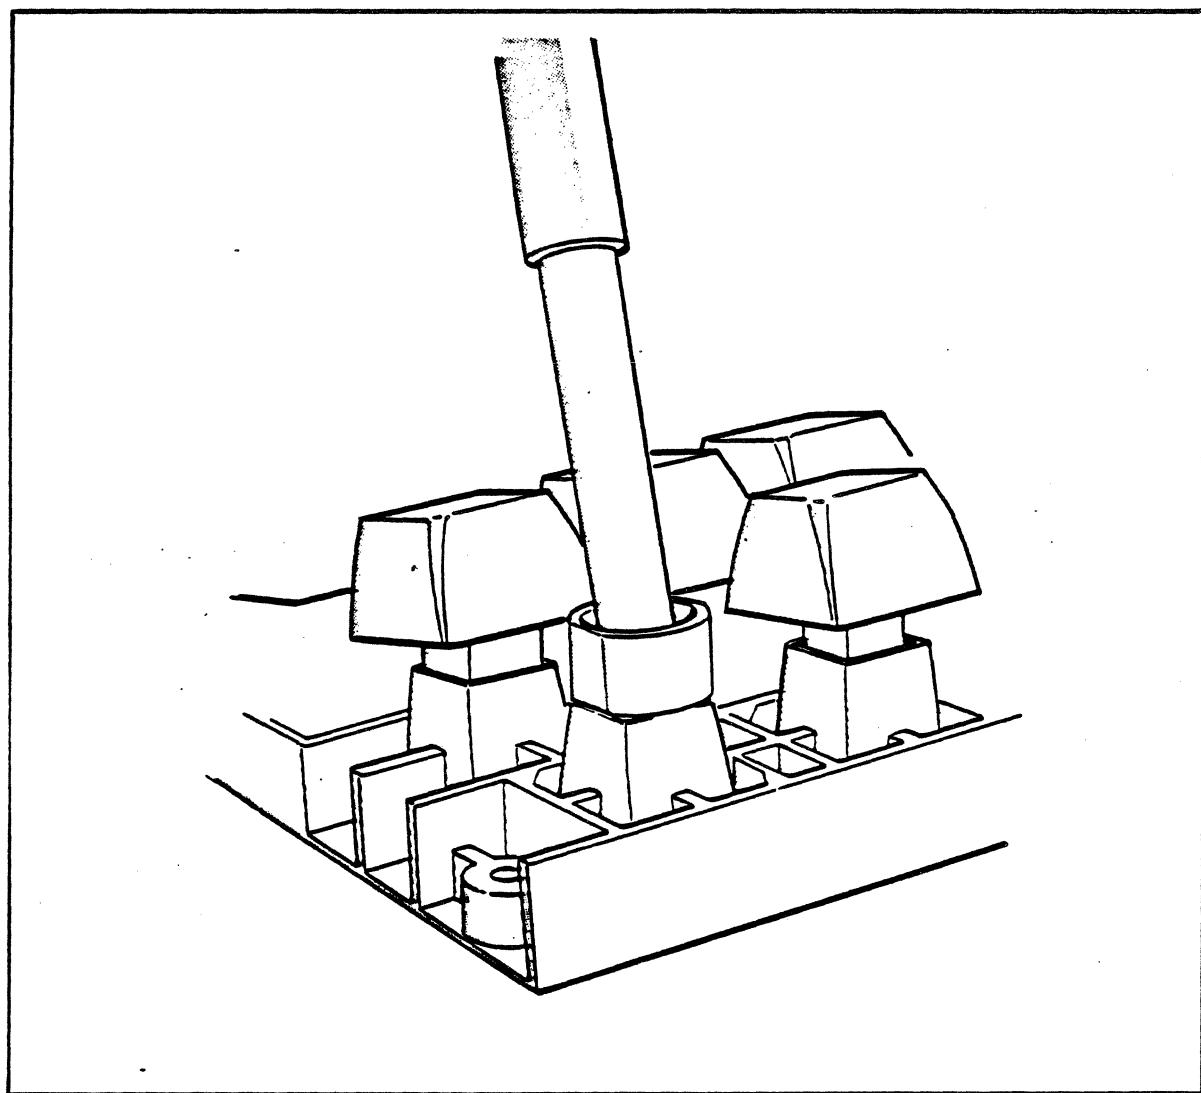


Figure 7-5. Placing the Insertion Tool Into the Guide

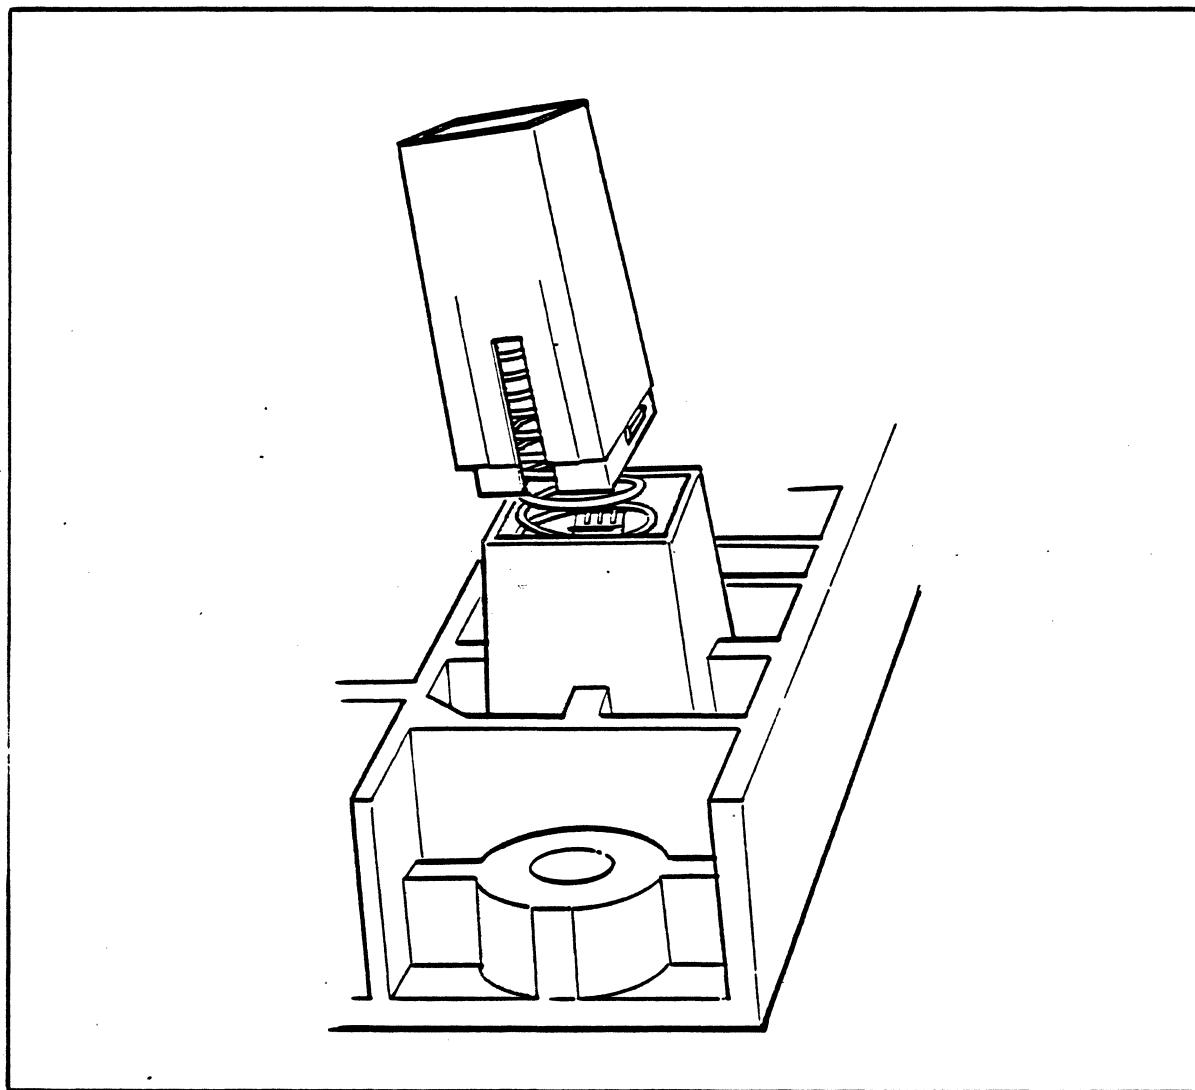


Figure 7-6. Replacing the Plunger

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

4. Reverse procedure to replace.

Opening Monitor Cover

1. Push in or pry gently on the center catch of the cover.
2. Rock cover upward and forward to gain access to monitor logic board and CRT.
3. To replace, install catches on front top of cover, lower cover, and push inward above catch unit it clicks into place.

Removal of Main Electrical Housing Cover

1. Open Switch Access Cover to expose latch.
2. Bend the catch toward the front of the monitor and lift the lid upward.

Replacement of Main Electrical Housing Cover

1. Place plastic tabs located at rear of cover into slots on bottom of electrical housing.
2. Lower cover and hook latch.
3. Close Switch Access Cover.

Removal of Power Supply

1. Loosen screw holding down the power supply circuit boards.
2. Disconnect power supply connectors from the boards.
3. Lift up power supply from front until it is clear of the housing.
4. Pull cord through the back of the electrical housing.
5. Reverse procedure to replace.

Removal of Logic Boards

1. Disconnect connector running between keyboard and main electrical housing.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

2. Lift up logic boards and place in holders.
3. Remove boards by disconnecting all connectors and lifting the boards straight out.
4. Reverse procedure to replace.

Removal of CRT

WARNING:

Discharge anode voltage to ground before attempting to remove the CRT, flyback assembly or circuit board..

To remove the CRT, proceed as follows:

1. Unhook both ends of the spring that is positioned across the CRT.
2. Remove the connector from the base of the CRT.
3. Remove the anode connector from the lower surface of the CRT.
4. Using a screwdriver or socket wrench, loosen the clamps on both sides of the CRT frame. Turn the clamps to clear the frame.
5. Grasp the CRT securely and lift it upward, then out of the ADM-42 cover.

To install a new CRT, follow the preceding steps in reverse order.

To remove the flyback assembly, proceed as follows:

1. Disconnect the anode connector from the CRT.
2. Disconnect the Molex connector that connects the flyback assembly to the monitor circuit board.
3. Use a screwdriver to loosen the hex-head screw that clamps the flyback assembly to the molded cover.
4. Lift the flyback assembly upward until the screw clears the slot in the mounting plate. Remove assembly from the cover.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

To remove the monitor circuit board, proceed as follows:

1. Remove the flyback assembly.
2. Disconnect all Molex connectors from the monitor circuit board..
3. Slide circuit board from the slots in the molded cover and remove.

To replace monitor circuit board and flyback assembly, perform the preceding steps in the reverse order.

7.4.3 Adjustments

The Monitor assembly is the only ADM-42 component which requires adjustment.

Opening the ADM-42 Cover

All adjustments to the ADM-42, except the contrast adjustment, must be performed with the terminal cover opened or removed. To open the terminal cover, proceed as follows:

1. Remove the two slot head screws located under the front corners of the terminal base.
2. Lift the cover upwards and rearwards from the front until it is lowered to rest on the table.
3. To remove the cover, disconnect the cable connecting the main circuit board to the monitor. Slide the cover toward the left until it is free of the hinge pins, then lift the cover from the base.

Note that the cover need not be removed for most of the adjustments required on the ADM-42.

Contrast Adjustment

The Contrast Adjustment knob is located on the front of the monitor chassis, just below the screen, to the left of the ON/ OFF switch. The contrast control should be set to the center of its range initially, and then, after the brightness control is set, set the contrast for comfortable viewing.

Brightness Adjustment

The brightness control is located on the front of the monitor chassis, just below the screen, to the right of the ON/OFF switch. The brightness control should be initially turned

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

switch. The brightness control should be initially turned clockwise until the background is barely visible. The cursor should be present. Adjust for comfortable viewing.

WARNING:

Brightness must be adjusted with power applied to the ADM-42. To avoid electrical shock, use a non-conducting screwdriver for this and all other adjustments.

Vertical Adjustment

To perform vertical adjustment on the ADM-42, proceed as follows:

1. Apply video and synchronization signals to the monitor.
2. Set the Vertical Frequency control to the center of its rotation.
3. Adjust the Vertical Height control until the desired height of the display is obtained.
4. Adjust the Vertical Linearity control to obtain the best vertical linearity.
5. Remove the vertical drive signal from the CRT or use a jumper lead and short the vertical drive input terminal of the printed circuit card edge connector to ground.
6. Adjust the Vertical Frequency control until the picture rolls up slowly.
7. Restore the vertical drive signal to the monitor.
8. Recheck height and linearity.

Horizontal Adjustment

The raster width is changed by adjusting the width coil and the Horizontal Linearity Sleeve as follows:

1. Apply video and synchronization signals to the monitor. Set the Contrast Control to the point where the raster is visible on the screen.

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

2. Insert the Horizontal Linearity Sleeve under the yoke until about 1/3 of the sleeve is exposed. If the monitor was shipped from the factory and the location of the sleeve in the yoke was present, make a mark on the sleeve and reinsert the sleeve to this mark if removal is required.

If the Horizontal Linearity Sleeve is inserted too far into the yoke, the horizontal output circuitry may be stressed.
3. Adjust the Horizontal Width Coil to obtain the correct raster width.
4. To obtain the best linearity, move the Horizontal Linearity Sleeve further under the yoke. This adjustment may affect the raster width but should not be used for raster width adjustments. The Horizontal Linearity Sleeve should be positioned to obtain the best linearity.
5. Readjust the Horizontal Width Coil to obtain the correct raster width.
6. Check horizontal linearity and width. Adjust if necessary.

Focus Adjustment

To obtain the best focus, rotate the Focus Adjustment knob.

Centering the Raster

The raster may be centered by rotating the Ring Magnets.

The Ring Magnets should not be used to move the raster from its center position; this action will lower the display resolution.

If the display is tilted, the entire yoke should be rotated.

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

SECTION 8

DRAWINGS

NOTE: Drawings in this Section are physically arranged in numerical sequence.

<u>TITLE</u>	<u>ASSEMBLY 129810-1,-21</u>	<u>ASSEMBLY 129810-31,41</u>
Final Assembly, ADM-42	129810E	129810E
Parts List, Final Assembly, ADM-42	PL129810E	PL129810E
Configuration Switch	CS129830B	CS131370A
Personality PROM, ADM-42 Standard	129753T-8 (Sht. 6)	-
Options, ADM-42	129542F	131371D
Terminal Control Unit, ADM-42	129840D	129840D
Parts List, Terminal Control Unit, ADM-42	PL129840D	PL129840D
Assembly Logic Board	129830D (Shts. 1 & 3)	131370A
Parts List, Assembly, Logic Board	PL129830D	PL131370A
Schematic, Logic Board	129831C	129813A
Assembly, Option Logic Board	129832D (Sht. 1)	129832D (Sht. 1)
Parts List, Assembly, Option Logic Board	PL129832D	PL129832D
Schematic, Option Logic Board	129833A	129833A
Keyboard Assembly, ADM-42	129841B	129841B
Parts List, Keyboard Assembly, ADM-42	PL129841B	PL129841B

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

<u>TITLE</u>	<u>ASSEMBLY 129810-1,-21</u>	<u>ASSEMBLY 129810-31,-41</u>
Keyboard PC Board Assembly	129834C (Sht. 1)	-
Parts List, Keyboard PC Board Assembly	PL129834C	-
Schematic Keyboard PC Board Assembly	129835B	-
Cable Assembly, Keyboard	129723	129817A
Monitor Assembly, ADM-42	129842B	129842B
Parts List, Monitor Assembly, ADM-42	PL129842B	PL129842B
Monitor Cable, Video	129839B	129839B
AC Cable Assembly, Monitor	-	129844A
Power Adapter Assembly	129777C	-
Power Supply Assembly	129730A	129730A
Parts List, Power Supply Assembly	PL129730C	PL129730C
Power Supply PCBA	129731A (Sht. 1)	129731A (Sht. 1)
Parts List, Power Supply PCBA	PL129731A	PL129731A
Wire List Power Supply PCBA	129732D	129732D

<u>TITLE</u>	<u>ASSEMBLY 131394</u>
PC Board Assembly	131394D
Parts List, PC Board Assembly	PL131394D

▼
REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
4		INC ADCN 1 - 3 REDRAWN SHT 1,3,11(OUT 2 F/N 7 AM 8-107) ADDED OPT 5,6,11 DELETE OPT 3-6; OPT 9-5 F/N 5 WAS <i>W. Kelly 10-20-78 128349-4102</i>	11-17-78 11-22-78	<i>W. Kelly</i> <i>J. Turner</i>
8		INC ADCN 4-8 SHT 7 F/N 8 QTY WAS 3, F/N 9 WAS 9 SHT 8 F/N 7 QTY WAS 3 <i>W. Kelly 2-21-79</i>	2-21-79 2-21-79	<i>W. Kelly</i> <i>J. Turner</i>

CONTENTS

Option

	Page
1 PROM configuration	3
2 Data RAM	
8K	4
12K	4
16K	4
Option board instruction	5
3 Option board general	6
* 3-1 Parallel printer port	7
3-2 Async printer port	8
* 3-3 Synchronous port	9
3-4 Polling address	10
3-5 Programmable function keys	
3-5-1 32 CHARACTER (1K)	11
3-5-2 64 CHARACTER (2K)	11
* 3-6 Expanded program (Not available)	
* 3-7 External bus	12
4 Composite video	13
5 Answer back	14
Alternate character set	
6-1 Graphics	15
10 230V 50/60 Hz Power input	16
Optional keyboard arrangement	
11-1 Alternate	17
* 11-2 German	17
* 11-3 United Kingdom	17
* 11-4 Scandinavian	17
20 Cable, RS232-current loop	18
21 Cable, Parallel printer	18
22 Cable, Async printer	18
* 23 Cable, External bus	19
* 24 Cable, Composite video	19

* OPTION NOT AVAILABLE

DASH NO.	NEXT ASSY	USED ON
		DL29500

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN.	DR W. KELLY 8-18-78	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.			
	CHK	CONFIGURATION CONTROL			
	DSGN				
	ENGR DH THOMSON 8-25-78	ADM 42			
	PROJ				
	REL M. SLUTZKY 8-25-78	SIZE	CODE IDENT	REV	
	CUSTOMER APPD				
	✓	A	98438	129542	F
		SCALE		SHEET 1 OF 19	

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
C		INC ADCN 9-20, DCN 4356 520. ADD VIEW SHT Z FOR REVISIONS & UPDATE ALL SHEETS	4-1-80 RM - 4-4-80	C. [Signature] B. [Signature]
D		INC DCN 603	4-1-80 RM - 4-4-80	B. [Signature]
E		INC DCN 605	4-4-80 RM 4-9-80	C. [Signature] B. [Signature]
F		INC DCN 627	4-1-80 RM 4-9-80	W. [Signature] B. [Signature]

SIZE	CODE IDENT	129542	F
A	98438		
SCALE	-	SHEET	2

CONFIGURATION No.	PROM DASH NO. ON 129830					PROM DASH NO ON 129832				
	PERSONALITY 129753(025123) LOCATION 14H	PROGRAM 129827(2716) LOCATION 11H E000	PROGRAM 129827(2716) LOCATION 2H E800	PROGRAM 129827(2716) LOCATION 3H F000	PROGRAM 129827(2716) LOCATION 4H F800	PROGRAM 129827(2716) LOCATION 4E C000	PROGRAM 129827(2716) LOCATION 5E C800	PROGRAM 129827(2716) LOCATION 6E D000	PROGRAM 129827(2716) LOCATION 8E D800	
753-	827-	827-	827-	827-	827-	827-	827-	827-	827-	827-
1 OPT.	-55	-54	-53	-52	-51					50
2										
3	011000	004111	004012	004013	004014	004004	-	004006	-	5.E
4 NOT REQD	-64	-54	-53	-52	-51					6.E
5										
6										
7										
8										
9										
10		.								
11										
12										
13										
14										
15										
16										
17										
18										
19										
20										
21										
22										
23										
24										
25										
26										
27										
28										
29										
30										
OPTION 1 TITLE: PROM CONFIGURATION SHEET: 1 OF 1					SIZE A	CODE IDENT 98438	129542	REV F		
					SCALE				SHEET	3

No.	QTY PROD	PARTS LIST			NOTE:
		PART NUMBER	DESCRIPTION	LOCATION/REF DES	
1	V	8K MEMORY	OPTION		
2	V	12K MEMORY	OPTION		
3	V	16K MEMORY	OPTION		
4					
5	2416 8	129466-4027	RAM		
6	2416 8	128518-103	CAP, .01UF		
7	2 1	128518-106	CAP, 10UF		
8					
9					
10					
11					
12					
13					

A. PARTS INSTALL ON 129830. SEE DWG FOR LOCATION

OPTION 2	SIZE	CODE IDENT	REV
TITLE MEMORY - 8K/12K/16K	A	98438	129542
SHEET 1 OF 1	SCALE		SHEET 4

REQUEST FOR ANY OF THE FOLLOWING OPTIONS IN GROUP 3
REQUIRE ADDITIONAL P.C. BOARD 129832 & PARTS LISTED
ON NEXT SHEET ADDED TO 129830 BD.

ANY OF THE FOLLOWING AFFECT REAR CLOSURE 129746.

OPTION

PARALLEL PTR PORT	.			.	.
ASYNC PTR PORT		.		.	.
SYNCHRONOUS PORT			.	.	.
INSTALL 129746 CLOSURE DASH NO. ON 129832	161	181	171	191	151

ITEM	QTY	REF ID	PARTS LIST		
			PART NUMBER	DESCRIPTION	LOCATION/REF DES
1					
2					
3					
4	2	8496-1003	CONN, 50PIN	(3M)	A
5					
6					
7					
8					
9	1	129832-11	P.C. BOARD ASSY		B
10	2	129739-1	INTERCONNECT CABLE 50x2		B
11	1	129746-(NOTE)	CLOSURE		C
12	1	129843-3	SPACER		B
13					

A. PARTS INSTALL ON 129830. SEE DWG FOR LOCATION

B PARTS INSTALL ON TOP ASSY 129840.

C. CLOSURE DASH NO. IS OPTION DEPENDENT SEE
TABULATION ON SHT 4 OR INSTALL BLANK 129746-131

OPTION	3	SIZE	CODE IDENT	REV
TITLE	OPTION BOARD	A	98438	129542
SHEET	1 OF 1	SCALE		F
				SHEET 6

ITEM	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF DES
1	1	129824-6821	IC	
2	3	129467-04		
3	1	129467-21		
4	1	129476-102	RES MOD, 1K	
5	5	128518-102	CAP .001 UF	
6	1	128533-302	RES 3K	
7	1	128533-472	RES 4.7K	
8	1	206817-1	CONN	(AMP)
9	2	129473-3	JACK SOCKET	
10	2	R3479 x 1/4	RIVET, SEMI-TUB	(CHICAGO RIVET)
11	1	640379-3	SOCKET, 40 PIN	(AMP)
12	1	129827-00	EPROM 2716	B
13				

A. INSTALL PARTS ON 129832. SEE DWG FOR LOCATION.

B. PROGRAM PER PROM TABULATION. SEE SHT 3
AVAILABLE PROGRAMS:

1. (NONE)
- 2.

OPTION NOT AVAILABLE

No.	QTY END	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF DES
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				

A. STANDARD PARTS INCLUDED ON 12983Z-11

B. PROGRAM PER PROM TABULATION SEE SHT 2.

AVAILABLE PROGRAMS:

1. 129827-004004; ONLY COMPATABLE WITH -11 THRU -14 OR -12,13,14 & 17 PROGRAM SET.
2. 129827-57 ONLY COMPATABLE WITH -52 THRU -55 PROGRAM SET.

OPTION 3-2
TITLE ASYNC PRINTER PORT
SHEET 1 OF 1

SIZE	CODE IDENT	REV
A	98438	129542
SCALE		F
SHEET	8	

No.	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF'DGS
1	1	129824-6852	IC	
2	1	128348-1488		
3	2	128348-1489		
4	2	128348-8T97		
5	1	785-1-R4.7K	RES MOD, 47K	(BECKMAN)
6	1	1-435668-8	SWITCH, 8POS	(AMR)
7	2	128518-103	CAP, .01 UF	
8	2	128533-512	RES, 5.1K	
9	1	206584-1	CONN, 25 PIN	(AMR)
10	2	129473-3	JACKSCREW	
11	2	R3479 x 1/4	RIVET, SEMI-TUBULAR	(CHICAGO RIVET)
12	1	640361-3	SOCKET, 24 PIN	(AMR)
13	1	129827-00	EPROM 2716	B

A. PARTS INSTALLED ON 129832. SEE DWG FOR LOCATION.

B. PROGRAM PER PROM TABULATION. SEE SHT 3

AVAILABLE PROGRAMS:

1. (NONE)
- 2.

OPTION NOT AVAILABLE

OPTION 3-3
TITLE SYNCHRONOUS PORT
SHEET 1 OF 1

SIZE	CODE IDENT	REV
A	98438	F
SCALE		SHEET 9

QTY	REF ID	PARTS LIST			NOTE
		PART NUMBER	DESCRIPTION	LOCATION/REF DES	
1	7	128348-8T97	IC		
2	5	1-435668-8	SWITCH, 8POS	(AMP)	
3		5785-1-R4.7K	RES MOD 4.7K	(BECKMAN)	
4	1	129827-00	EPROM 2716	6E	C
5					
6					
7					
8					
9					
10					
11					
12					
13					

A. PARTS INSTALL ON 129832. SEE DWG FOR LOCATION.

B. DECAL INSTALLS ON 129841 KEYBOARD ASSY.

C. PROGRAMS AVAILABLE

1. 129827-004006 (FOR PROM SET REL 1Z/18)

2. 129827-73 (FOR PROM SET VZ-03H)

Fig	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF DES
1		3-5-1	32 CHAR,FCN KEYS	B
2	✓	3-5-2	64 CHAR,FCN KEYS	
3				
4				
5	8	128348-2102A	RAM	ZH-9H A
6			"	
7				
8				
9				
10				
11				
12				
13				

A. PARTS INSTALL ON 12983Z-11 PCB IN SOCKETS.

B. STANDARD PARTS INCLUDED ON 12983Z-11

OPTION 3-5
TITLE PROGRAMMABLE FUNCTION KEYS
SHEET 1 OF 1

SIZE A CODE IDENT 129542 REV F
98438
SCALE SHEET 11

No.	QTY PWD	PARTS LIST			MATERIAL
		PART NUMBER	DESCRIPTION	LOCATION/REF IDES	
1		2 3496-2003	CONN 50 PIN		(3M)
2		6 761-3-R100-L	RES MOD 100Ω, DIP		(CTS)
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					

A. PARTS INSTALL ON 129832. SEE DWG FOR LOCATION.

OPTION NOT AVAILABLE

OPTION	3-7	SIZE	CODE IDENT	REV
TITLE	EXTERNAL BUS	A	98438	129542
SHEET	1 OF 1	SCALE		F
				SHEET 12

ITEM	QTY REQD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF'DS
1	1	51-153-0000	JACK	(SELECTRO)
2	2	2N3904	TRANSISTOR	
3	1	128533-100	RES, 10Ω	
4	1	128533-750	RES, 75Ω	
5				
6	1	51-107-3059	PLUG, COAX	SELECTED
7				B/C
8				
9				
10				
11				
12				
13				

- A PARTS INSTALL ON 129830. SEE DWG FOR LOCATION.
- B. IF INSTALLED ON RG59/U FOR CUSTOMER BY LSI,
PART NO. 51-124-3059 MAY BE SUBSTITUTED.
- C. FURNISH LOOSE WITH EQUIPMENT AS PART OF THIS OPTION.

ITEM	QTY PER PC	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF. DES.
1				
2				
3				
4	1	129753-00	PROM, 825123	10K
5				
6				
7				
8				
9				
10				
11				
12				
13				

- A. PROGRAM TO CUSTOMER REQUIREMENTS.
- B. INSTALL ON 129830 Q 10K. SEE DWG.
- C. NOT AVAILABLE UNTIL -7 BD

OPTION 5
TITLE ANSWER BACK
SHEET 1 OF 1

SIZE A CODE IDENT 98438 REV F
SCALE SHEET 14

Ref	QTY PROD	PARTS LIST			
		Part Number	Description	Location/Ref Des	Notes
1	✓	6-1	GRAPHICS		
2					
3					
4					
5	1	129827-005000	EPROM, LINE GRAPHICS	2H	A
6					
7					
8					
9					
10					
11					
12					
13					

A. PROGRAM & INSTALL PROM ON 129830 Q 2H

OPTION 6
TITLE ALTERNATE CHAR GEN SET
SHEET 1 OF 1

SIZE A	CODE IDENT 98438	129542	REV F
SCALE		SHEET 15	

P/N	QTY REQD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF'DS
1	1	1 129730-21	POWER SUPPLY ASSY	A
2	1	31301.5	FUSE, S-B, 1½A	(LITTELFUSE) A
3	1	1 129717-27	NAME PLATE, TPU	A
4				
5	1	1 129717-35	NAME PLATE, MON	C
6	1	313.750	FUSE, S-B, ¾A	(LITTELFUSE) C
7				
8				
9				
10				
11				
12				
13				

A REPLACES EXISTING POWER SUPPLY ON 129840 TOP ASSY.
 B MONITOR MUST BE 230V (SEE VENDOR DATA SHEET)
 C. REPLACES EXISTING NAME PLATE ON 129842 MON ASSY.

ITEM	QTY	REF ID	PART NUMBER	DESCRIPTION	LOCATION/REF DES	NOTES
1	1	11-4	11-1	ALTERNATE KBD		
2	1	11-2	11-2	GERMAN KBD	NOT AVAILABLE	
3	1	11-3	11-3	UK OPTION		
4	1	11-4	11-4	SCANDINAVIAN	NOT AVAILABLE	
5						
6	1	129841-11	129841-11	KEYBOARD ASSY		A
7	1	129841-21	129841-21	" "	" "	A
8	1	129435-43	129435-43	KEYTOP ENGRAVED		C
9	1	129841-41	129841-41	" "	" "	A
10	1	129827 OR 129867	129827 OR 129867	CHAR GEN	1H	B
11	1	129827-24	129827-24	CHAR GEN EPROM	1H	B
12	1	129827 OR 129867	129827 OR 129867	CHAR GEN	1H	B
13						

A. REPLACE 129841-1 KEYBOARD WITH F/N 6,7,8, OR 9 AS APPLICABLE.

B. REPLACE STD CHAR GEN ON 129830 @ 1H

C. REPLACE KEYTOP #42 3 WITH F/N 8 3

Fig. QTY PROD

PARTS LIST

Fig.	QTY	PART NUMBER	DESCRIPTION	LOCATION/REF DES	Alt.
1	1	✓ OPT 20	CABLE, RS232 -CURRENT LOOP		
2	1	✓ OPT 21	CABLE, PARALLEL PRINTER		
3	1	✓ OPT 22	CABLE, ASYNC PRINTER		
4	1				
5					
6					
7	1	1129316-21	CABLE, RS232-CURRENT LOOP		
8	1	129787-1	CABLE, PARALLEL PRINTER		
9	1	129949-1	CABLE, ASYNC PRINTER		
10					
11					
12					
13					

Ref	QTY	ERAD	PARTS LIST		LOCATION / REF. NO'S	Notes
18			PART NUMBER	DESCRIPTION		
1		✓	OPT 23	EXTERNAL BUS	(NOT AVAIL)	
2		✓	OPT 24	CABLE, COMPOSITE	VIDEO	(NOT AVAIL)
3						
4						
5						
6		2		FLAT		
7		1		CABLE		
8						
9						
10						
11						
12						
13						

OPTION 23-24	SIZE	CODE IDENT	129542	F
TITLE CABLE	A	98438		
SHEET	SCALE		SHEET	19

APPLICATION			SYM	REVISION DESCRIPTION	APPROVAL / DATE
DASH NO.	NEXT ASSY	USED ON			

NOTES:

1. TOOLING FOR F/N 4

PRODUCTION - CHAMPOMATIC 1-253980-4

HAND - 229451-4 TOOL KIT

EXTRACTOR - 230238-1

TOOLING FOR F/N 8

PRODUCTION - AMP-O-MATIC

HAND - 90302-1

INSET/EXTL - 91067-2

2. STAMP F/N 12 - LSI PART NO
§ DESCRIPTION

129723-1
KEYBOARD

CONTRACT NO.

CONTENTS		DR W. Kelly 3-14-77	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV ANAHEIM, CALIF.	
SECT.	PAGES	CHK		
1		DSGN		CABLE ASSY-
2		ENGR		KEYBOARD TO ELECTRONICS
3		PROJ H. Thompson 3-14-77		
4		REL H. Thompson 8/1/77	SIZE	CODE IDENT
5		CUSTOMER APPD	A	98438 129723 RE
6			SCALE	SHEET 1 OF 3


LIST OF MATERIALS OR PARTS LIST						
QTY REQD		FIND NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL OR CODE IDENT	SPECIFICATION
	-1		-1	CABLE ASSY- KEYBOARDED TO ELECTRONICS		
	✓	1				
		2				
		3				
	1	4	552313-1	RECEPTACLE	AMP	
	1	5	1-552413-1	CABLE CLAMP	"	
	1	6	205208-1	PLUG	"	
	1	7	206472-1	CABLE CLAMP	"	
	20	8	1-66506-1	CONT, PIN, 24-20	"	FOR AMP-O-MATIC
		9				
	A/R	10	129726-1	CABLE		
		11				
	2	12	FIT-221-3/8, CLEAR	SLEEVING,	ALPHA	CUT 2" LG IDENT PER NOTE 2
		13				
		14				
		15				
		16				
		17				
		18				

SCALE **A** SIZE **98438** CODE IDENT **129723**
 SHEET **2** RE

LINE NO.	CABLE NO.	TERMINATION INFORMATION				WIRE INFORMATION				ROUTING LGT	
		WIRE NO. OR COLOR	FROM		TO		FIND NO./NOTES				
			REF DES	PIN	REF DES	PIN	FROM END	TO END	WIRE OR CABLE		
1	KEYBD	-	KEYBD	1	ELECT	2					
2		-		2		3					
3		WH/GN		3		4				8	
4		BLK		4		5					
5		WH/BN		5		6					
6		WH/VI		6		7					
7		WH/YL		7		8					
8		WH/BL		8		9					
9		BK/BR		9		10					
10		WH/OR		10		11					
11		WH/GN		11		12	4			6	
12		WH/RD		12		13	5			7	
13		-		13		14	12			10	
14		-		14		15					
15		BRN		15		16					
16		ORN		16		17					
17		RED		17		18					
18		GRN		18		19					
19		YEL		19		20					
20		WHT		20		21					
21		VIO		21		22					
22		GRY		22		23					
23		BLU		23		24					
24		BK/RD	KEYBD	24	ELECT	25				8	
25		-				1					


CODE NOTES:

△ SLEEVING SHALL EXTEND INTO CABLE CLAM

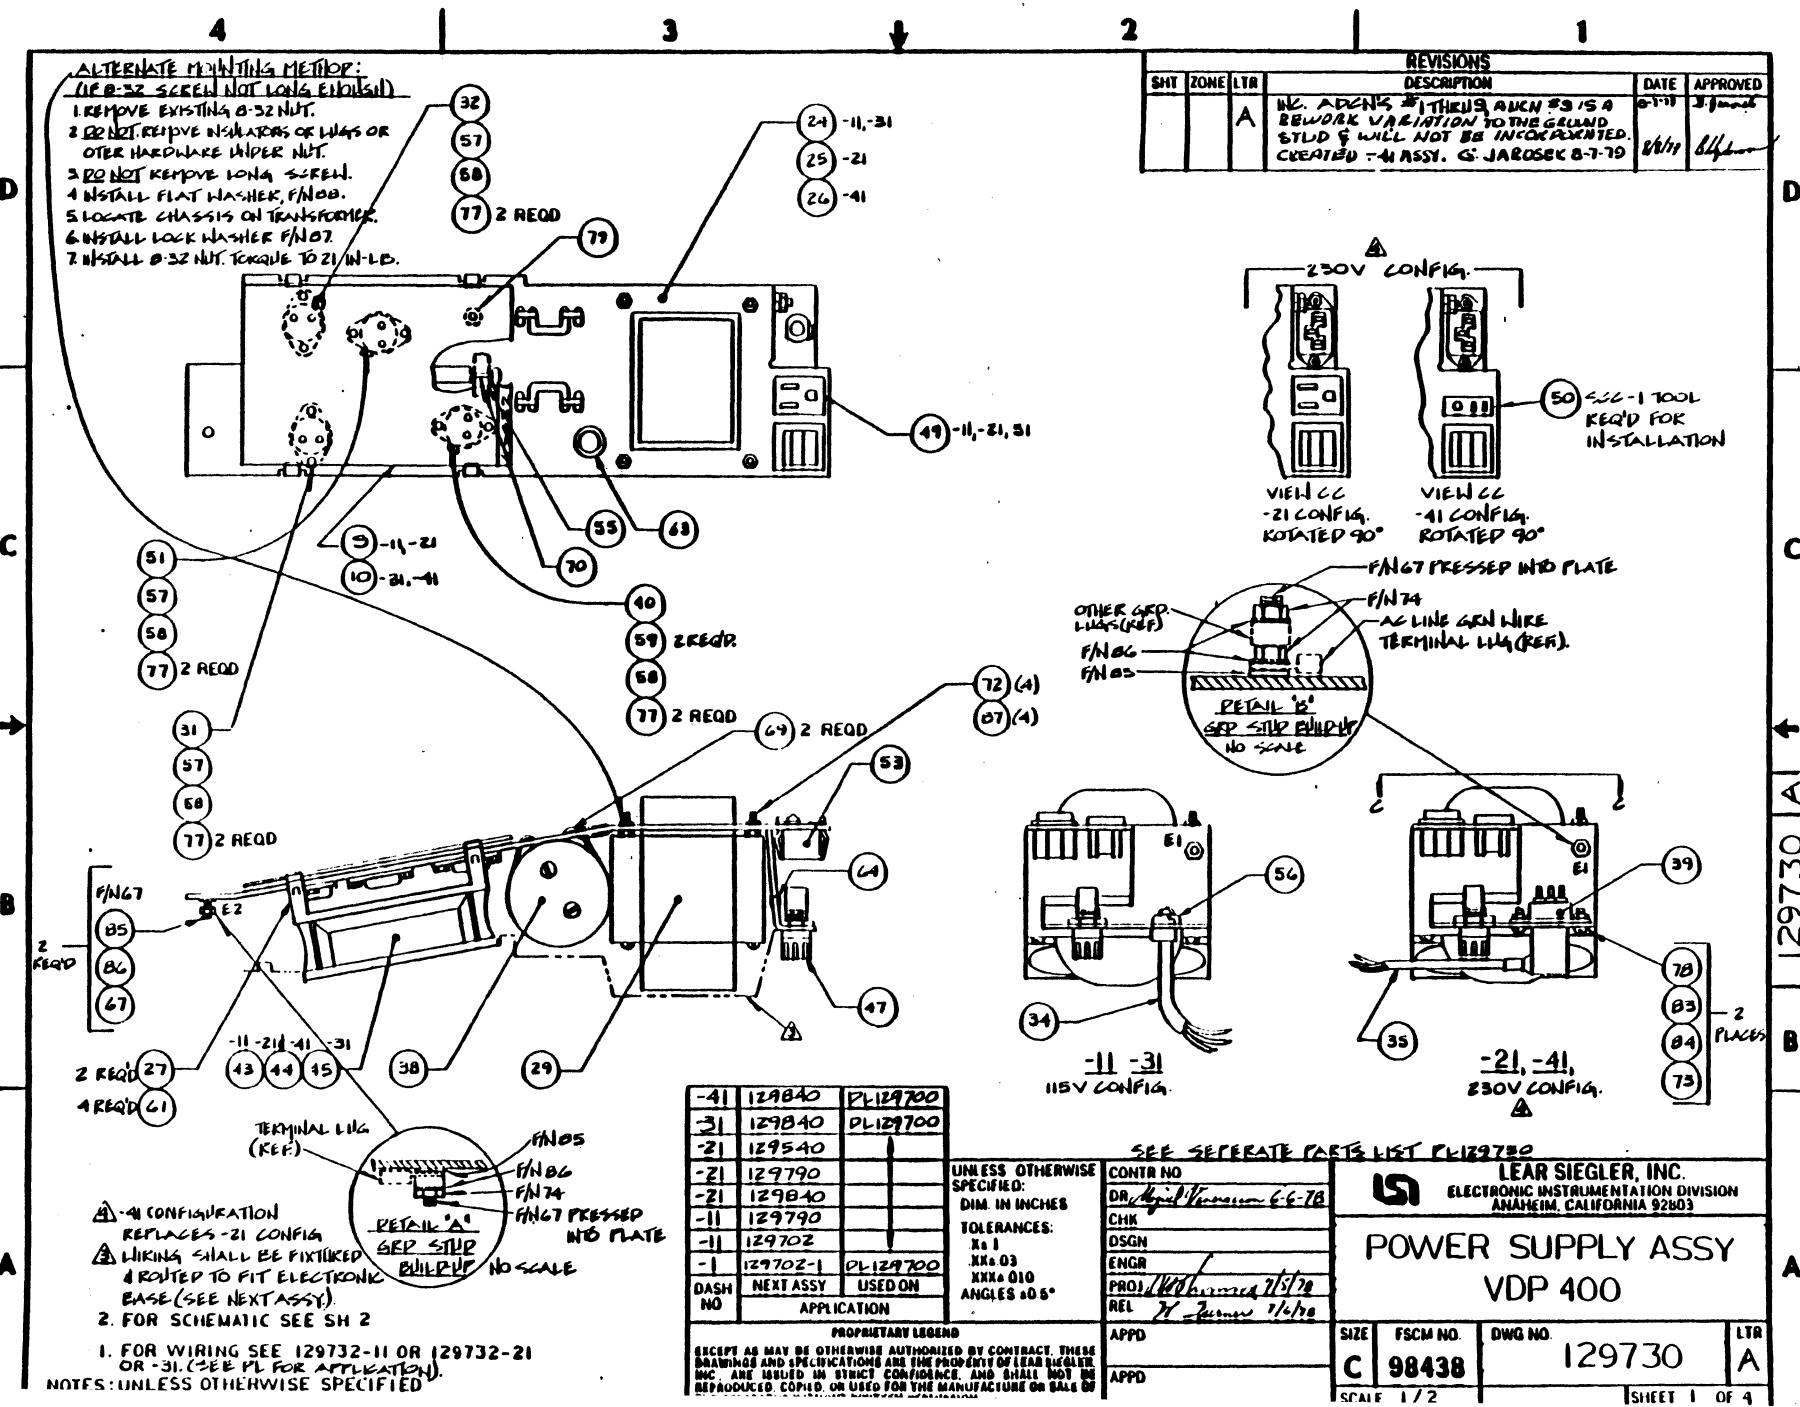

**I. FOR WIRING SEE 129732-11 OR 129732-21
OR -31. (SEE PL FOR APPLICATION).**

NOTES: UNLESS OTHERWISE SPECIFIED

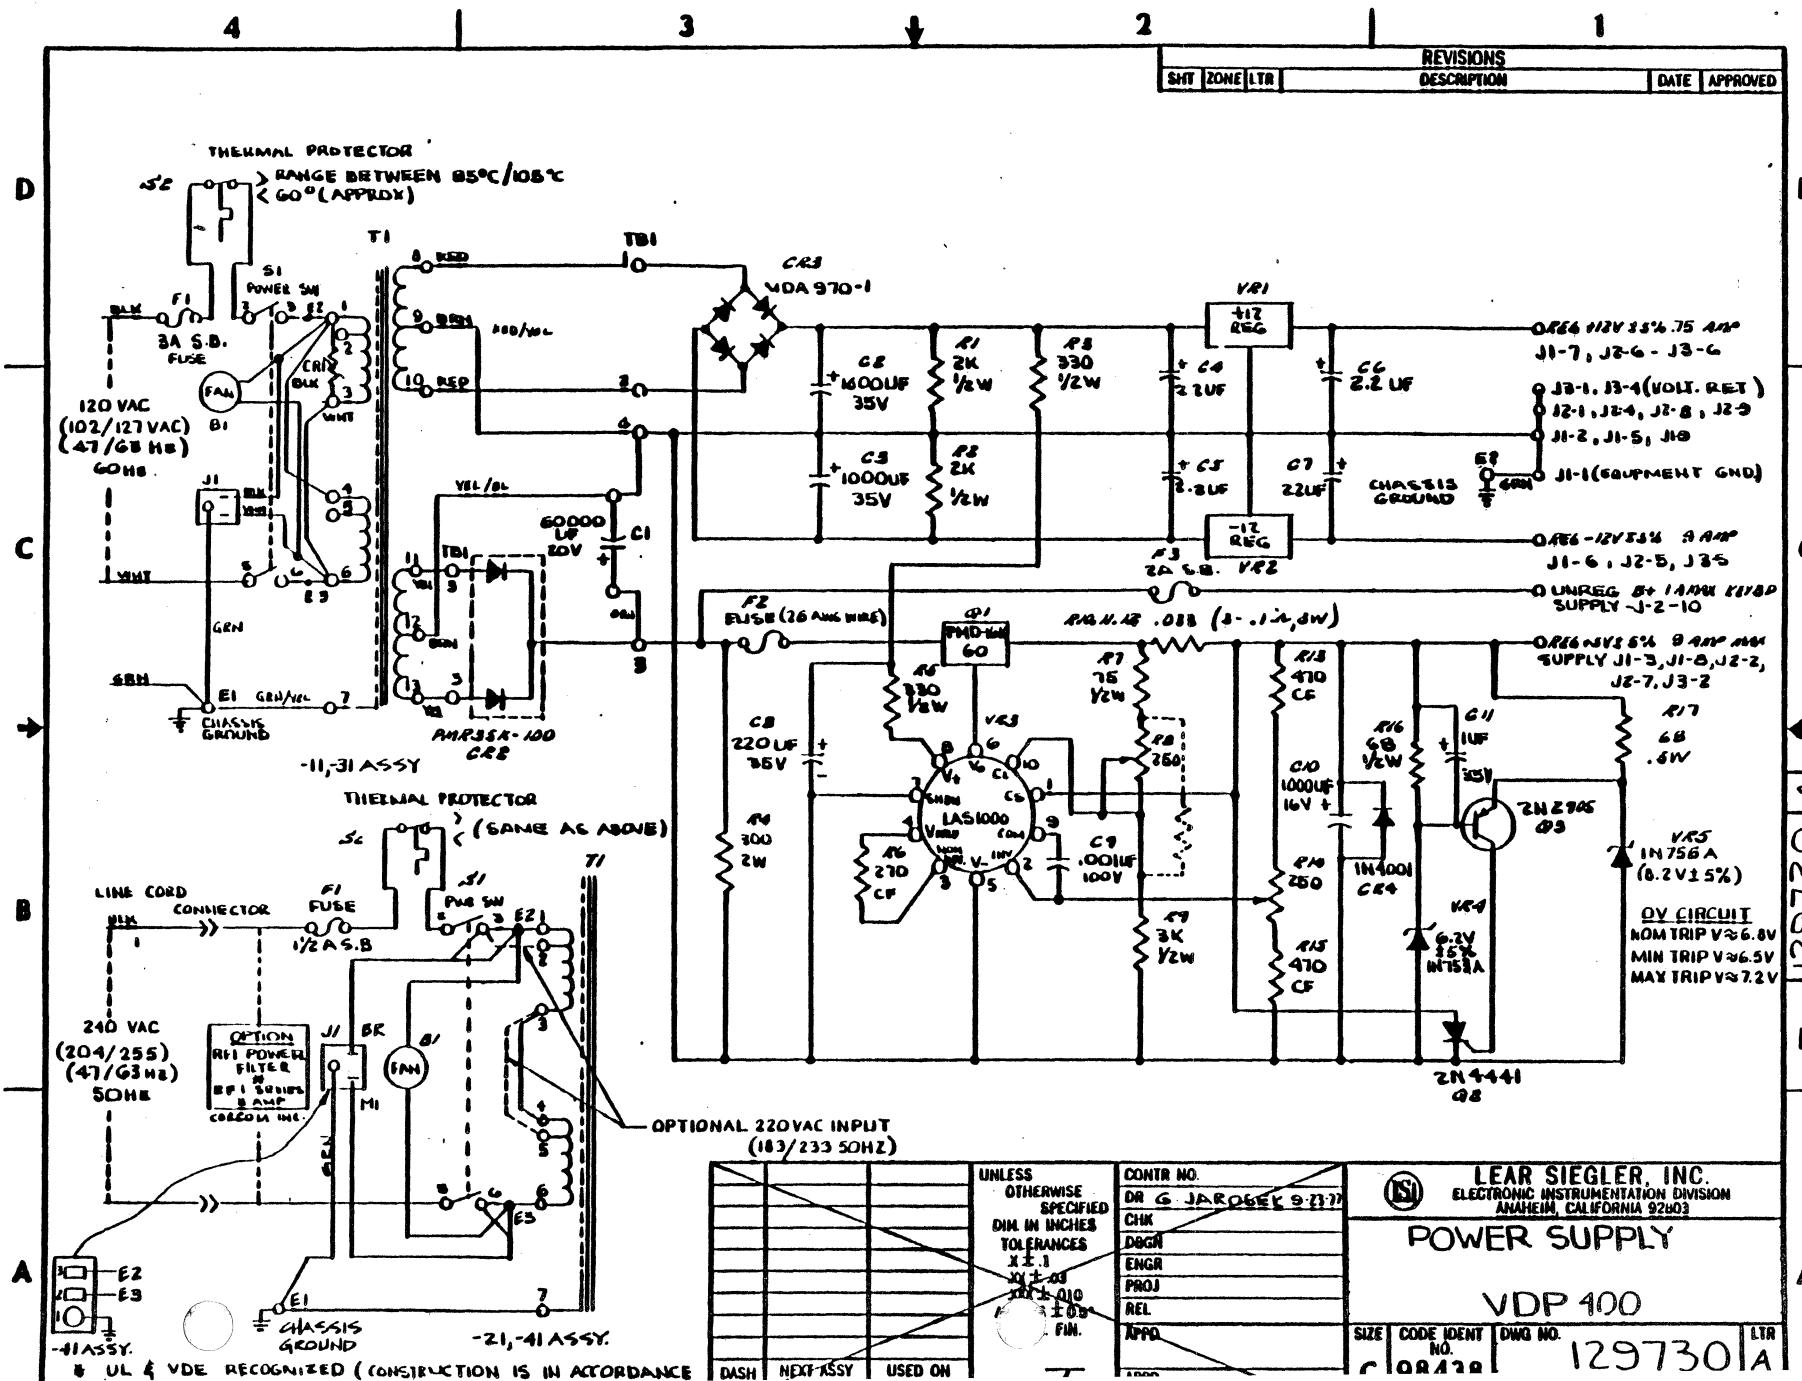

4

3

2

1

REVISIONS
DESCRIPTION

DATE APPROVED

D

D

C


C

B

B

A

A

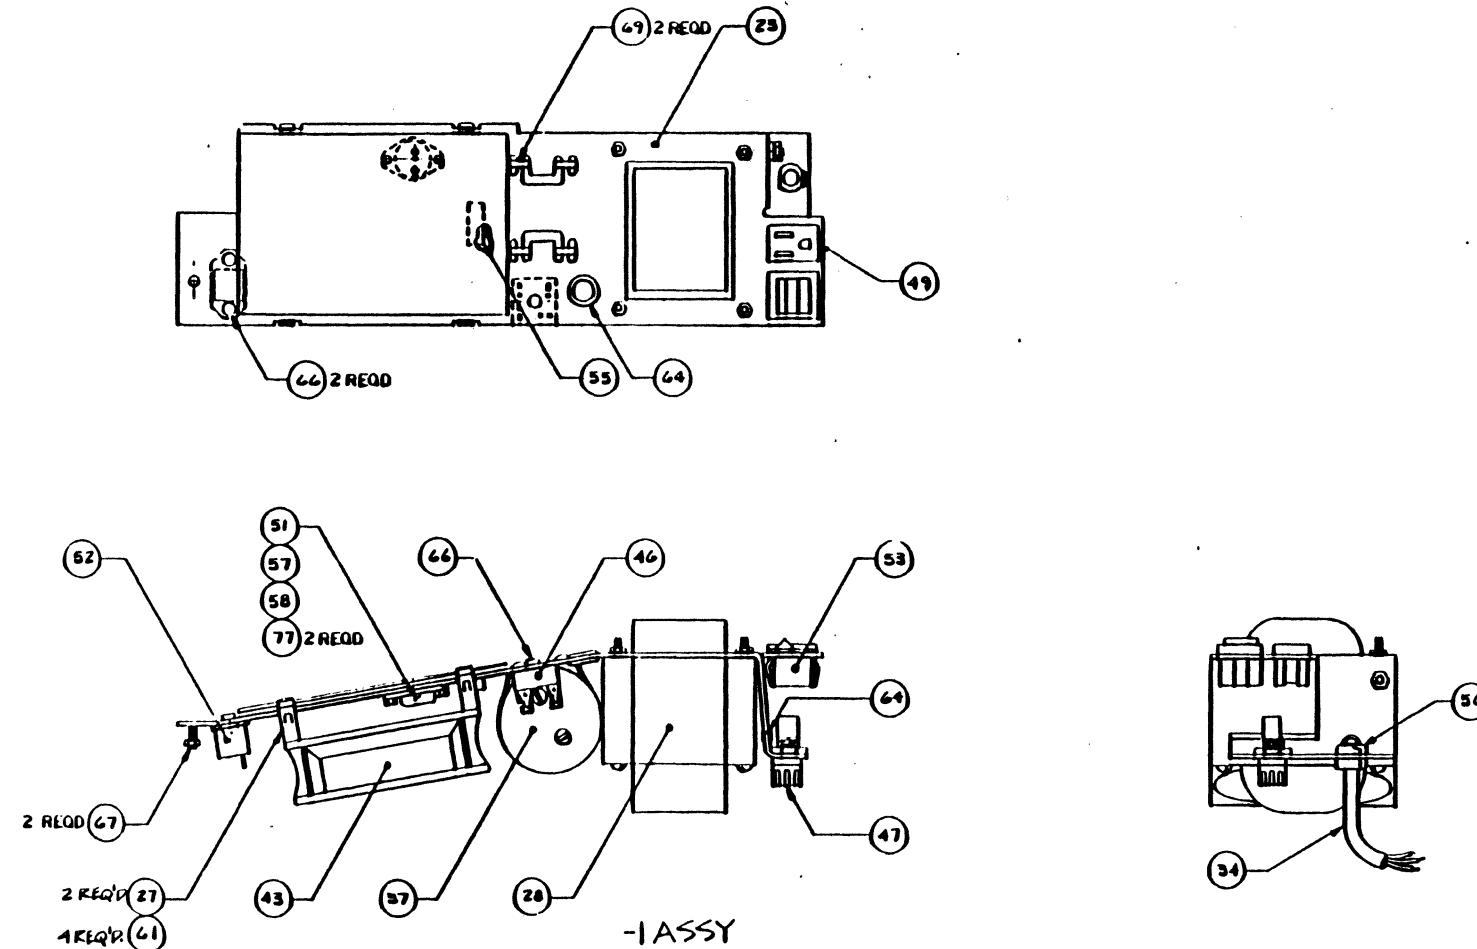

2. FOR SCHEMATIC SEE SH 4

1. FOR WIRING SEE 129732-1.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY LEGEND
EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE
DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR SIEGEL
INC. AND ARE HELD IN STRICT CONFIDENCE, AND SHALL NOT BE
REPRODUCED, COPIED, OR USED FOR THE MANUFACTURE OR SALE OF

SIZE	FSCM NO.	DWG NO.	LTR
C	98438	129730	A

EXCHT 1 OF 4

4

3

2

1

REVISIONS
DESCRIPTION

DATE APPROVED

D

D

C


C

B

B

A

A

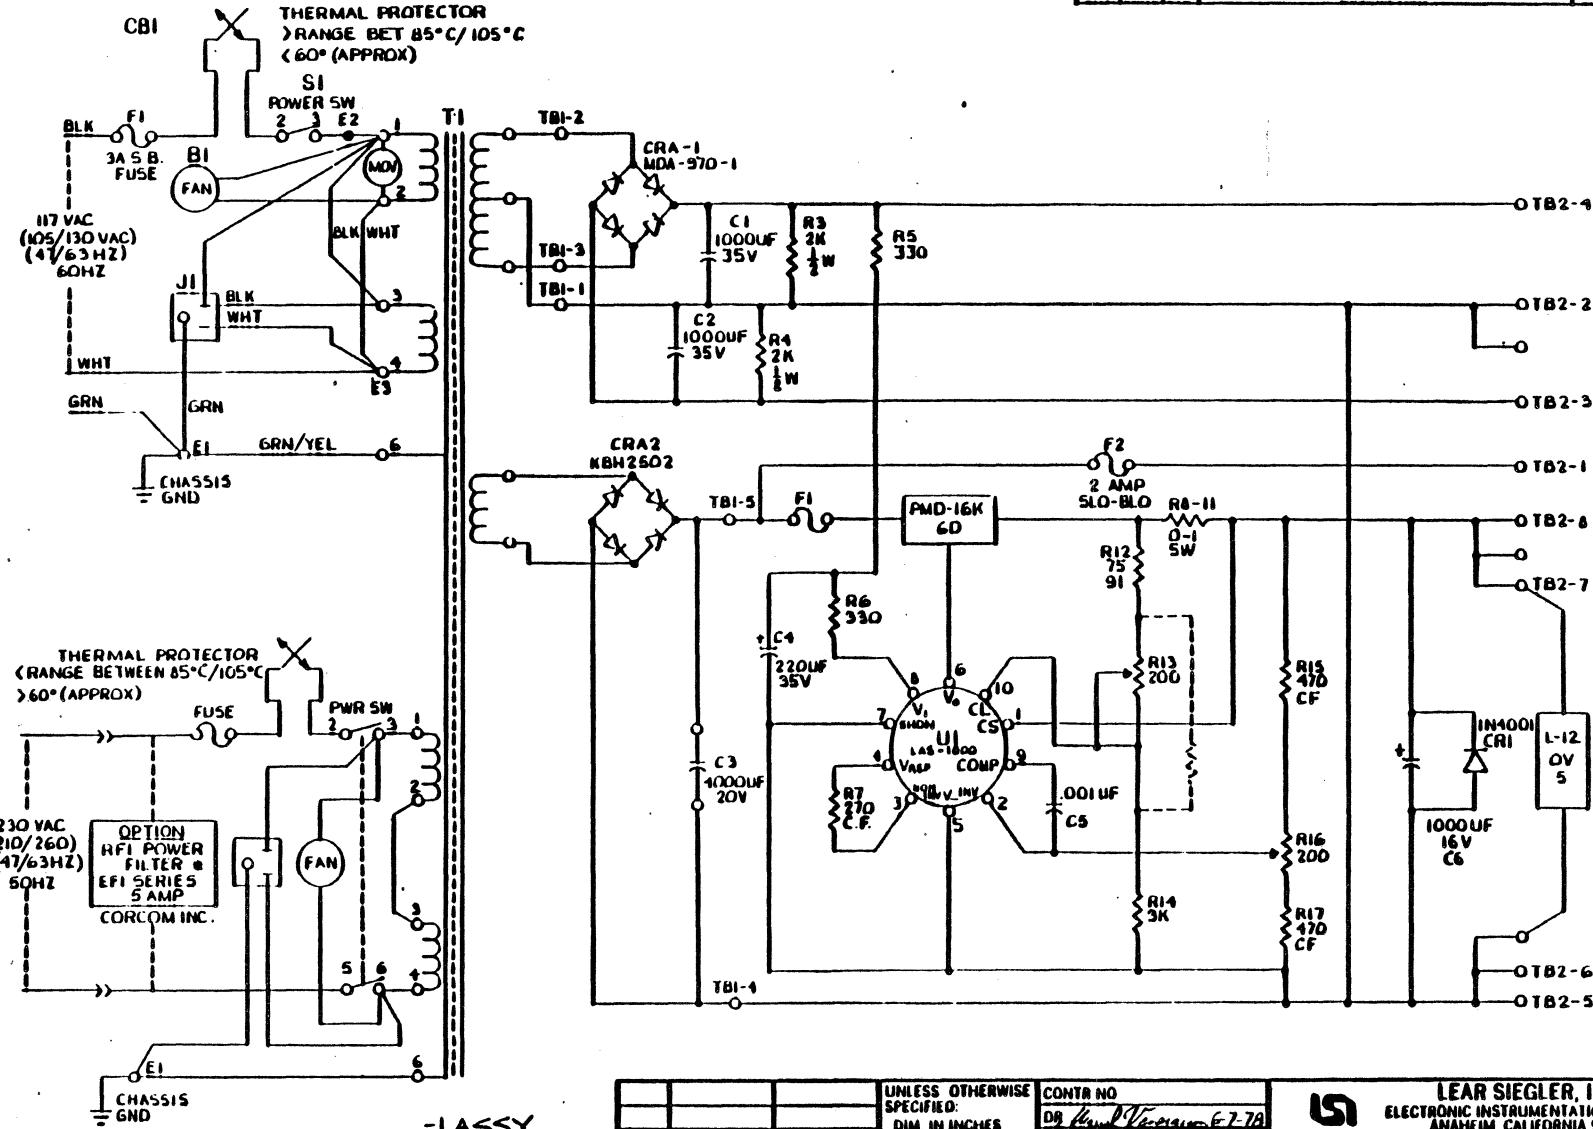

DASH NO	NEXT ASSY	USED ON APPLICATION	UNLESS OTHERWISE SPECIFIED: DIM IN INCHES TOLERANCES: ± 0.01 ± 0.03 ± 0.06 ± 0.08	CONTR NO DR. Liquid Vacuum E-7-70	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIVISION ANAHEIM, CALIFORNIA 92803
				CHK	SCHEM PWR SUPPLY
				DSGN	VDP 400
				ENGR	
				PROJ	
				REL	
				APPO	
				SIZE	FSM NO.
				DWG NO.	129730
				LTR	A

* UL AND CSA RECOGNIZED CONSTRUCTION IS IN ACCORDANCE WITH IEC, HSI AND CSA STANDARDS.

EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS ARE THE PROPERTY OF LEAR SIEGLER, INC.

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
C		REVISED & REDRAWN, INCORP. ADDN = 16. T.S. 7-3-79	7-7-79 8-8-79	J. Garoutte A. Hydman

NOTES:

- △ UL RECOGNIZED COMPONENT
- △ MAY BE PURCHASED WITH 12" SELF LEADS.
- △ NATURAL COLOR OPTIONAL.
- △ MODIFY-TRIM CENTER DIVIDER TO 1/8 HIGH MAX.
- △ HEX SCREW 4-40 x 1/2 & EXTERNAL TOOTH LOCK WASHER MAY BE USED IN PLACE OF SEMS HARDWARE.
- △ IF HARDWARE NOT USED RETURN TO STOCKROOM
- △ SCC-1 TOOL REQUIRED FOR INSTALLATION.
- △ INSTALL ON MOUNTING PLATE 129734.
- 9. FOR SCHEMATIC OF -1 THRU -41 SEE SHEET 2 OF 129730.
- FOR SCHEMATIC OF -1 SEE SHEET 4 OF 129730

-41	129840	DL129700
-31	129840	
-21	129540	
-21	129790	
-21	129840	
-11	129790	
-11	129702	
-1	129702-1	DL129700
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES X ± .1 XX ± .03 XXX ± .010 ANGLES ± 0.5° MACH. FIN. J	DR Balfour 3-4-77	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF. POWER SUPPLY ASSY VDP 400	SIZE A CODE IDENT 98438 SCALE —	PL 129730 REV C SHEET 1 OF 5
	CHK			
	DSGN			
	ENGR			
	PROJ THOMSON 8/1/77			
	REL W. TURNER 8/1/77			
	CUSTOMER APPD			

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
1	31	✓	-11	PWR. SUPPLY ASSY. 115V	(REPLACED BY -11)
2		✓	-11	" " " "	VDP400 & VDP410
3	✓		-21	" " " " 230V	VDP400 & ADM42 VDP410 & ADM42
4	✓		-31	" " " " 115V	ADM 42
5	✓		-41	" " " " 230V	REPLACES -21
6					
7					
8	1		129731-1	PCB ASSY. - PWR SUPPLY	
9	1		129731-11	" " " " "	
10	1		129731-21	" " " " "	
11					
12	1		129732-1	WIRING LIST	
13	1		" -11	" "	
14	1		" -21	" "	
15	1		-31	" "	
16					
17	1		129733-1	WIRE ASSY.	
18	1	1	" -11	" "	
19	1	1	" -21	" "	
20	1	1	" -31	" "	
21					
22					
23	1		129734-3	MOUNTING PLATE	
24	1	1	" -5	" "	
25	1	1	" -7	" "	

A
SIZE
FSCM NO.
98438

PL/129730
SH
N

REV C

FIND NO.	QTY REQD				STOCK NO. OR NOTES	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-31	21	41	-11	-1			
26		/				129734-9	MOUNTING PLATE	
27	2	2	2	2		129735-3	BRACKET, FAN	
28			1	T1	129738-3	TRANSFORMER		
29	1	1	1	T1	" -5	"		
30								
31	1	1	1	VRI	128348-1512	VOLTAGE REG (+12V)	CASS 12	
32	1	1	1	VR2	" -1812	" " (-12V)	CASS 812	
33								
34	1	1	1		129455-03	PWR. CORD		
35	1				" -13	" "		
36								
37			1	C1	129468-403	CAP. 40,000 UF 20 VOLTS		
38	1	1	1	C1	" -603	CAP. 60,000 UF 20 VOLTS		
39	1			EAC-301		CONNECTOR	SWITCH CRAFT	
40	1	1	1	CR2	PTMR 35K-100	RECTIFIER		
41			1	CR2	KBH 2502	BRIDGE	GI	
42								
43		1	1	B1	4600X	FAN	PANTHER 	
44		1		B1	4650X	"	" 	
45	1			B1	3-15-2471	"	HOWARD 	
46								
47	1	1	1	I	XFI 342838L	FUSEHOLDER	LITTLE FUSE 	
48								
49	1	1	1	I	J1 1370-W	RCPT	LEVITON	
50	1	1			J1 SIG-3303-SCL.093THA	SOCKET		BEAU PRODUCTS

SIZE
FSCM NO.
98438

SH
W
PC
129730

REV

FIND NO.	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-31	2V 4A	-11	-1				
51	1	1	1	1	Q1	PMOD16K60	TRANSISTOR, DARLINGTON	LAMMADA
52				1	CRI	L120V5	OVERTVOLGE PROTECTOR, VARISTOR	"
53	1	1	1	1	S1	TGCO911-TW-B	SWITCH, ROCKER (IMPRINTED ON-OFF)	CARLING ▲
54								
55	1	1	1	1	S2	MODEL F 100 °C	THERMAL PROTECTOR	PORTAGE ▲
56	1	1	1			SR-GP3-4	STRAIN RELIEF	HEYCO
57	3	3	3	1		TM-1	INSULATOR	WECKESSER A
58	4	4	4	4		60-11-9511-1674	INSULATOR, REINFORCED SILICONE. CHROMERICS	
59	2	2	2			5609-11	SHOULDER WASHER	SEASTROM
60								
61	4	4	4	4	824001	RDGGP85LF	POP RIVET	USITT
62								
63	1	1	1	1		NMC557-8C-BLACK	GROMMET, SPLIT ▲	NYCON IT HOLDING
64	H/K	H/K	A/R	A/R		PG5-2	GROMMET	RICHCO
65								
66			3	822612		CL-632-Z	INSERT	PEIIT
67	2	2	2	2	822102	FH-032-10	STUD	PEIIT ▲
68								
69	2	2	2	2	830017	PLT3I	CABLE TIE	PANDUIT
70	1	1	1		830003	PLT1M	TIE WRAP	PANDUIT
71								
72	4	4	4	4	822802	8-32	NUT, HEX, STL, CAD PLATE	
73		2			822601	#6	NUT	
74	3	3	3	3	822001	10-32	NUT, N.P. BRASS	
75								

A
SIZE
98438
FSCM NO.
PC 129750
SH
REV C

FIND NO	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	31	21	41	11				
76	4	4	4	3	821418	4-40 x 3/8	SCREW, PAN HD.	
77	8	8	8	2	821409	4-40 x 1/2	SCREW, SEMI'S HEX HD.	△
78		2			821621	6-32 x 1/2	SCREW	
79	1	1	1			4-40 x 1/4	SCREW SEMI'S HEX HD.	
80								
81								
82								
83		2			823603	#6	WASHER, FLAT	
84		2			823606	#6	WASHER, INT STAR LOCK	
85	2	2	2	2	823001	#10	WASHER, FLAT	
86	3	3	3	3	823004	#10	WASHER, LOCK EXT. TOOTH	
87	4	4	4			#8	WASHER, LOCK, EXT. TOOTH, STL. CRD.	△
88	4	4	4		823803	#8	WASHER, FLAT, STL. CRD.	△
89								
90								
91								
92								
93								
94								
95								
96								
97								
98								
99								
100								

A
SIZE
FSCM NO.
98438

P2 / 29730
SH 5

REV C

4

3

2

1

D

D

C


C

B

B

A

A

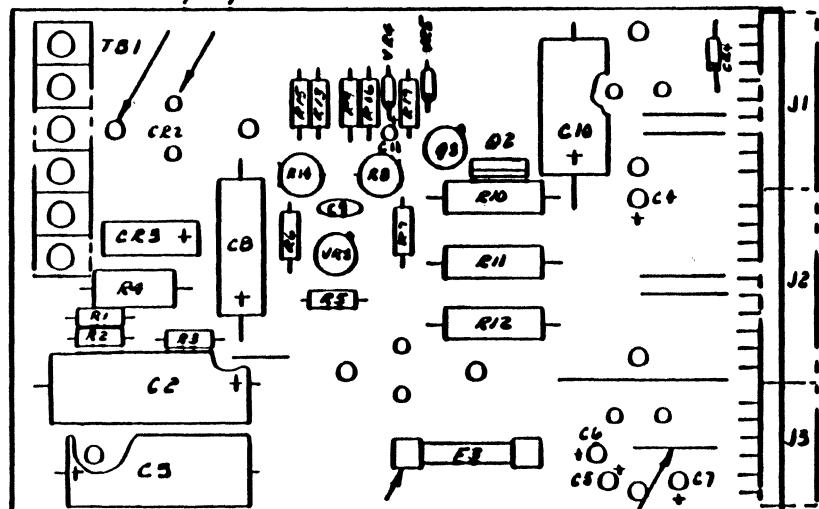129731-11 ASSY

30 2 REQD

36 TYP

NOTES:
1. FOR SCHEMATIC SEE DWG 129730, SHZ.

SEE SEPARATE PARTS LIST PL 129731

DASH NO.	NEXT ASSY	USED ON
NO.	APPLICATION	
-11	129730-4	DL129706
-1	129730-1	DL129706

UNLESS
OTHERWISE
SPECIFIED
DIM. IN INCHES
TOLERANCES
 $\pm .1$
 $\pm .03$
 $\pm .010$
ANGLES $\pm 0.5^\circ$
MACH. FIN.

CONTR. NO.
DR W. KELLY 6-29-77
CHK
DSGN
ENGR
PROJ.DN THOMSON 8-1-77
REL W. TURNER 8-1-77
APPD
APPD


LEAR SIEGLER, INC.
ELECTRONIC INSTRUMENTATION DIVISION
ANAHEIM, CALIFORNIA 92803
P.C. BOARD ASSY-
POWER SUPPLY
SIZE CODE IDENT NO. DWG NO.
B 98438 129731 LTR A
SCALE SHEET 1 OF 2

4

3

2

1

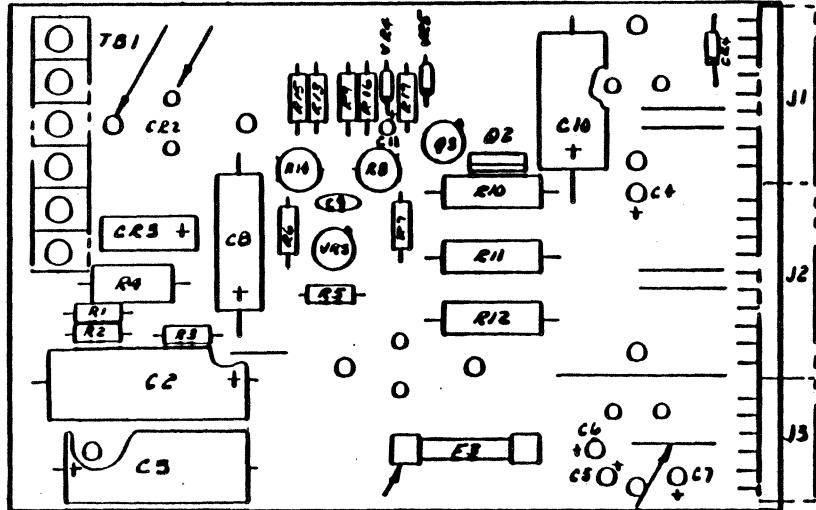

129731-11 ASSY

(30) 2 READ

-11	129730-4	DL129706
-1	129730-1	DL129706
DASH NO.	NEXT ASSY	USED ON
		APPLICATION

3

4

3

2

1

D

三

6

10

B

1

A

1

3 
INSTALL FROM FARSIDE
UNINSTALL FROM FARSIDE

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE APPROVED
	A	CREATED - 11 ASSY - 9 REVISIONS REDRAWN WAS C-5126 D. BALEFOUR	1/11/11 4/1/11 N. ZARIN

NOTE:
1. FOR SCHEMATIC SEE DWG 129730, SN2

SEE SEPARATE PARTS LIST PL129731

UNLESS OTHERWISE SPECIFIED	CONTR NO. DR W. KELLY 6-29-72	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIVISION ANAHEIM, CALIFORNIA 92803		
DIM. IN INCHES	CHK			
TOLERANCES	DSGN			
$\pm .1$	ENGR			
$\pm .03$	PROJ M THOMSON 8-1-77			
$\pm .010$	REL W. TURNER 8-1-77			
ANGLES $\pm 0.5^\circ$	APPD			
MACH. FIN.	APPD			
P.C. BOARD ASSY- POWER SUPPLY				
		SIZE	CODE IDENT NO.	DWG NO.
		B	98438	129731
		SCALE		SHEET / OF 8

PARTS LIST		CONTR NO.	LEAR SIEGLER, INC.		98438	PL 129731	A															
MODEL ADM-4		JOB NO. DL 129700	ELECTRONIC INSTRUMENTATION DIVISION ANAHEIM CALIFORNIA		CODE IDENT	SHEET 1 OF 2 SHEETS	REV															
PLANNING APPLICATION		PREPARED <u>BALFOUR</u> 3-4-77		RELEASED <u>X Turner</u>	ITEM NOMENCLATURE																	
PLANNER	REQUIRED TOTAL QTY. THIS	PROD. AREA	SCHEDULES	CHECKED <u>D. M. Johnson</u> 3/15/78	DATE <u>3/15/78</u>	PWB ASSY- PWR SUPPLY																
END ITEM	DELIVER	ISSUE DATE	SCHEDULED	APPROVED <u>D. M. Johnson</u> 3/15/78																		
ISSUE DATE:	BUY	FULL	SCHEDULED	COMP. DATE																		
ASSY ITEM	NEXT ASSEMBLY	PLANNING NOTES:		ENGINEERING NOTES:	LTR	REVISION DESCRIPTION	DATE	APPROVED														
-1	129730-1	<small>PROPRIETARY LOGO</small> <small>EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT THESE DRAWINGS ARE THE PROPERTY OF LEAR SIEGLER, INC. AND ARE NOT TO BE COPIED OR REPRODUCED, IN WHOLE OR IN PART, WITHOUT THE EXPRESS WRITTEN CONSENT OF LEAR SIEGLER, INC. LEAR SIEGLER, INC. AND ITS SUBSIDIARIES SHALL NOT BE RESPONSIBLE FOR LOSS OR DAMAGE RESULTING FROM USE OF THESE DRAWINGS FOR MANUFACTURE OR SALE OF THE APPARATUS WITHOUT THEIR EXPRESSEN CONSENT.</small>			A	INC ADM 152 - ADDED FNS BALFOUR 2-28-78	3/15/78	<u>D. M. Johnson</u> <u>X. Turner</u> 3/15/78														
RECORD OF REVISION STATUS OF EACH SHEET																						
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	
FIND NO.	QTY REQD	CODE IDENT	PART OR IDENTIFYING NO.		NOMENCLATURE OR DESCRIPTION				NOTE	REF DES	PLANNING											
1	/	/	129731-1		PWB ASSY- PWR SUPPLY						P	M	C	TOTAL REQ	STOCK ISSUED	SHORT QTY	UNIT COST	TOTAL COST	G	B	COST BASE	I
2	/	/	129781-11		PWB ASSY- PWR SUPPLY																	
3	/	/	129731-5		PWB - PWR SUPPLY																	
4	/	/	129731-7		PWB - PWR SUPPLY																	
5	/	/	129469-168		CAP. ELECT. 1000UF 35V						C2											
6	/2	/2	129329-108		CAP. ELECT. 1000UF 85V						C3											
7	/1	/1	129469-227		CAP. ELECT 820UF 35V						C8											
8	/1	/1	129469-108		CAP. ELECT 1000UF 16V						C10											
9	/1	/1	129758-102		CAP. POLYESTER .001UF 100V						C9											
10	/1	/1	(129469-227)		DIODE						C4											
11	/1	(129469-227)	129469-108		BRIDGE						C4											
12	4		129518-225		CAP. SOLID TAN. 2.2UF 35V						C4,5,6,7											
13	/1	LITTELFUSE 313002			FUSE, 2A SLO-BLO						F3											

PARTS LIST

LEAR SIEGLER, INC.
ELECTRONIC INSTRUMENTATION DIVISION
ANAHEIM CALIFORNIA

PL 129731

REV
LTR

REVISIONS					
LTR	SHEET	DESCRIPTION	DATE	APPROVED	
A		REVISED & REDRAWN -11 REPLACES -1 W. Kelly 10/18/77	10/18/77	R.C. McAllister <i>SL</i> W. Kelly	
B		INC ADGN 1 SHT 2 & 3 REDRAWN ADDED SHT 4 W. Kelly 11-27-78	11-27-78	W. Kelly H. Turner	
C		INC ADGN 2,3 ADDED SHT. 5 (-31 ASSY) T.E.S. 7-1-79	7-2-79	H. Turner R. Hydman	
D		INC ADGN 4,5 & DCN 955 CHANGED QTY FOR F/N 7 FROM 4 TO 2 BAB 6-11-80	6-12-80	W. Kelly R. Hydman	

NOTES:

- 1. CERTIFY AS UL RECOGNIZED COMPONENT.
- 2. FOR SCHEMATIC SEE DWG. 129730 SH. 2 & 4

-31	129730	DL129700
-21	129730	DL129700
-11	129730	DL129700
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $x \pm .1$ $.xx \pm .03$ $xxx \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. <i>J</i>	DR	W. KELLY 3/29/77	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF. WIRES LIST - POWER SUPPLY
	CHK		
	DSGN		
	ENGR		
	PROJD.	H. THOMSON 8/1/77	
	REL	W. TURNER 8/1/77	
	CUSTOMER APPD		
	SIZE	CODE IDENT	
	A	98438	
	SCALE	129732	
	REV D		
	SHEET 1 OF 5		

FIND NO.	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-41	-31	-21	-11				
1								
2	6	8	6		835008	2-350803-2	TAB, .250, INS 18-22	AMP UL LISTED
3	3	3	1		835050	3-31889-3	TERM LUG, #10 RING, 18-22	AMP "
4	3	3	3		835004	52409	TERM LUG, #6 SPADE, 18-22	AMP "
5	4	3	3		835018	31900	TERM LUG, #10 RING 14-16	AMP "
6	4	4	4		835019	52420	TERM LUG, #6 SPADE 14-16	AMP "
7	2	2	2		835033	324067	SPLICE	AMP "
8	1	1	1			C2055-003-BL	FAN CORD	PACIFIC ELECTRIC CORD
9	A/R	A/R	A/R			18 AWG, 16x30, GRN/YEL	WIRE, UL STYLE 1015, PVC	UL LISTED
10								"
11	A/R	A/R	A/R			14 AWG, 41x30, YEL		"
12						14 AWG, 41x30, YEL/BLU		"
13						14 AWG, 41x30, ORN		"
14						22 AWG, 7x30, BLK		"
15						22 AWG, 7x30, WHT		"
16						22 AWG, 7x30, RED		"
17						22 AWG, 7x30, RED/YEL		"
18	A/R	A/R	A/R			18 AWG, 16x30, BLK		"
19								
20	A/R	A/R	A/R			SLEEVING, CLEAR 5 AWG		UL LISTED
21	A/R	A/R	A/R			SLEEVING, CLEAR 0 AWG		"
22								
23								
24								

A
SIZE

98438
FSCM NO.

129732
SH

D
REV

LINE NO.	TERMINATION INFORMATION				WIRE INFORMATION					
	FROM		TO		IDENTIFICATION	LENGTH	ROUTING	FIND NO. / NOTES		
	REF DES	PIN	REF DES	PIN				WIRE	FROM END	TO END
1	E4	71	1	BLK	22	5		14	7	' ⁰ ₄ 20
2	E4	51	3	BLK	22	7 ¹ ₂		14	2 ⁰ ₄	2
3	E4	J1	BR	BLK	22	5		14	3 ⁰ ₄	2
4	E4	FAN CORD			-	17		8	4 ⁰ ₄	
5	E3	FAN CORD			-	17		-	7	1 ⁰ ₄
6	E3	T1	6	WHT	22	5		15	2 ⁰ ₄	△ 20
7	E3	S1	6	WHT	22	5 ¹ ₂		15	3 ⁰ ₄	2
8	E3	J1	N1	WHT	22	5		15	4 ⁰ ₄	2
9	S1	2	CB1(S2)		BLK	18	12	SELF LEAD		2
10	F1	CB1(S2)			BLK	18	11	SELF LEAD		2
11	J1 GRN WIRE	E1 CHASSIS GND			-	-		SELF LEAD		
12	POWER CARD	F1	LINE	BLK						
13	"	S1	5	WHT				-		
14	"	E1 CHASSIS GND		GRN				-		
15	T1	7	E1 CHASSIS GND	GRN/YEL	11	6 ¹ ₂		9	△ 20	3
16	T1	1	T1	4	BLK	22	3	14	△	△ 20
17	T1	3	T1	6	WHT	22	3	15	△ 20	△
18										
19	T1	8	TB1	1	RED	22	9 ¹ ₂	16	△ 20	4
20	T1	9	TB1	6	RED/YEL	22	8 ¹ ₂	17	△ 20	4
21	T1	10	TB1	2	RED	22	9	16	△ 20	4
22	T1	11	TB1	3	YEL	14	8	11	△ 21	6
23	T1	12	C1	(-)	YEL/BLU	14	5 ¹ ₂	12	△ 21	5
24	T1	13	TB1	5	YEL	14	7 ¹ ₂	11	△ 21	6
25	C1	(-)	TB1	6	YEL/BLU	14	4 ¹ ₂	12	5	6
26	C1	(+)	TB1	4	ORN	14	6 ³ ₄	13	5	6
27										
28										
29										
30										

P/N 101-10101


 SOLDER
 STRIP 1/2 INCH
 STRIP 5/8 INCH

STD 115 V INPUT -11 ASSY

SIZE

CODE IDENT

A

98438

129732

REV D

SCALE

SHEET 3

LINE NO.	TERMINATION INFORMATION				WIRE INFORMATION					
	FROM		TO		IDENTIFICATION	LENGTH	ROUTING	FIND NO. / NOTES		
	REF DES	PIN	REF DES	PIN				WIRE	FROM END	TO END
1	E4		T1	1	BLK	22	5	14	7 1/4	△ 20
2	E4		S1	3	BLK	22	7 1/4	14	2 1/4	2
3	E4		J1	BR	BLK	22	5	14	3 1/4	2
4	E4		FAN CORD	1	(18)	17		8	4 1/4	
5	E3		FAN CORD	2	(18)	17		-	7 1/4	
6	E3		T1	6	WHT	22	5	15	2 1/4	△ 20
7	E3		S1	6	WHT	22	5 1/2	15	3 1/4	2
8	E3		J1	N	WHT	22	5	15	4 1/4	2
9	S1	2	CB1(S2)		BLK	18	12	SELF LEAD	2	
10	F1	4A0	CB1(S2)		BLK	18	11	SELF LEAD	2	
11	J1	GEN WIRE	E1 CHASSIS				—	SELF LEAD		
12	J2	L	F1	LINE	BLK	22	6 1/2	14	△	2
13	J2	N	S1	5	WHT	22	6 1/2	15	△	2
14	J2	±	E	E1 CHASSIS GRD	GRN/YEL 18	4		9	△	3
15	T1	7	E1 CHASSIS GRD		GRN/YEL 18	6 1/2		9	△ 20	3
16	T1	3	T1	4	BLK	22	3	14	△ 20	△ 20
17										
18										
19	T1	8	TB1	1	RED	22	9 1/2	16	△ 20	4
20	T1	9	TB1	6	RED/YEL	22	8 1/2	17	△ 20	4
21	T1	10	TB1	2	RED	22	9	16	△ 20	4
22	T1	11	TB1	3	YEL	14	8	11	△ 21 4	6
23	T1	12	C1	(-)	YEL/BLU	14	5 1/2	12	△ 21 4	5
24	T1	13	TB1	5	YEL	14	7 1/2	11	△ 21	6
25	C1	(-)	TB1	6	YEL/BLU	14	4 1/2	12	5	6
26	C1	(+)	TB1	4	ORN	14	6 3/4	13	5	6
27										
28										
29										
30										

△ SOLDER △ STRIP 5/8 INCH
 △ ON 410 DO NOT INSTALL
 △ STRIP 1/2 INCH
 230 V INPUT -21 ASSY

SIZE CODE IDENT —
A **98438** **129732**
 SCALE —
 SHEET **4**

LINE NO.	TERMINATION INFORMATION				WIRE INFORMATION					
	FROM		TO		IDENTIFICATION	LENGTH INCHES	ROUTING	FIND NO. / NOTES		
	REF DES	PIN	REF DES	PIN				WIRE	FROM END	TO END
1	E4		T1	1	BLK	22	5	14	7	1 OF 4 ▲ 20
2	E4		S1	3	BLK	22	7 1/4	14	3	OF 4 Z
3	E4	*J1	3	BLK	22	5	▲	14	3	OF 4 ▲
4	E4	FAN CORD	1		18	17		8		1 OF 4
5	E3	FAN CORD	2		18	17		-	7	1 OF 4
6	E3	T1	6	WHT	22	5		15	3	OF 4 ▲ 20
7	E3	S1	6	WHT	22	5 1/2		15	3	OF 4 Z
8	E3	*J1	2	WHT	22	5	▲	15	1	OF 4 ▲
9	S1	2	CB1(S2)		BLK	22	12		SELF LEAD	Z
10	F1	4	CB1(S2)		BLK	22	11		SELF LEAD	Z
11	* J1	1	EI GND CHASSIS		GRN/YEL	18	4	▲	9	▲ 3
12	J2	L	F1	4	BLK	22	6 1/2	14	▲	2
13	J2	N	S1	5	WHT	22	6 1/2	15	▲	2
14	J2	E	EI GND CHASSIS		GRN/YEL	18	4	9	▲	3
15	T1	7	EI GND CHASSIS		GRN/YEL	18	6 1/2	9	▲ 20	3
16	T1	3	T1	4	BLK	22	3	14	▲ 20	▲ 20
17										
18										
19	T1	8	TBI	1	RED	22	9 1/2	16	▲ 20	4
20	T1	9	TBI	6	RED/YEL	22	8 1/2	17	▲ 20	4
21	T1	10	TBI	2	RED	22	9	16	▲ 20	4
22	T1	11	TBI	3	YEL	14	8	11	▲ 21	6
23	T1	12	C1	(-)	YEL/BLU	14	5 1/4	12	▲ 21	5
24	T1	13	TBI	5	YEL	14	8	11	▲ 21	6
25	C1	(-)	TBI	6	YEL/BLU	14	4 1/2	12	5	6
26	C1	(+)	TBI	4	ORN	14	6 3/4	13	5	6
27										
28										
29										
30	* IDENTICAL TO -21 ASSY EXCEPT FOR WIRES TO & FROM J1.									

▲ SOLDER

▲ ON 410 DO NOT INSTALL
230V INPUT - 31 ASSY

SIZE CODE IDENT
A 98438

129732

REV D

SCALE

SHEET

5

PERSONALITY PROM PROGRAM

PART NO. 129

Specification Form
ADM 42

753-008000-1

CUSTOMER STD ADM 42

129753-08

S.O. #

DATE

POS	SYM	PURPOSE	BIT SPECIFICATION								STANDARD
			7	6	5	4	3	2	1	0	
0	\$1B	Escape Lead in Character	0	0	0	1	1	0	1	1	ESC
1	\$0D	End of Block Transmit Character	0	0	0	0	1	1	0	1	CR
2	\$0C	2nd End of Block Transmit Character	0	0	0	0	0	0	0	0	NUL
3	\$1F	New Line Send Character	0	0	0	1	1	1	1	1	US
4	\$00	2nd New Line Send Character	0	0	0	0	0	0	0	0	NUL
5	\$1C	Field Separator	0	0	0	1	1	1	0	0	FS
6	\$01	Function Lead in Xmit	0	0	0	0	0	0	0	1	SCH
7	\$00	Parity Error Replacement Character	0	0	0	0	0	0	0	0	NUL
8	\$20	Clear/Erase Replacement Character	0	0	0	1	0	0	0	0	SPACE
9	\$00	Start Delay	0	0	0	0	0	0	0	0	0
10	\$00	Reserved	0	0	0	0	0	0	0	0	0
11	\$00	Poll Varients	0	0	0	0	0	0	0	0	0
12	\$00	Trans # Limit	0	0	0	0	0	0	0	0	0
13	\$00	Default Tab Mode	0	0	0	0	0	0	0	0	0
14	\$08	Keyboard Lockouts	0	0	0	0	1	0	0	0	0
15	\$02	Message Attribute	0	0	0	0	0	0	1	0	34
16		Reserved									
17											
18											
19											
20											
21											
22											
23											
24											
25											
26											
27											
28											
29											
30	\$CO	Identification Code	1	1	0	0	0	0	0	0	
31	\$46	Identification Code	0	1	0	0	0	1	1	0	

REVISIONS					
LTR	SHEET	DESCRIPTION	DATE	APPROVED	
A	2	FN 6 WAS QTY 1, 10-01-1030 CONN, 3 CKT. MOLEX; FN 7 QTY WAS 3, FN 8 QTY WAS 3. FN 13 WAS 10-19-1031 WAFER QTY 1. FN 16 PN WAS 10-01-1044. (FN 6, REVISED -1 & -11 TERMINATIONS ADD AW) BALFOUR 2-23-78	3/3/78	J. Turner	
	4		3/10/78	H. Turner	
B	3,4	ADDED -41 INC ADCN 1 W. Kelly 7-27-79	8-8-79	W. Kelly	
			8-8-79	B. Johnson	
C	2,3	ADD LSI PN PER DCN 905 DEF 7 1/2/80	2-5-79 3/14/80	R. Clark B. Johnson	

NOTE:

1. UL RECOGNIZED COMPONENT.

129701-11		
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. <input checked="" type="checkbox"/>	DR	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
	CHK	(ISI)		
	DSGN BALFOUR 12-15-77			
	ENGR	WIRES LIST - MONITOR		
	PROJ. MGR. J. Turner	ASSY - BALL BROS		
	REL. H. Turner 13/3/78	SIZE	CODE IDENT	REV
	CUSTOMER APPD	A	98438	C
		SCALE		SHEET 1 OF 4

	QTY REQD			LIST OF MATERIALS OR PARTS LIST			
	-21	-11	-1	FIND NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL OR CODE IDENT
			✓	1	129777-1	CONTRAST HARNESS ASSY	
		✓		2	129777-11	BRIGHTNESS HARNESS ASSY	
	✓			3	129777-21	COAX CABLE ASSY	
		1		4	801024	RES. VAR 500-2	
		1		5	801026	RES VAR 100K	
			6				
	3	4	7	809120	SOLDER SPRING		
	2	4	8	809087	CONTACT		
		1		9	809025	CONN HOUSING	
		1		10	809027	KEY	
		3		11	809062	CONTACT	
	AR	AR	AR	12	22AWG 7X30	WIRE, UL STYLE 10/15 PVC, COLOR AS INDICATED	▲
				13			
	AR			14	812028	COAX, RG 59 B/U	
	1			15	809118	COAX CONN	
	1			16	809218	CONN. PKT	
	1			17	809121	TERMASHIELD	
	0	1		18	809122	INSULAT. M	

SCALE A
SIZE 1/2
CODE 9843
IDENT 08
1/29777

SHEET 2

QTY REQD			LIST OF MATERIALS OR PARTS LIST				
	-41	-31	FIND NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL OR CODE IDENT	SPECIFICATION
		✓	19	129777-31	PWR ADPTR ASSY		
	1	1	20	809125	CONN. RCPT		
	5	5	21	809038	CONTACT, SOCKET		
	1	1	22	809115	COUPLER, MALE		1
	1	1	23	809116	COUPLER, FEMALE		1
	1	1	24	835046	TERM. PIDS, RING #10		
	AR	AR	25	22AWG 7x30	WIRE, UL STYLE 1015 PVC COLOR AS INDICATED	1	
	AR	26	27	22AWG, 7x30	WIRE, UL STYLE 1061 PVC COLOR AS INDICATED	1	
	✓		129777-41	PWR ADPTR ASSY	230V		
		28					
		29					
		30					
		31					
		32					
		33					
		34					
		35					
		36					

SCALE
SIZE
A
CODE IDENT
984308

SHEET 3

REV C

LINE NO.	TERMINATION INFORMATION						WIRE INFORMATION						ROUTING	LGH					
	CABLE NO.	WIRE NO. OR COLOR	FROM		TO		FIND NO./NOTES				WIRE OR CABLE								
			REF DES	PIN	REF DES	PIN	FROM END	TO END	CONN	TERMINATION	CONN	TERMINATION							
1	-1	YEL	R1	1	P201	1	4	7	2	8	12	12							
2		YEL	R1	2	P103	3													
3		WHT	R1	3	P201	6													
4		WHT	R1	3	P103	1													
5	-11	RED	R2	1	P101	3	5	7	11	12	12	12							
6		BRN	R2	2	P101	4													
7		YEL	R2	3	P101	2													
8																			
9	-21	COND	COND		P202	1	15	16	8	14	12	60	3						
10		WHT	SH		P202	3													
11																			
12	-31	BLK	XFI	END P-PWR	3	23	20	21	26	26	25								
13		BLU	XFI	END P-PWR	8														
14		WHT	PWR CO	WHT P-PWR	1		22												
15		YEL	PWR CO	WHT P-PWR	6														
16		GRN	E4	P-PWR	5														
17																			
18	-41	BLK	XFI	END P-PWR	3		20	21	25	25	25								
19		WHT	P-PWR	8	P-PWR	1													
20		YEL	PWR CO	WHT P-PWR	6														
21		GRN	E4	P-PWR	5														
22																			
23																			
24																			
25																			

CODE NOTES: **2** REMOVE EXISTING WHITE & YELLOW WIRES FROM P201, 1E6 AND P103, 1E3.

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		RELEASE PER DCN 1292	9-17-81	J. L. Linn
B		INCORP DCN #1663	12-17-81	L. L. Linn
C		INCORP DCN #1900	3/1/81	E. J. Johnson
D		INCORP DCN# 2767	ESL 9-3-81	9-4-81 J. L. Linn 9-10-81 O. Mullatt

TABLE OF CONTENTS

PARA	DESCRIPTION	SHEET
1.0	SCOPE	2
2.0	APPLICABLE DOCUMENTS	2
3.0	INPUT REQUIREMENTS	2
4.0	DISPLAY CHARACTERISTICS	4
5.0	POWER REQUIREMENTS	6
6.0	MECHANICAL REQUIREMENTS	6
7.0	PROTECTIVE FINISH	6
8.0	U.L. APPROVAL	6
9.0	ENVIRONMENTAL REQUIREMENTS	7
10.0	HUMAN FACTORS REQUIREMENTS	7
11.0	WARRANTY	8
12.0	APPROVED VENDOR	8
13.0	REFERENCE DOCUMENTATION	8
14.0	CHANGES AFTER APPROVAL	8
	FIG. 1 CRT DISPLAY AREA	9
	FIG. 2 TIMING DIAGRAM	10
	FIG. 3 PHYSICAL OUTLINE	11
	FIG. 4 POWER CONNECTOR	12
	FIG. 5 CRT OUTLINE	13
	-1	129842 DL129700
	DASH NO.	NEXT ASSY
		USED ON

SPECIFICATION CONTROL DRAWINGS

APPLICATION

UNLESS OTHERWISE SPECIFIED	DR <i>L. L. Linn 8-7-80</i>	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
DIM. IN INCHES	CHK 			
TOLERANCES	DSGN <i>W. Keller 8-21-80</i>	MONITOR, 15 INCH		
X ± .1	ENGR <i>W. Keller 8-29-80</i>	ADM-42		
XX ± .03	PROJ			
XXX ± .010	REL <i>B. L. Linn 9/1/81</i>	SIZE	CODE IDENT	REV
ANGLES ± 0.5°	CUSTOMER APPD	A	98438	129779 D
MACH. FIN.		SCALE		SHEET 1 OF 16

1.0

DESCRIPTION

THIS 15 INCH MONITOR IS TO BE USED IN THE ADM-42 DATA DISPLAY TERMINAL. THE UNIT IS TO BE OPERATED IN THE DIRECT DRIVE OR SYNC MODE AND ON 115/230 VAC SUPPLIED BY LSI.

2.0

APPLICABLE DOCUMENTS

2.1

LSI DRAWINGS

129708 REV A CRT MOUNTING BRACKET
129794 MOUNTING PLATE SUBASSEMBLY
129798 ACCEPTANCE TEST PROCEDURE

3.0

INPUT REQUIREMENTS

3.1

INPUT CONNECTOR FOR DIRECT DRIVE

3.1.1

CONNECTOR PIN OUT

PIN 1 GROUND
2 BRIGHTNESS POT HIGH
3 BRIGHTNESS POT-LOW
4 BRIGHTNESS POT-ARM
5 UNUSED
6 HORIZONTAL SYNC
7 UNUSED
8 VIDEO SIGNAL
9 VERTICAL SYNC
10 GROUND

3.1.2

CONNECTOR IS OF THE PRINTED CIRCUIT EDGE TYPE WITH 0.156 INCH CENTER TO CENTER CONTACT SPACING AND 0.054 TO 0.071 INCH PRINTED CIRCUIT BOARD THICKNESS.

3.1.3

THE MATING CONNECTOR SHALL BE A SINGLE READOUT TYPE WITH 10 CONTACTS AND EQUIVALENT TO AN AMPHENOL TYPE 225-21031-101.

3.2

VIDEO INPUT CHARACTERISTICS

3.2.1

THE INPUT IMPEDANCE SHALL BE 2.0K OHM MINIMUM SHUNTED BY 60PF MAX. AT A DOT RATE OF 19.584 MHZ.

3.2.2

INPUT VIDEO SIGNAL LEVELS SHALL BE ZERO TO 0.04 VOLTS FOR BLACK. THE LEVEL SHALL BE ADJUSTABLE BUT NOT TO EXCEED 5.0 VOLTS FOR WHITE LEVEL.

SIZE A	CODE IDENT 98438	129779	RFV D
SCALE		SHEET 2	

- 3.2.3 VIDEO DOT TIMING
- 3.2.3.1 THE TIMING FOR A DOT, WHEN DISPLAYING STANDARD VIDEO, SHALL BE A 78.1 NSEC. WIDE POSITIVE PULSE WITH RISE AND FALL TIMES OF LESS THAN 10 NSEC.
- STANDARD VIDEO SHALL BE DEFINED AS DISPLAYING WHITE DOTS ON A BLACK BACKGROUND.
- 3.2.3.2 THE TIMING FOR A DOT, WHEN DISPLAYING REVERSE VIDEO, SHALL BE A 52.1 NSEC. WIDE NEGATIVE PULSE WITH RISE AND FALL TIMES OF LESS THAN 10 NSEC. REVERSE VIDEO SHALL BE DEFINED AS DISPLAYING BLACK DOTS ON A WHITE BACKGROUND.
- 3.3 VERTICAL SYNC INPUT CHARACTERISTICS.
- 3.3.1 THE INPUT LOADING SHALL BE COMPATIBLE TO 74 S SERIES TTL LOGIC CIRCUITS.
- 3.3.2 THE PULSE AMPLITUDE SHALL BE A LOW LEVEL OF 0.0 TO +0.4 VOLTS AND A HIGH LEVEL OF 4.0 ± 1.5 VOLTS.
- 3.3.3 THE PULSE RATE SHALL BE EITHER 50 OR 60 PULSES PER SECOND $\pm 1\%$.
- 3.3.4 THE PULSE RISE AND FALL TIMES SHALL BE EQUAL TO OR LESS THAN 100 NSEC.
- 3.3.5 THE VERTICAL CIRCUIT SHALL ACCEPT THE PULSE FORMAT GIVEN IN FIGURE NO. 2.
- 3.4 HORIZONTAL SYNC INPUT CHARACTERISTICS
- 3.4.1 THE INPUT LOADING SHALL BE COMPATIBLE TO 74 S SERIES TTL LOGIC CIRCUITS
- 3.4.2 THE PULSE AMPLITUDE SHALL BE A LOW LEVEL OF 0.0 TO +0.4 VOLTS AND A HIGH LEVEL OF 4.0 ± 1.5 VOLTS.
- 3.4.3 THE PULSE RATE SHALL BE 19.2K PER SECOND $\pm 1\%$.
- 3.4.4 THE PULSE RISE AND FALL TIME SHALL BE EQUAL TO OR LESS THAN 50 NSEC.
- 3.4.5 THE HORIZONTAL CIRCUITS SHALL ACCEPT THE PULSE FORMAT GIVEN IN FIGURE NO. 2.

SIZE A	CODE IDENT 98438	129779	RFV D
SCALE		SHEET 3	

- 4.0 DISPLAY CHARACTERISTICS
- 4.1 CATHODE RAY TUBE
- 4.1.1 THE CATHODE RAY TUBE (CRT) SHALL BE FIFTEEN INCH DIAGONAL MEASUREMENT. SEE FIGURE 5 FOR OUTLINE.
- 4.1.2 THE CRT SHALL BE SUPPLIED AS STANDARD WITH P-4 PHOSPHOR (129779-1) OR P-31 PHOSPHOR (129779-2).
- 4.1.3 THE CRT SHALL HAVE A DEFLECTION ANGLE OF 110°.
- 4.1.4 THE CRT SHALL BE SUPPLIED WITH A "T" BAND TO MEET U.L. IMPLOSION PROTECTION REQUIREMENTS.
- 4.1.5 THE CRT SHALL HAVE A DISPLAY AREA AS SHOWN IN FIGURE NO. 1.

SIZE A	CODE IDENT 98438	129779	REV D
SCALE		SHEET	4

4.2 CONTROLS

4.2.1 THE INTERNAL CONTROLS PROVIDED WITHIN THE UNIT SHALL CONSIST OF THE FOLLOWING:

- HEIGHT
- VERTICAL SYNC
- VERTICAL LINEARITY
- BRIGHTNESS
- HORIZONTAL CENTERING
- WIDTH
- FOCUS
- HORIZONTAL SYNC
- 24 VOLT ADJUST

4.2.2 THE CONTRAST CONTROL WILL BE MOUNTED OFF-UNIT AND SHALL BE A 100 OHM POT. THE VIDEO LEAD FROM CONTRAST CONTROL TO PIN 8 OF MONITOR BOARD EDGE CONNECTOR WILL BE APPROXIMATELY 17 INCHES LONG.

4.3 DISTORTION

4.3.1 CONDITIONS OF MEASUREMENT: UNLESS OTHERWISE STATED, ALL MEASUREMENTS SHALL BE MADE UNDER CONTROLLED LABORATORY CONDITIONS AFTER AN INITIAL WARM-UP PERIOD OF 5 TO 8 MINUTES. APPLIED POWER SHALL BE WITHIN THE LIMITS STATED IN PARAGRAPH 5.0. DATA SHALL BE PROVIDED FOR 25 ROWS OF 80 CHARACTER COLUMNS OF CHARACTERS. THE REMOTE BRIGHTNESS CONTROL SHALL BE ADJUSTED TO THE POINT JUST BEFORE THE RASTER IS VISIBLE. THE LIGHT OUTPUT OF THE MONITOR SHALL BE ADJUSTED TO 3.0 FOOT LAMBENTS \pm 0.5 FT. LAM. (MEASURED ON A WESTON 759 LIGHT METER OR EQUIVALENT) WITH THE CONTRAST CONTROL. AVERAGE LIGHT OUTPUT SHALL BE MEASURED WITH A FULL PAGE OF CHARACTERS WITH 30% DOTS LIT. THE FOCUS CONTROL SHALL BE ADJUSTED FOR BEST OVERALL FOCUS.

4.3.2 MAXIMUM GEOMETRIC DISTORTION ALLOWED SHALL BE:

4.3.2.1 PIN AND BARREL - DEFINED AS THE CURVATURE OF THE VIDEO CHARACTER ON TOP/BOTTOM OR SIDES.

4.3.2.1.1 LIMITS FOR TOP/BOTTOM ARE 1.0% OF THE HORIZONTAL SIZE OR $T = 0.10$ INCHES MAXIMUM.

4.3.2.1.2 LIMITS FOR SIDE ARE $S = 0.075$ INCH MAX.

4.3.2.1.3 INCREMENTAL PIN AND BARREL (I) = 0.020 INCH MAX/INCH.

4.3.2.1.4 REFERENCE FIGURE 6A AND 6B.

4.3.2.2 TRAPEZOIDAL DISTORTION - DEFINED AS THE DIFFERENCE IN THE VIDEO HEIGHT OR WIDTH.

4.3.2.2.1 LIMITS ON THE TOP/BOTTOM (HORIZONTAL) ARE H.T.D. = $W-W_1=0.1$ MAX.

SIZE A	CODE IDENT 98438	129779	REV D
SCALE		SHEET 5	

- 4.3.2.2.2 LIMITS ON SIDES (VERTICAL) ARE VTD = V-V₁=0.1 MAX.
- 4.3.2.2.3 REFERENCE FIGURE 7A AND 7.
- 4.3.2.3. PARALLELOGRAM DISTORTION - DEFINED AS THE DIFFERENCE FROM A TRUE 90 DEGREE ANGLE OF THE VIDEO PRESENTATION.
- 4.3.2.3.1 LIMITS ON THE PARALLELOGRAM DISTORTION P-P₁=0.1 MAX. (USING GAUGE SHOWN IN FIGURE 7 IN DETAILED INSTRUCTIONS).
- 4.3.2.3.2 REFERENCE FIGURE 8.
- 4.3.2.4 YOKE TILT - DEFINED AS THE DEVIATION OF THE CENTER ROW OF CHARACTERS FROM A MOUNTING PLANE.
- 4.3.2.4.1 LIMITS ON TILT ARE T = 0.100 INCH MAX. (USING GAUGE SHOWN IN FIGURE 4 AND TEST PROCEDURE NO. 2)
- 4.3.2.4.2 REFERENCE FIGURE 9.
- 4.3.2.5 VERTICAL RASTER CENTERING - DEFINED AS AN UNBLANKED RASTER BEING CENTERED TO THE PHOSPHOR EDGE OF THE CRT.
- 4.3.2.5.1 LIMITS FOR VERTICAL RASTER CENTERING ARE V.R.C=A-A₁=0.250 INCH MAX.
- 4.3.2.5.2 REFERENCE FIGURE 10
- 4.3.2.6 HORIZONTAL RASTER CENTERING
- 4.3.2.6.1 LIMITS FOR HORIZONTAL RASTER CENTERING ARE H.R.C.=B-B₁=0.250 INCH MAX.
- 4.3.2.6.2 REFERENCE FIGURE 11.
- 4.3.2.7 VIDEO SIZE - DEFINED AS ACTIVE VIDEO DISPLAY SIZE AFTER 5 MINUTES OF WARM-UP, AT THE CENTER OF THE VIDEO PRESENTATION.
- 4.3.2.7.1 VERTICAL SIZE - V=7.15 INCH \pm 0.125 INCH.
- 4.3.2.7.2 HORIZONTAL SIZE - W=9.90 INCH \pm 0.125 INCH.
- 4.3.2.7.3 REFERENCE FIGURE 1.
- NOTE: GEOMETRY MEASUREMENTS MUST BE MADE WITH THE CRT PHOSPHOR FACING EAST AND THE CRT NECK FACING WEST.

SIZE A	CODE IDENT 98438	129779	REV D
SCALE		SHEET 6	

5.0 POWER REQUIREMENTS

- 5.1 THE INPUT VOLTAGE SHALL BE 105 TO 135 VAC 50/60 Hz. OR 215 TO 250 VAC 50 Hz.
- 5.2 THE INPUT CURRENT SHALL BE .50 AMPERES NOMINAL WITH A MAXIMUM PEAK CURRENT OF .65 AMPERES.
- 5.3 THE INPUT POWER CONNECTOR SHALL MATE WITH MOLEX PART NO. 03-06-1092 AND FEMALE CONTACTS MOLEX 1787-F SERIES.
- 5.4 POWER CONNECTOR PIN OUT PER FIGURE 4.

6.0 MECHANICAL REQUIREMENTS

- 6.1 PHYSICAL SIZE SHALL BE PER FIGURE 3 OF THIS SPECIFICATION.
- 6.2 THE CRT SHALL BE MOUNTED WITH BRACKETS 129708-5 AND 129708-6 PER LSI DRAWING 129708.
- 6.3 THE ELECTRONICS SHALL BE MOUNTED WITH MOUNTING PLATE SUB-ASSEMBLY 129794-1 PER LSI DRAWING 129794.
- 6.4 CRT BRACKETS AND MOUNTING PLATE MAY BE TEMPORARILY FASTENED TOGETHER FOR SHIPMENT AND HANDLING.

7.0 PROTECTIVE FINISH

- 7.1 PROTECTIVE FINISHES SHALL BE PROVIDED ON ALL MATERIAL AND COMPONENTS WHICH MAY BE ADVERSELY AFFECTED BY THE ENVIRONMENTAL CONDITIONS SPECIFIED HEREIN.

8.0 U.L. APPROVAL

- 8.1 THE UNIT SHALL BE DESIGNED AND MANUFACTURED TO MEET THE REQUIREMENTS OF U.L. 478, (ELECTRONIC DATA PROCESSING UNITS AND SYSTEMS) UNDERWRITERS LABORATORIES INC. STANDARDS OF SAFETY, WHEN CONTAINED WITHIN A SUITABLE ENCLOSURE.

SIZE A	CODE IDENT 98438	129779	REV D
SCALE		SHEET	7

- 9.0 ENVIRONMENTAL REQUIREMENTS
- 9.1 TEMPERATURE
- 9.1.1 THE OPERATING TEMPERATURE MINIMUM AND MAXIMUM SHALL BE 0°C. AND 50°C. AMBIENT.
- 9.1.2 THE STORAGE TEMPERATURE MINIMUM AND MAXIMUM SHALL BE -20°C. AND +65°C. AMBIENT.
- 9.2 RELATIVE HUMIDITY
- 9.2.1 THE OPERATING RELATIVE HUMIDITY SHALL BE 5 TO 90 PERCENT (NON-CONDENSING) WITH A GRADIENT EQUAL TO OR LESS THAN 10% PER HOUR.
- 9.3 ALTITUDE
- 9.3.1 THE OPERATING ALTITUDE SHALL BE SEA LEVEL TO 10,000 FEET.
- 9.3.2 THE NON-OPERATING ALTITUDE SHALL BE SEA LEVEL UP TO 30,000 FEET.
- 10.0 HUMAN FACTORS REQUIREMENTS
- 10.1 X-RAY RADIATION
- 10.1.1 THE UNIT AS SPECIFIED SHALL COMPLY WITH THE "RADIATION CONTROL FOR HEALTH AND SAFETY ACT OF 1968".
- 10.2 RFI RADIATION
- 10.2.1 THE UNIT SHALL MEET FCC RULES AND REGULATIONS, IN ACCORDANCE WITH FCC COMPUTING DEVICES DOCKET NO. 20780.

SIZE A	CODE IDENT. 98438	129779	REV D
SCALE		SHEET	8

11.0 WARRANTY

THE EQUIPMENT SOLD TO LEAR SIEGLER, INC. SHALL BE WARRANTED BY THE VENDOR FOR A PERIOD OF ONE YEAR FROM THE DATE OF THE VENDOR'S SHIPMENT AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE AND OPERATION.

12.0 APPROVED VENDOR

12.1 THE FOLLOWING VENDOR HAS SUBMITTED UNITS THAT COMPLY WITH THE REQUIREMENTS OF THIS SPECIFICATION. SUBSEQUENT ORDERS SHALL COMPLY WITH THIS SPECIFICATION AND SHALL BE ACCEPTED IN ACCORDANCE WITH ACCEPTANCE TEST PROCEDURE 129798.

<u>LSI PART NO.</u>	<u>DESCRIPTION</u>	<u>VENDOR PART#</u>	<u>VENDOR</u>
129779-1	MONITOR, P4	4803J00	MOTOROLA
129779-2	MONITOR, P-31	4803900	MOTOROLA

12.2 VENDOR ADDRESS

MOTOROLA INC.
DATA PRODUCTS

13.0 REFERENCE DOCUMENTATION

13.1 THE VENDOR SHALL BE REQUIRED TO SUPPLY A COMPLETE DOCUMENTATION PACKAGE FOR THE UNIT SPECIFIED HEREIN. THE DOCUMENTATION MAY BE USED IN LSI MAINTENANCE MANUALS AND FOR U.L. SUBMITTAL.


13.2 DOCUMENTATION PACKAGE SHALL CONSIST OF:

SCHEMATIC DIAGRAMS
PC BOARD LAYOUT AND ASSEMBLY DRAWINGS
COMPONENT PARTS LISTS
COMPONENT SPECIFICATIONS OR REPLACEMENT PARTS INFO.
TRANSFORMER AND PC BOARD MATERIAL SPECIFICATION
FOR U.L. SUBMITTAL

14.0 CHANGES AFTER APPROVAL

14.1 CHANGES OF MATERIAL, COMPONENT TYPE, VALUE, OR SOURCE OF SUPPLY SHALL BE SUBMITTED TO LSI 60 DAYS PRIOR TO INTENDED SHIP DATE FOR APPROVAL. WRITTEN ACCEPTANCE FROM LSI PRIOR TO SHIPMENT IS REQUIRED. DOCUMENTATION OF CHANGES MAY BE SUBMITTED CONCURRENT WITH SHIPMENT.

SIZE A	CODE IDENT 98438	129779	REV D
SCALE		SHEET 9	


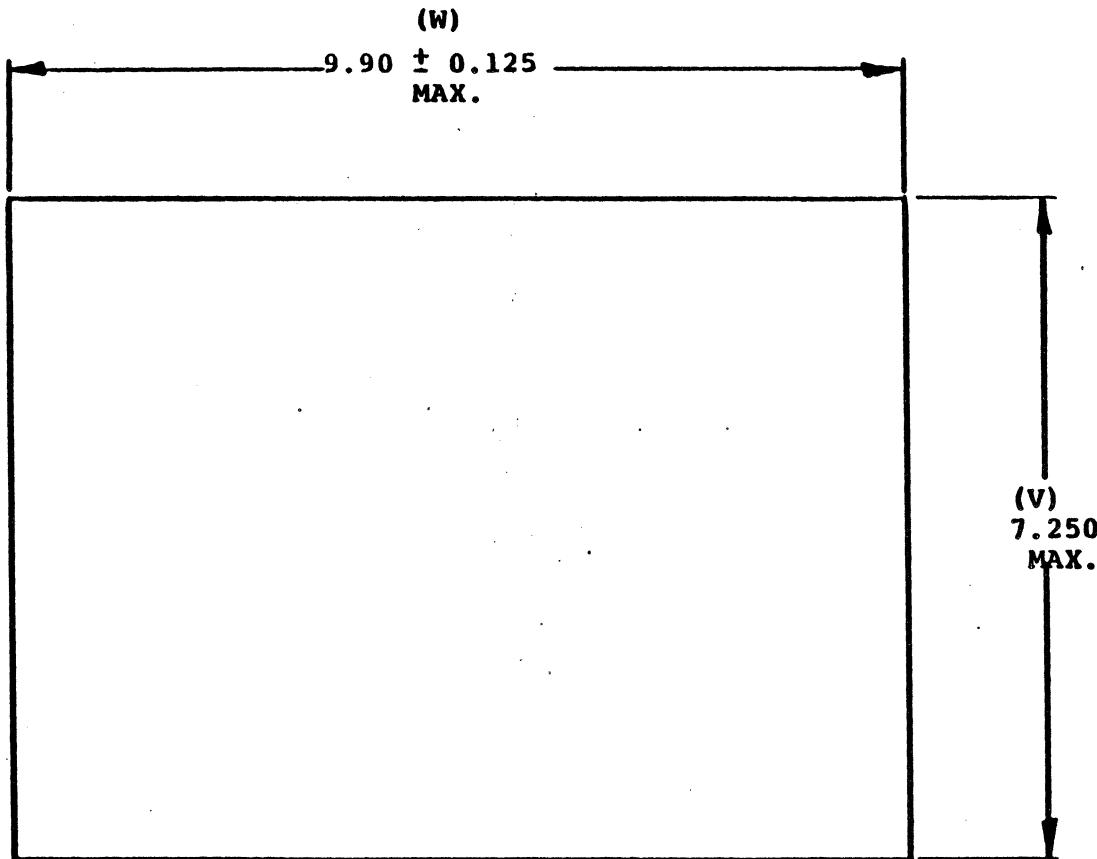


15" CRT DISPLAY AREA

FIGURE NO. 1

SIZE	CODE IDENT	129779
A	98438	
SCALE		

REV
D

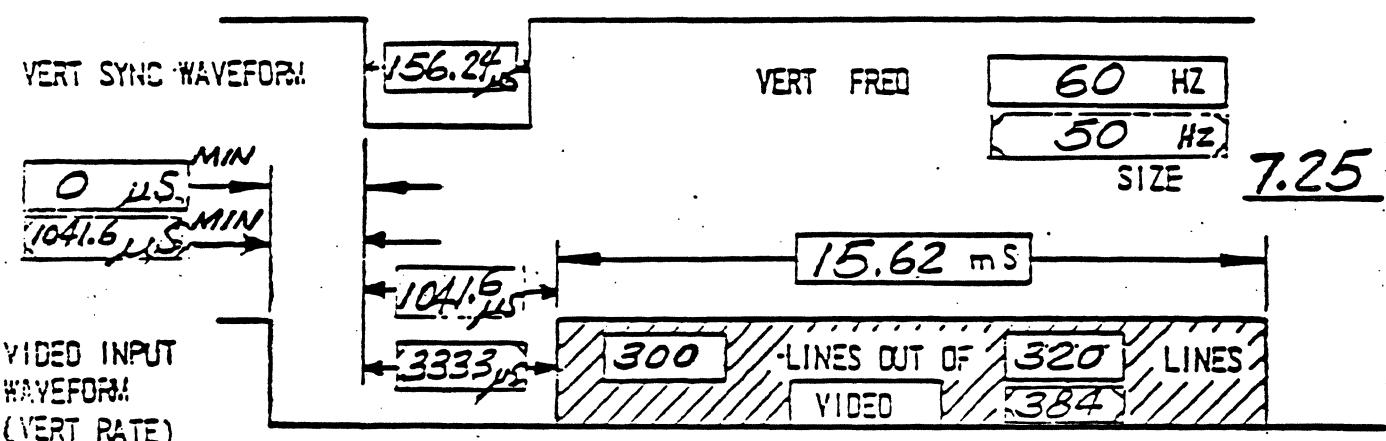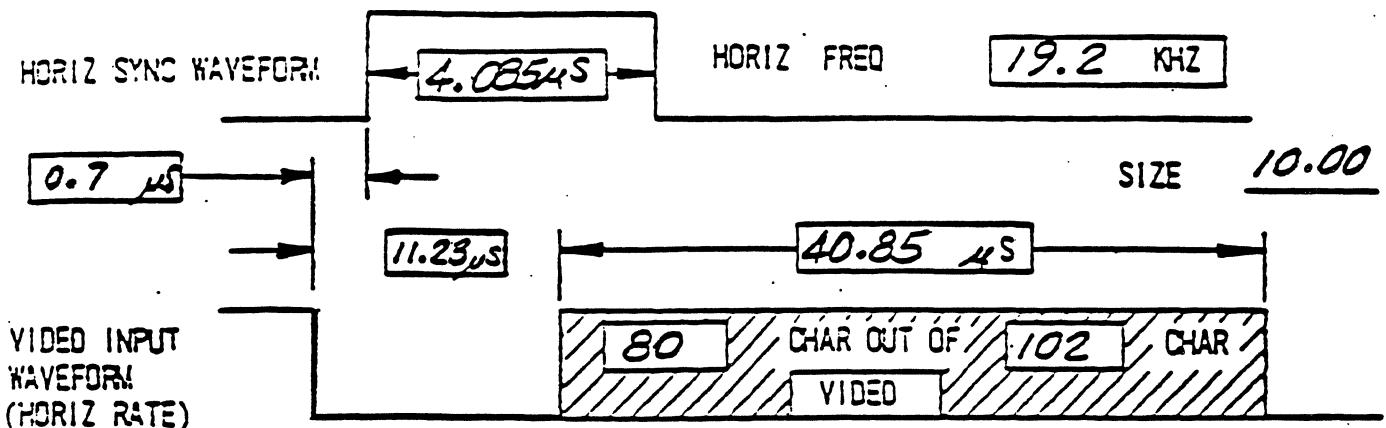

	HORIZ	VERT
CHARACTER BLOCK	10	12
CHARACTER MATRIX	7	9
DOT RATE (MHz)	19.584 MHz	

VIDEO INFORMATION	
POLARITY	+WHITE
IMPEDANCE	STANDARD
PERCENT	50-100
VIDEO INPUT RANGE (V)	STANDARD

FIGURE No. 2

SIZE A	CODE IDENT 98438	129779	REV D
SCALE	SHEET 11		


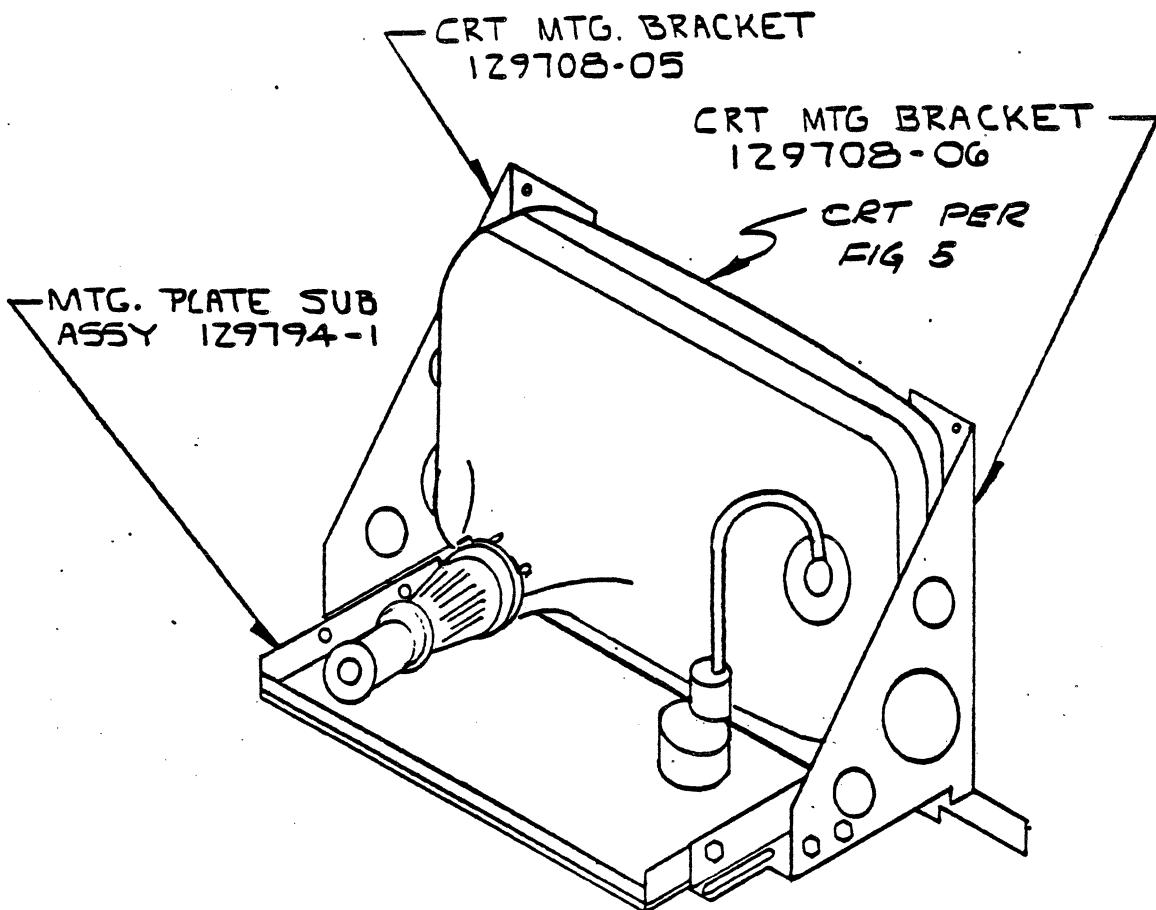


FIGURE NO. 3
PHYSICAL OUTLINE

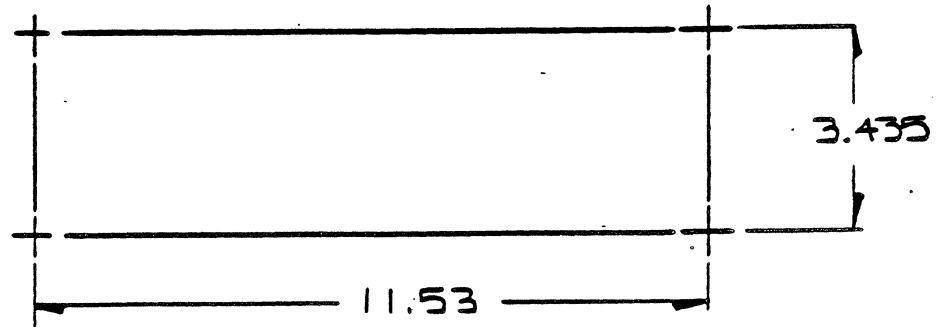

MOUNTING HOLE PATTERN

SIZE	CODE IDENT	129779	REV
A	98438		D
SCALE		SHEET	12




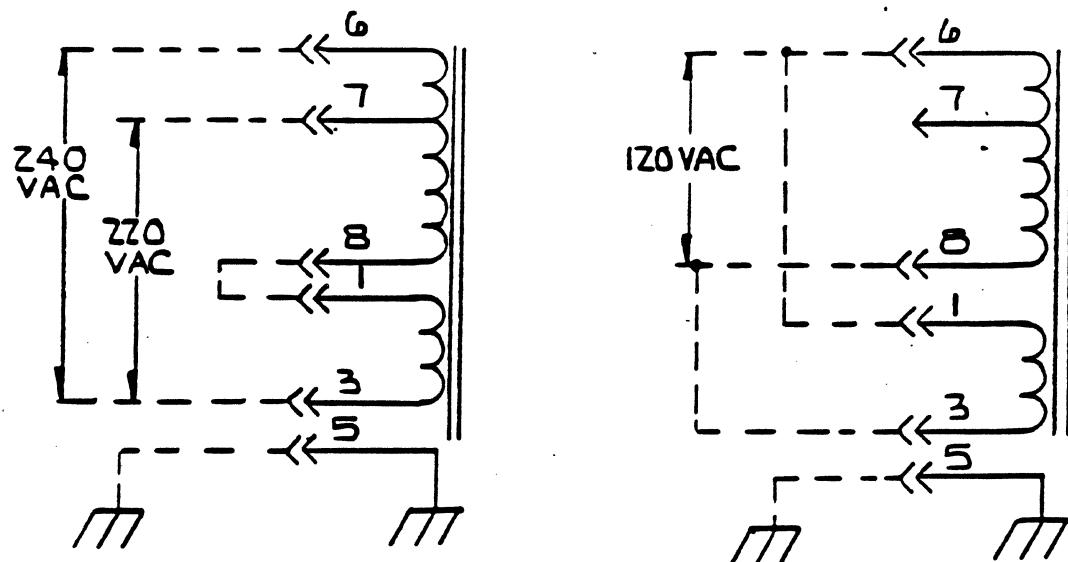


FIGURE NO. 4
POWER CONNECTION

SIZE	CODE IDENT	REV
A	98438	D
SCALE	—	SHEET 13

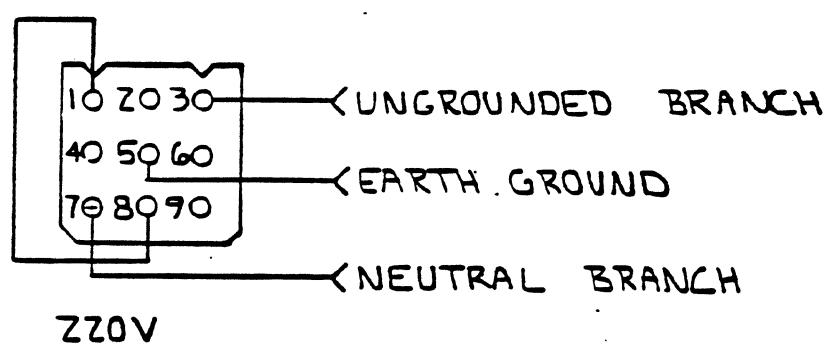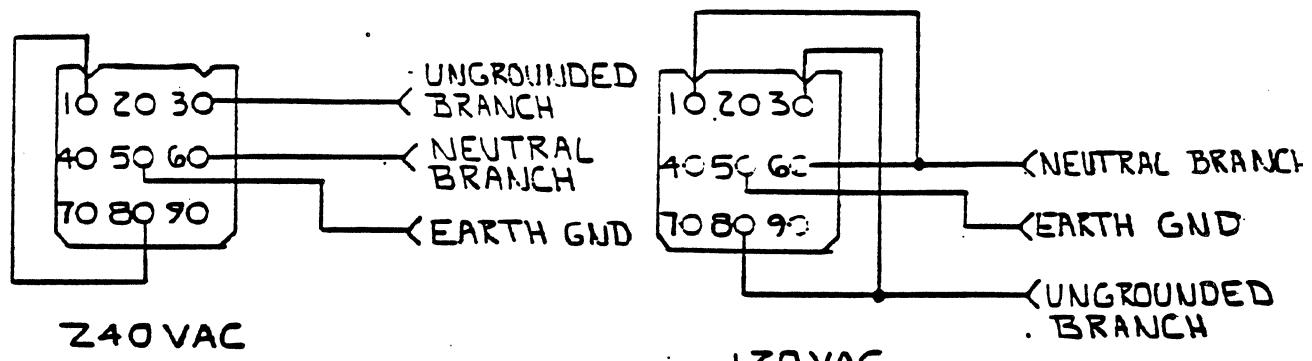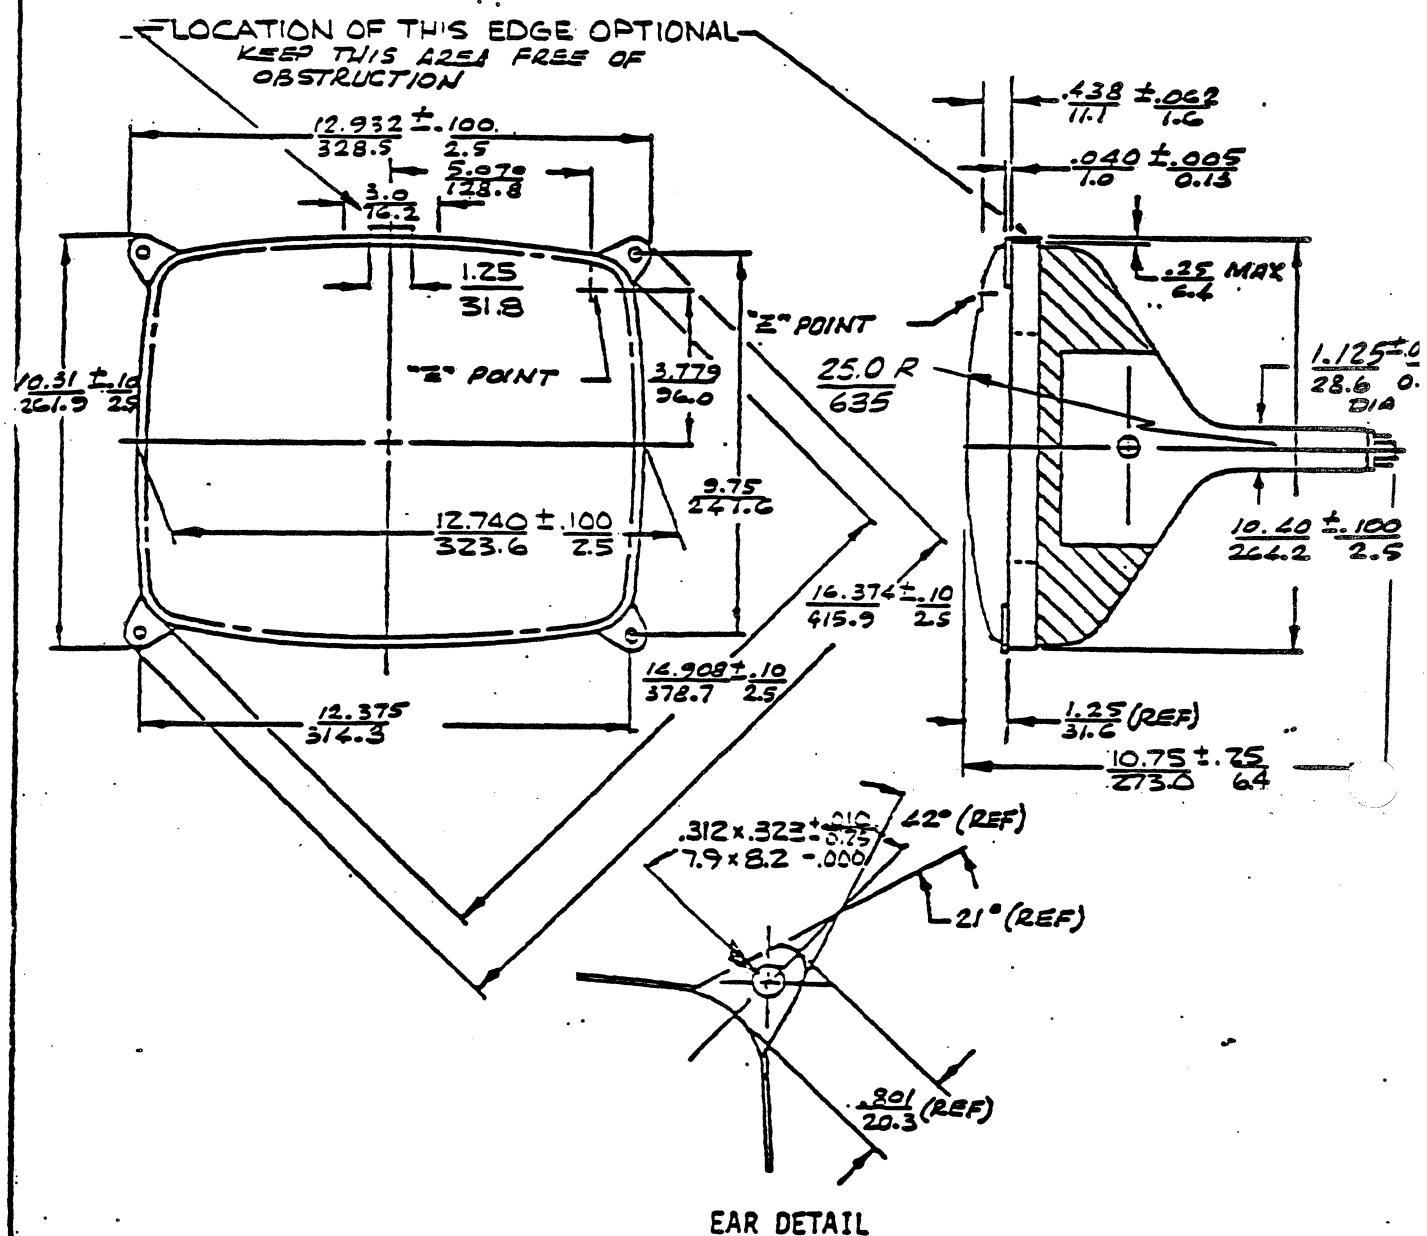


NOTE:

THE EARS SHALL FIT OVER (4) $.170 \pm .002$ DIA. PINS LOCATED WITH THEIR CENTERS AT THE CORNERS OF A $12.375 \pm .005$ BY $9.750 \pm .005$ RECTANGLE.


FIGURE 5
CRT OUTLINE

SIZE A	CODE IDENT 98438	129779	REV. D
SCALE		SHEET 14	

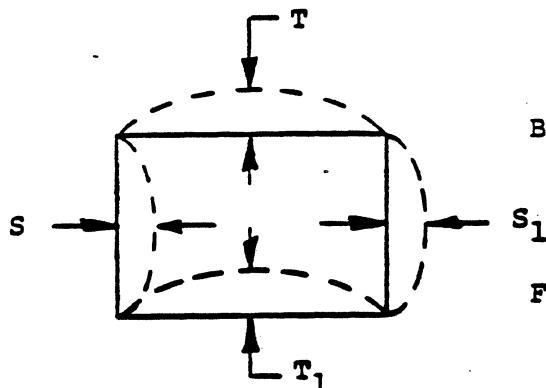


BARREL AND PINCUSHION

FIGURE 6A

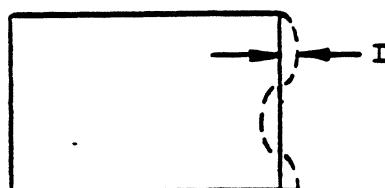


INCREMENTAL PIN AND BARREL

FIGURE 6B

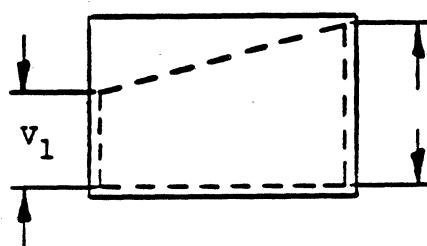

TRAPEZOID DISTORTION (HORIZONTAL)


FIGURE 7A

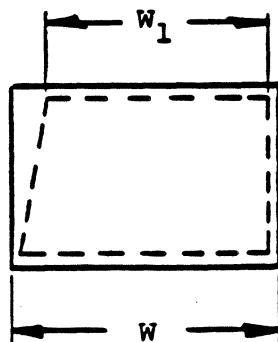

TRAPEZOID DISTORTION (VERTICAL)


FIGURE 7B.

SIZE A	CODE IDENT 98438	129779
SCALE		SHEET 15

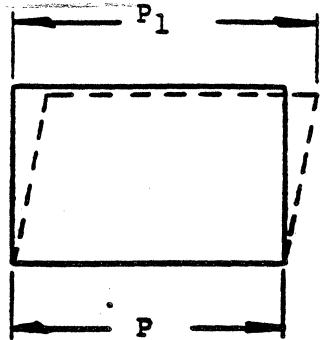

PARALLELOGRAM DISTORTION

FIGURE 8

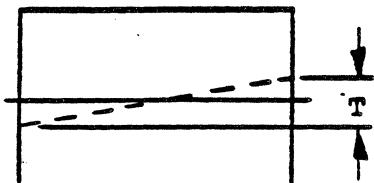

YOKE TILT

FIGURE 9

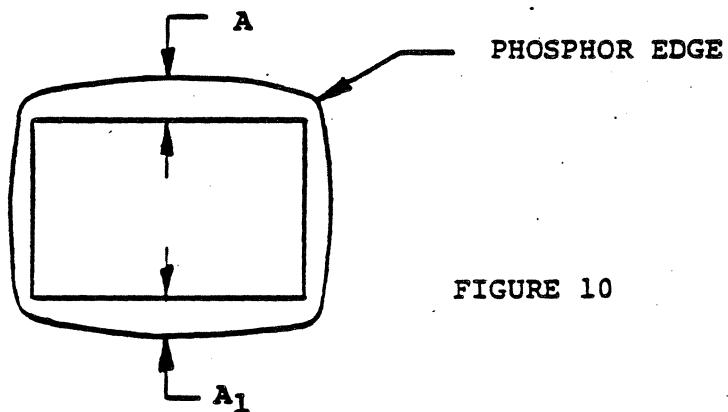


FIGURE 10


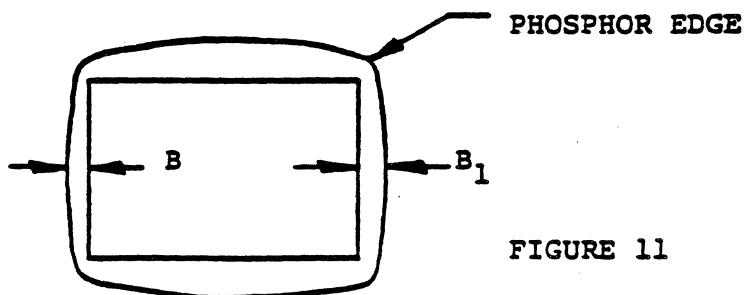


FIGURE 11

SIZE	CODE IDENT	
A	98438	129779
SCALE		SHEET 16

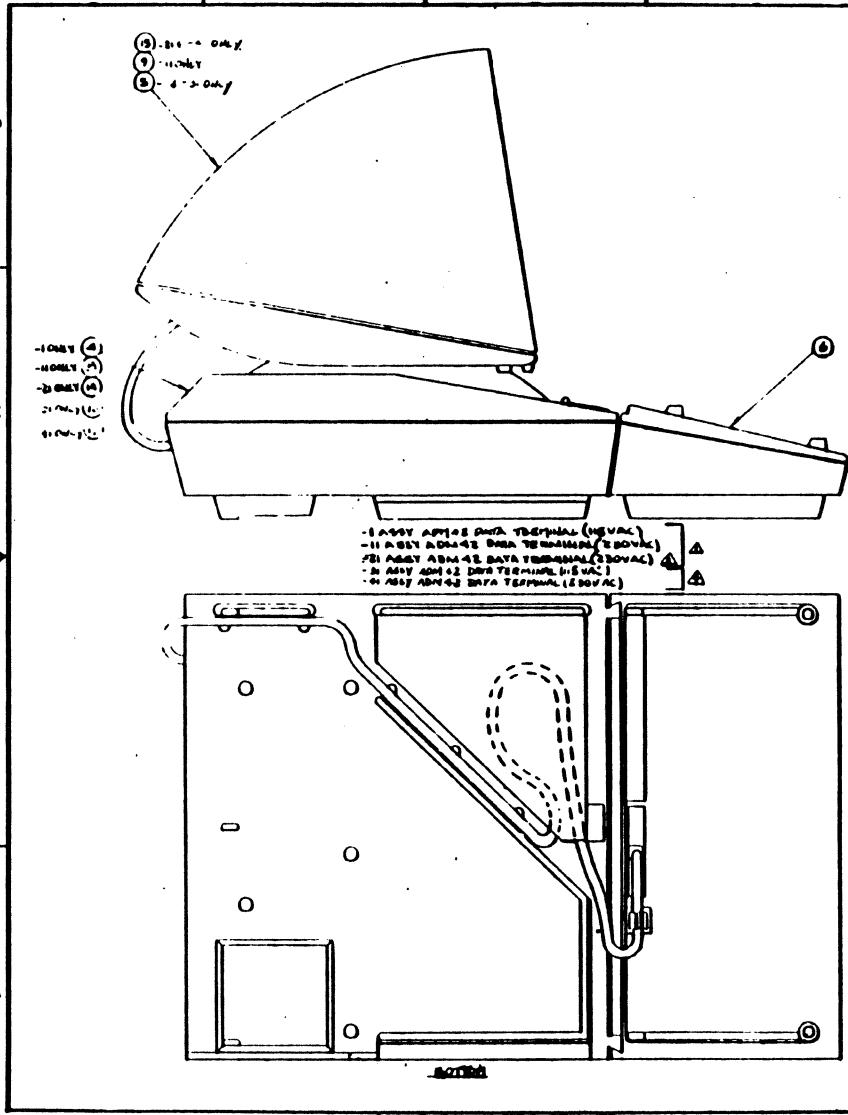

SEQ	ITEM	TITLE	REVISIONS		DATE APPROVED
			DESCRIPTION	DATE	
	A	CHARTERS - REVERSED. DELETED ON 2- 02-1975. MOUNT AND STAPLE - 04-11-75 DEFINING TERMS FOR RETIREMENT BENEFITS. 04-12-75 ADVISOR - 04-05-75 G INDEX. 04-05-75		04-05-75	04-05-75
	C	PROGRAM 1 INDEXED DEC 560,000.00 10-2-75 TO TOTAL 1,600,000.00 12-2-75		04-05-75	04-05-75
	E	INCURSE DEC 4- 1975 INDEXED 0-300 12-2-75		04-05-75	04-05-75

NOTES

- 1. FOR OPTIONS REFER TO 182658.
 - 2. FOR APPLICATION OF DASH NUMBERS SEE P1129810.
 - 3. FOR POWER SUPPLY SCHEMATIC SEE DUG 110750.
 - 4. FOR LOGIC BOARD SCHEMATIC SEE DUG 110751.
 - 5. FOR KEYBOARD SCHEMATIC SEE DUG 110752.
 - 6. FOR OPTIONS REFER TO 182671.

FOR SEPARATE PARTS LIST SEE PA 172810.

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
	A	CREATED -11, -101 & -111 ASSY ADDED F/N'S 2, 8, 9, 12, 13, 10, 11, 16, 18, 19 TCS 3-7-79	3/21/79	R. Q. Pollack
	B	INCORPORATED ADCH 9, 2 BY DELETING ALL REF TO DASH NO'S -101 & -111. & ADDED -21 ASSY. G. JAROSEK 7/3/79	8-9-79	J. Garisch
	C	INCOOP. DCN 556 JE GLASS 7-8-80	1/3/79 5/1/79	R. Q. Pollack R. L. Johnson
	E	INCOOP. DCN 414 & 824 JE GLASS 4-20-80	4/3/79 5/1/80	R. Q. Pollack R. L. Johnson

NOTE

1. FOR OPTIONS REFER TO 129542.

2. APPLICATION

-1 IS STD ADM 42 115 VAC

-11 IS STD ADM 42 230VAC SERIAL NO. 1 THRU 3666

-21 IS STD ADM 42 230VAC SERIAL NO. 3667 & ON

-31 IS STD ADM 42 115 VAC

-41 IS STD ADM 42 230VAC

3 FOR PWR SUPPLY SCHEMATIC SEE 129730.

FOR LOGIC BD. SCHEMATIC SEE 129831

FOR KEY BOARD SCHEMATIC SEE DWG 129835.

4. FOR OPTIONS REFER TO 131371.

	END ITU	DL129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN.	DR G. JAROSEK 7/3/79	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.
	CHK	(LSI)
	DSGN	PARTS LIST - ADM 42
	ENGR	DATA TERMINAL
	PROJ C. H. Turner 7/3/79	
	REL H. Turner 7/2/79	SIZE
	CUSTOMER APPD	A CODE IDENT
		98438 PL129810 REV E
		SCALE
		SHEET 1 OF 2

FIND NO.	QTY RECD					PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		-21	-11	-1	-31	-41		
1			✓				-1	ADM 42 ASSY 115VAC
2			✓				-11	" " " 230VAC
3	✓						-21	ADM 42 ASSY 230VAC
4			1				129840-1	TERMINAL CONTROL UNIT
5			1	1			129842-1	MONITOR
6	1	1	1	1	1		129841-11	KEYBOARD ASSY
7							129723-1	CABLE ASSY
8			1				129840-11	TERMINAL CONTROL UNIT 230VAC
9			1				129842-21	MONITOR 230VAC
10								
11			✓				129810-31	ADM 42 ASSY 115VAC
12			✓				129810-41	ADM 42 ASSY 230VAC
13								
14	1						129840-61	TERMINAL CONTROL UNIT 230VAC
15	1			1			129842-31	MONITOR 230VAC
16			1				129840-71	TERMINAL CONTROL UNIT 115VAC
17			1				129840-81	TERMINAL CONTROL UNIT 230VAC
18								
19		REF R _{EQ}					CS 131370	ADM 42 CONFIGURATION CONTROL SHU SETTINGS
20								
21								
22								
23								
24								
REV	111							
	21							

4

3

2

1

REVISED


DESCRIPTION

A RELEASE PIR D-IN SAI

DATE

12/14/82

APPROVED

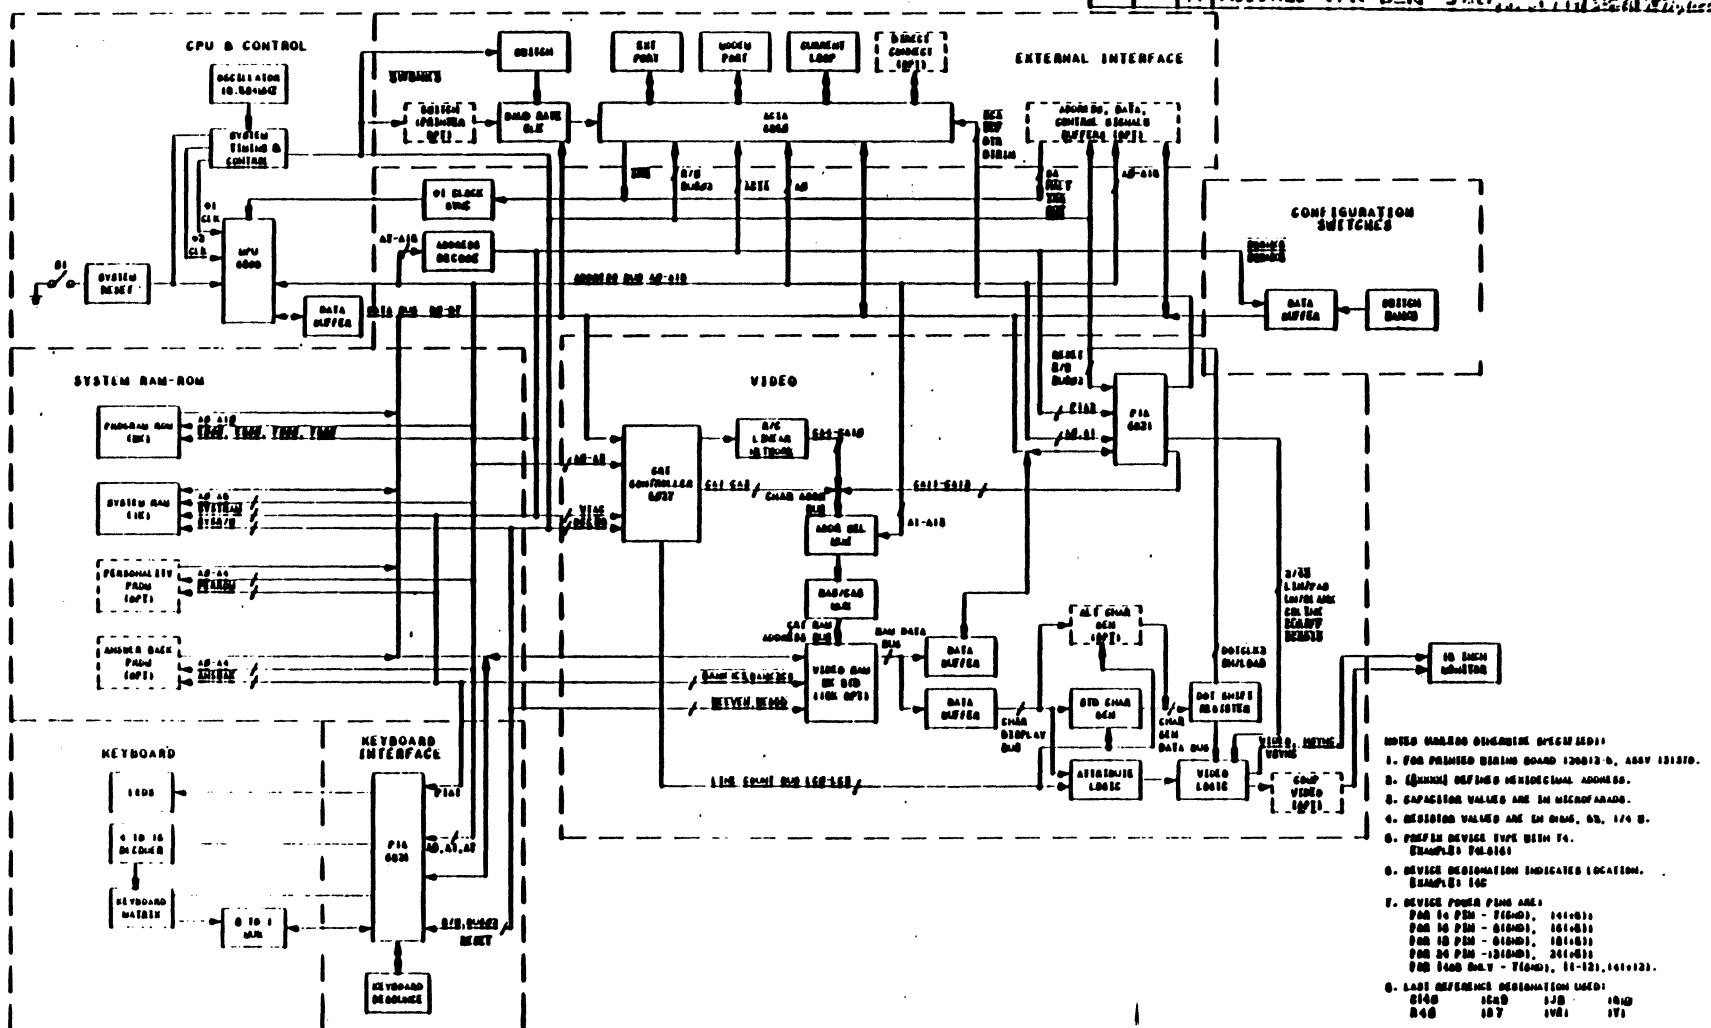

DASH NO	NEXT ASSY	USED ON	APPLICATION
131370	D-129810		

UNLESS OTHERWISE
SPECIFIED:
DIM IN INCHES
TOLERANCES:
X ± 0.03
XXX ± 0.010
ANGLES ± 0.5°

CONTR NO
DR 65461 8-8-80
CHK
DSGN
ENGR D 7-2-80
PROJ 2-2-80
REL 1446 6-6-80



LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION
ANAHEIM CALIFORNIA 92803

SCHEMATIC,
LOGIC BOARD ADM-42

SIZE	FSCM NO	DWG NO	LTR
C	98438	129813	A

PROPRIETARY LEGEND
EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE
DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR SIEGEL
INC. AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE

D

D

C


C


B

B

A


A

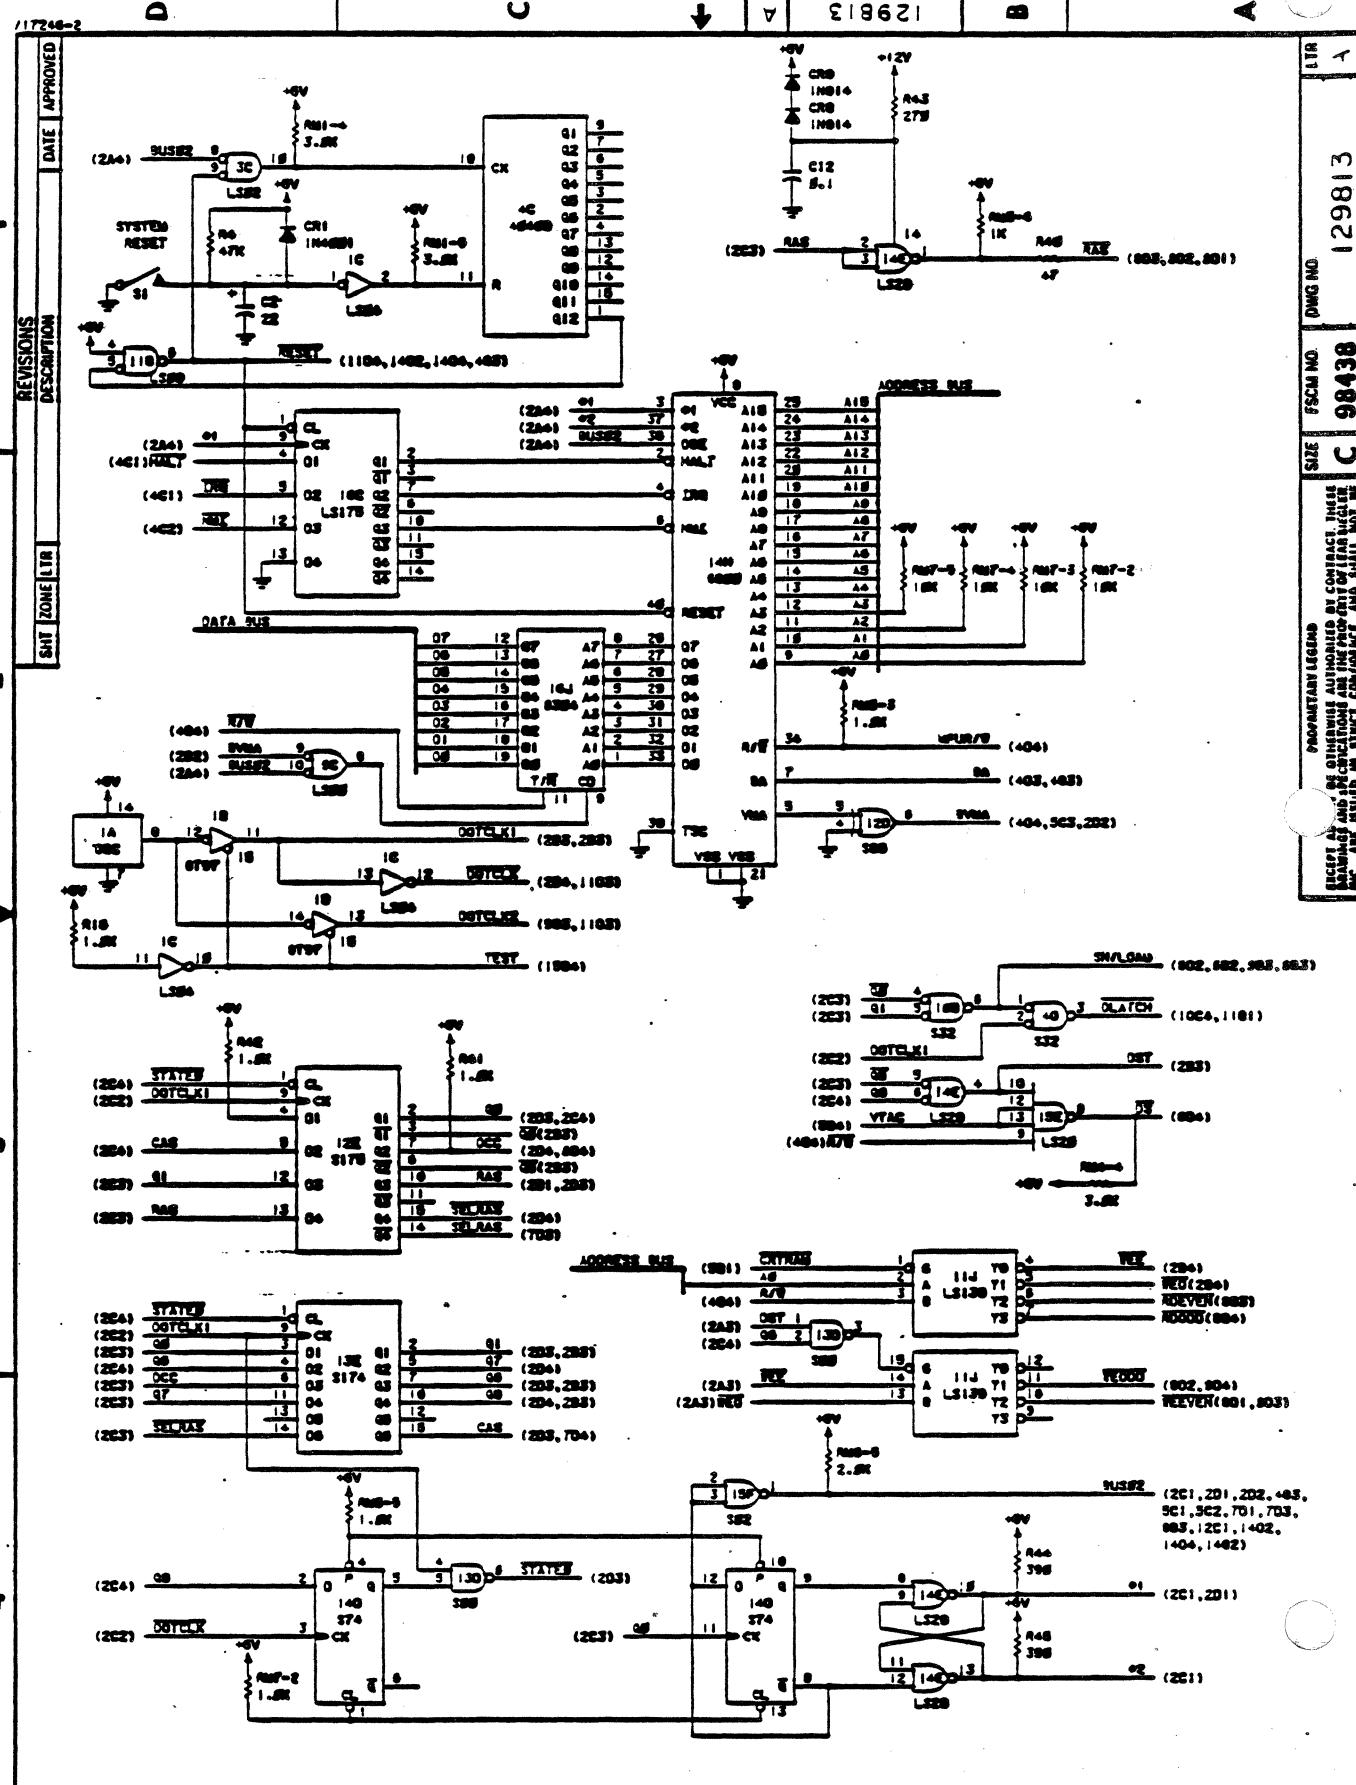

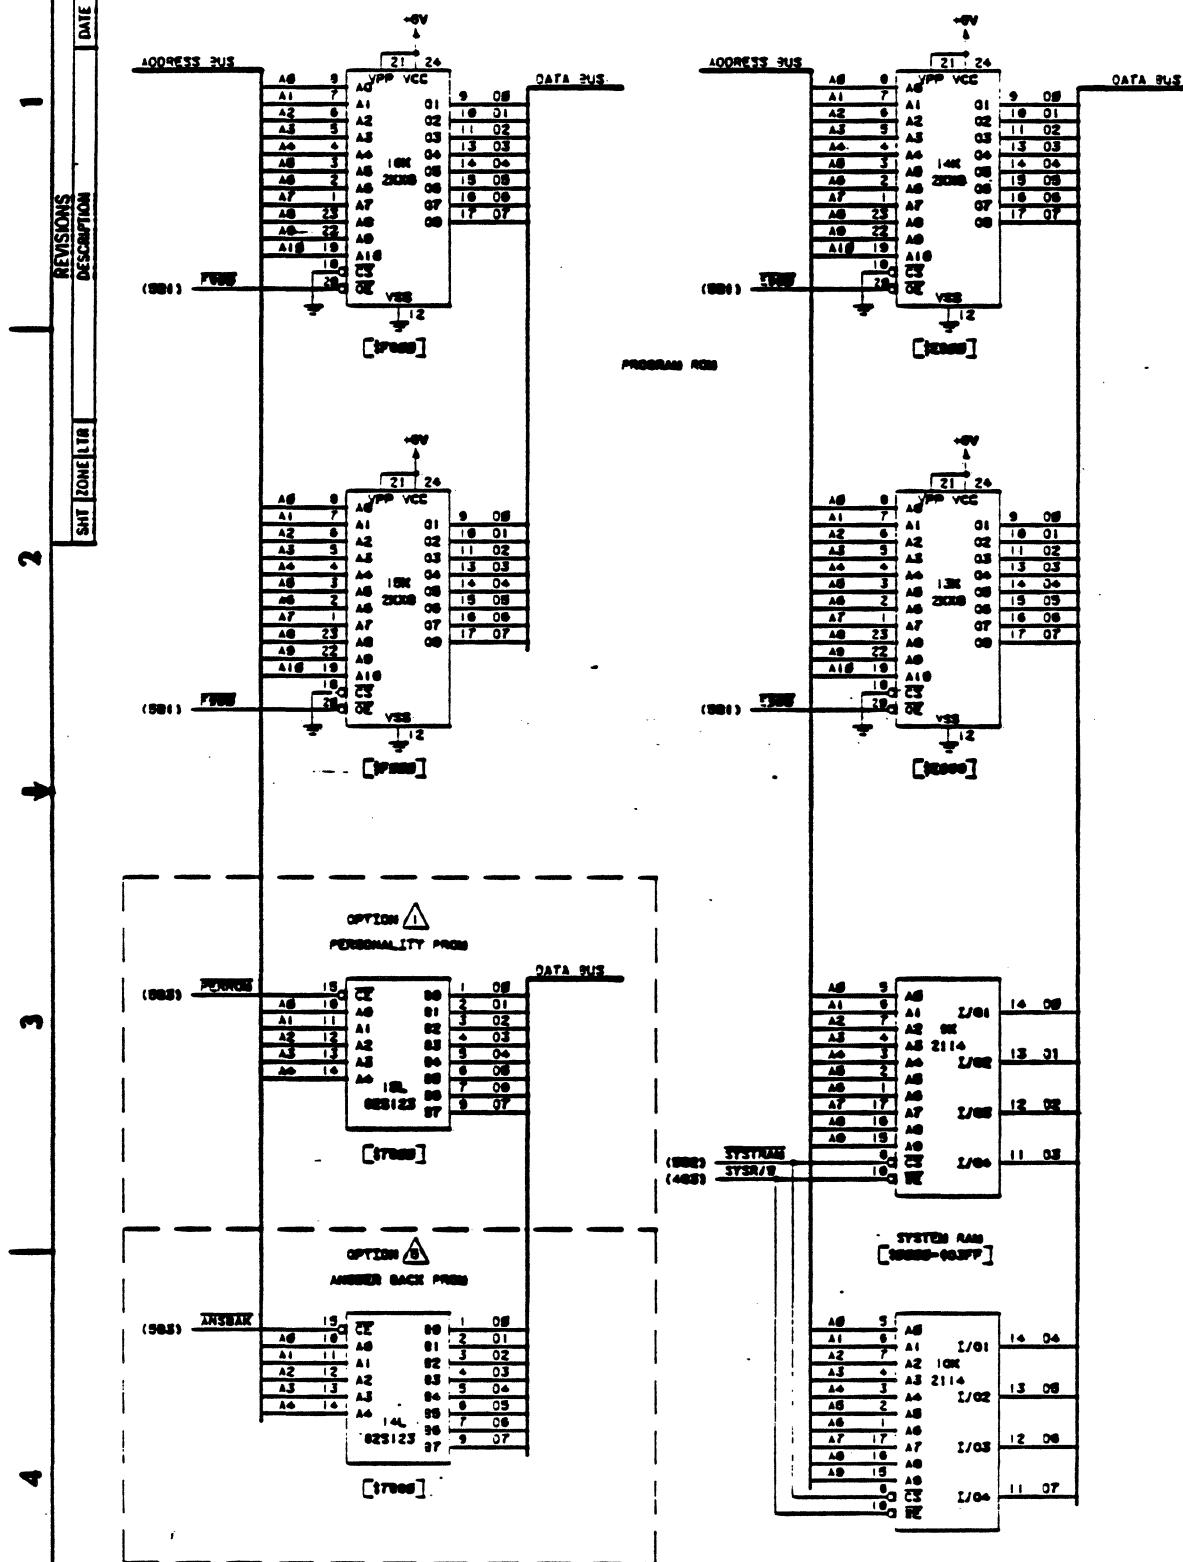

PROVANTIAL SIGNATURE	SIZE	FCM NO.	DWG NO.	LIN
ELLIOTT AS MAY BE ORIGINATED AND UNCHANGED AT CONTRACT, WHICH BAMH AND UNCHANGED AT THE REQUEST OF LEAR NIGHT INC. AND IS HELD IN BLACK CARBON COPY. AND SHALL NOT BE MADE PUBLIC, OR USED FOR THE MANUFACTURE OR SALE OF THIS MODELS. C-2010	C	98438	129813	A

REVISIONS		DESCRIPTION	DATE APPROVED
SAT	ZONE/LTA		

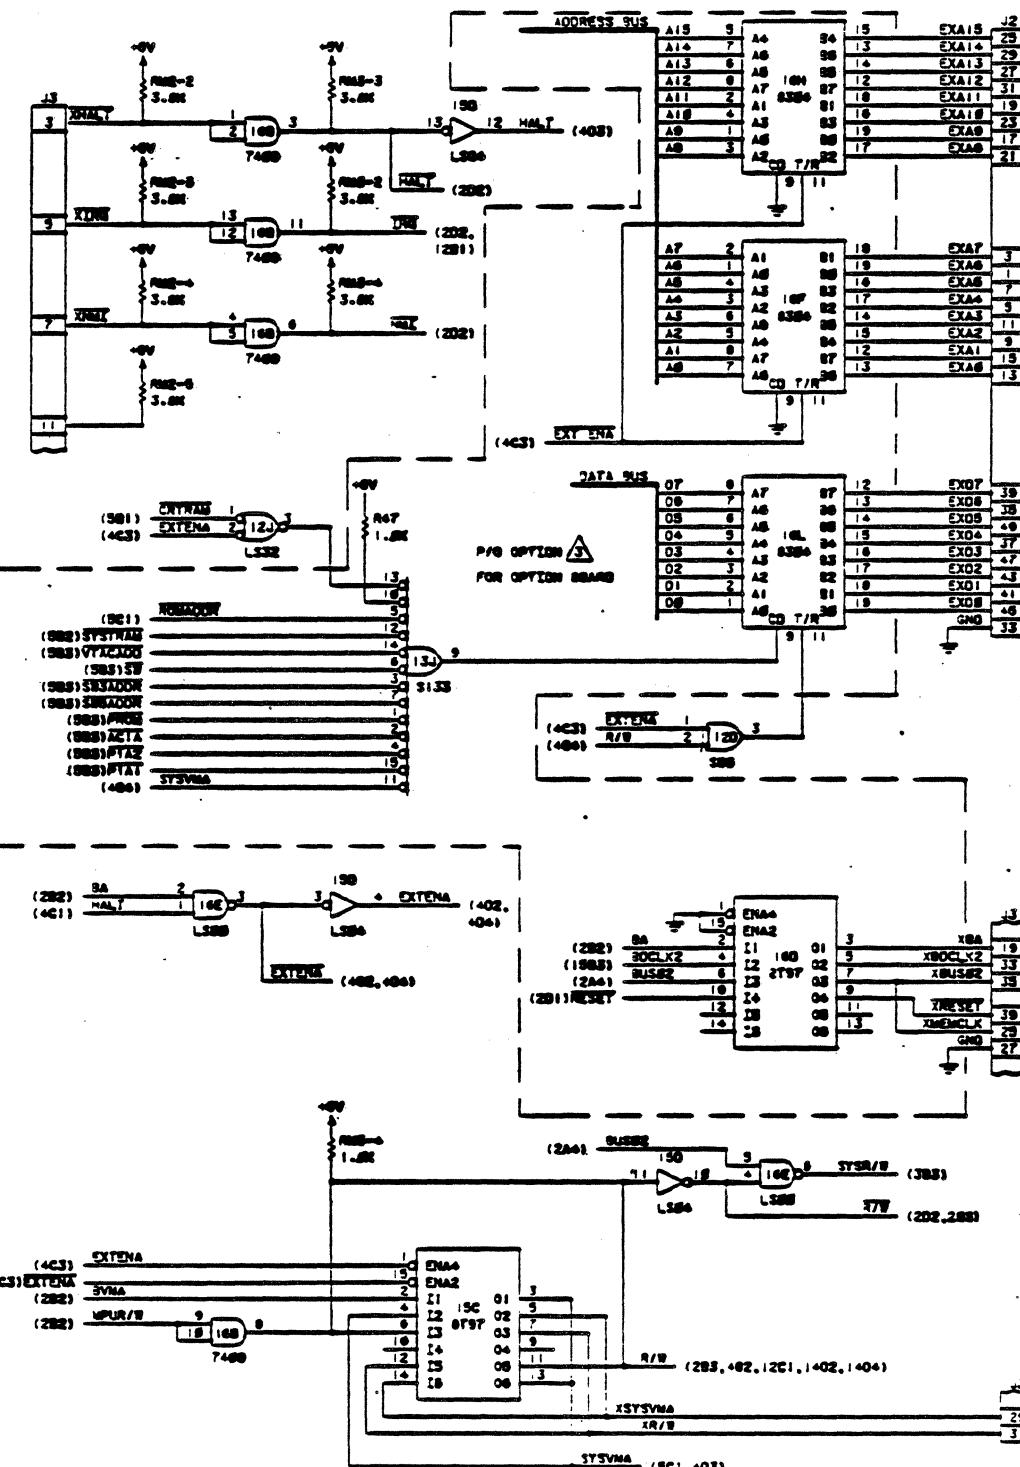



PROPRIETARY LEGEND

LIA A
129813

PROPRIETARY LEGEND
PRINTED AND OR DRAWN ON CONTRACTUAL BASIS
NOT FOR RELEASE OUTSIDE THE CONTRACTING TEAM
OR FOR OTHER THAN CONTRACT PURPOSES
EXCEPT AS AUTHORIZED IN WRITING BY THE CONTRACTING TEAM
OR AS AUTHORIZED BY THE CONTRACTING TEAM
IN WRITING FOR THE MANUFACTURE OR SALE OF

C 98438 129813 A

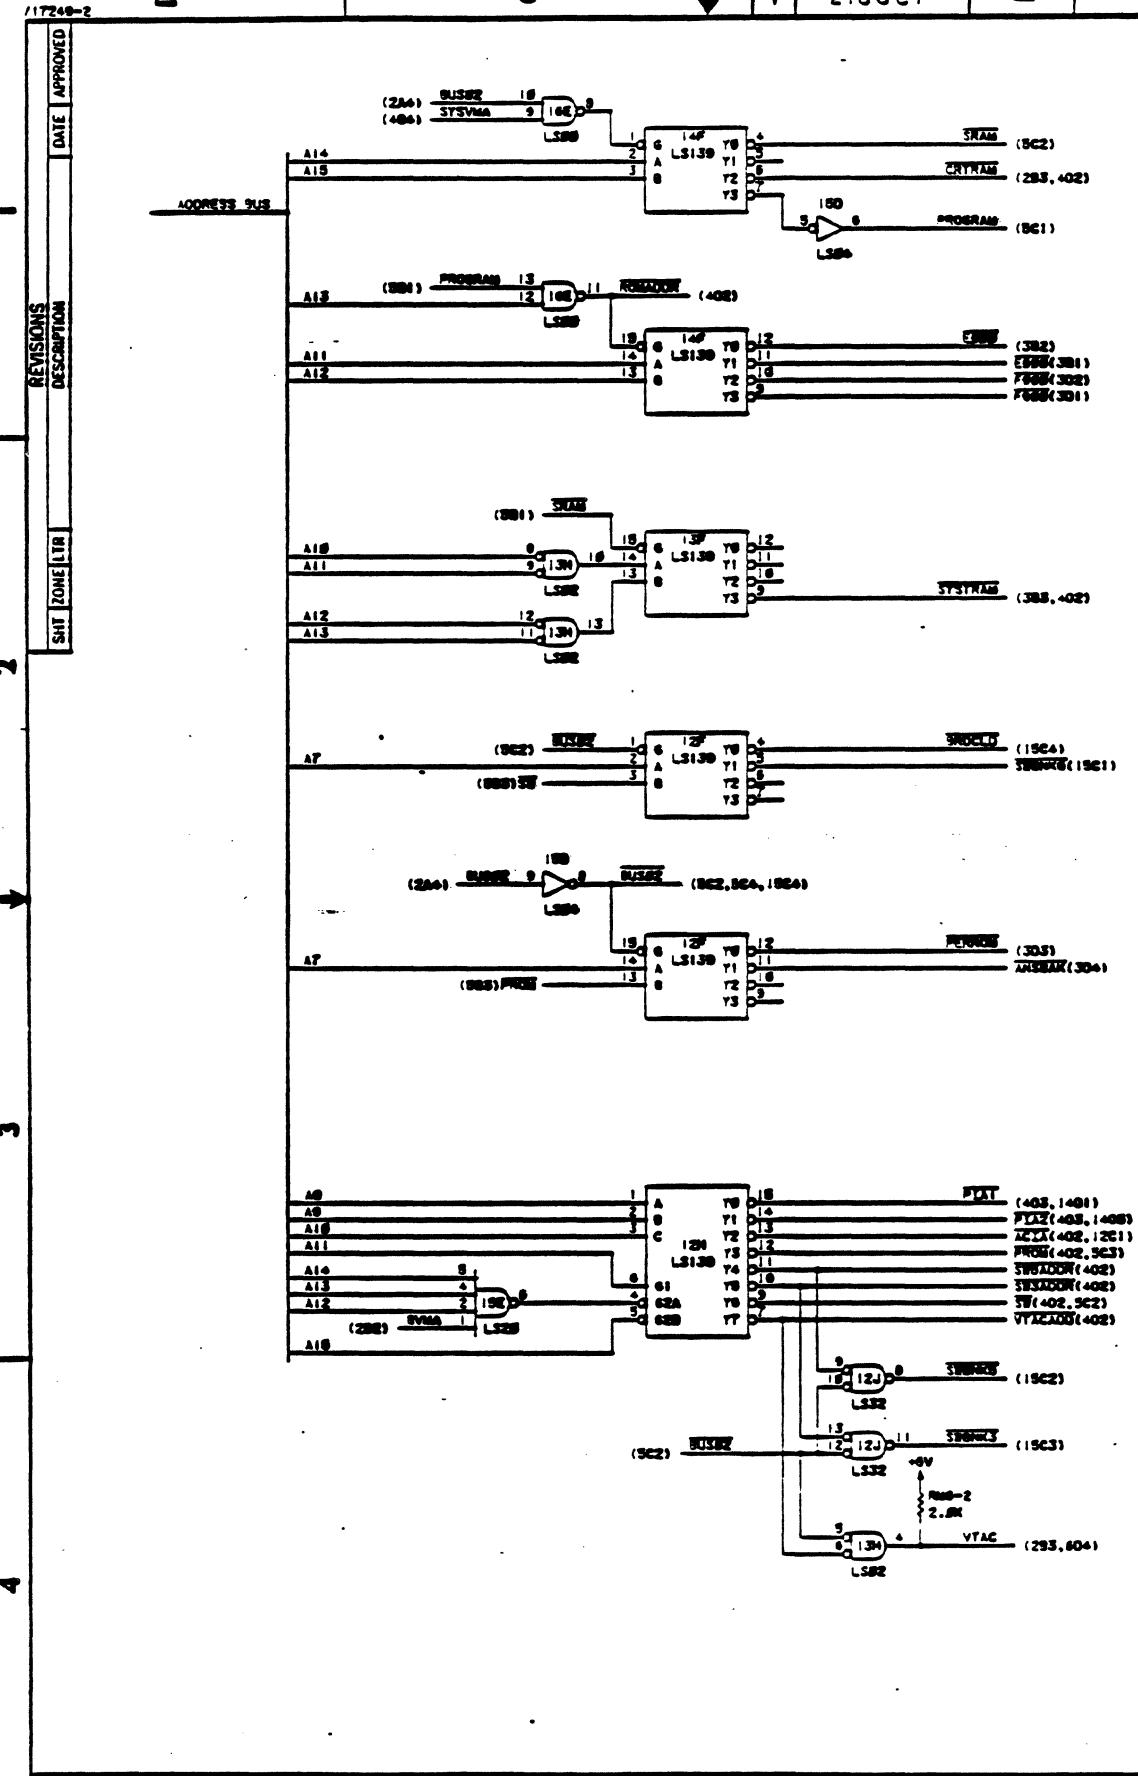

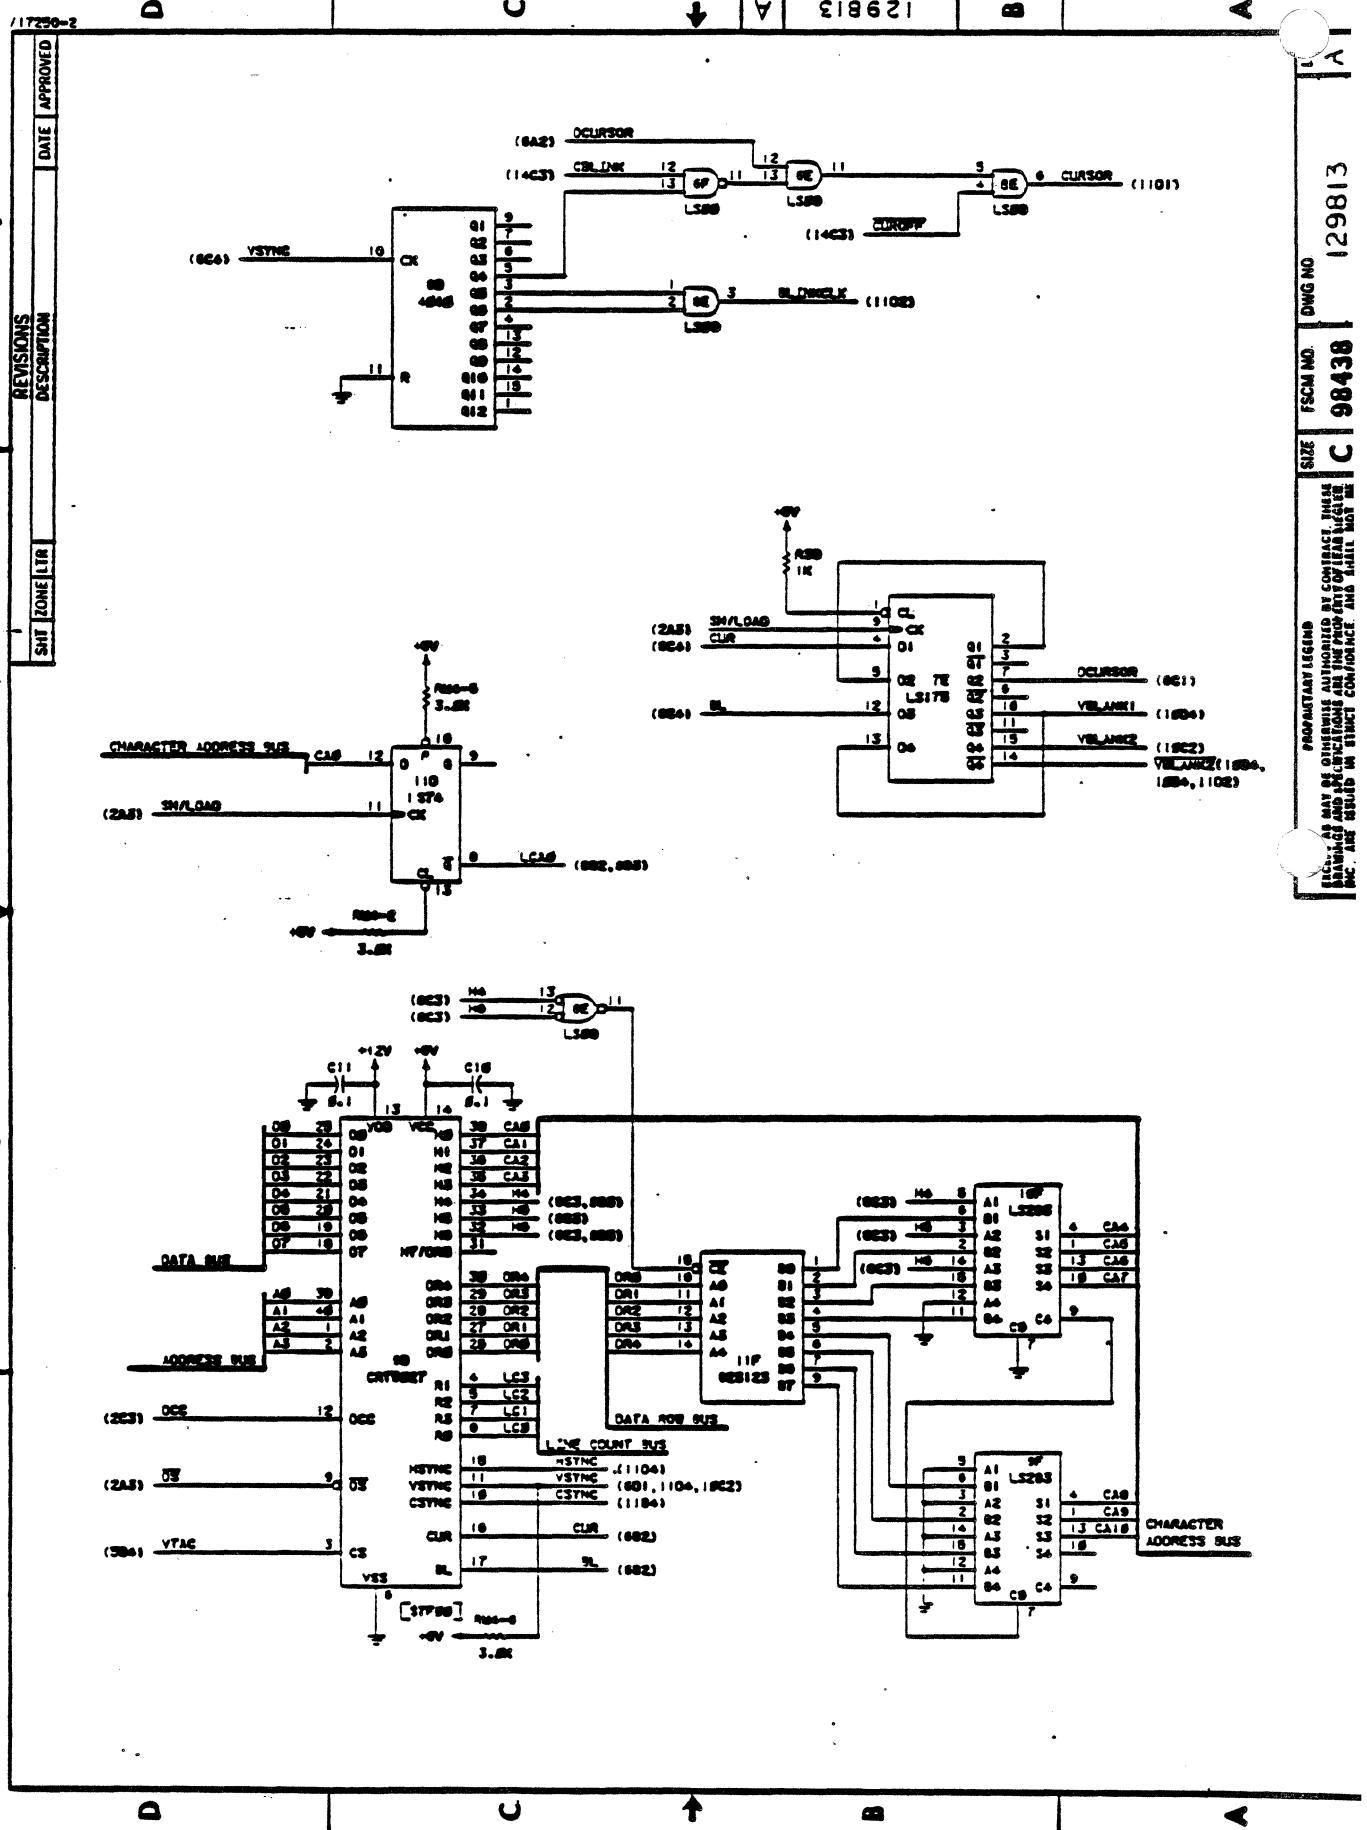

117281-1

2

U

6

126

6

1

NON-RESIDENT
SOCIETY

3

1

1

ADDRESS: 808

MULTIPLEXED ADDRESS BUS

CHARACTER ADDRESSES SUB

MULTIPLIED ADDRESS SUB

WALTERS LIBRARY

CUT RAMS ACCORDING TO

卷之三

WAT	8	SL	
WAT	9	SL	Y2
WAT	11		
WAT	13		
WAT	23	SL	Y3
WAT	24	3048	
WAT	31		Y1
WAT	31		
WAT	44		
WAT	13		Y4
	84	SL	
			Y16

1	2	3	4
5	S	A1	Y1
6	S1		
7	A4		
8	A4	164	Y4
9	A3	3848	
10	A3		Y3
11	B3		
12	A2		
13	A2		Y2
14	B2	E	

CAT RADI ACTIVITY 100%


卷之三

卷之三


PROPRIETARY LEGEND


EXCEPT AS MAY BE OTHERWISE AUTHORIZED
DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY

LTR
A
FSCM NO. DWG NO. 129813
C 98438

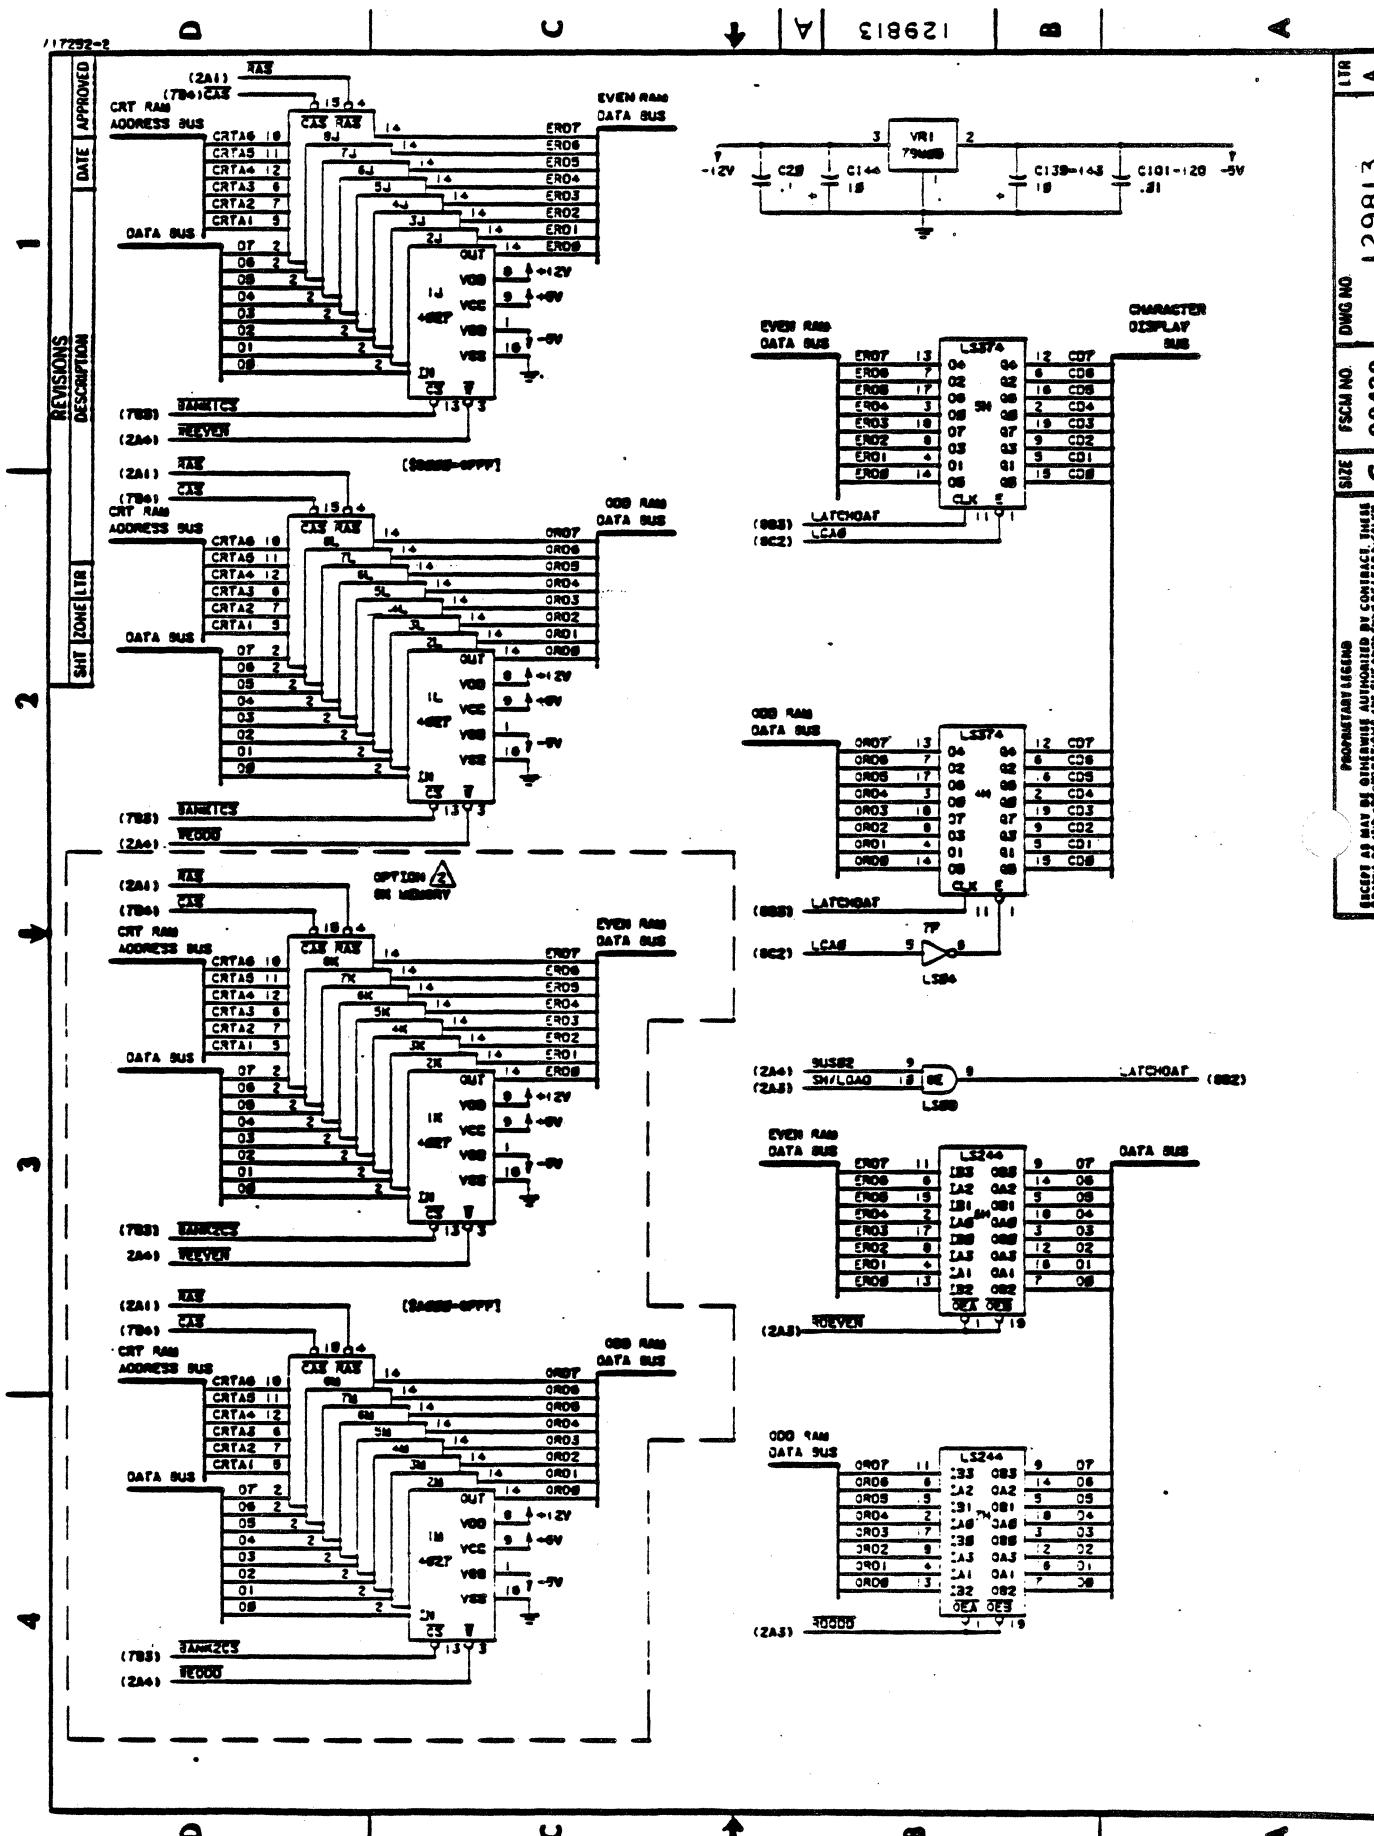

117233-2 D C A B A

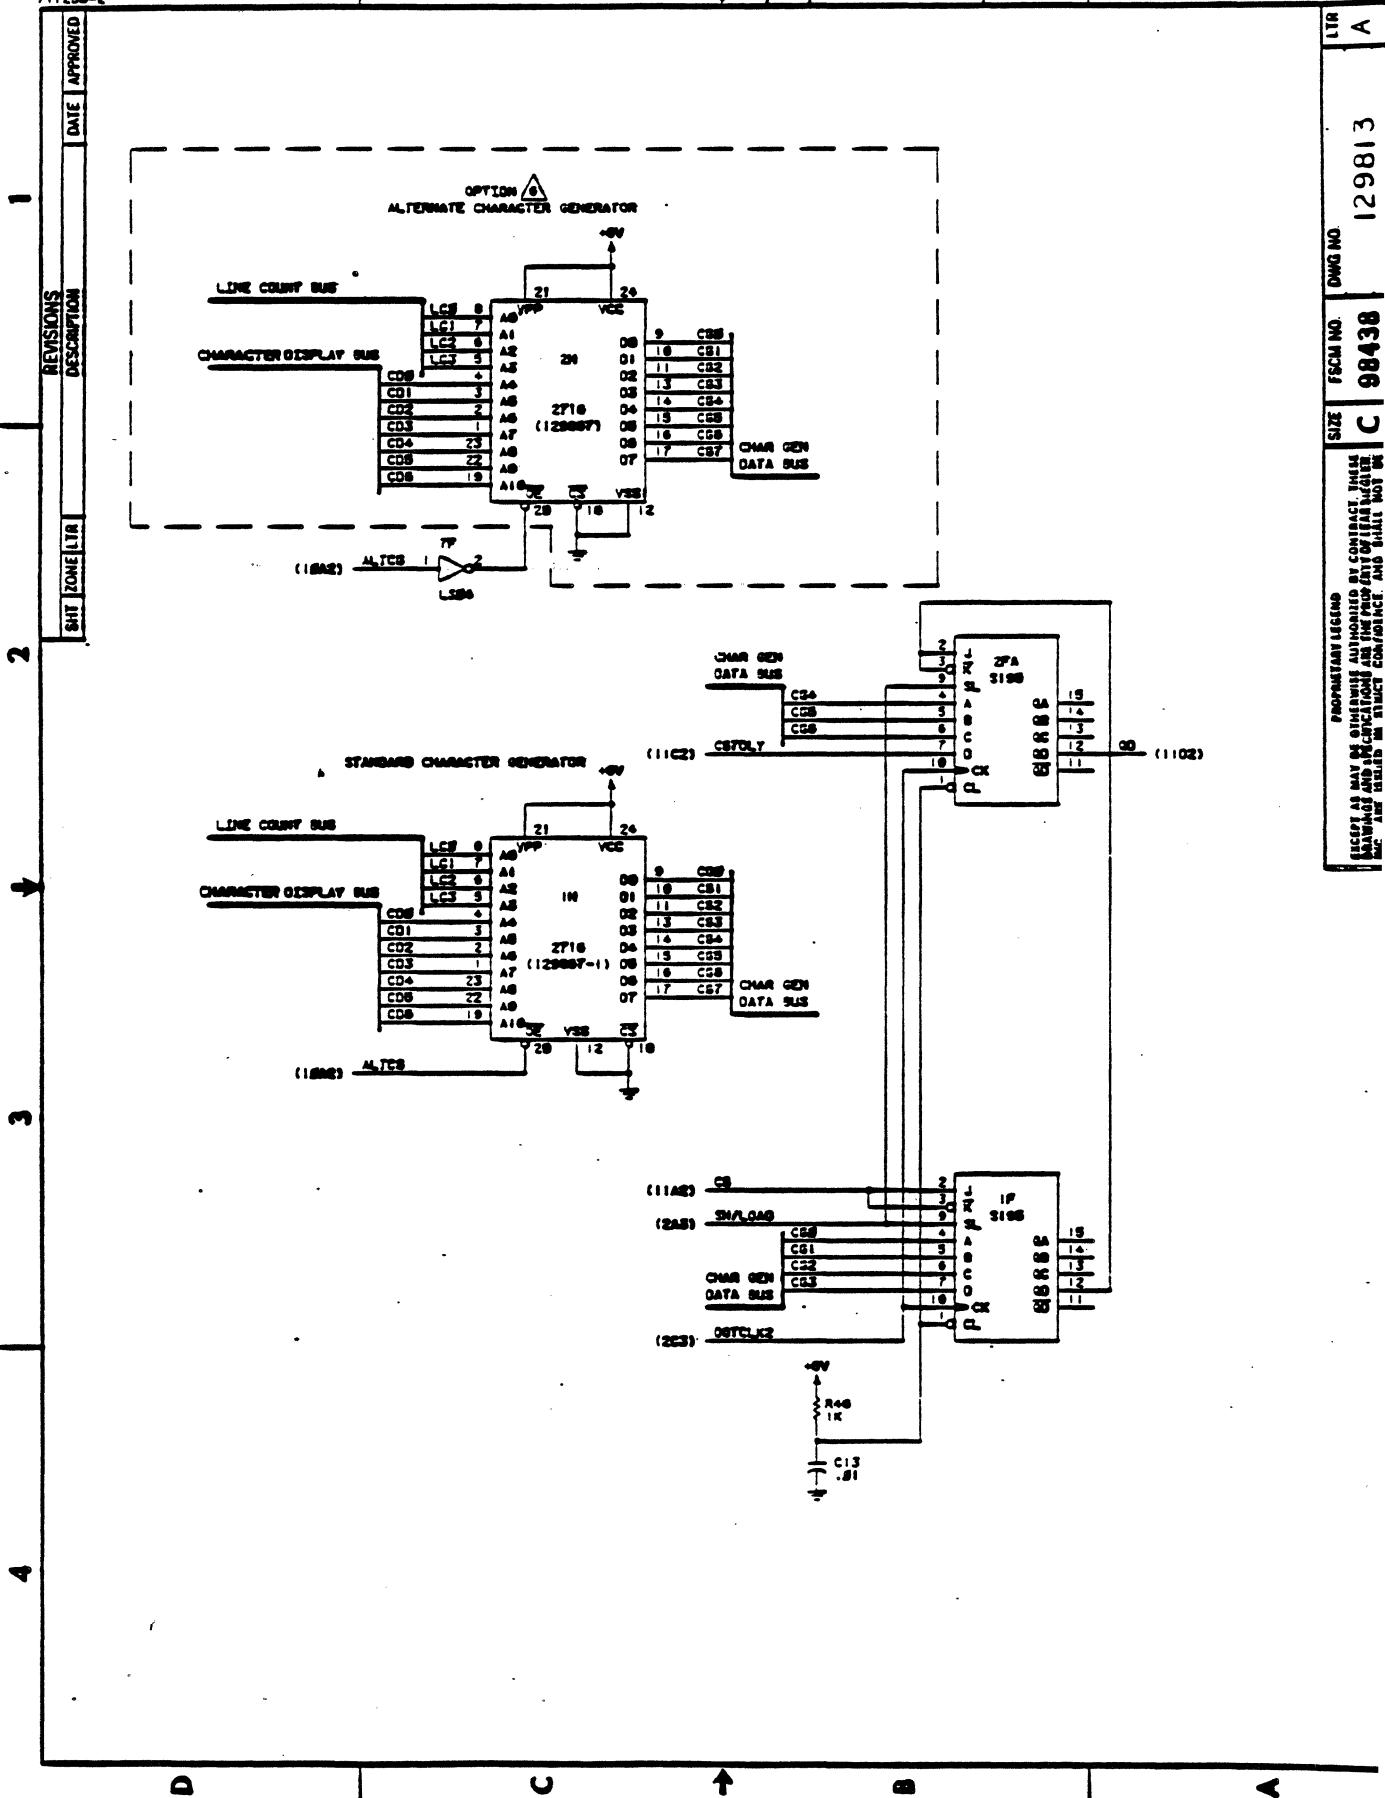

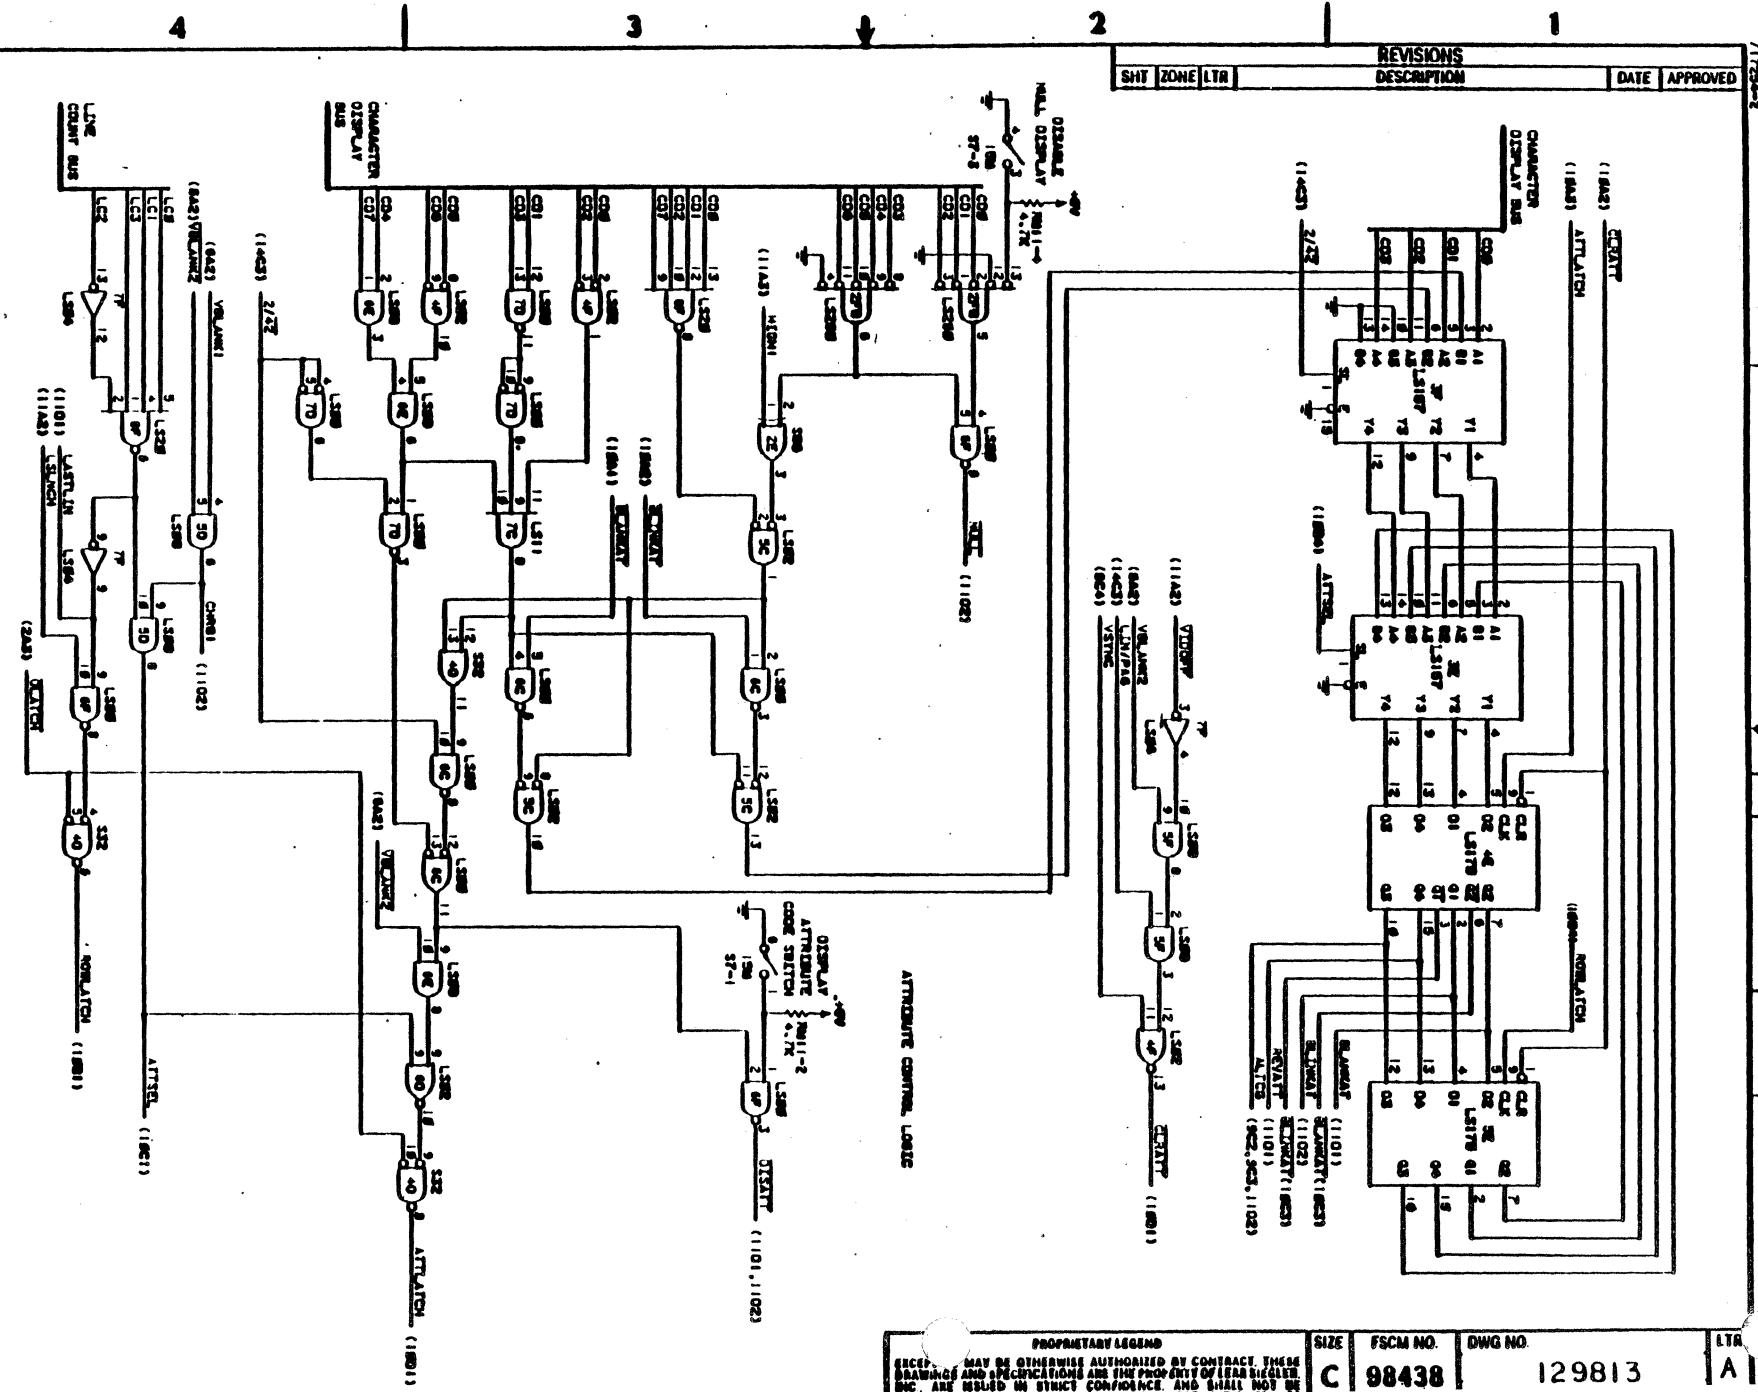

PROPOSITIONARY LOGIC

BE OTHERWISE AUTHORIZED BY
SPECIFICATIONS ARE THE PROPERTY
Held in strict confidence. AM

50

C | 9843


10M

129813

LTC

1

PROPRIETARY LEGEND
JACOB LABS INC. 1985. All rights reserved. No portion of this document may be reproduced without written permission from JACOB LABS INC.

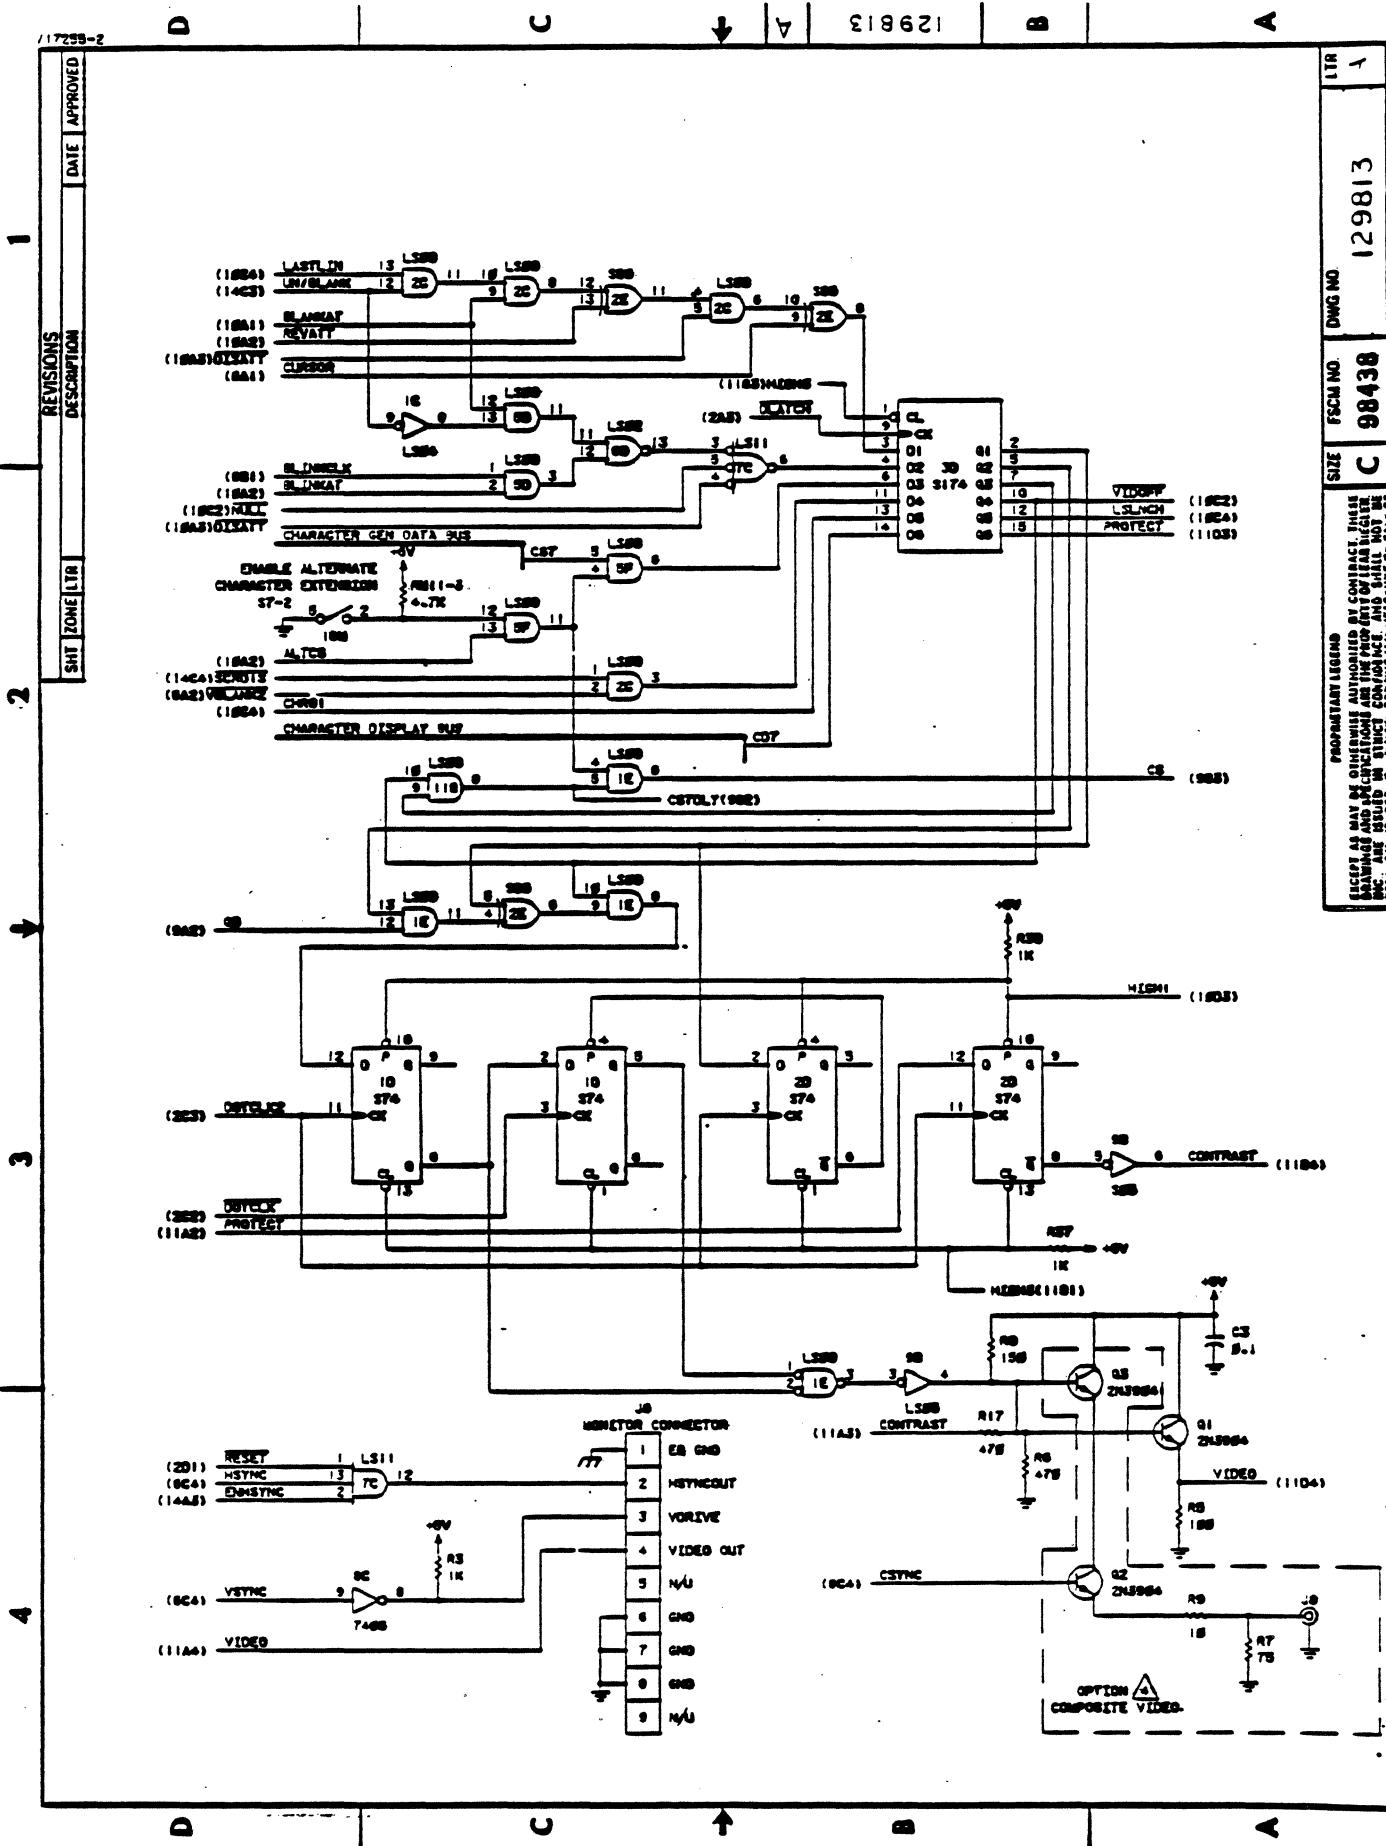

17298-2


D

C

B

129813 A

A

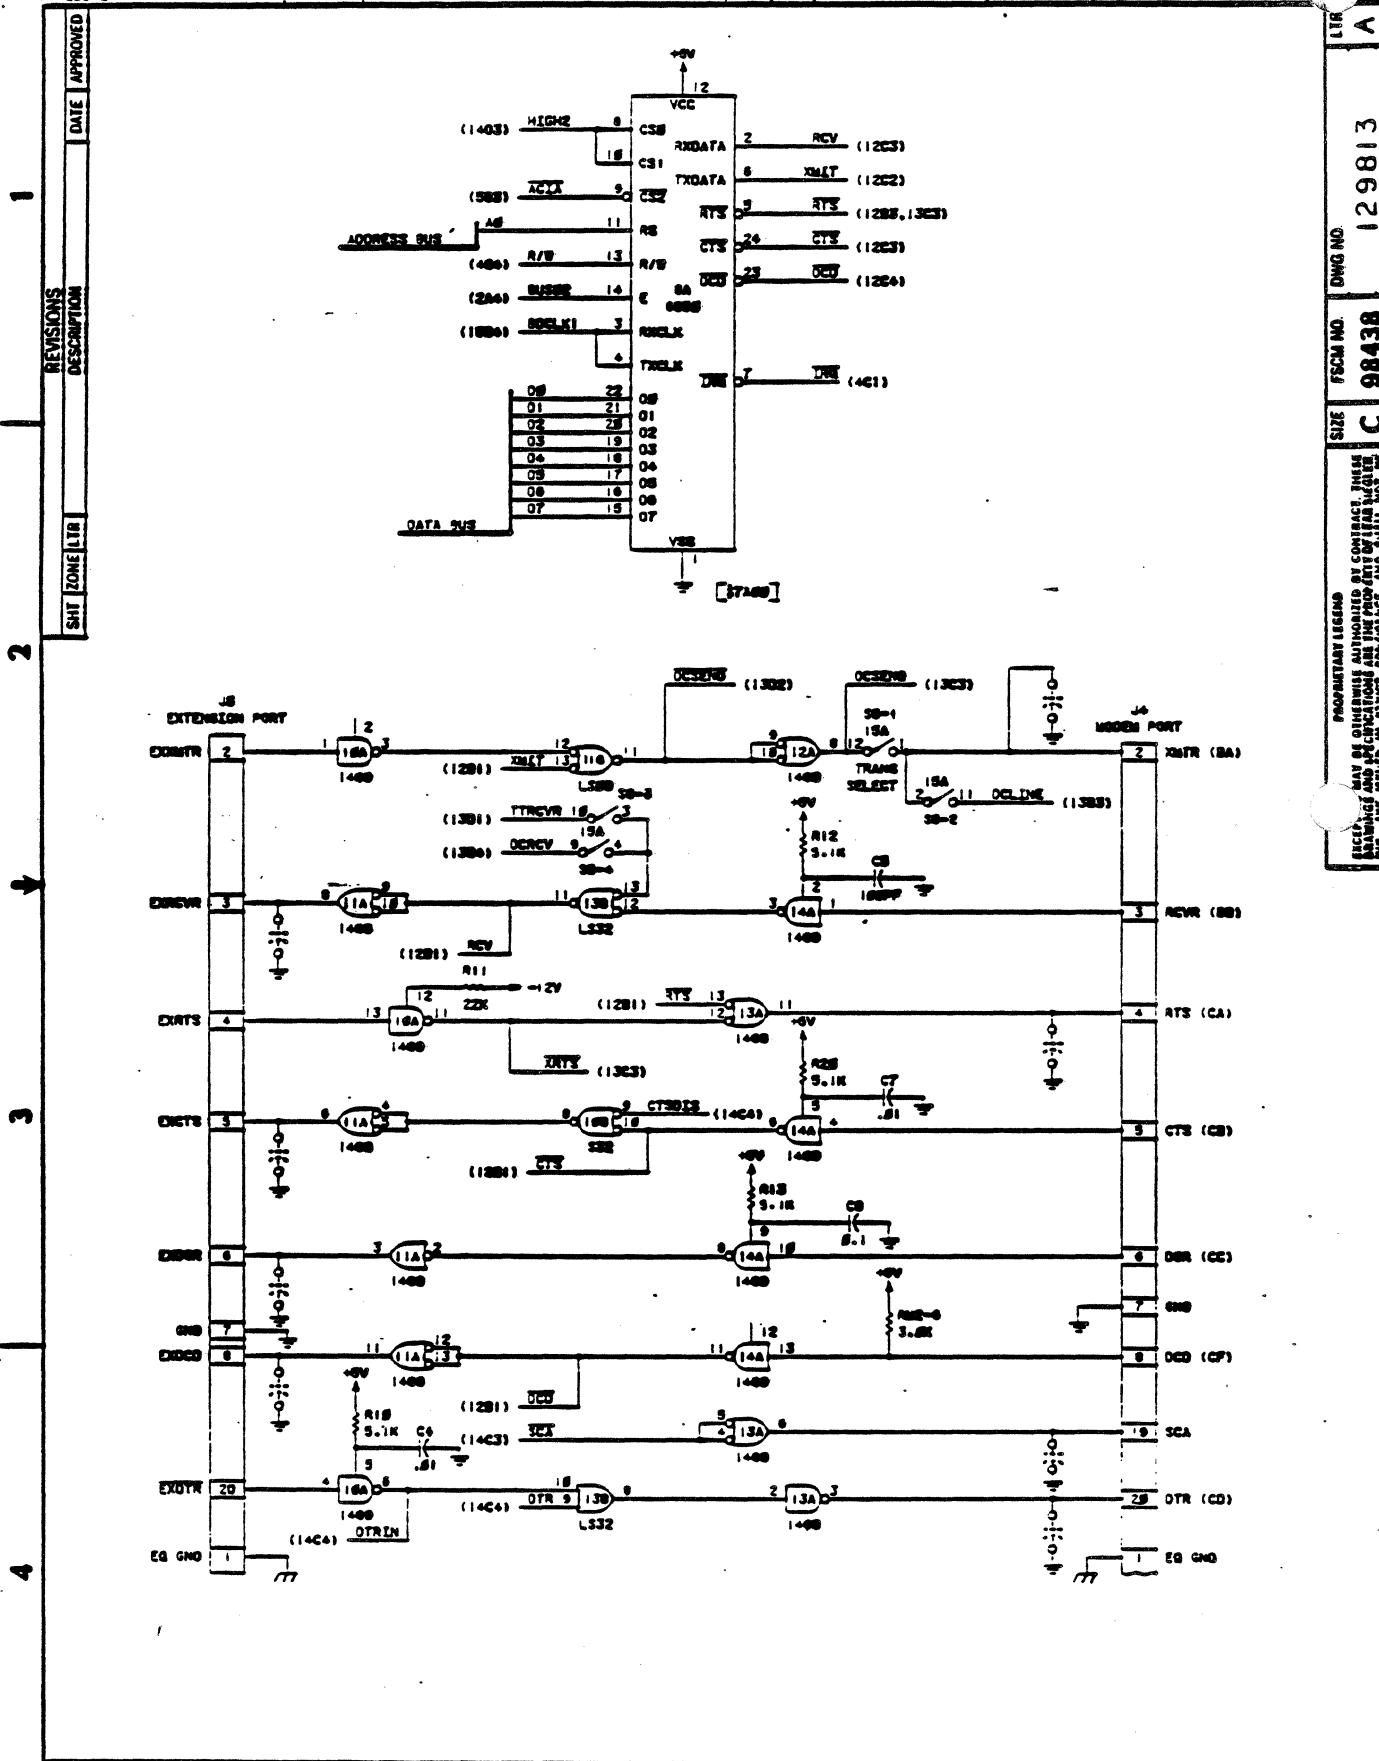

PROPRIETARY LEGEND
NOT TO BE ORGANIZED OR COPIED, THIS
DRAWING AND ITS SPECIFICATIONS ARE THE PROPERTY OF STANLEY
CORPORATION AND ARE NOT TO BE USED BY ANYONE EXCEPT
STANLEY CORP. OR ITS CONTRACTORS.

LIA

A

C 98438

129813

117-2

6


۳

1

12

4

REVISIONS	DESCRIPTION	DATE APPROVED
SAT ZONE 110		

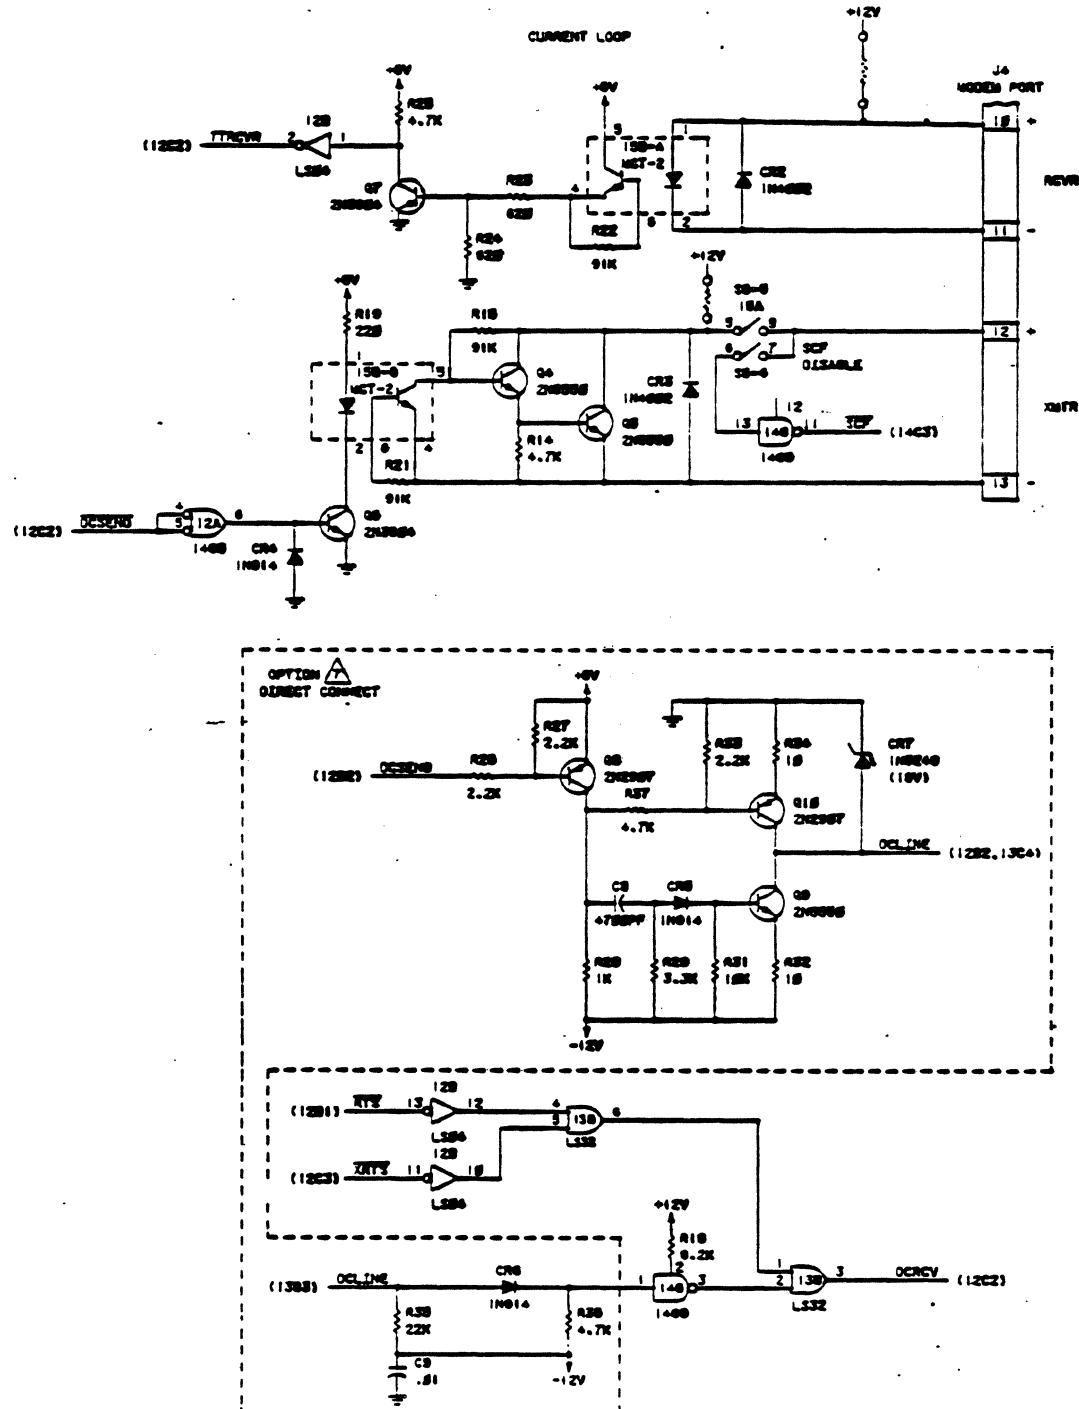

SHEET 1 OF 1

PROJECT NAME	SIZE	FCOM NO.	Dwg No.	LIN
PACIFIC AIR LINES	C	98438	219813	A

117298-2

1

U


1

129813

2


REVISIONS

SIL Zone 12

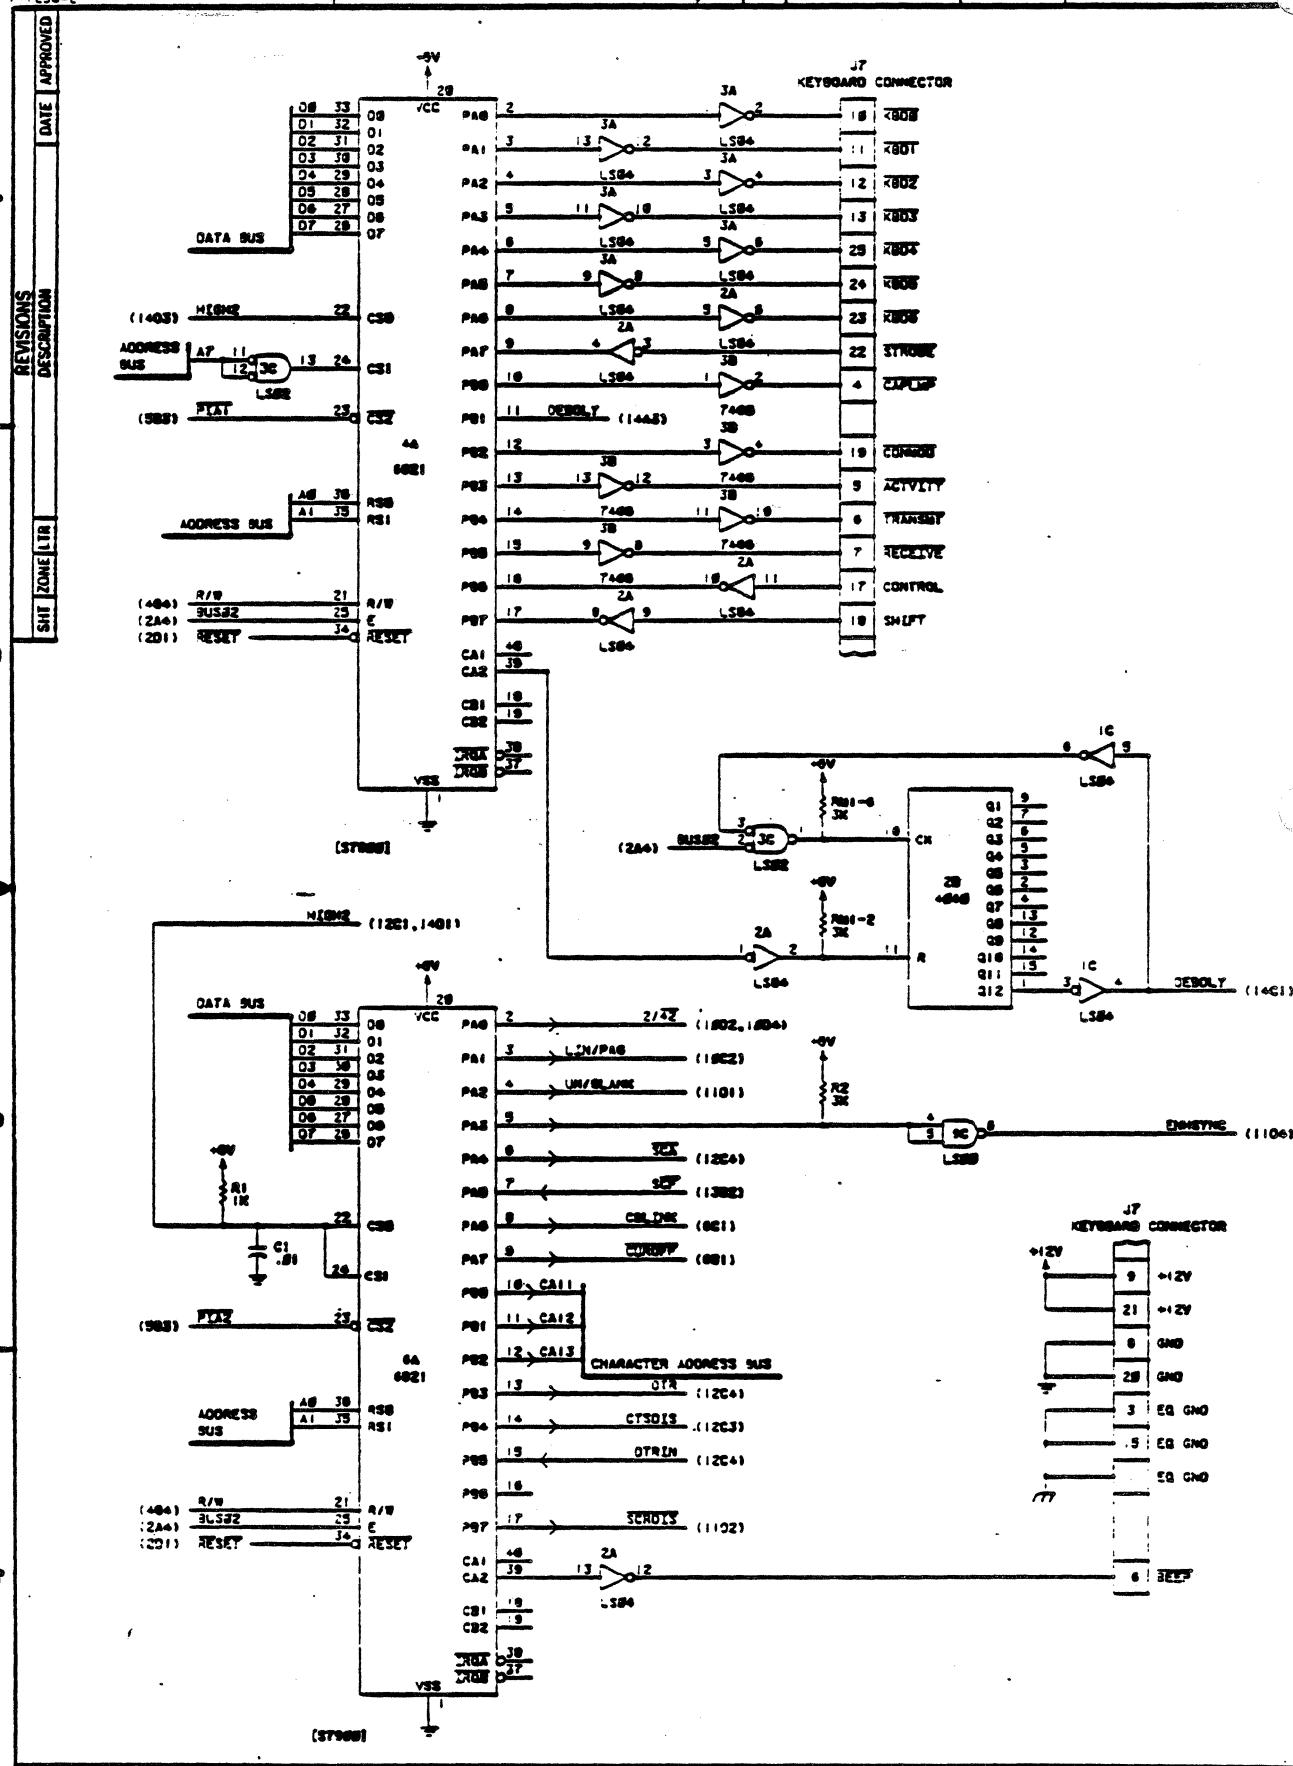

PROFESSIONAL LICENSE **SIZE** **FSM NO.** **DWG NO.**

CLASS C	C 9843A	129813
---------	---------	--------

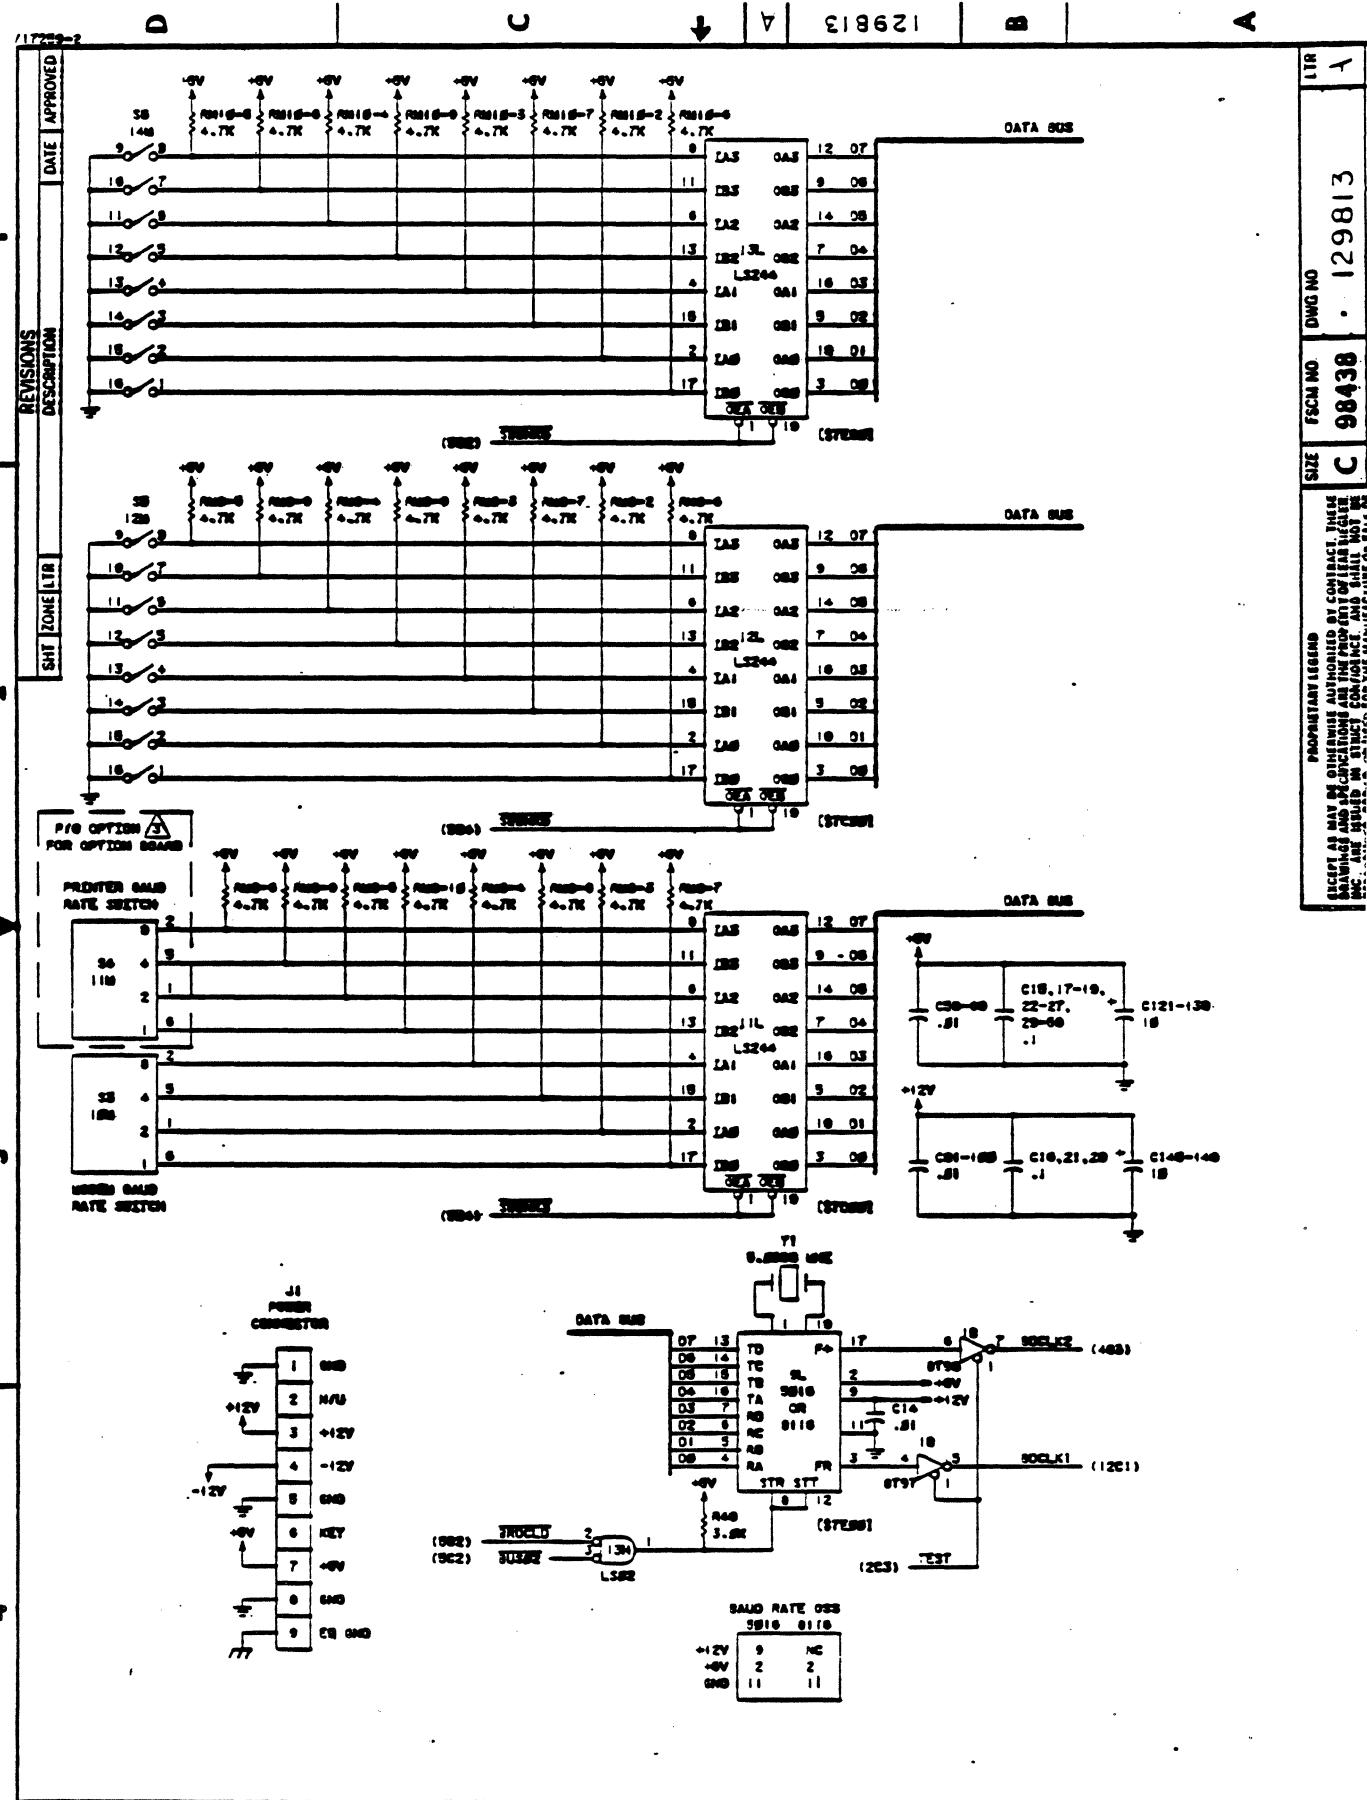

REVISIONS
DATE APPROVEDREVIEWS
DESCRIPTION
SHT ZONE LTR

PIN NO.	FUNCTION	REF
1	GND	1503
2	N/U	
3	+12V	1504
4	-12V	1504
5	GND	1504
6	KEY	1504
7	+12V	1504
8	GND	1504
9	EQ. GND	1504

J2 ADDRESS/DATA BUS

PIN NO.	FUNCTION	REF
1	A6	441
3	A7	441
5	A4	442
7	A6	442
9	A2	442
11	A3	442
13	A6	442
15	A1	442
17	A9	441
19	A11	441
21	A9	441
23	A16	441
25	A15	441
27	A13	441
29	A14	441
31	A12	441
33	GND	442
35	D8	442
37	D4	442
39	D7	442
41	D1	442
43	D2	442
45	D8	442
47	D3	442
49	D5	442
EVEN	GND	

J3 CONTROL SIGNALS

PIN NO.	FUNCTION	REF
1	N/U	
3	HALT	
5	IRET	401
7	N/R	402
9	N/U	
11	↑	
13	N/U	
15	N/U	
17	GND	
19	SA	
21	N/U	
23	N/U	
25	MECLK	443
27	GND	443
29	STSVMA	444
31	R/W	444
33	N/U	
35	BUSDR	443
37	N/U	
39	RESET	443
41	N/U	
43	GND	
45	GND	
47	GND	
49	GND	
EVEN	GND	

J4 MODEM

PIN NO.	FUNCTION	REF
1	EQ GND	12A4
2	XMT (BA)	12A2
3	RCVR (BB)	12A3
4	RTS (CA)	12A3
5	CTS (CB)	12A3
6	DSR (CC)	12A3
7	GND	12A3
8	OCD (CF)	12A4
9	N/U	
10	CL RCVR+	12A1
11	CL RCVR-	12A1
12	CL XMT+	12A2
13	CL XMT-	12A2
14	N/U	
15	N/U	
16	↑	
17	N/U	
18	SCA	12A4
19	OTR (CD)	12A4
20	N/U	
21	N/U	
22	↑	
23	N/U	
24	N/U	
25	↓	

J5 EXTENSION

PIN NO.	FUNCTION	REF
1	EQ. GND	1204
2	XMT (BA)	1202
3	RCVR (BB)	1203
4	RTS (CA)	1203
5	CTS (CB)	1203
6	DSR (CC)	1203
7	GND	1203
8	OCD (CF)	1204
9	N/U	
10		
11		
12		
13		
14		
15		
16		
17		
18		
19	N/U	
20	OTR (CD)	1204
21	N/U	
22		
23		
24		
25	N/U	

J6 MONITOR

PIN NO.	FUNCTION	REF
1	EQ. GND	11C4
2	HSTNC	11C4
3	VSTNC	11C4
4	VIDEO	11C4
5	N/U	11C4
6	GND	11C4
7	GND	11C4
8	GND	11C4
9	X/0	11C4

J7 KEYBOARD

PIN NO.	FUNCTION	REF
1	EQ. GND	1444
2	N/U	
3	EQ. GND	1444
4	CAPLMG	1481
5	ACTIVITY	1482
6	TRANSIT	1482
7	RECEIVE	1482
8	GND	1443
9	+12V	1443
10	KBD8	1481
11	KBD7	1481
12	KBD2	1481
13	KBD3	1481
14	N/U	
15	EQ. GND	1444
16	BEEP	1444
17	CONTROL	1482
18	SHIFT	1482
19	COMMON	1482
20	GND	1444
21	+12V	1443
22	STROBE	1481
23	KBD6	1481
24	KBD5	1481
25	KBD4	1481

J8 COMPOSITE VIDEO (OPT.)

PIN NO.	FUNCTION	REF
1	VIDEO	11A4

PROPRIETARY LEGEND
EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS ARE THE PROPERTY OF IBM CORPORATION
AND ARE BEING FURNISHED IN CONFIDENTIALITY.
REPRODUCTION OR DISSEMINATION OF THESE DRAWINGS OR PORTIONS THEREOF IS PROHIBITED UNLESS EXPRESSLY
AUTHORIZED IN WRITING BY IBM CORPORATION.

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC. OCN 537 ADD SH.4. <i>W.E. Kelly 2-22-80</i> ADDED LSI P/N's ON SHEET 2, PARTS LIST	3-4-80 3/6/80	<i>W. Kelly</i> <i>B. L. Anderson</i>

-11	129542	
-1	129841	DL129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED	DR <i>W. Kelly 7-2-79</i>	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
DIM. IN INCHES	CHK			
TOLERANCES	DSGN	<i>CABLE ASSY - KEYBOARD</i>		
X ± .1	ENGR			
.XX ± .03	PROJ <i>W. Kelly 8-8-79</i>			
XXX ± .010	REL <i>R. King Anna 9/1/84</i>	SIZE	CODE IDENT	REV
ANGLES ± 0.5°	CUSTOMER APPD	A	98438	129817 A
MACH. FIN.		SCALE		SHEET 1 OF 4
✓				

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-11 -1				
1		✓	129817 -1	CABLE ASSY (48)	
2	✓		129817 -11	CABLE ASSY (96)	
3					
4					
5	1 1		809058	PLUG, HOUSING	
6	1 1		809078	CABLE CLAMP	
7	22 22		809079	CONTACT, PIN, 24-20	
8	1 1		809262	HOUSING	
9	22 22		809083	CONTACT, 2759T, 22-30	
10	1 1		809047	KEY, POLARIZING	
11					
A	4 1/2 4 1/2		129726 -1	CABLE	
SIZE					
98438					
FSCM NO.					
129817					
SH					
2					
REV					
4					
25					


LINE NO.	TERMINATION INFORMATION					WIRE INFORMATION				
	CABLE NO. -/-11)	WIRE NO. OR COLOR	TCU FROM		KBD TO		FIND NO./NOTES		ROUTING	LGTH
			REF DES	PIN	REF DES	PIN	FROM END	TO END		
1										
2										
3	WH/BK/BR	P7	3	P1	2		7		9	
4	VIO		4		8					
5	WH/BK/RD		5		11					
6	BLU		6		10					
7	WH/BK/BR		7		9					
8	WH/GY		8		12					
9	GRN		9		6					
10	WH/VIO		10		22					
11	WH/BLU		11		21	5,				
12	YEL		12		20	6,	1			
13	WH/GRN		13		19	14	7		9	
14	—		—		3	▲	—		10	
15	GRY		15		1	▲	7		9	
16	BLK		16		7					
17	WHT		17		15					
18	WH/BLK		18		14					
19	BRN		19		23					
20	WH/BRN		20		4					
21	WH/RD		21		5					
22	RED		22		18					
23	WH/ORG		23		17					
24	ORG		24		16					
25	WH/YEL	P7	25	P1	13		7		9	

CODE NOTES:


- STRIP OUTER JACKET 2 INCH
 STRIP OUTER JACKET 1 INCH.
 FAN PI PER DETAIL 1
 MARKER, F/N 14, SHALL EXTEND INTO CABLE CLAMP, F/N 6.

7-2001P (7-64)

SIZE A	CODE IDENT 98438	129817	REV A
SCALE		SHEET 3	

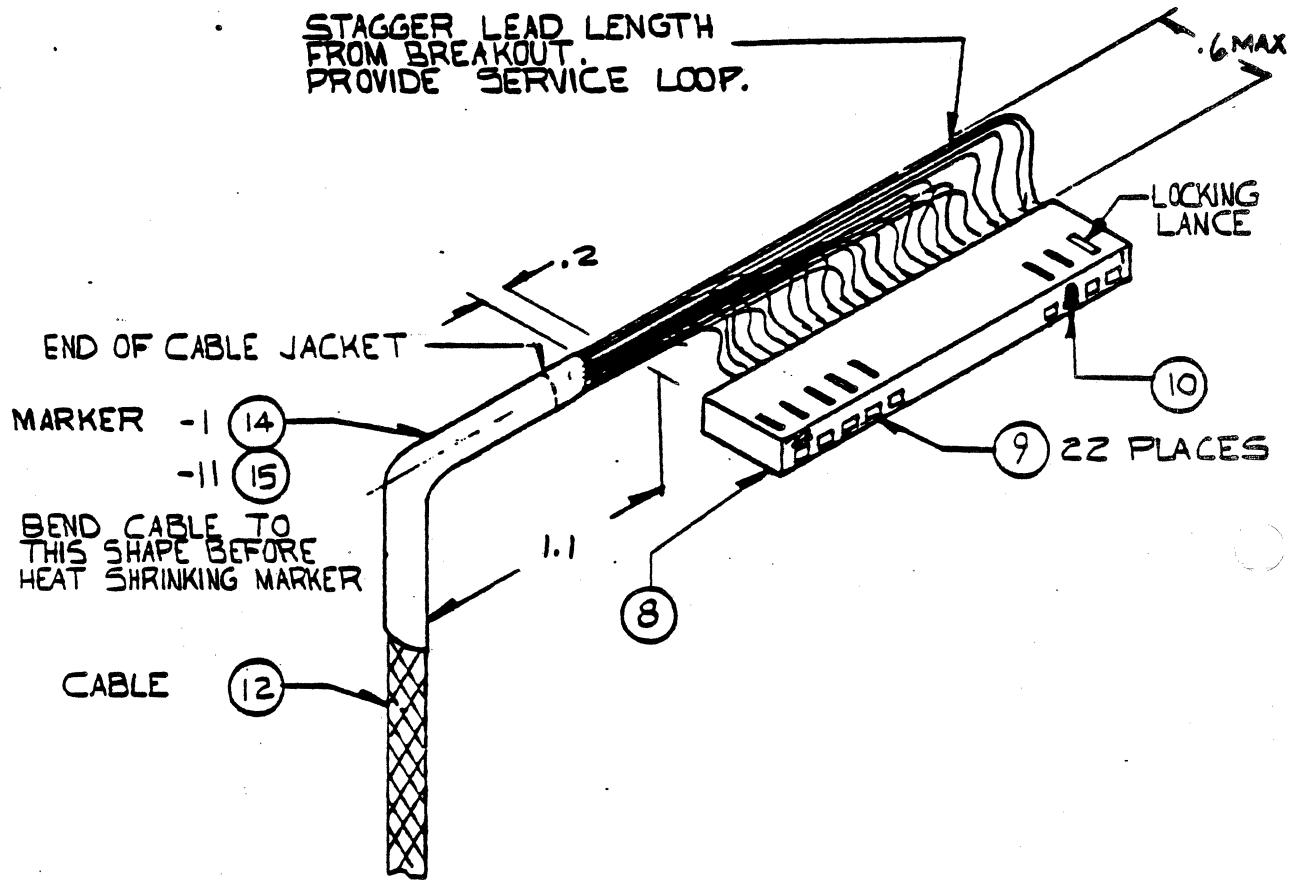


DETAIL I

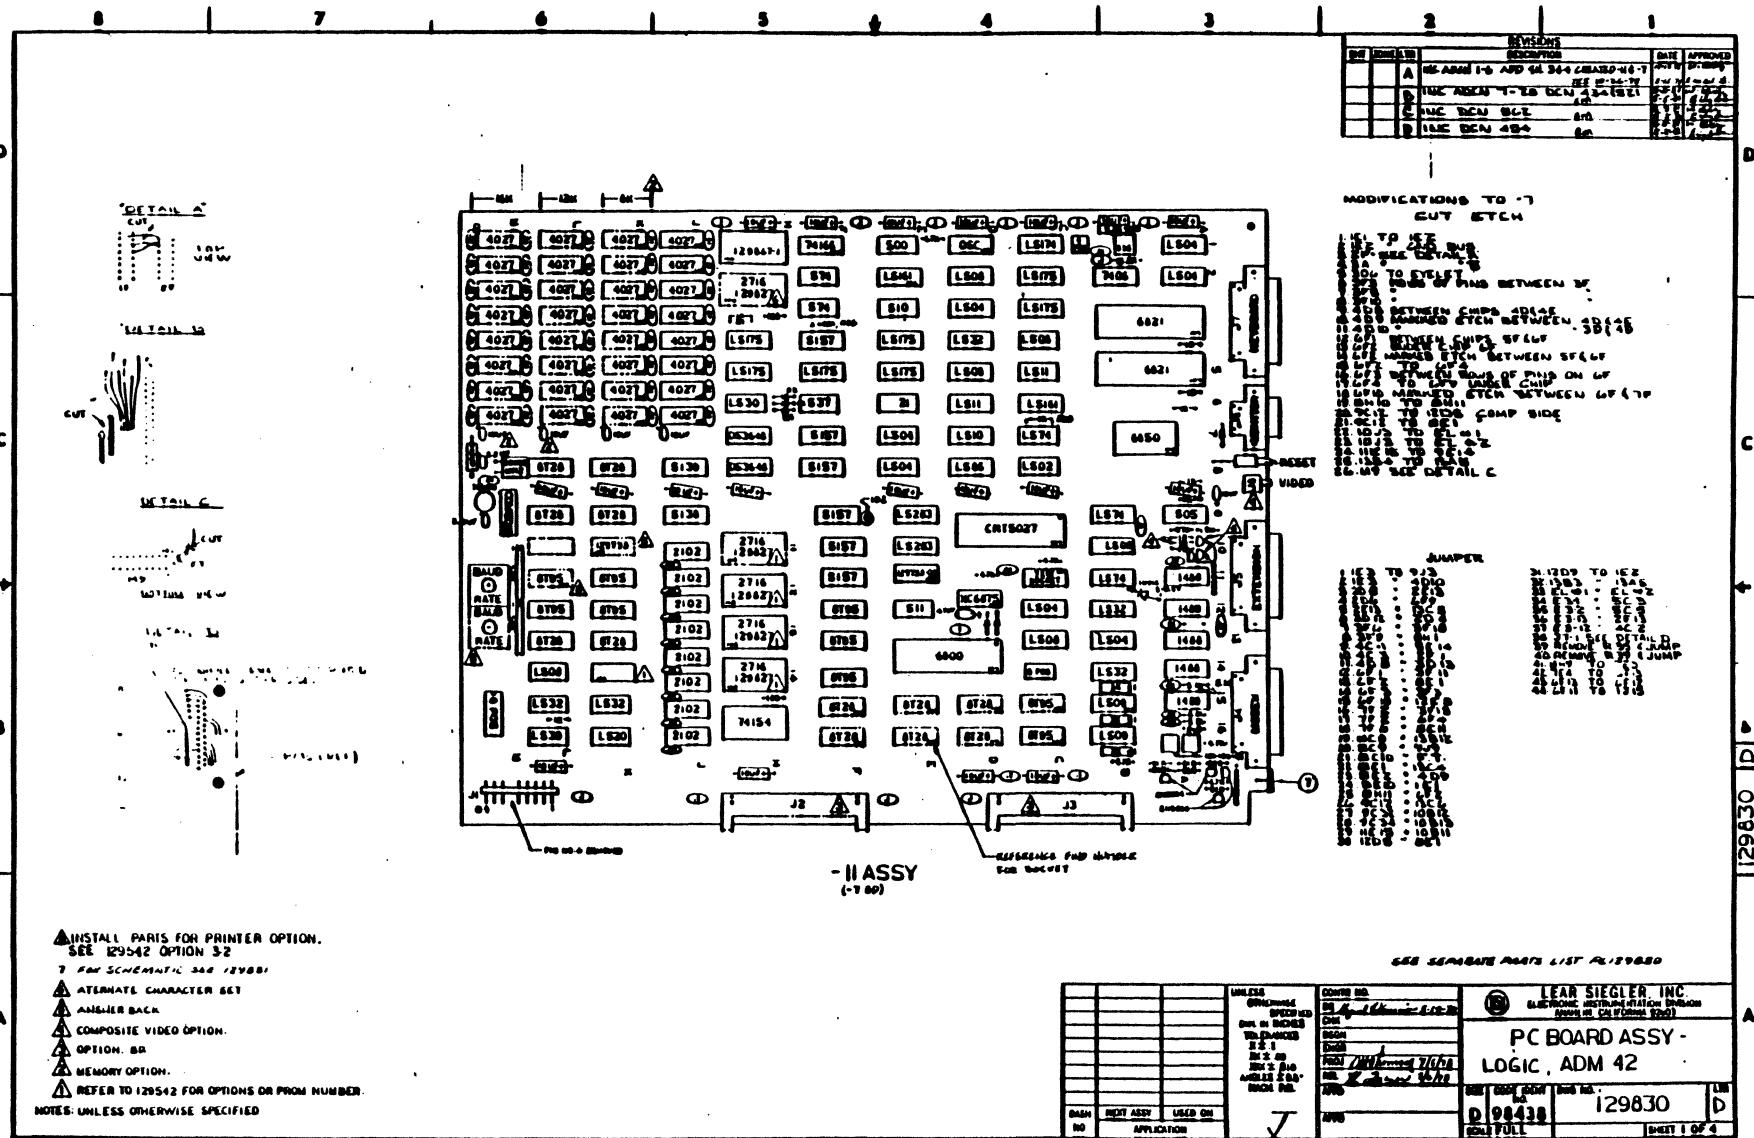

- ▲ INSTALL PARIS FOR PRINTER OPTION.
SEE 129542 OPTION 32**
- ▼ FOR SCHEMATIC SEE 129581**
- ▲ ALTERNATE CHARACTER SET**
- ▲ ANGLE BACK**
- ▲ COMPOSITE VIDEO OPTION.**
- ▲ OPTION. BR**
- ▲ MEMORY OPTION.**
- ▲ REFER TO 129542 FOR OPTIONS OR PROM NUMBER**

NOTES: UNLESS OTHERWISE SPECIFIED

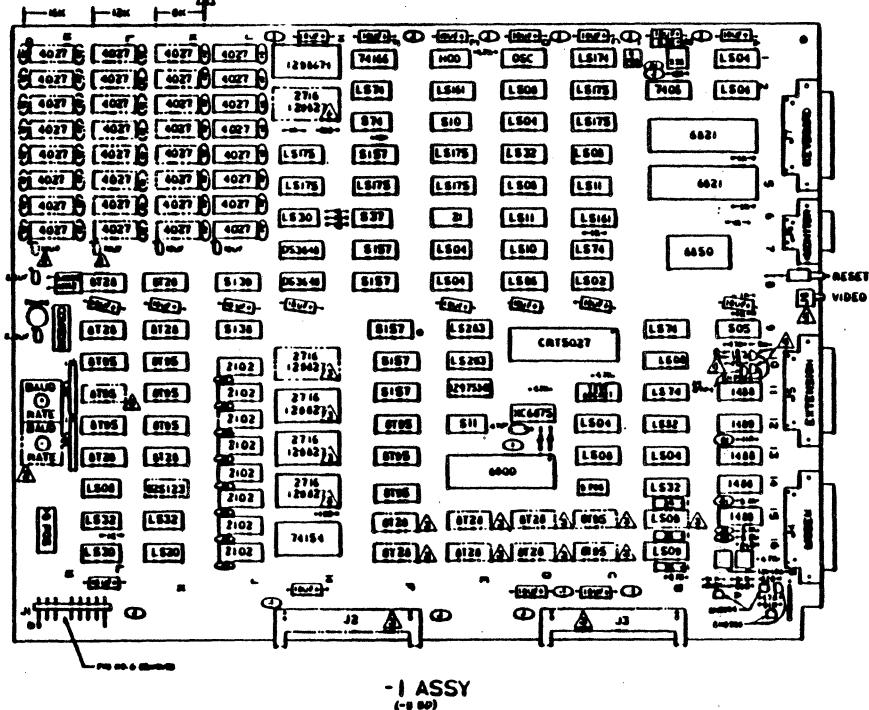

-  ALTERNATE CHARACTER SET
-  COMPOSITE VIDEO OPTION.
-  OPTION: 8A
-  MEMORY OPTION.
-  REFER TO 129512 FOR OPTIONS OR FROM NUMBER.

NOTES: UNLESS OTHERWISE SPECIFIED

**MODIFICATIONS TO -5
CUT ETCH:**

1.70-10 TO PLATE THIN ON CAT THE
 2.15-10 CAT LEAD CLOTH (DO NOT CUT) EACH SIDES
 2.15-12 TO PLATE THIN ON CAT LEAD
 2.15-13 TO PLATE THIN ON CAT LEAD
 2.15-14 CLOTH TAPE
 2.15-15 CAT LEAD
 2.15-16 CAT LEAD
 2.15-17 TO PLATE THIN ON CAT LEAD
 2.15-18 TO PLATE THIN ON CAT LEAD
 2.15-19 TO PLATE THIN ON CAT LEAD
 2.15-20 TO PLATE THIN ON CAT LEAD

ADD JUMPERS

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC. ADCN 1 THRU 7 FIN 71 ASSY 3 WIRE DELETE L4 129486-3 SPACER ADDED SMT 6 TES 10-23-78	11-15-78	W. Kelly
B		INC ADCN 8-Z1. DCN 434, 458 & 520. RM - 4-11-80	4-11-80	R. M. Albritton
C		INC DCN 562 RM 4-11-80	4-11-80	W. Kelly
D		INC DCN 454 RM 9-11-80	4-11-80	W. Kelly
			4-17-80	B Hydeman
			4-17-80	B Hydeman
			4-17-80	B Hydeman

-1	129840	DL129810
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES X ± .1 XX ± .03 XXX ± .010 ANGLES ± 0.5° MACH. FIN. ✓	DR W. Kelly 4/24/78	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
	CHK	 P.C. BOARD ASSY - ADM 42 LOGIC		
	DSGN			
	ENGR	REL JV Turner 5/3/78		
	PROJ			
	ANGLE	SIZE	CODE IDENT	REV
	MACH. FIN.			
	CUSTOMER APPD	A	98438	D
		SCALE		SHEET 1 OF 6

FIND NO.	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-11	-1				
1		✓		-1	P.C. BOARD ASSY - ADM42 LOGIC	
2		✓		-11	" " " " "	
3						
4						
5		1		-5	PRINTED WIRING BOARD	
6		1		-7	" " "	
7		1	129746-121	CLOSURE		
8		1	129762-3	OSC		
9		1	811016 800A-5.0688 MHz	CRYSTAL		STANDARD CRYSTAL
10		8	8 129473-3	JACK SOCKET		
11		3	3 809017 206584-1	CONN, 25 PIN		AMP
12		1	1 804048 8125AV2	SWITCH		C&K
13						
14		1	1 804017 212794	SWITCH		EECO
15						
16		1	1 809106 09-75-1091	CONN		MOLEX
17		1	1 804060 435640-5	SWITCH, 8 POS		AMP
18		1	1 435640-3	SWITCH, 5 POS		AMP
19		1	1 435640-2	SWITCH, 4 POS		AMP
20		2	2 819046 785-1-R4.7K	RESISTOR MODULE 4.7K		BECKMAN
21		1	1 809185 207084-2	CONN, 9 PIN		AMP 105206-1 17-1370 MM
22		1	1 129476-472	RESISTOR MODULE, 4.7K		
23		3	3 129476-302	RESISTOR MODULE 3K		
24						
REV D		R _{EF}	R _{EF}	129831	SCHEMATIC	

FIND NO.	QTY REQD			STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		-11	-1				
26		1	1		129467-02	L5 TYPE	
27		7	7		-04		
28		6	6		-08		
29		2	1		-09		
30		1	1		-10		
31		2	2		-11		
32		1	1		-20		
33							
34		2	2		-30		
35		5	5		-32		
36		3	4		-74	L574	
37		1	1		-86		
38		2	2		-161		
39		1	1		-174		
40		7	7		-175		
41		2	2		-283		
42		1			129826-00	IC TYPE 74500	1E
43		1	1		129826-05	S TYPE	
44		1	1		-10		
45		1	1		-11		
46		1	1		-37		
47		2	1		-74	S74	
48		1	1		-138		
49		1	1		-139		
50		6	6		-157		

A
SIZE
98438
FSCM NO.

P/L/29830
REV D

FIND NO.	QTY REQD			STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		-1	-1				
51		/			128348-00		
52		/	/		-06		
53		/	/		-154		
54		/	/		-166		
55		3	3		-1488		
56		2	2		-1489		
57		2	2		-3648		
58		/	/		-8116		
59		/	/		-5027		
60		12	6		-BT28		
61		B	8		-BT95		
62		/	/		-555		
63		/	/		-21		
64		/	/		128348-79M05		
65		/	/		129824-6800		
66		2	2		-6821		
67		/	/		-6850		
68		/	/		-6875		
69		/	/		129867-1	CH GEN.	
70		2	2		129498-01	OPT ISOLATOR	
71		4	4		129827-00	2716 PROM	
72							
73		/	/		129753-05	PROM RDDR TRANS	
74		8	8		129466-4027	RAM	
75		8	8		128348-2102A		

A

SIZE
FSCM NO.
98438

PL/29830

REV D

FIND NO.	QTY RECD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-11	-1				
76	1	1	808005	IN4002	DIODE	
77	2	2	808042	IN914	DIODE	
78	3	3	810001	2N3904	TRANSISTOR	
79	2	2	810004	2N5550	TRANSISTOR	
80						
81	1	1		129875-104	CAP. .1UF 5 %	
82	34	29		129876-103	CAP .01 UF	
83	13	13		129876-104	.1 UF	
84	2	2		128518-225	2.2 UF	
85	20	19		129469-106	10 UF	
86	3	2		128518-106	10 UF	
87	1	1		129468-4751	4.7 UF, 25V	
88	1	1		129885-1822	RES, 18.2 K 1%	
89	5	5		128533-150	RES. 15	
90	1	1		-241	240	
91	2	2		-471	470	
92	2	2		-621	620	
93	9	9		-102	1K	
94	6	6		-472	4.7K	
95	4	4		-512	5.1K	
96	1	1		-113	11K	
97	3	3		-913	91K	
98						
99	3	2		-101	100	
100	1	1		-151	150	

SIZE
AFSCM NO.
98438

SH

PL/29830

REV D

FIND NO.	QTY READ	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	/ /	/ /			
101					
102	1 1		129747-3	SPACER, P.C. BOARD	
103	1 1	839012	7717-5 DAP	INSULATOR	THERMALLOY
104					
105	39 13	802031	640358-3	SOCKET 16 PIN	AMP
106	1 1	802032	640359-3	SOCKET 18 PIN	"
107	2 3	802030	640357-3	SOCKET, 14 PIN	"
108	7 7	802033	640361-3	SOCKET, 24 PIN	"
109	4 4	802034	640379-3	SOCKET, 40 PIN	"
110					
111					
112					
113					
114					
115					
116					
117					
118					
119					
120					
121					
122					
123					
124					
REV D	5				

A
SIZE
FSCM NO.
98438

PL/29830
6

REV

4

3

2

3

REVISIONS DESCRIPTION

		REVISIONS		DATE	APPROVED
SHT	ZONE	LTR	DESCRIPTION		
	A		RELEASED PER DCH	4-27-00	J. STANLEY
	B		INC. DCH GAS	4-27-00	R. GIFFORD

1

1

STANDARD FORM 129030-7

OIC

- | | | | | |
|--------------------------|-------------------------------------|-------------------------------------|--------------------------|----------------------|
| UNDERLINE | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | BLANK ATTRIBUTE |
| DSPLY ATTRIBUTE AS SPACE | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | DSPLY ATTRIBUTE CODE |
| GRAPHICS ENABLED | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | GRAPHICS DISABLED |
| DSPLY NULL AS SPACE | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | DSPLY NULL AS NULL |

0146
SA - SUB 1000/SECONDARY SNAKE

- CURB LOOP AND
SECONDARY CHAN CTRL { 0 1 0 } CURB LOOP AND
EXTERNAL TRISTATE BUS ENA { 0 2 0 } SECONDARY CHAN CTRL
DATA BUS ENABLE CTRL { 0 3 0 } EXTERNAL TRISTATE BUS DIS
{ 0 4 0 } DATA BUS ENABLE CTRL

S6-1	S6-2	S6-4	S6-5	FUNCTION
ON	OFF			CURR LOOP ENABLED
OFF	ON			SECONDARY CHAN ENABLED
OFF	OFF			CURR LOOP AND SECONDARY CHAN DISABLED
ON	ON			MAY CAUSE DAMAGE TO UNIT
		OFF	ON	INTERNAL DATA BUS ENABLED
		ON	OFF	EXTERNAL DATA BUS ENABLED
		OFF	OFF	NOT DEFINED
		ON	ON	MAY CAUSE DAMAGE TO UNIT

THE LOCATIONS AND FACTORY SETTINGS OF THE CONFIGURATION CONTROL SWITCHES SHOWN
APPLY TO:

PRINTED MIXING BOARD 129830-7
OPTIONAL PRINTED MIXING BOARD 129832-5

IF YOU NEED TO MAKE CHANGES, PLEASE REFER TO THE OPERATOR'S MANUAL.

NOTES: 1. Switch Position ON = Closed = Logical 0
2. Switch Position OFF = Open = Logical 1

CAUTION

IN COLD CLIMATES, CARE SHOULD BE EXERCISED TO ALLOW THE TEMPERATURE OF THE TERMINAL TO EQUALIZE WITH ROOM TEMPERATURE BEFORE REMOVING THE UNIT FROM THE SHIPPING CARTON; THIS WILL PREVENT MOISTURE FROM CONDENSING ON A COLD TERMINAL EXPOSED TO WARM AIR. AVOID OPERATING THE UNIT ON A SOFT SURFACE, SUCH AS CARPETING, WHICH WOULD OBSTRUCT THE FLOW OF COOLING AIR IN THROUGH THE BOTTOM OF THE CHASSIS. THIS COULD RESULT IN OVERHEATING AND DAMAGE TO THE UNIT.

**UNLESS OTHERWISE
SPECIFIED:**
DIM IN INCHES
TOLERANCES:
X .⁺0 .⁻
XX .⁺0 .⁻03
XXX .⁺0 .⁻10
ANGLES: +0 .⁵

PROPRIETARY LEGEND

EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR Siegler, INC., ARE ISSUED IN STRICT CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED, OR USED FOR THE MANUFACTURE OR SALE OF THE APPARATUS WITHOUT WRITTEN PERMISSION.


LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION
ANAHEIM, CALIFORNIA 92803


**ADM-42 CONFIGURATION
CONTROL SWITCH SETTINGS**


15

SIZE C	FSCM NO. 98438	DWG NO. CS129830-7	LTR B
SCALE		SHEET	OF

**ltr
B**

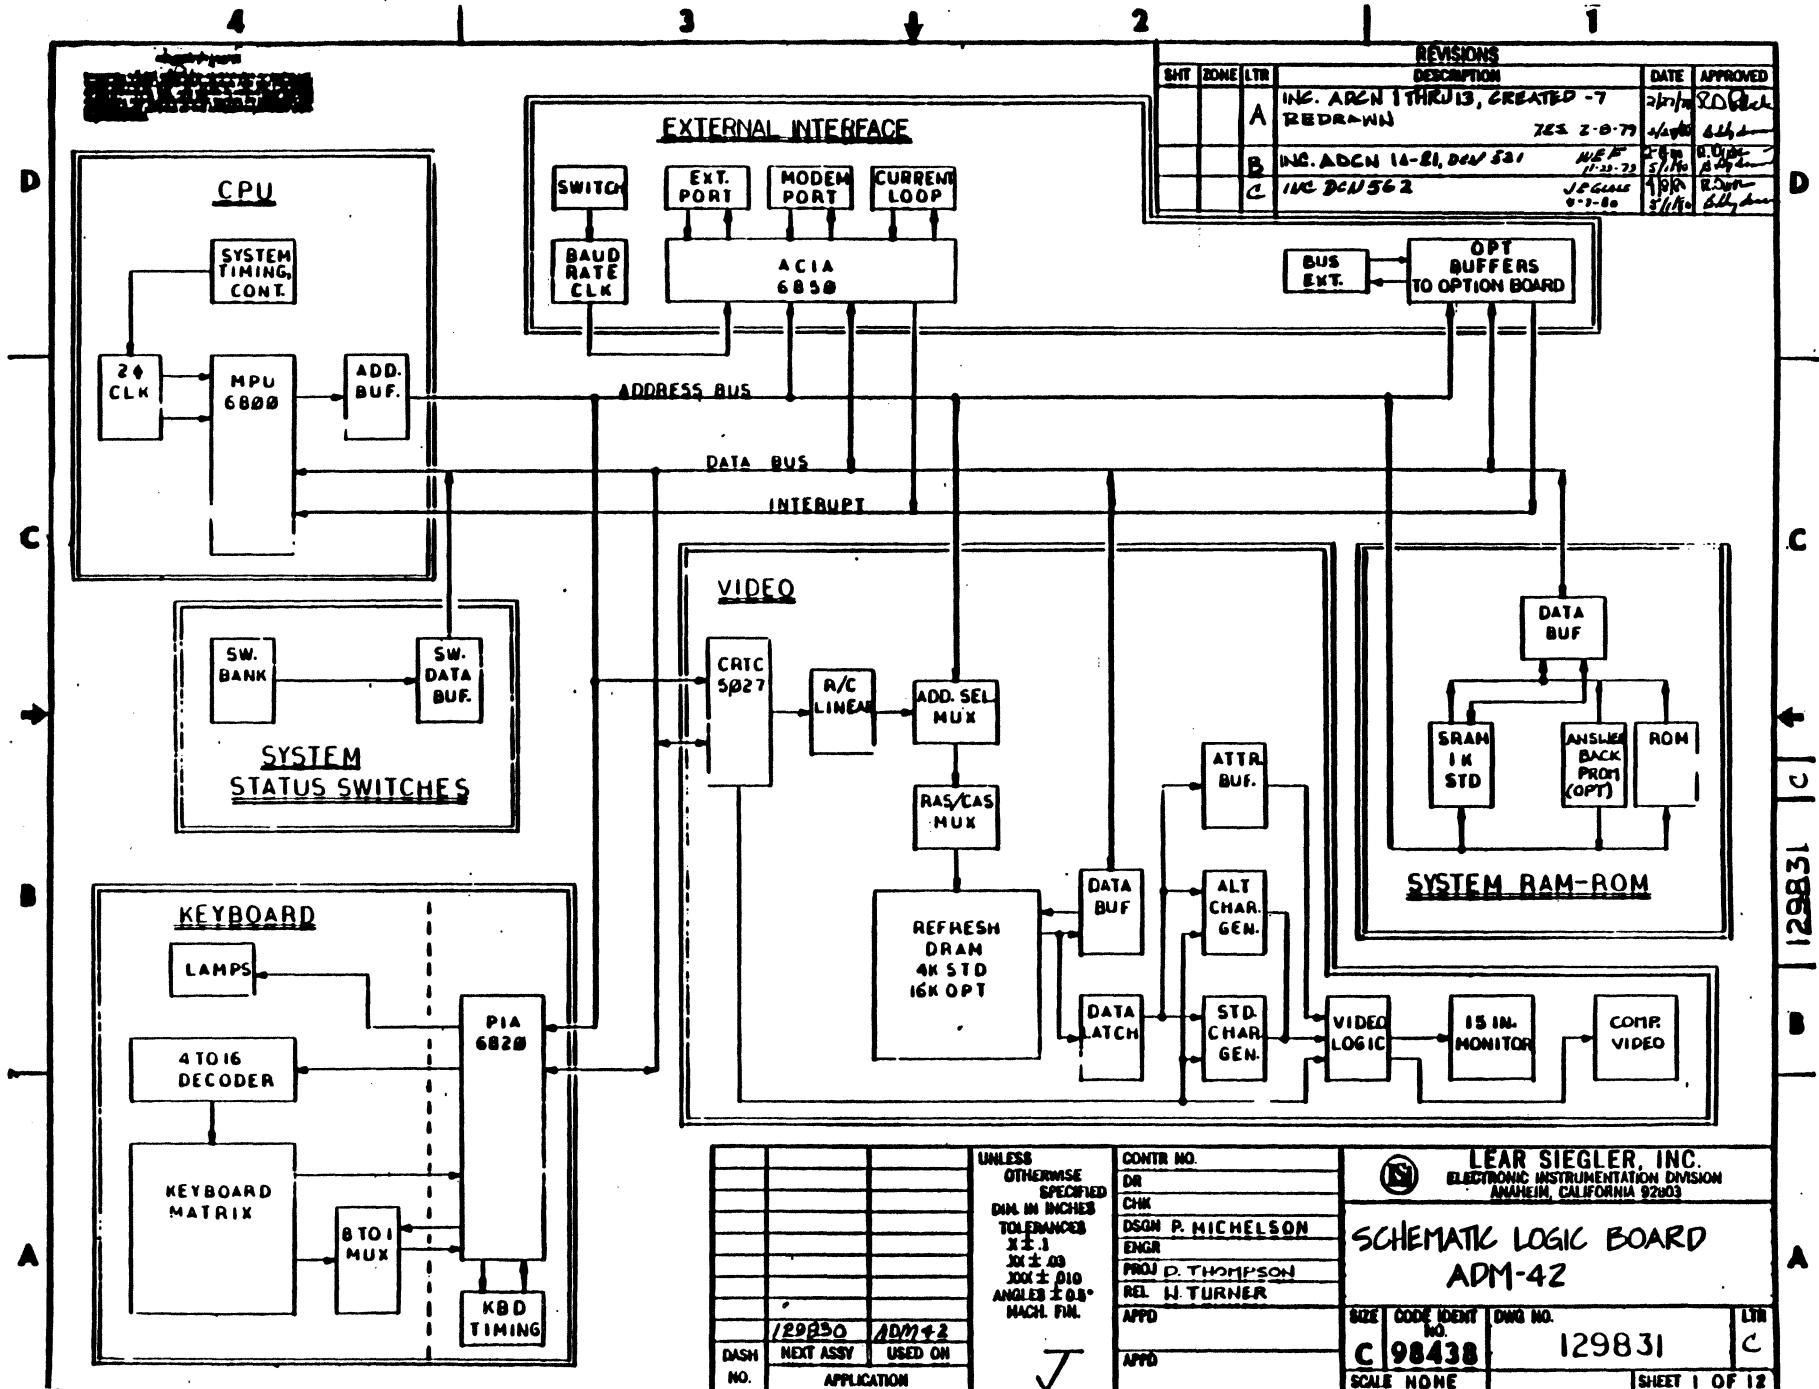

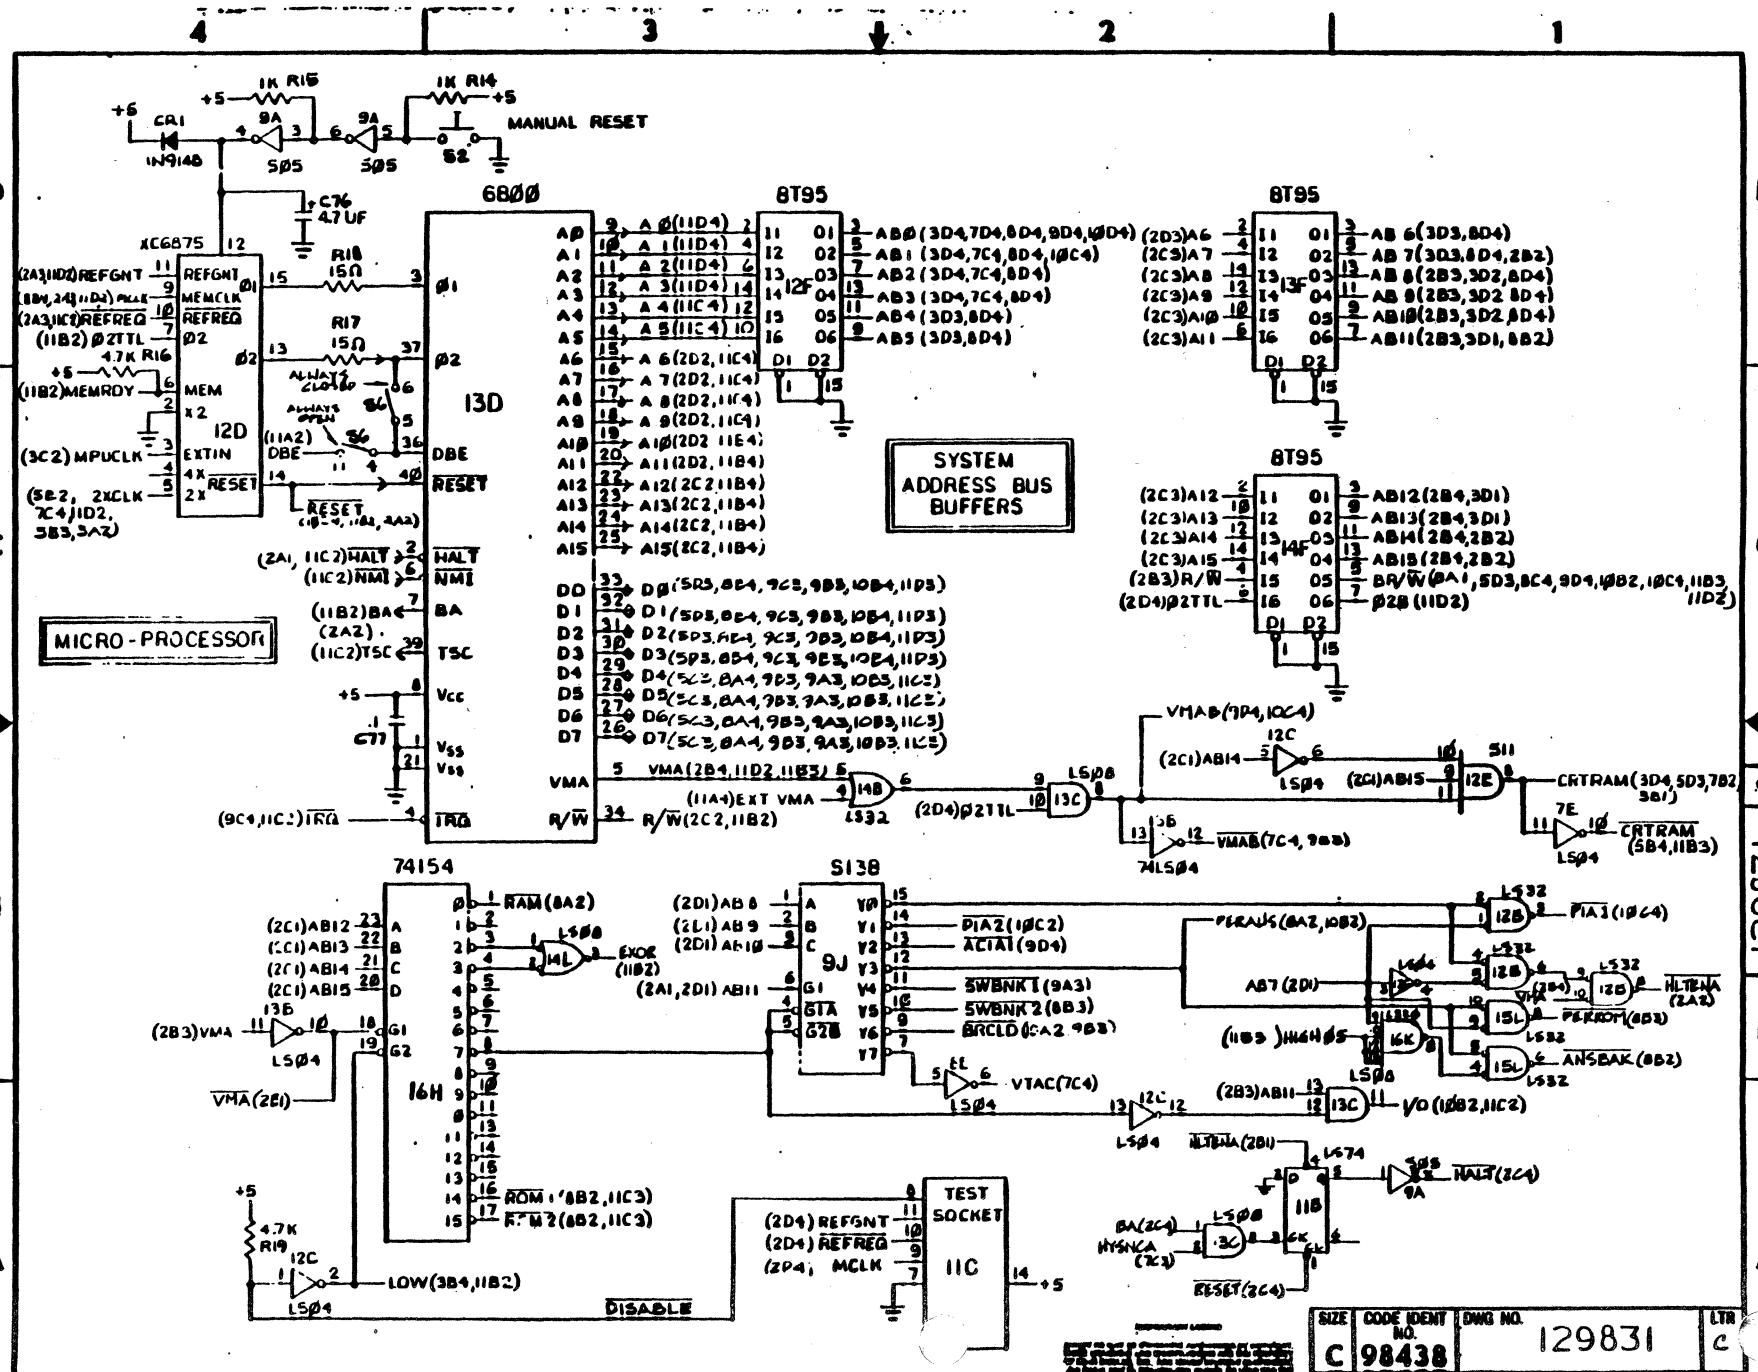

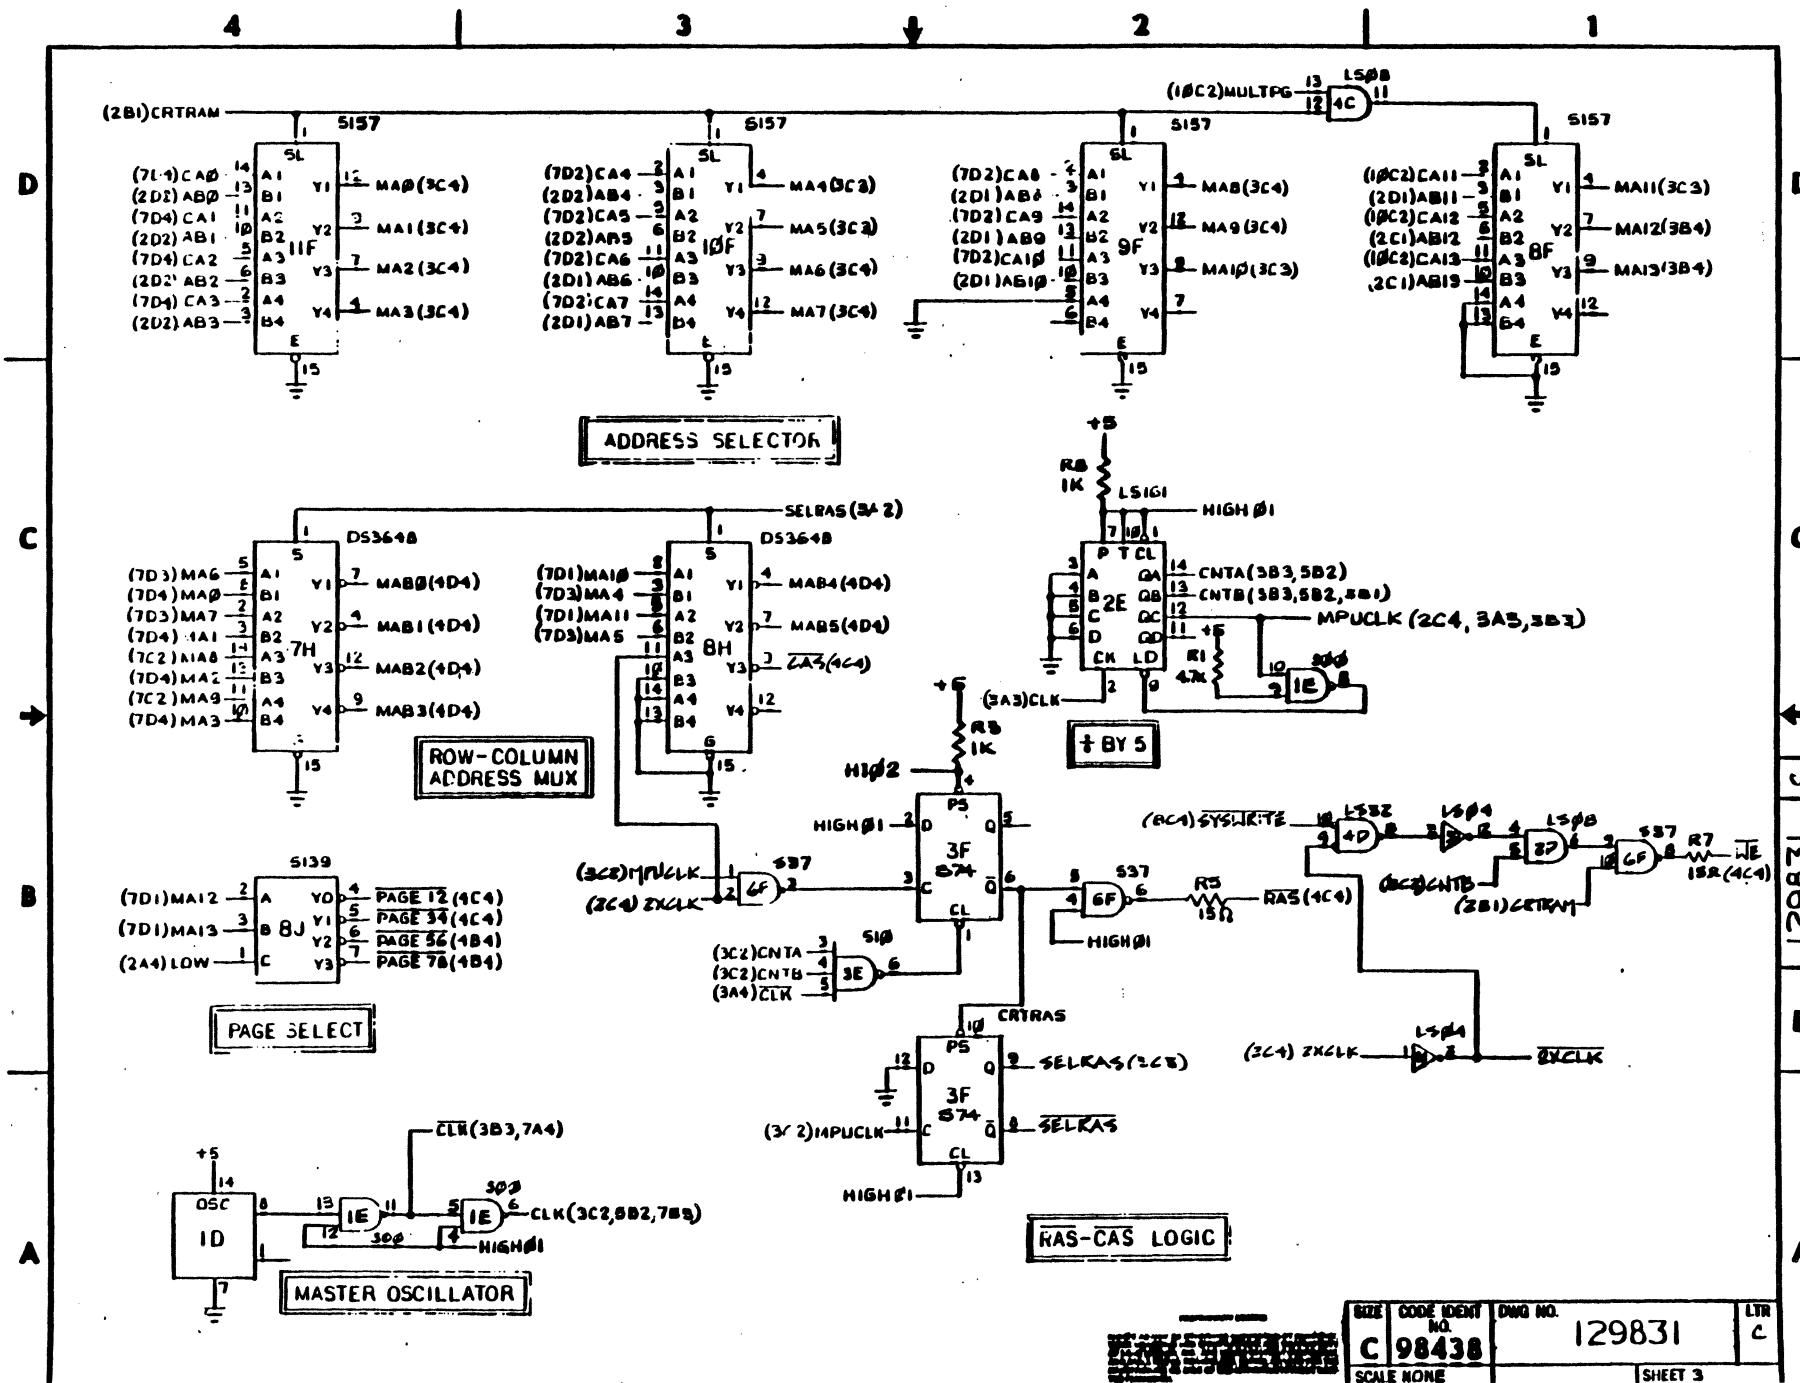

SIZE C	CODE IDENT NO. 98438	Dwg No. 129831	LTR C
SCALE NONE		SHEET 3	

4

3

2

1

D

D

C

C

B


B

B


B

A

A

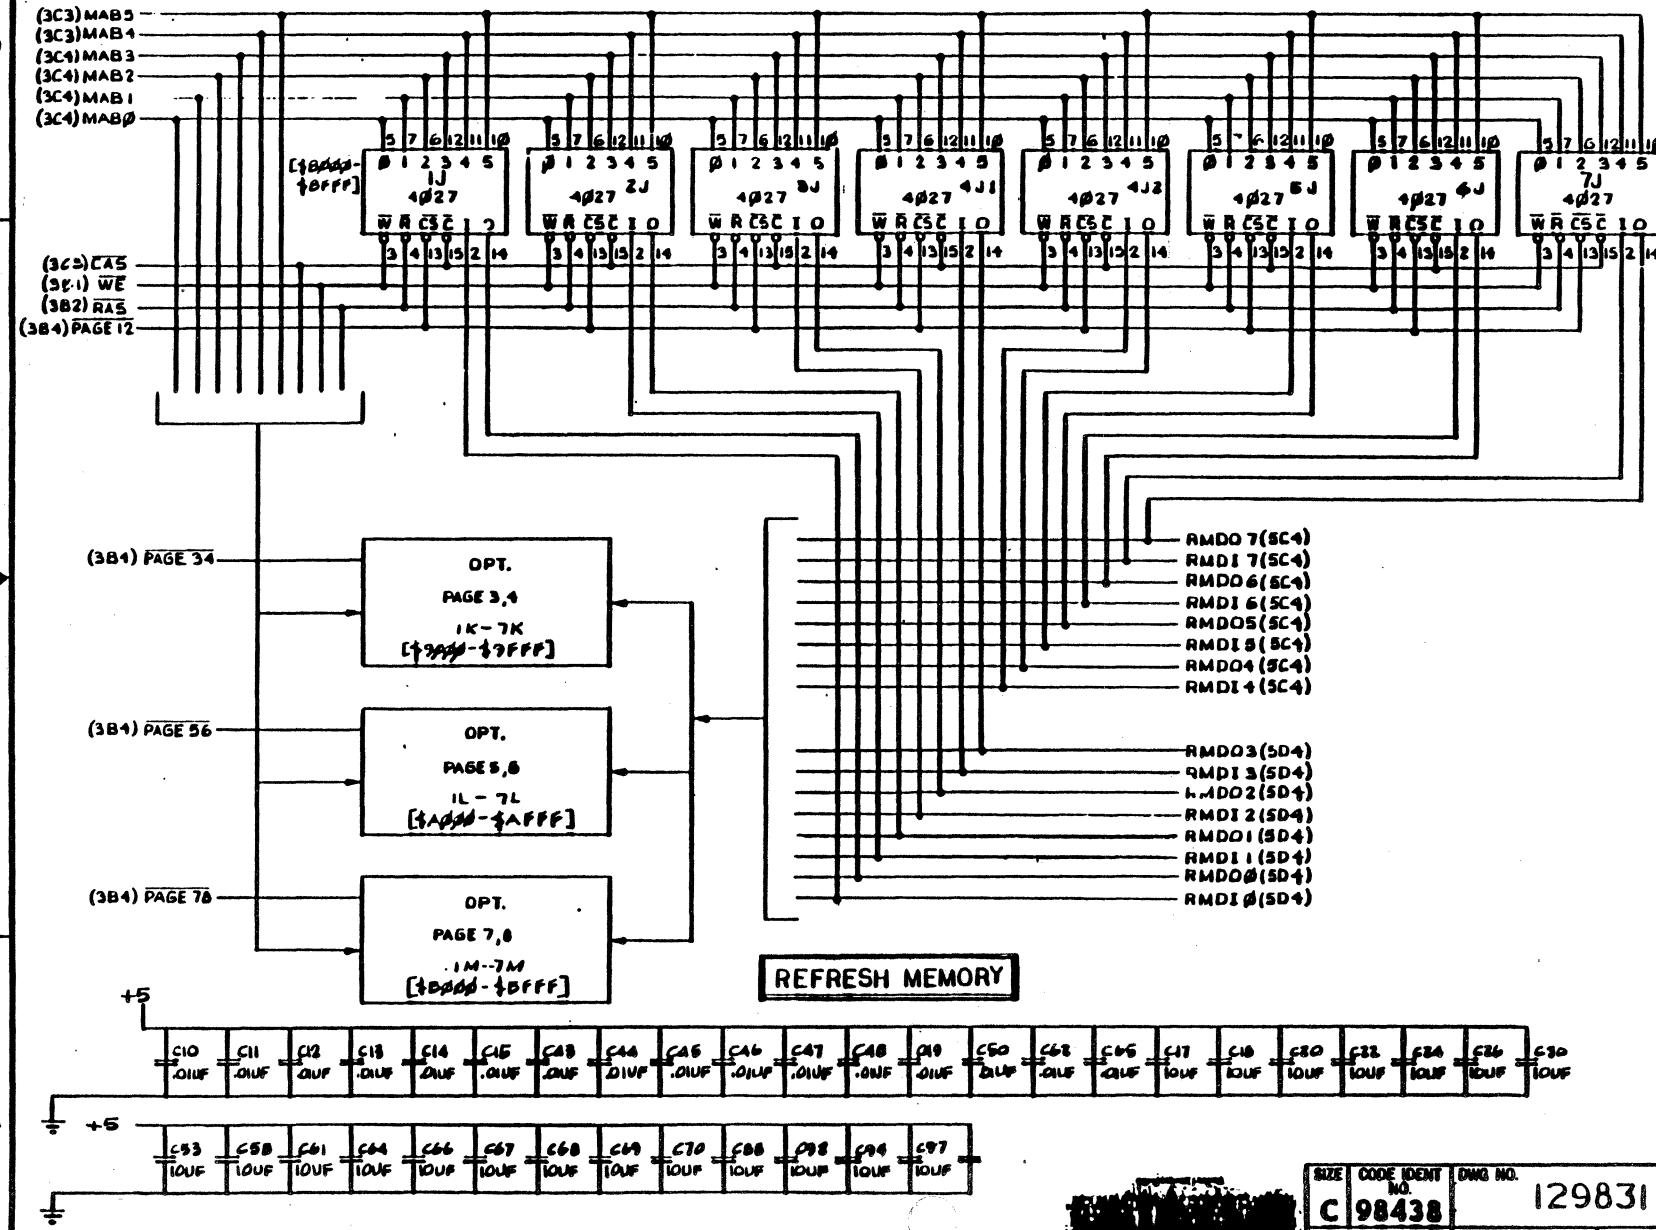

SIZE CODE IDENT NO. DWG NO. 129831
C 98438 LTR C
 SCALE NONE SHEET 4

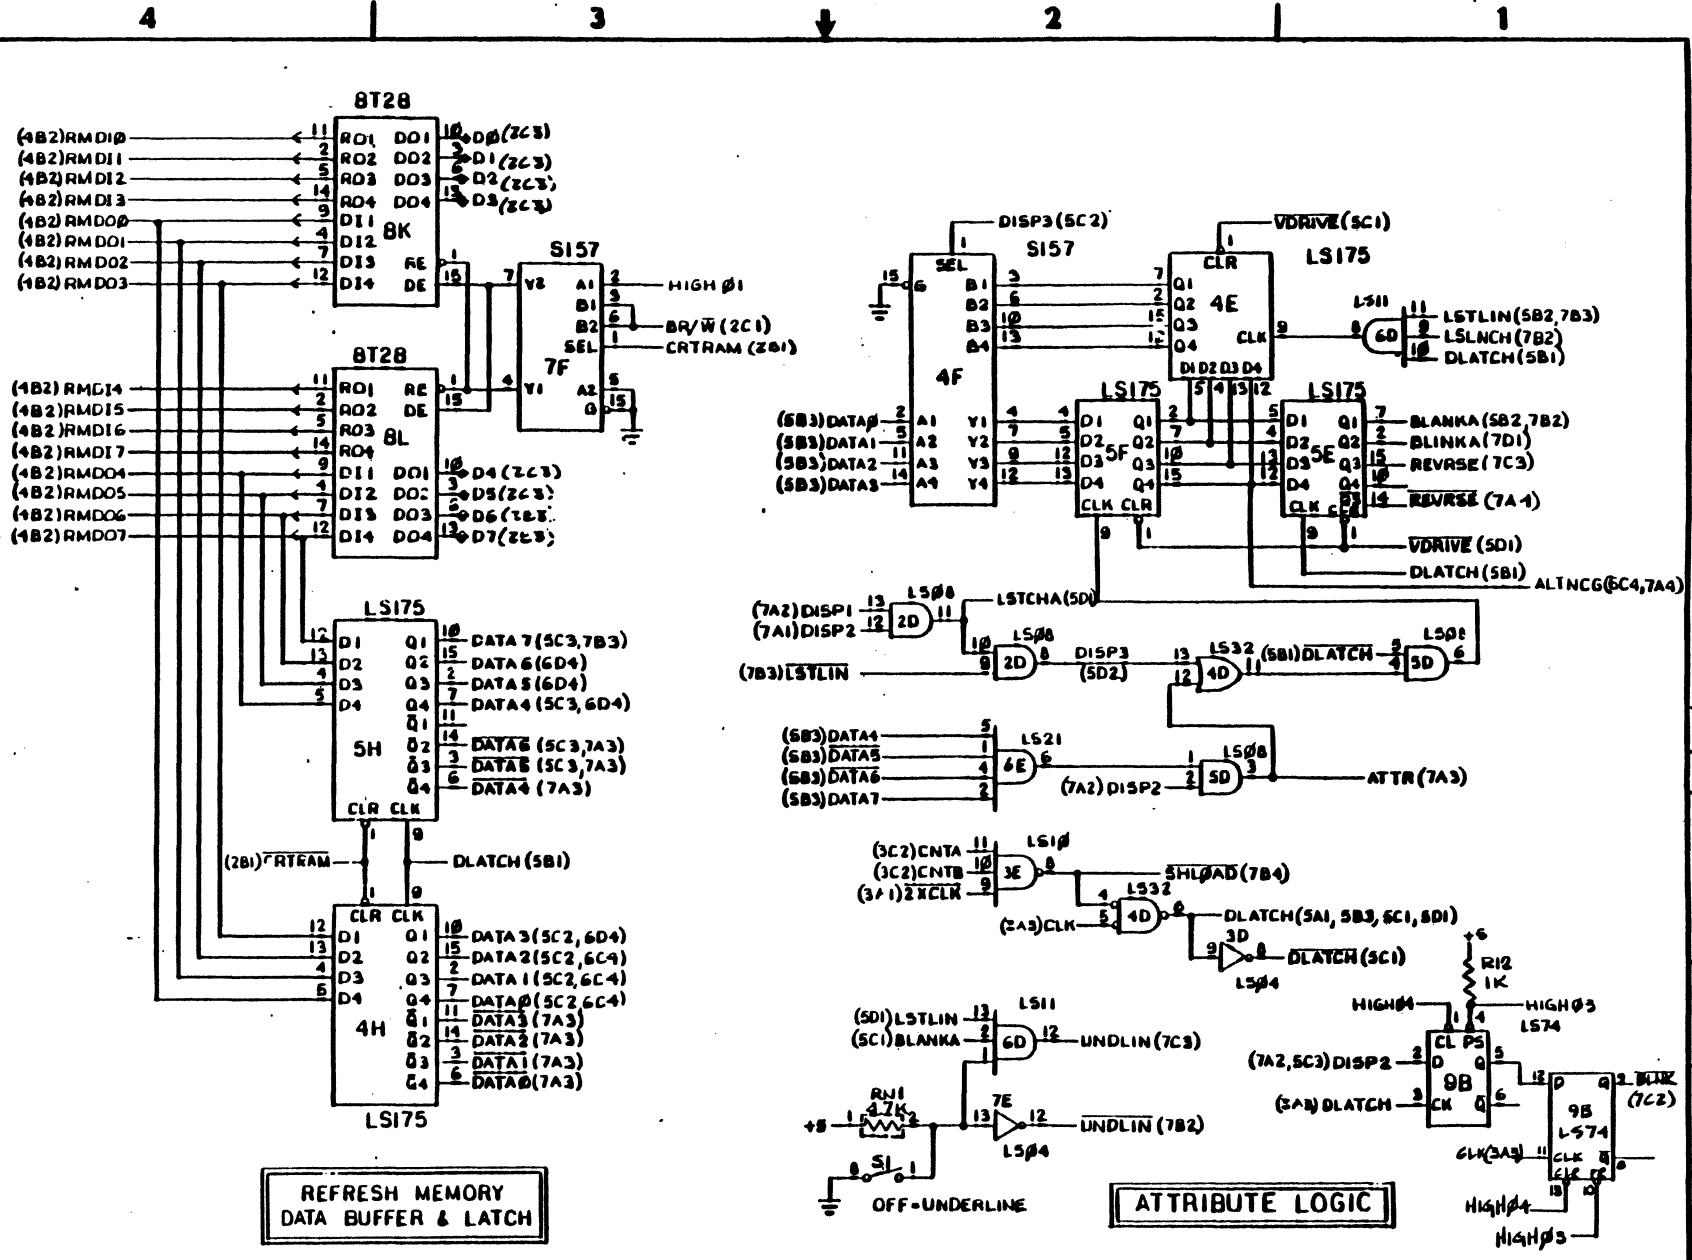

REFRESH MEMORY DATA BUFFER & LATCH

ATTRIBUTE LOGIC

4 1 3 ↓ 2 1

D

D

C


C

B

B

A

A

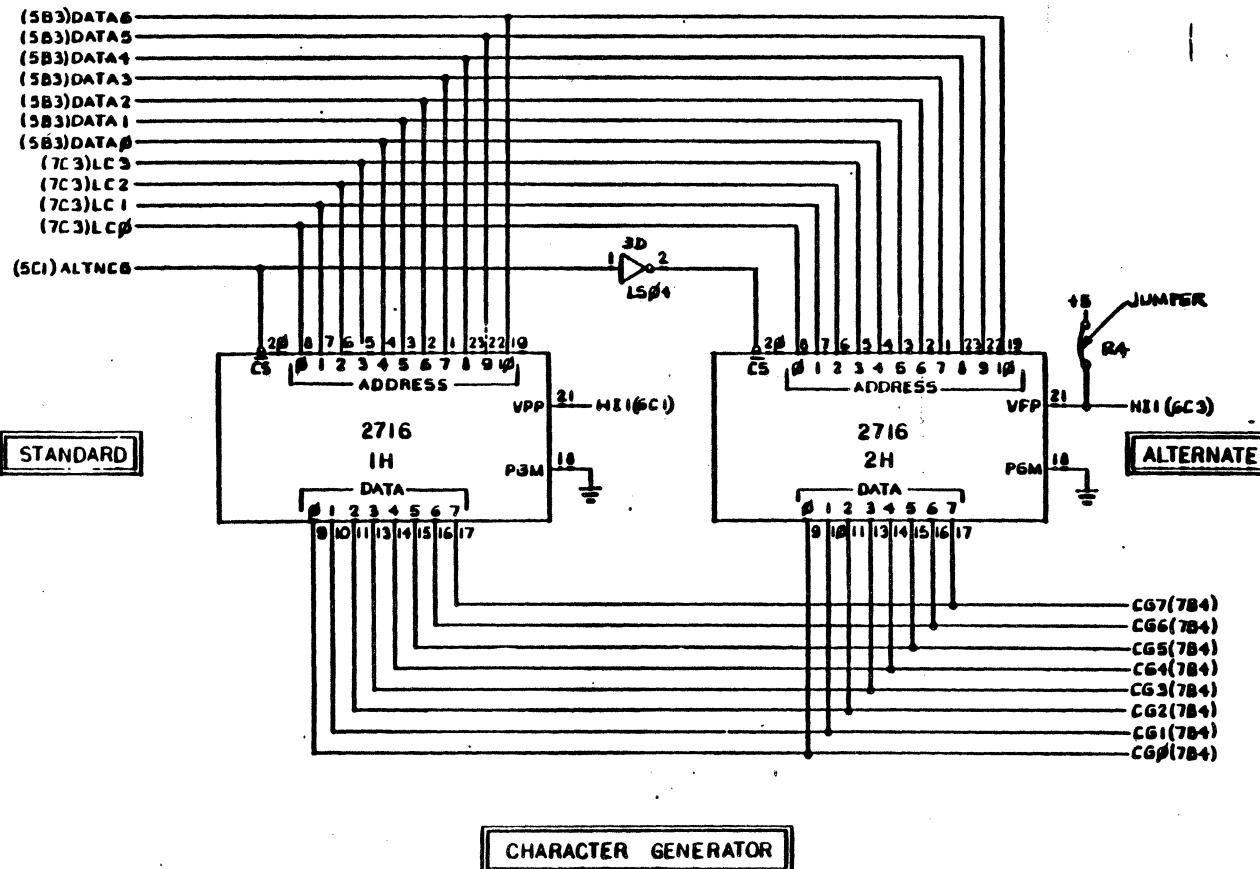

SIZE	CODE IDENT. NO.	DWG NO.
C	98438	129831





4

3

2


1

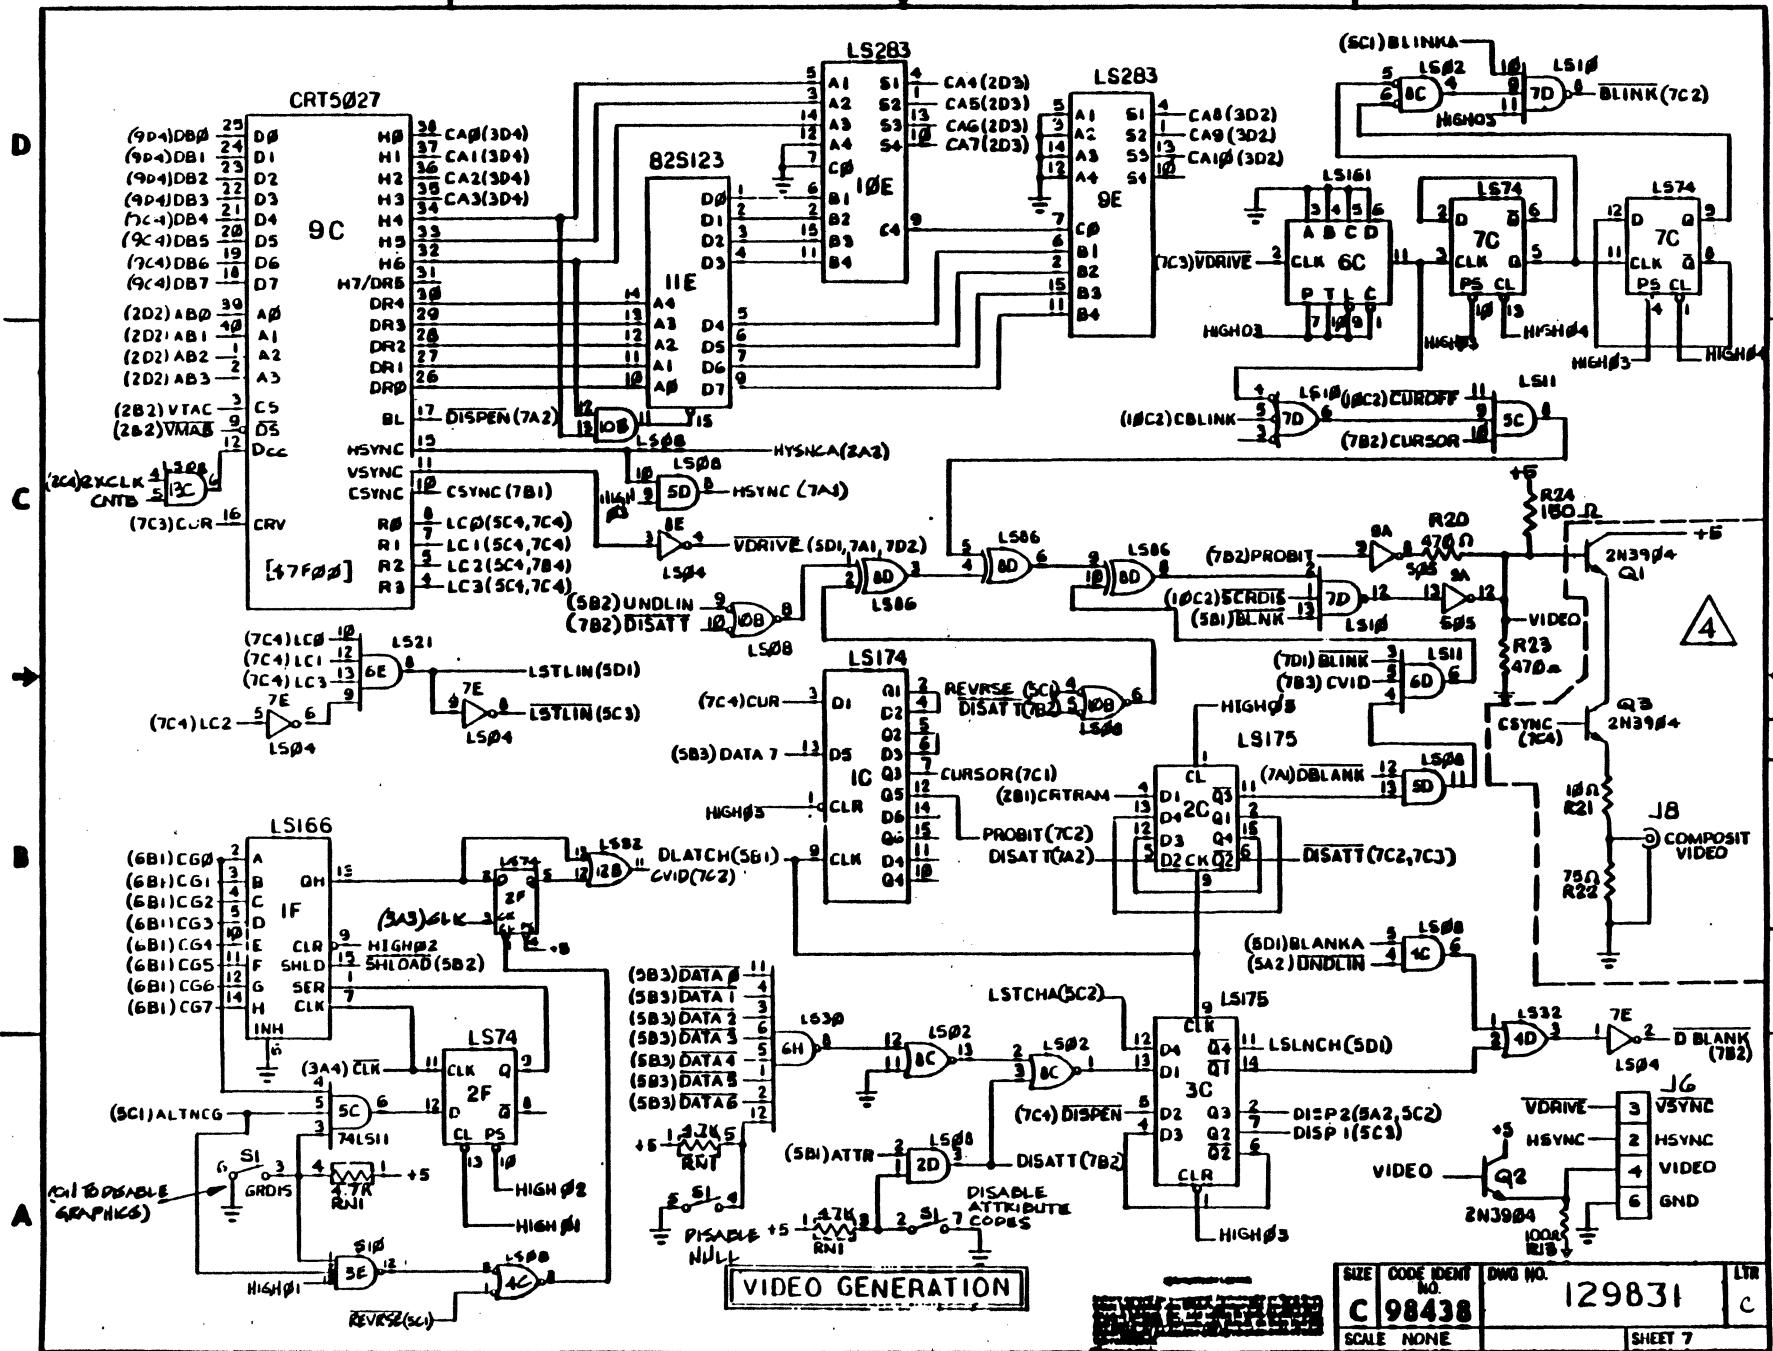


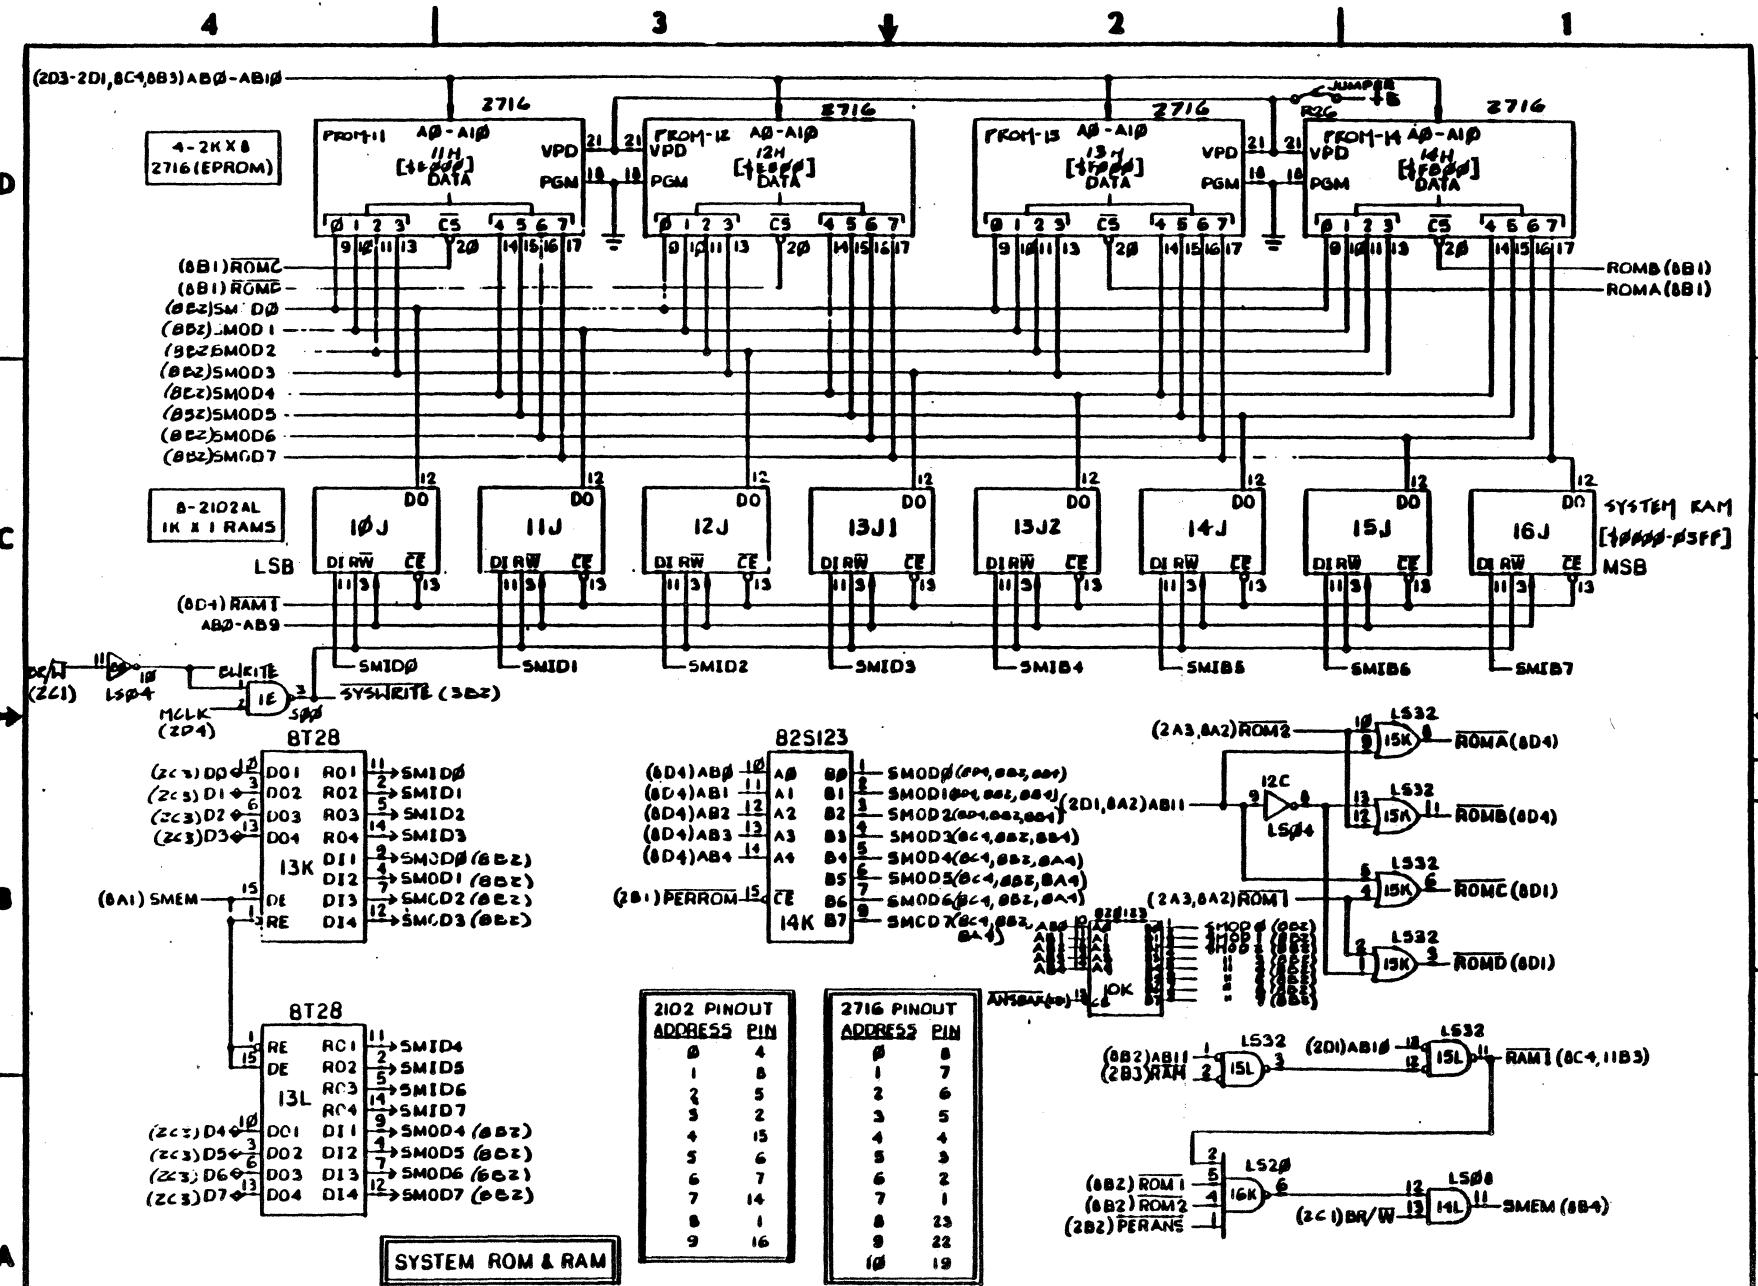


SYSTEM ROM & RAM

SIZE	CODE IDENT NO.	DWG NO.
C	98438	12983

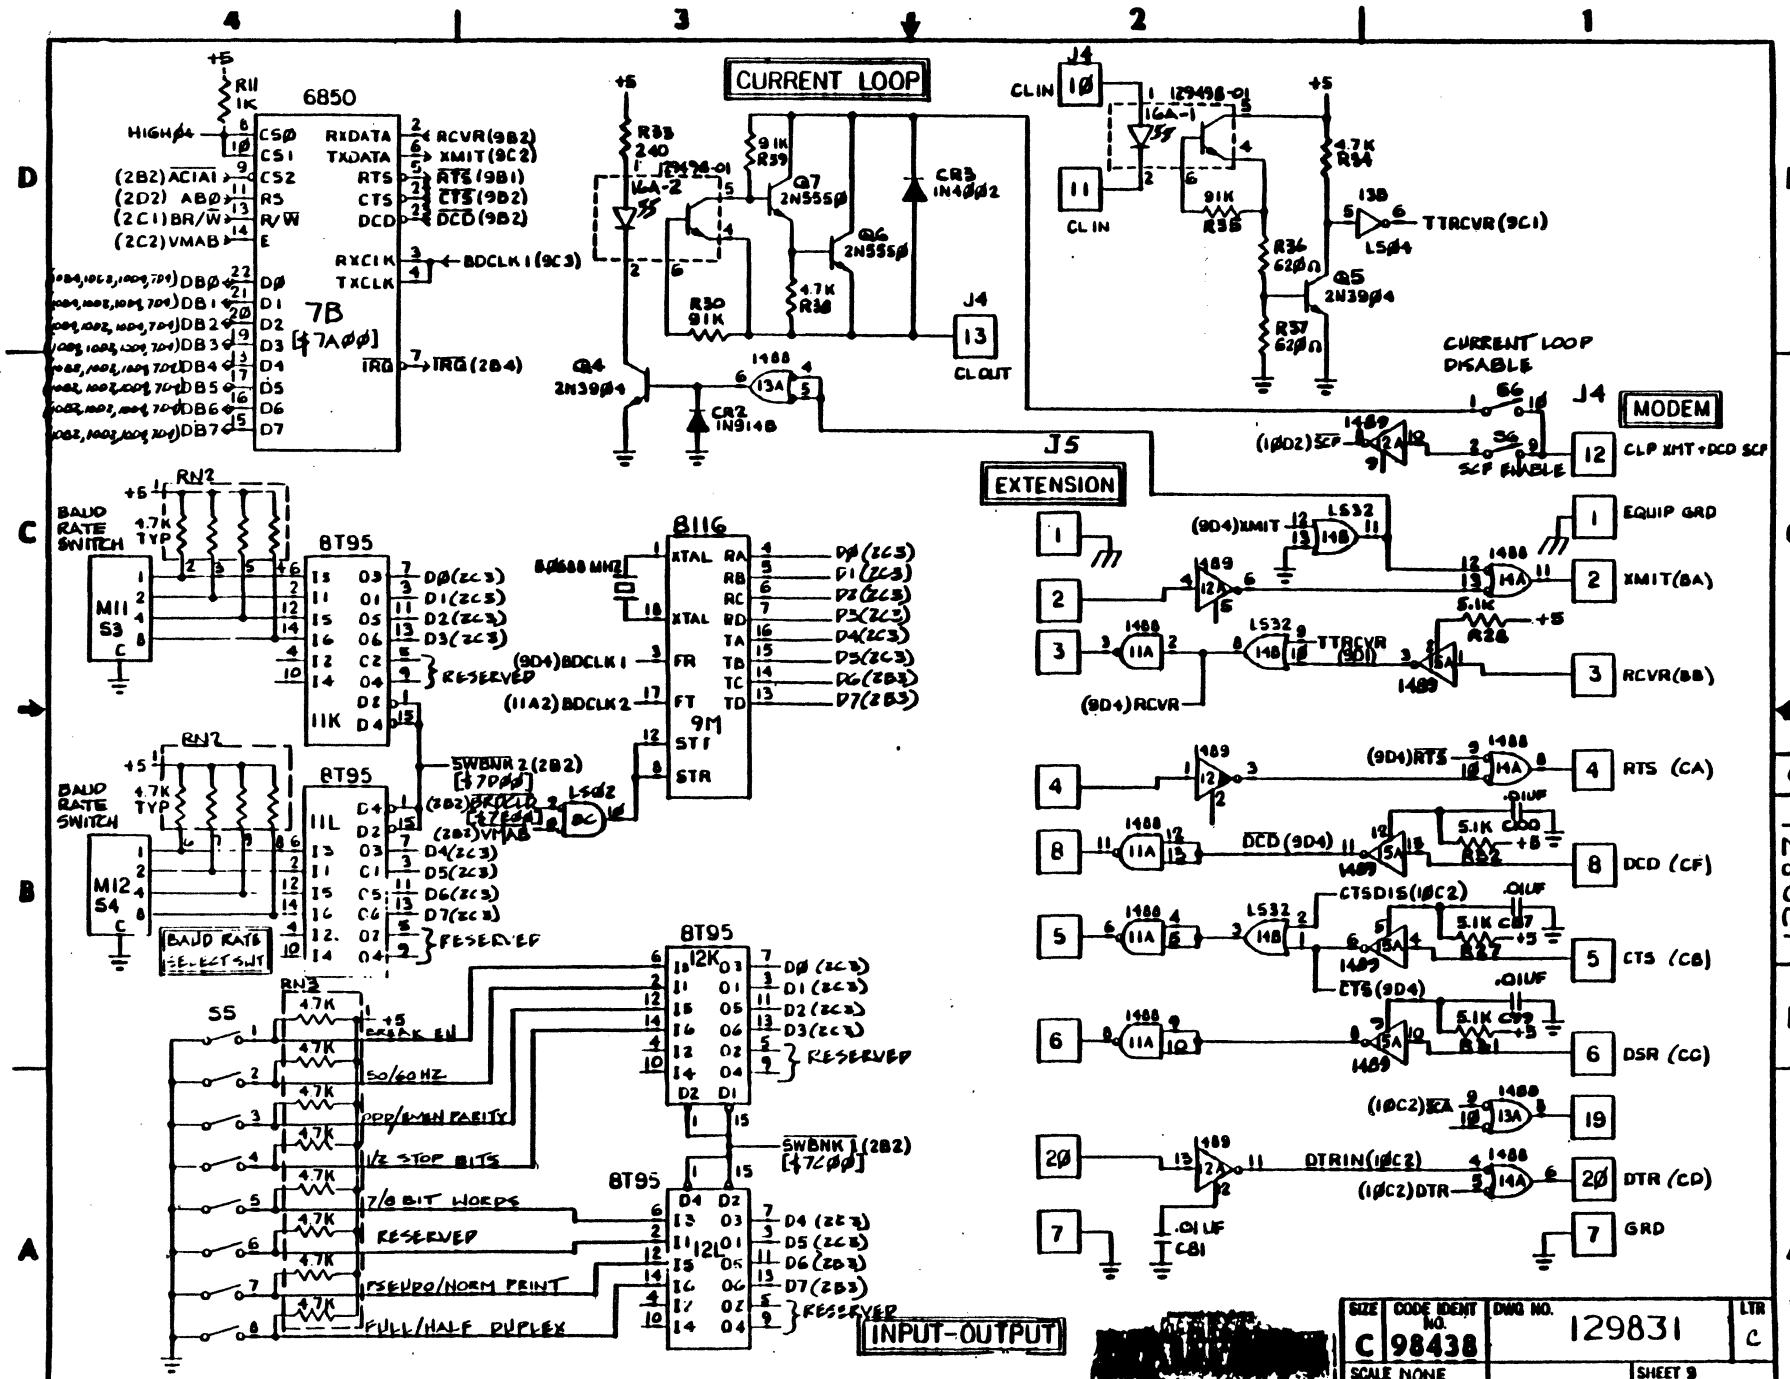


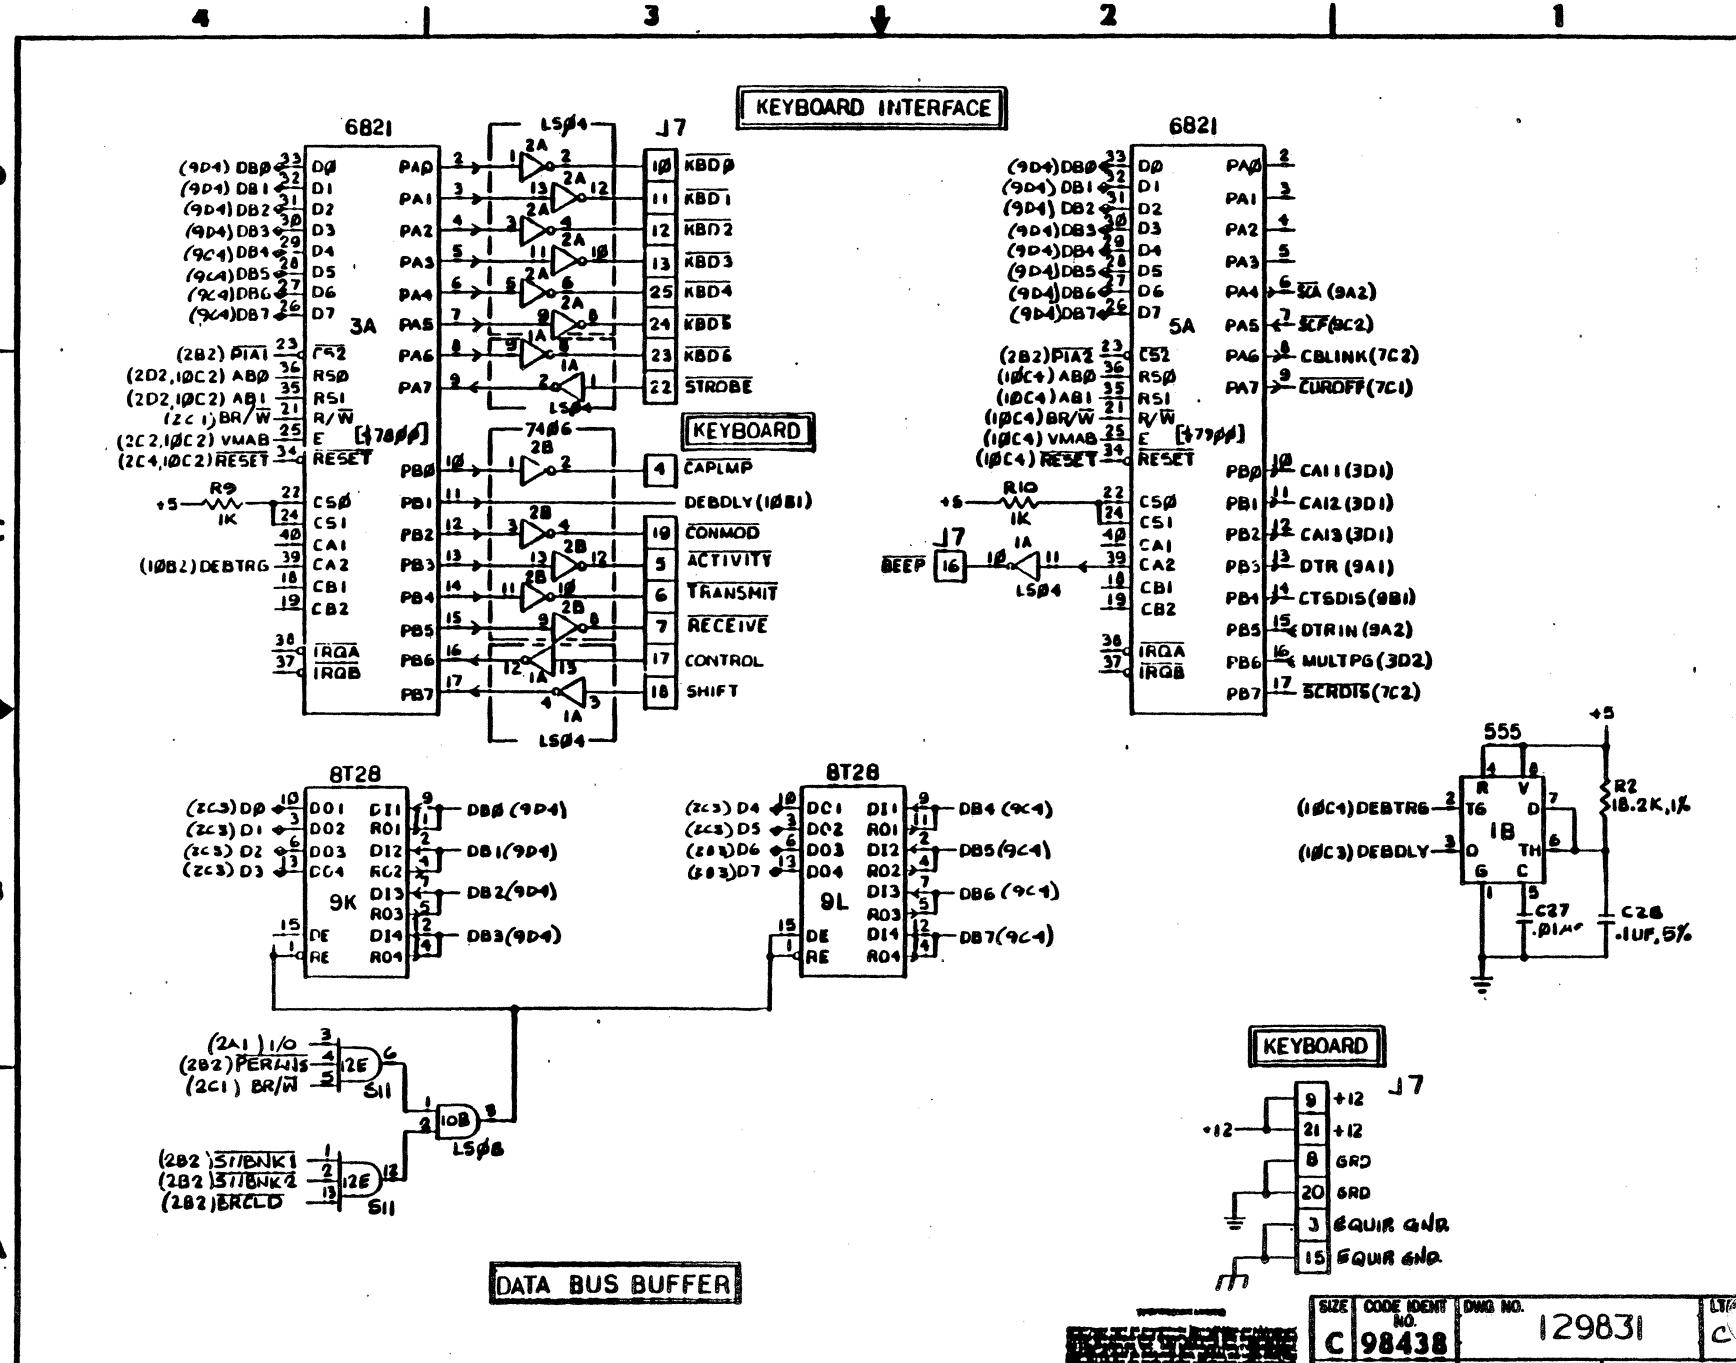

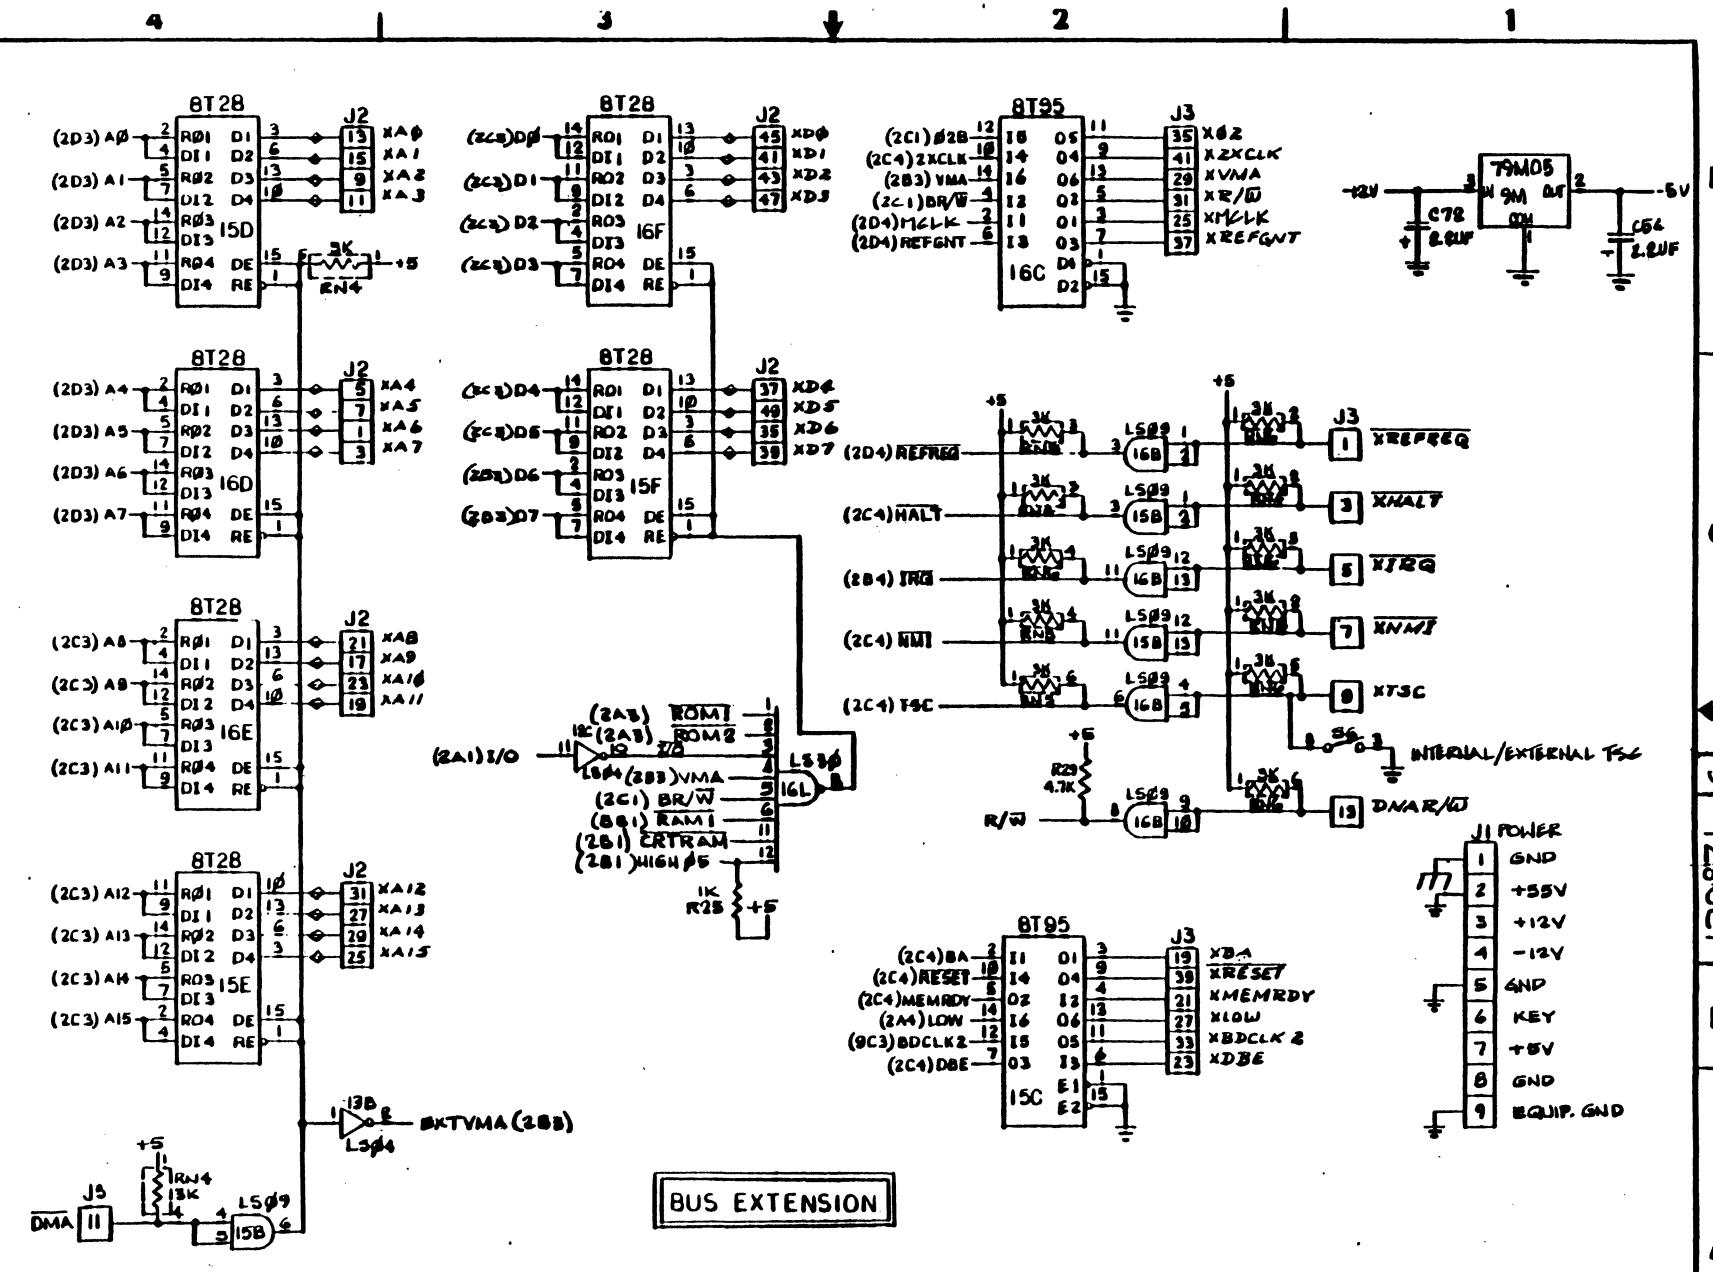

BUS EXTENSION

SIZE	CODE IDENT NO.	DWG NO.	LTR
C	98438	129831	C
SCALE MONTE		SHEET 11	

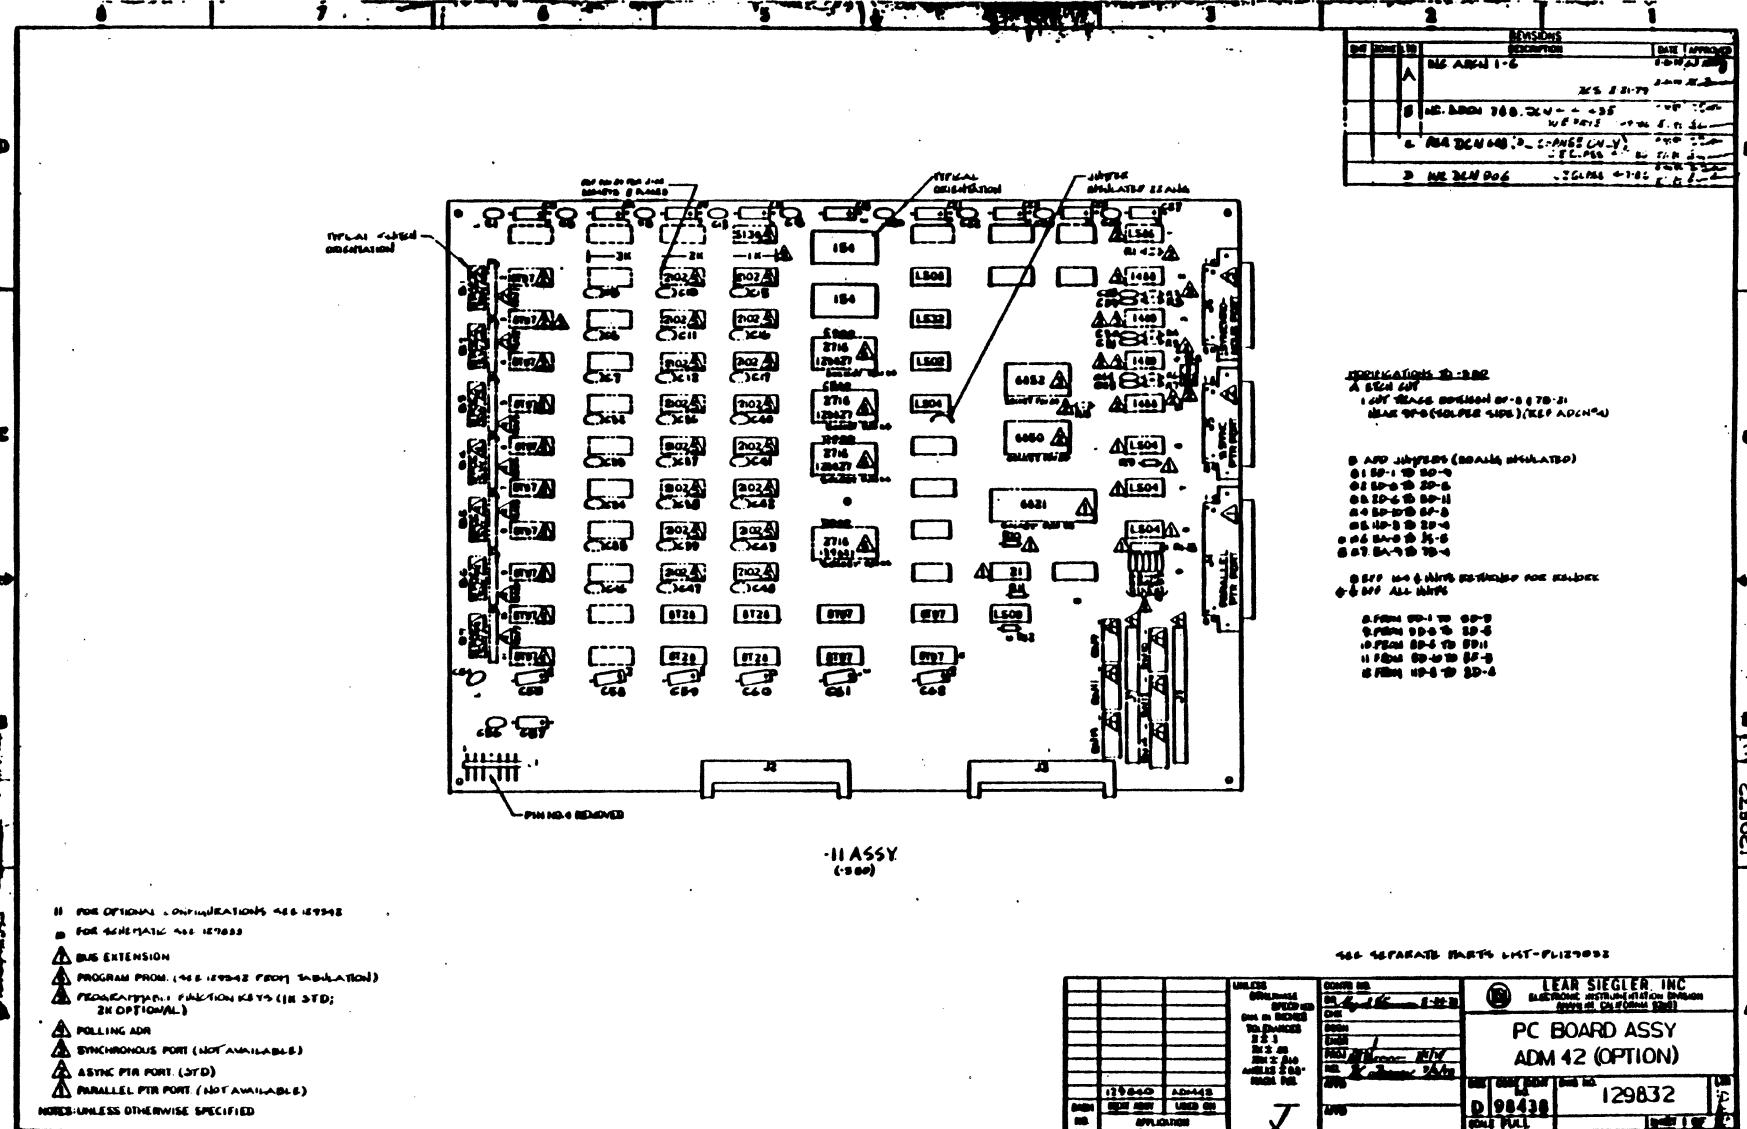

- I** FOR OPTIONAL CONFIGURATIONS 466-187948
- D** FOR GENERATOR 466-187988
- ▲** BUS EXTENSION
- ▲** PROGRAM PROM 1466-187942 FROM TABULATION
- ▲** PREDICTOR-COMP. FUNCTION KEYS (IN STD; 2K OPTIONAL)
- ▲** POLLING ADR
- ▲** SYNCHRONOUS PORT (NOT AVAILABLE)
- ▲** ASYNC PTR PORT (STD)
- ▲** PARALLEL PTR PORT (NOT AVAILABLE)

NOTE: UNLESS OTHERWISE SPECIFIED

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC ADCN 1-8 REDRAWN WAS 4 SHEETS DELETE FN 12 3496-2003 HDR, 30 PIN 3M W Kelly 2-21-79	2-21-79	W. Kelly
B		INC DCN 414. REDRAWN WAS 2 SHEETS JE GLASS 4-7-80	4/30/80 5/1/80	R. O'Donnell B. Johnson
C		INC DCN 606 JE GLASS 4-7-80	4/30/80 5/1/80	R. O'Donnell B. Johnson
D		INC DCN 906 JE GLASS 4-7-80	4/30/80 5/1/80	R. O'Donnell B. Johnson

NOTE 1. PROGRAM PROM - SEE 1295+2 PROM TABULATION.

	129840	ADM42
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. 	DR W. KELLY 5-2-78	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.			
	CHK				
	DSGN				
	ENGR				
	PROJDH THOMSON 5-2-78				
	REL W. TURNER 5-3-78	P.C. BOARD ASSY- ADM 42 OPTION			
	CUSTOMER APPD	SIZE A	CODE IDENT 98438	PL 129832	REV D
		SCALE		SHEET 1 OF 3	

FIND NO	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REFERENCE DESIGNATORS
		-11 -1				
1		✓		129832-1	PCBA, ADM +2, OPTION	
2		✓		-11		
3	1	1		129832-5	PRINTED WIRING BOARD	
4						
5	1	1		129746-131	CLOSURE	
6	1	1		129747-3	STANDOFF	
7	2	2		809096	CONN., 50-PIN	J2, J3
8	1	1		809109	CONN. 11-PIN	J1
9						
10	1	1		129747-02	IC - QUAD 2-IN NOR, LS02	4D
11	1	1		-04	" HEX INVERTER, LS04	5D
12	1	1		-08	" QUAD 2-IN AND, LS08	2D
13	1	1		-09	" QUAD 2-IN AND, OC, LS09	10C
14	1	1		-32	" QUAD 2-IN OR, LS32	3D
15	2	2		129348-154	" 4-16 LINE DEC. 154	1E, 2E
16	4	4		-8T28	" QUAD BUS REG. 3-ST. BT28	10F, 11F, 10H, 11H
17	6	4		-8T97	" HEX BUF. 3-ST. NOR INV. BT97	10D, 11D, 10E, 11E, 2K, 3K
18						
19	11	11		129876-104	CAP .1 MFD .50V, 10% MONO	C1, 3, 8, 13, 18, 20, 22, 3F, 26, 5F, 56
20	16	16		129469-106	" 10 MFD, 25V	C2, 4, 9, 14, 19, 21, 23, 25, 27, 35, 57-62
21	2	2		128533-302	RES. 3K	R1, 2
22						
23						
24	6	6		802033	SOCKET, IC 24-PIN	1E-6E, 8E, 1C, 6C
	1	1		802034	" 40-PIN	7C

A
SIZE:
FSCM NO.
98438

PL 129832
SH 2

D
REV

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REFERENCE DESIGNATORS
26					
27	1		129824-6850	IC - ASYNC COM INT ADAPTER	6C
28	1		129827-XX	EPROM 2716, C000	4E NOTE 1
29	8		129348-2102A	RAM	2F-9F
30	1		-1488	IC QUAD LINE DR. TYPE 1488	5A
31	2		-1489	IC QUAD LINE REV.R, TYPE 1489	3A, 4A
32	1		129467-86	IC QUAD 2-IN EXCL DR. 74LS06 1A	
33					
34					
35	1		128533-472	RES. 4.7K	R1
36	1		-512	5.1K	R7
37	1		-102	1K	R8
38					
39	17		129876-103	CAP. .01, 50V, ±10%	C10-12, 15-17, 36-43, 47, 58
40	8		802031	SOCKET, 16-PIN	2H-9H
41	1		804021	SWITCH, 8 POS.	S1
42	1		804028	" 3 POS.	S8
43	1		819046	RES. MOD 4.7K	RN
44	1		131365-11	CONN. ASSY, 25-PIN	J5
45	2		824002	RIVET (R3478X 7/32)	
46	1		129746-181	CLOSURE, STD	
47					
48					
49					
50					

A
SIZE
98438
FSCM NO.


PL129832
SH 3
REV D


4


3


2


1


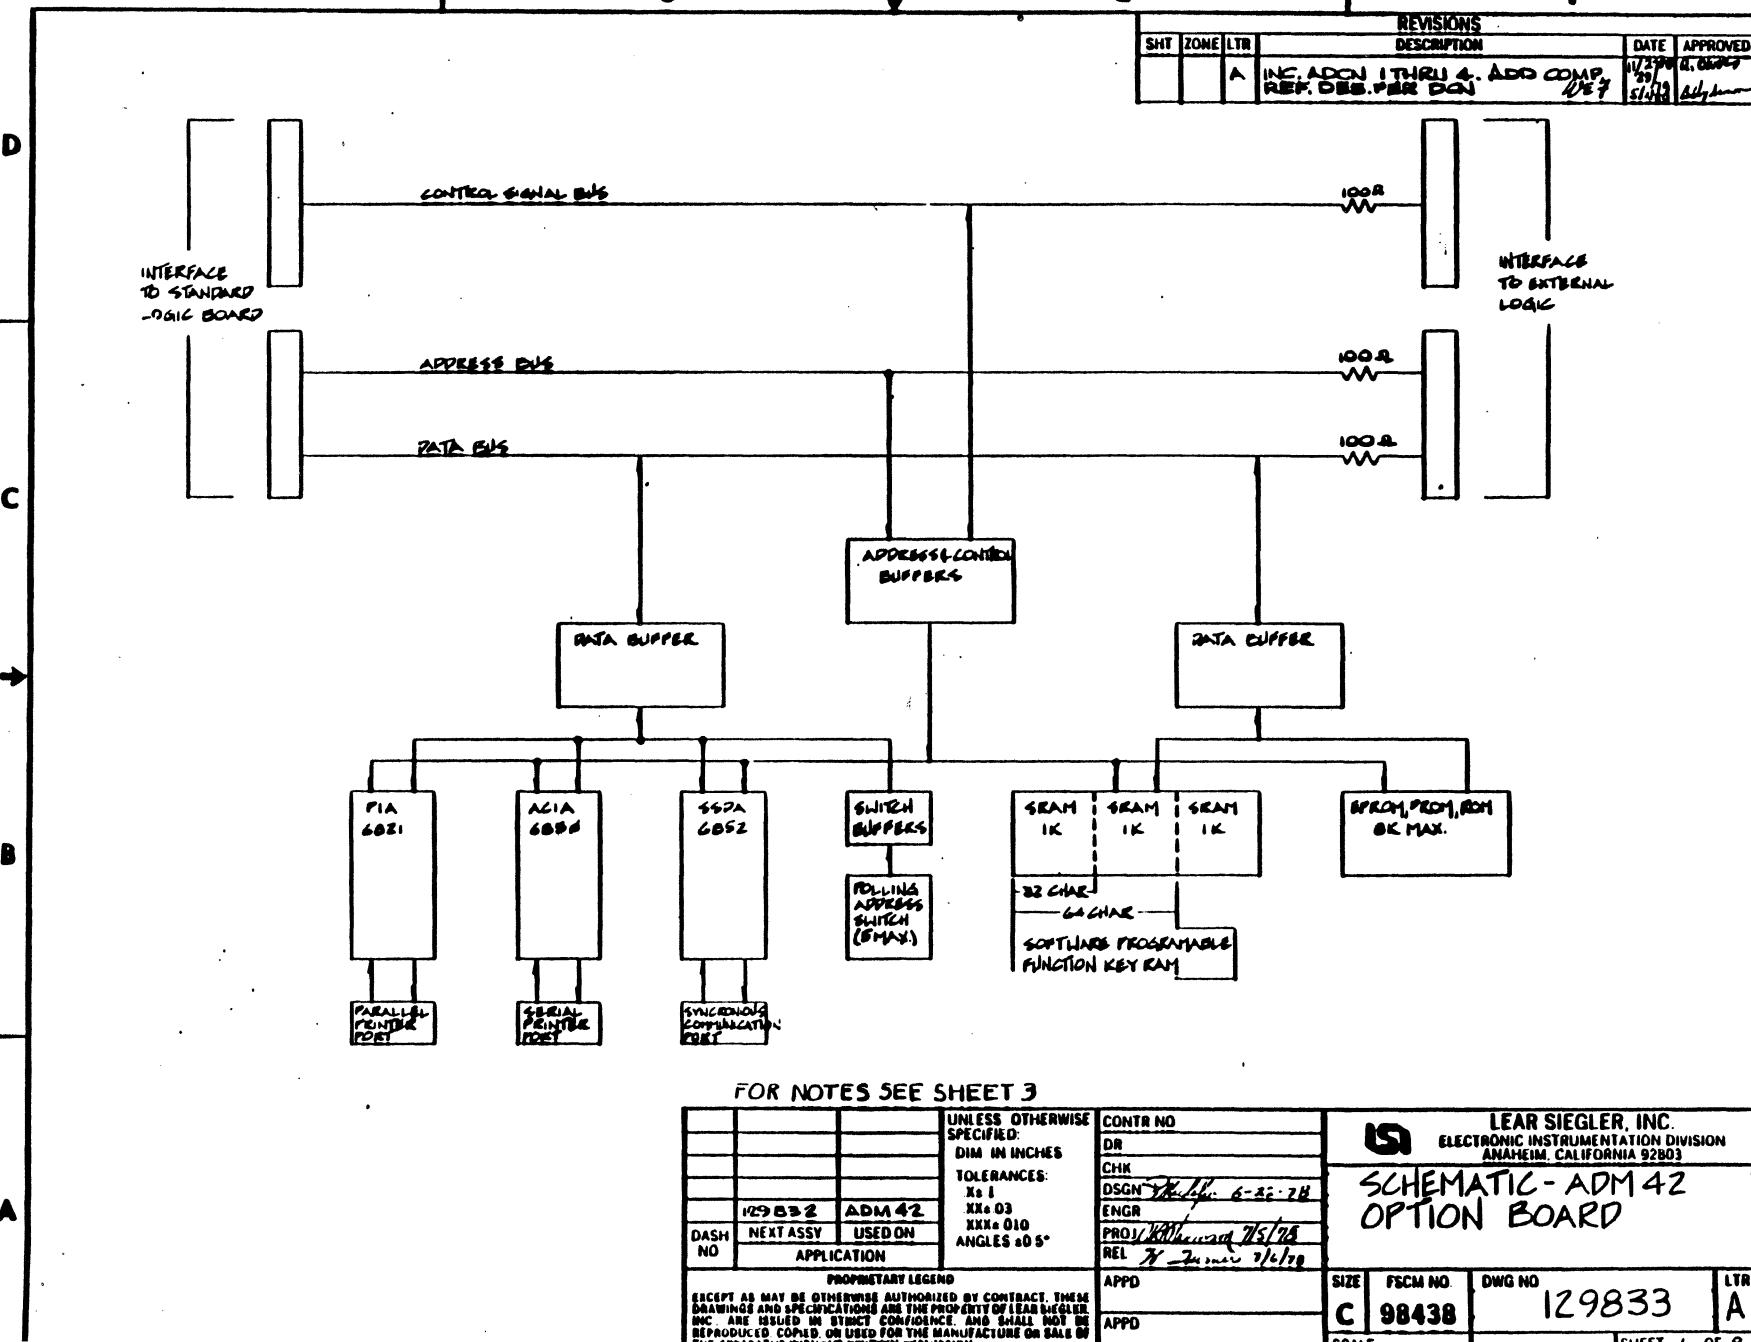


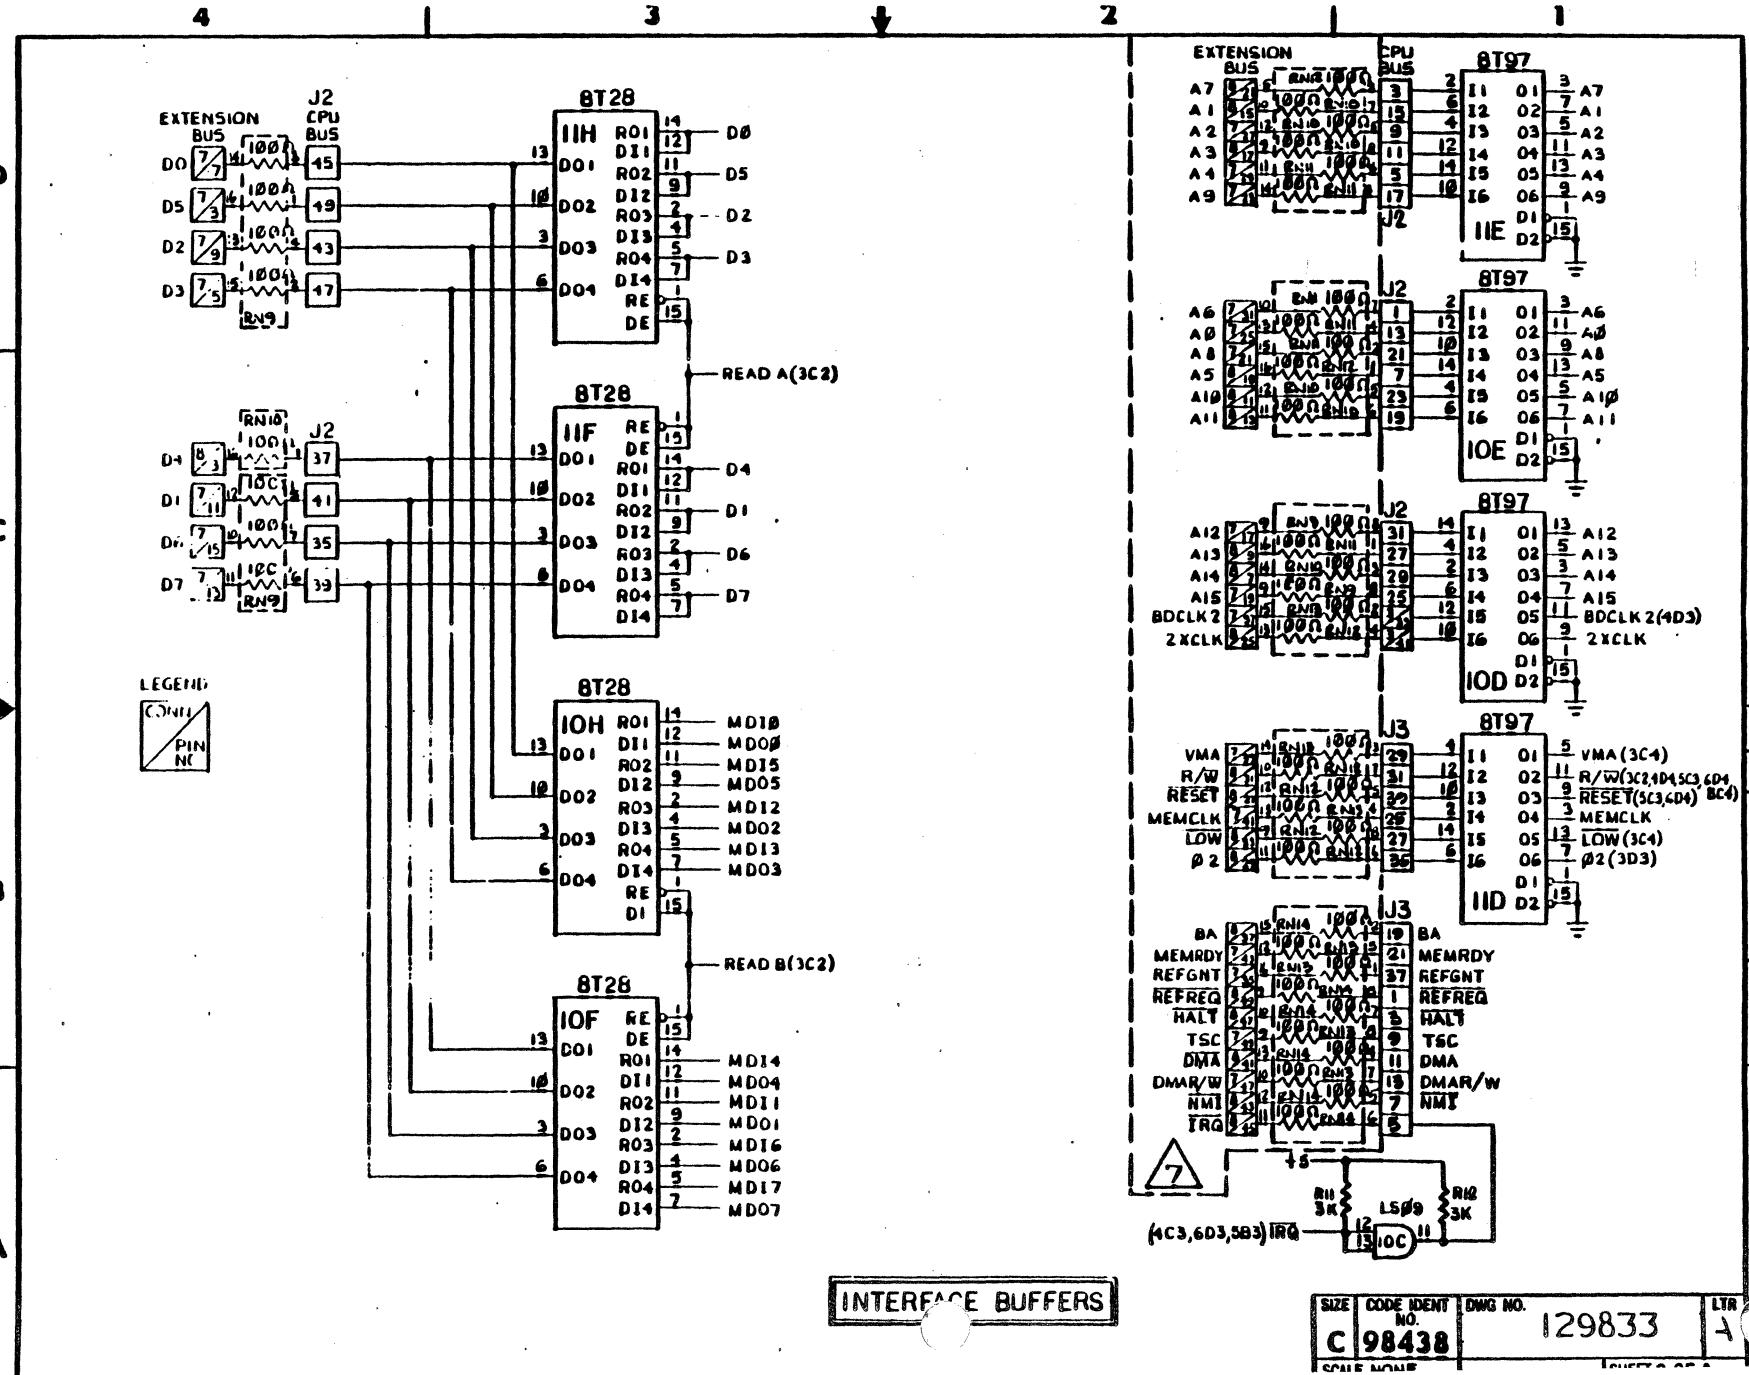

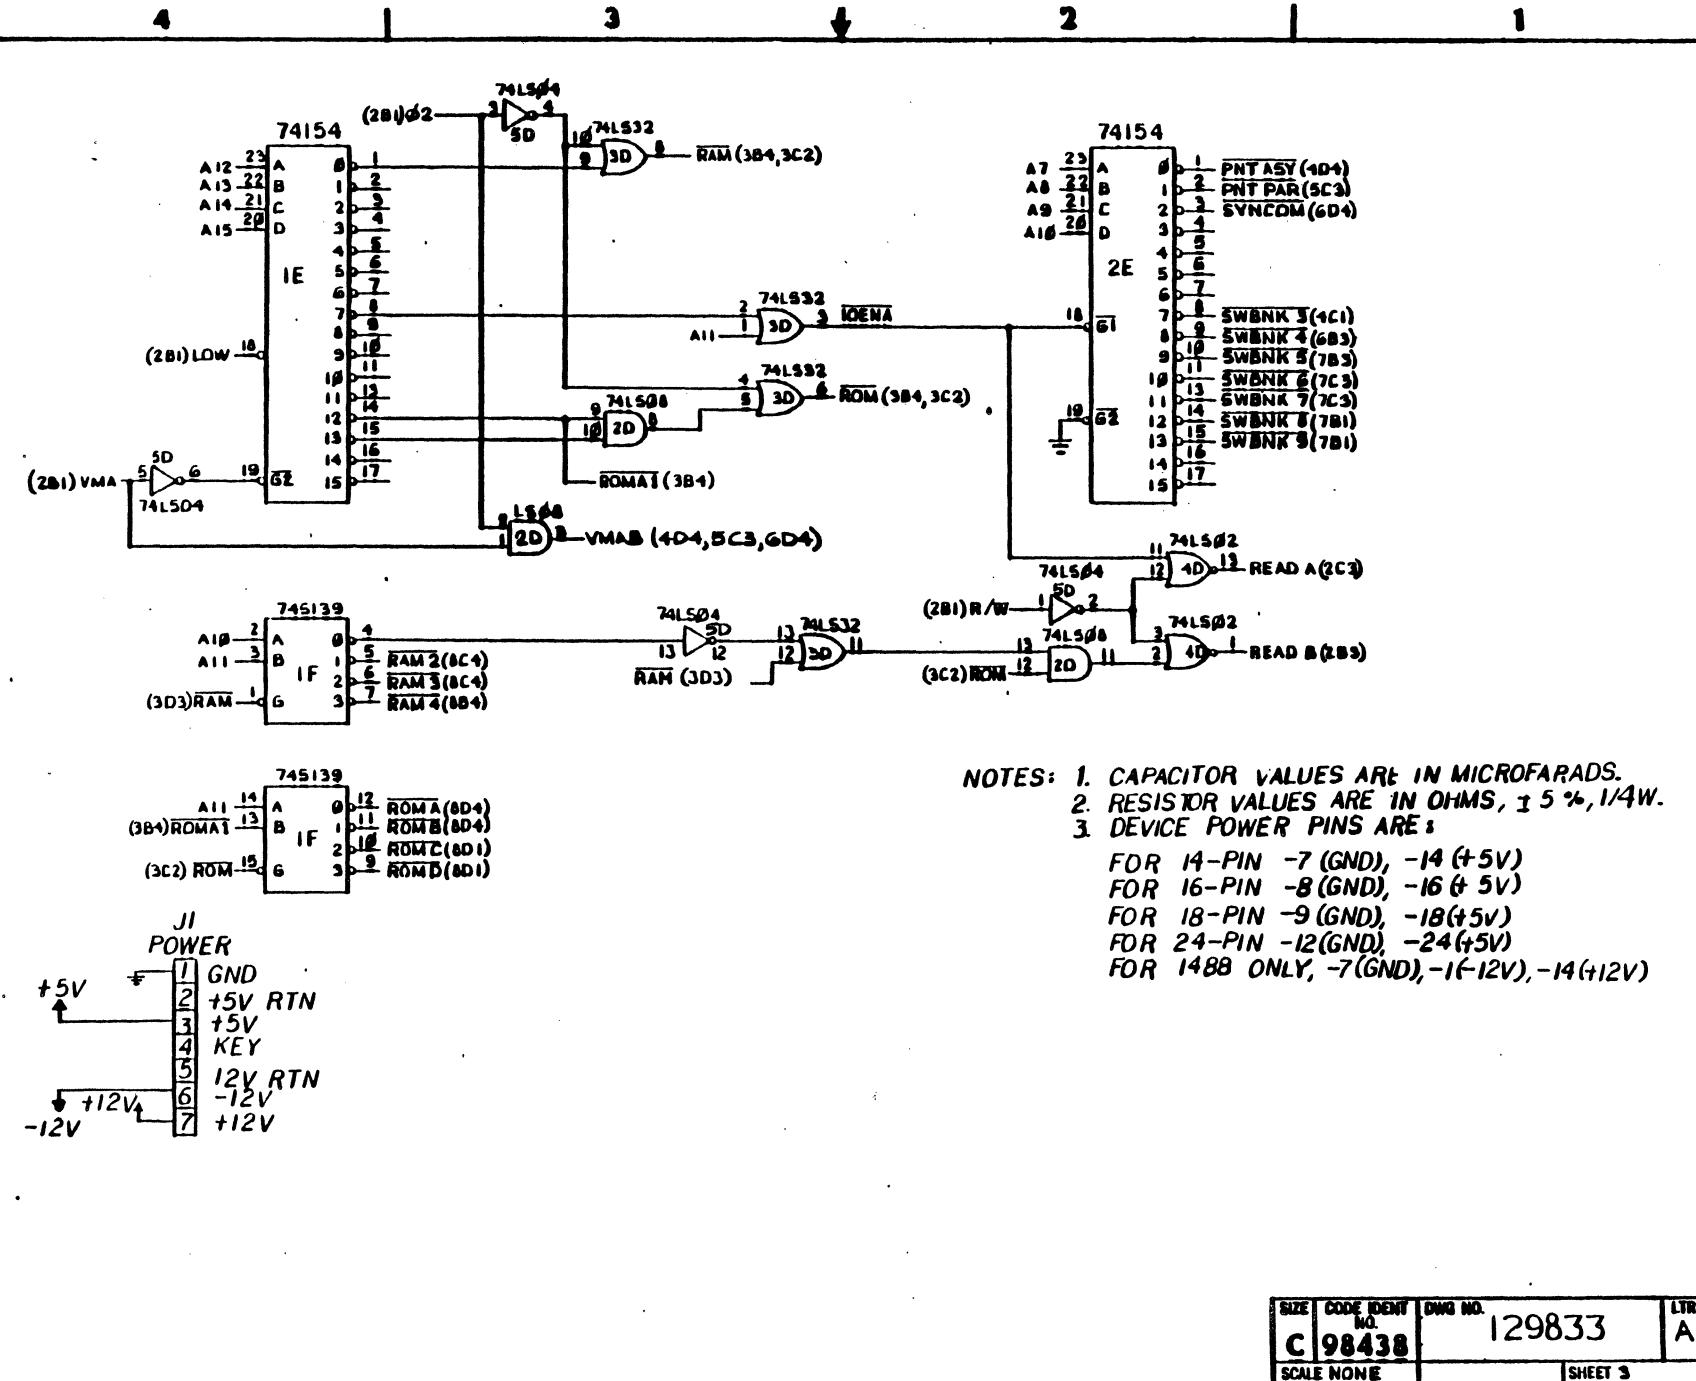

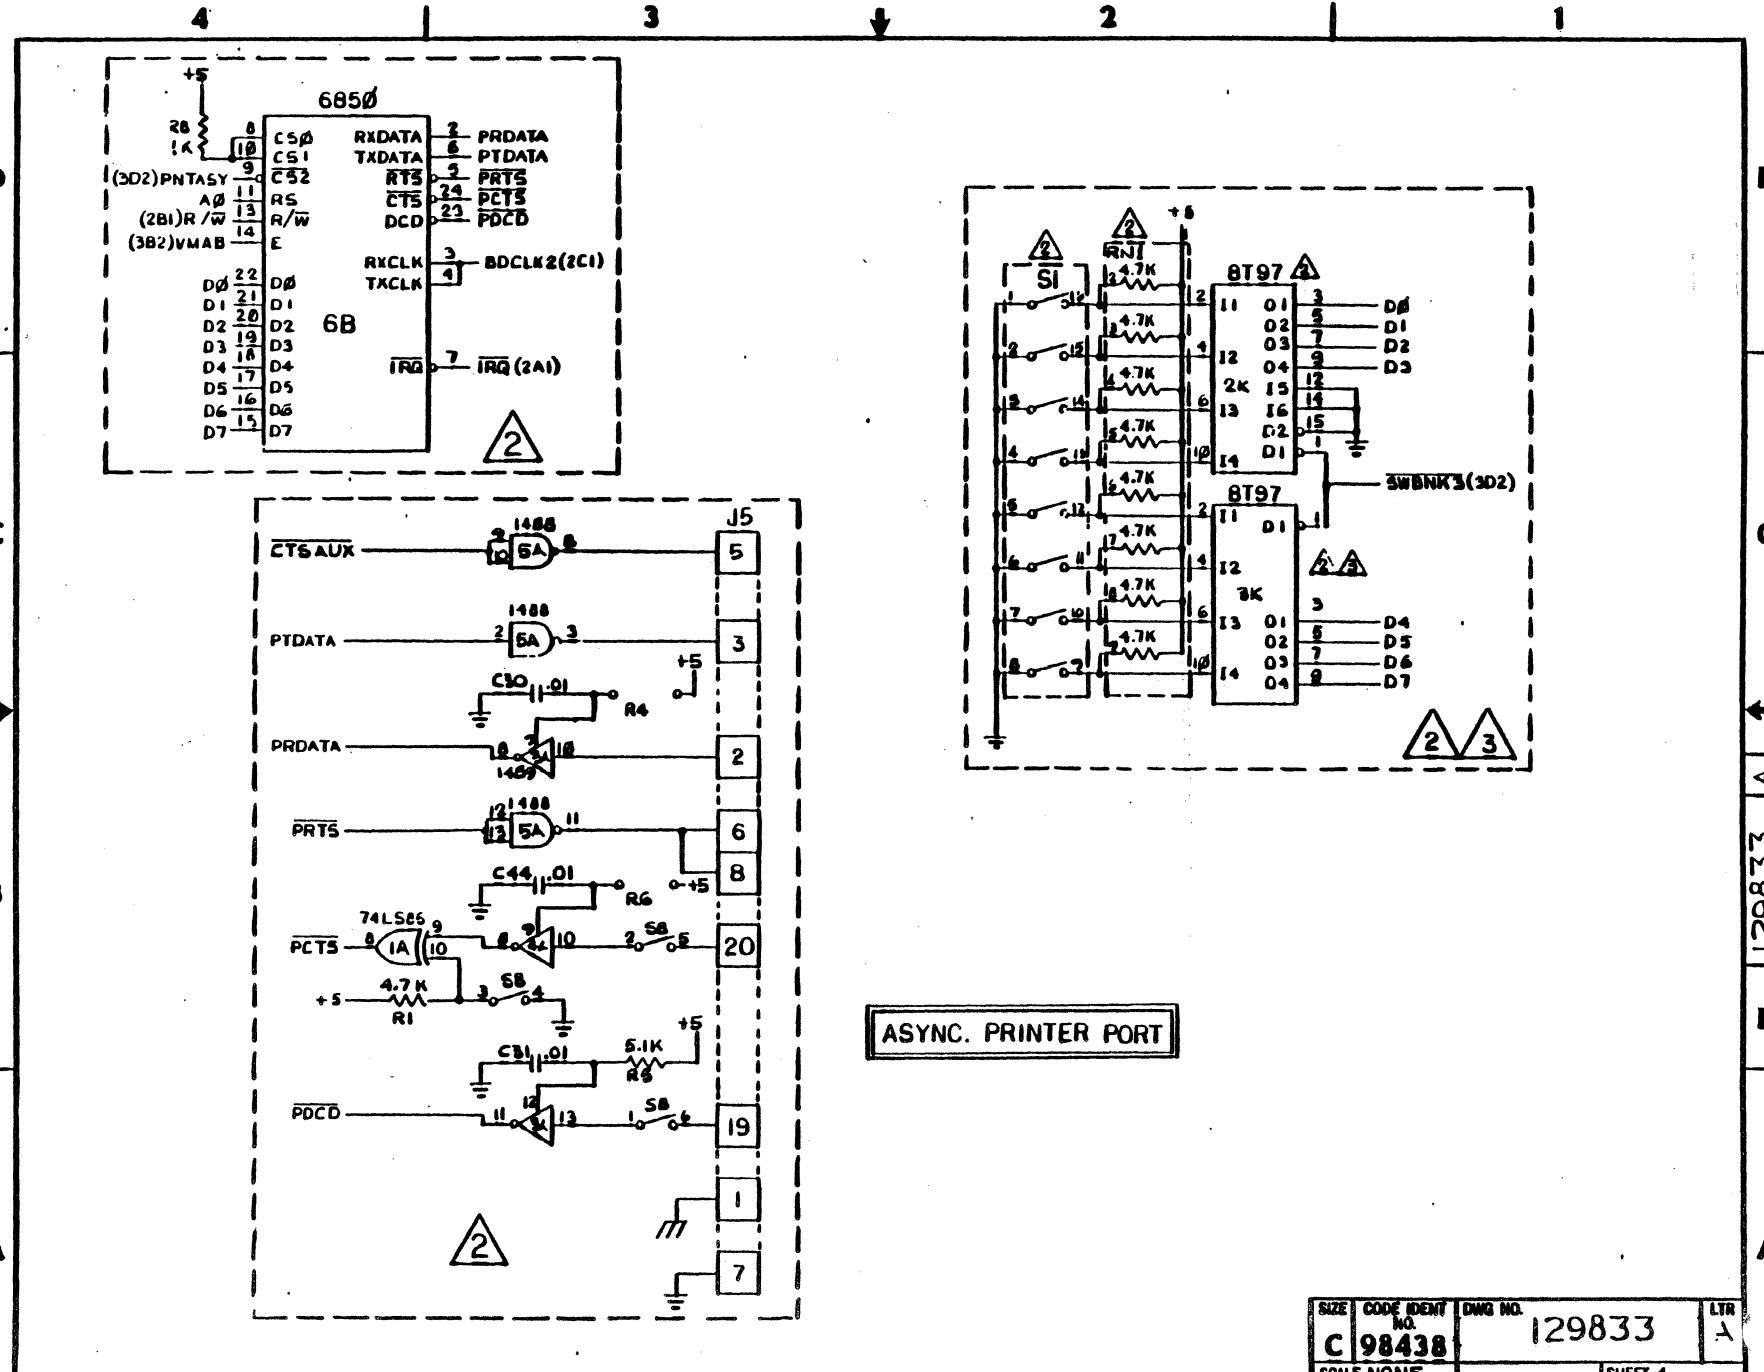


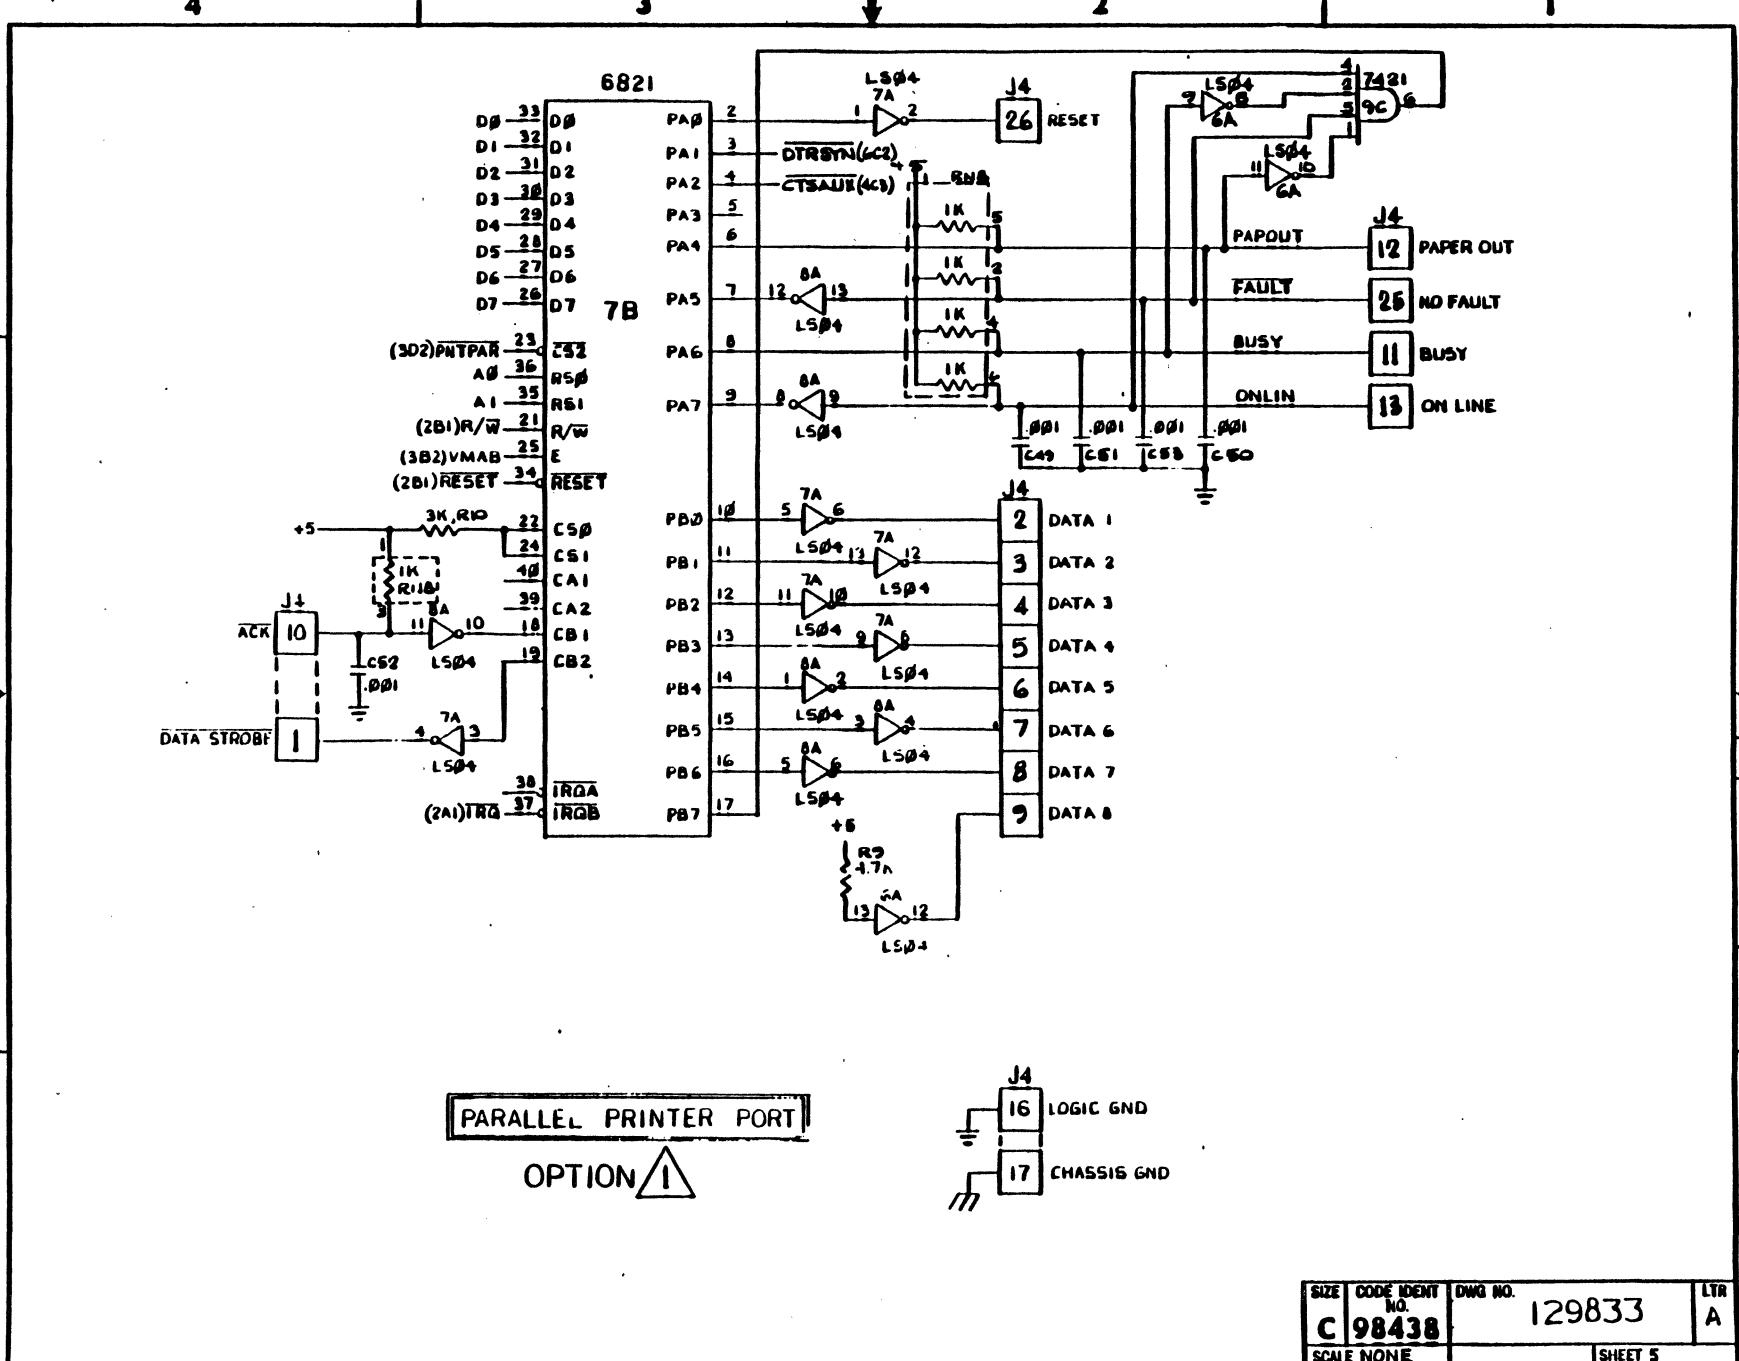

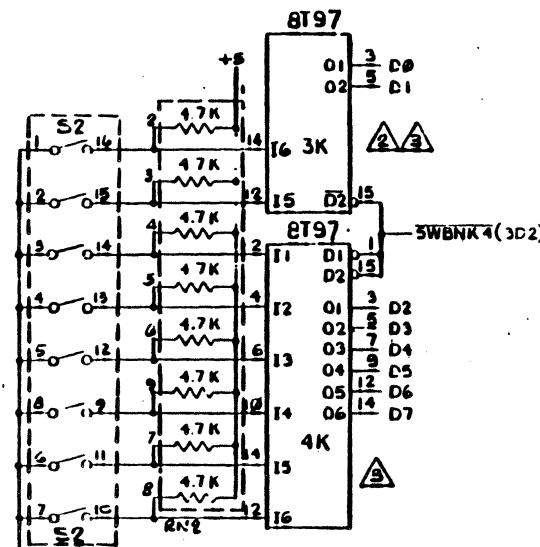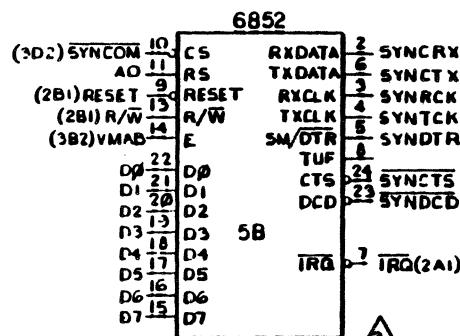

SYNCHRONOUS PORT

OPTIONS 

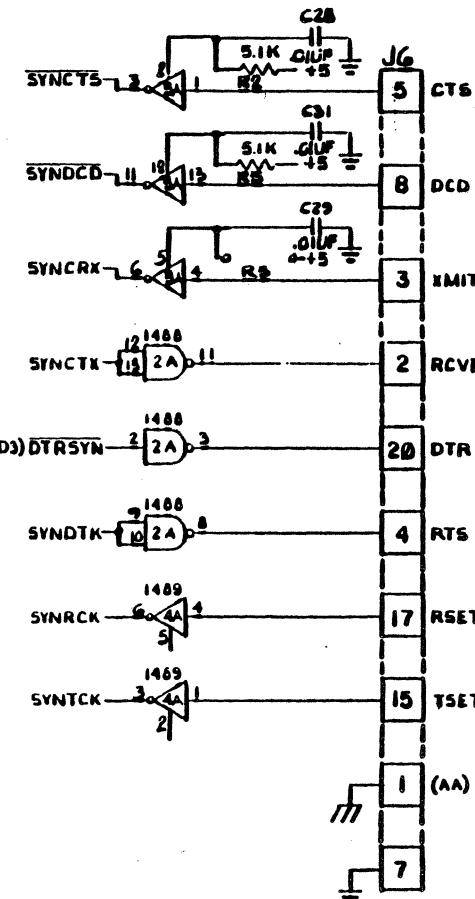

8

1

1

2

1

4

3

2

1

D

D

C


C

B

B


A


A

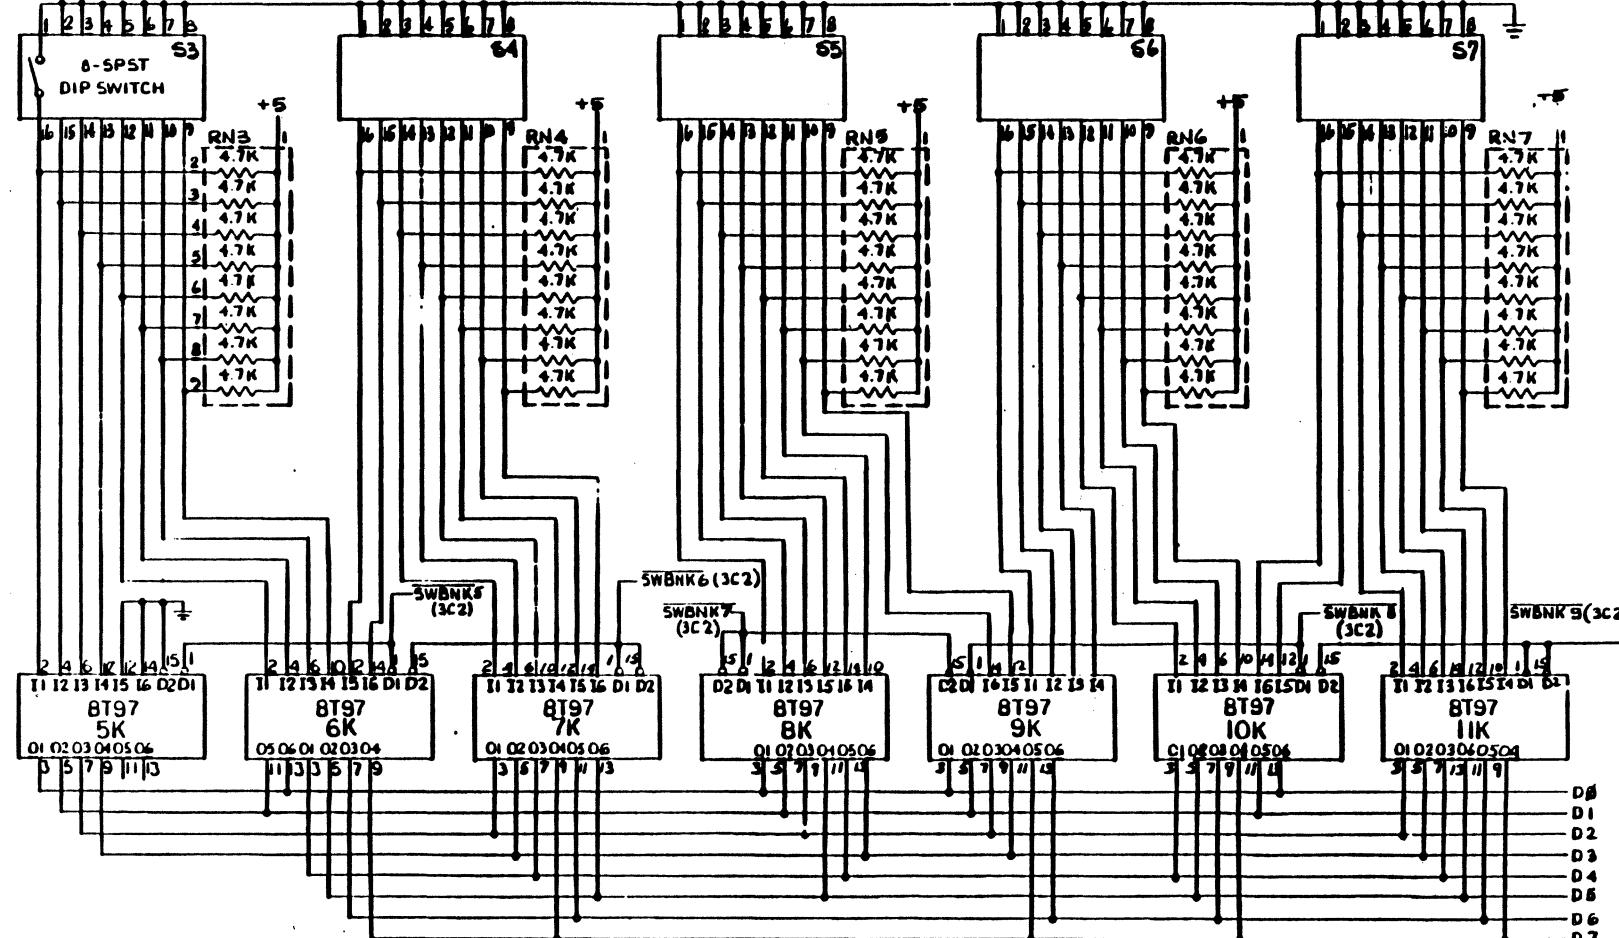

POLLING

OPTION 4

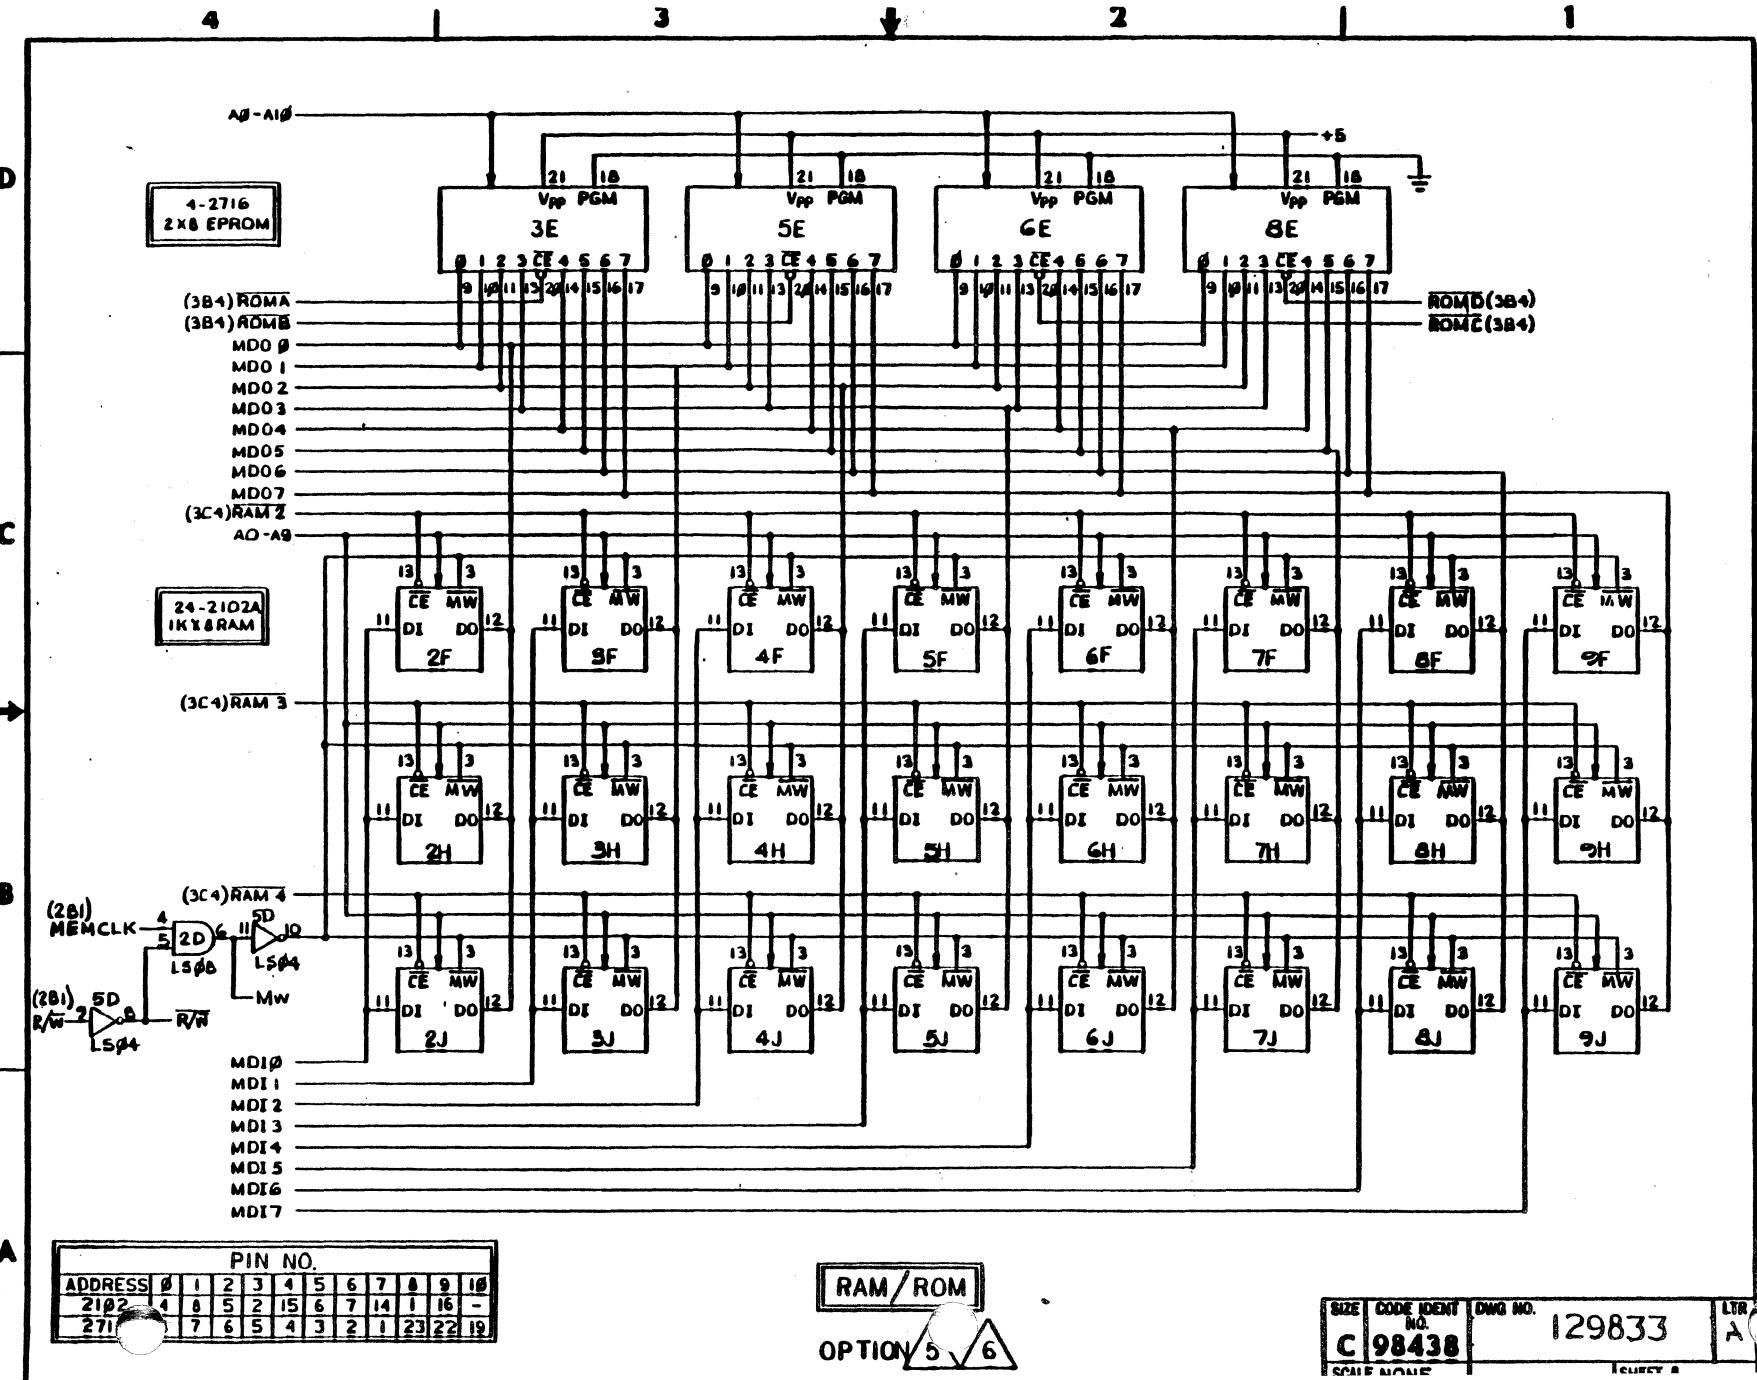

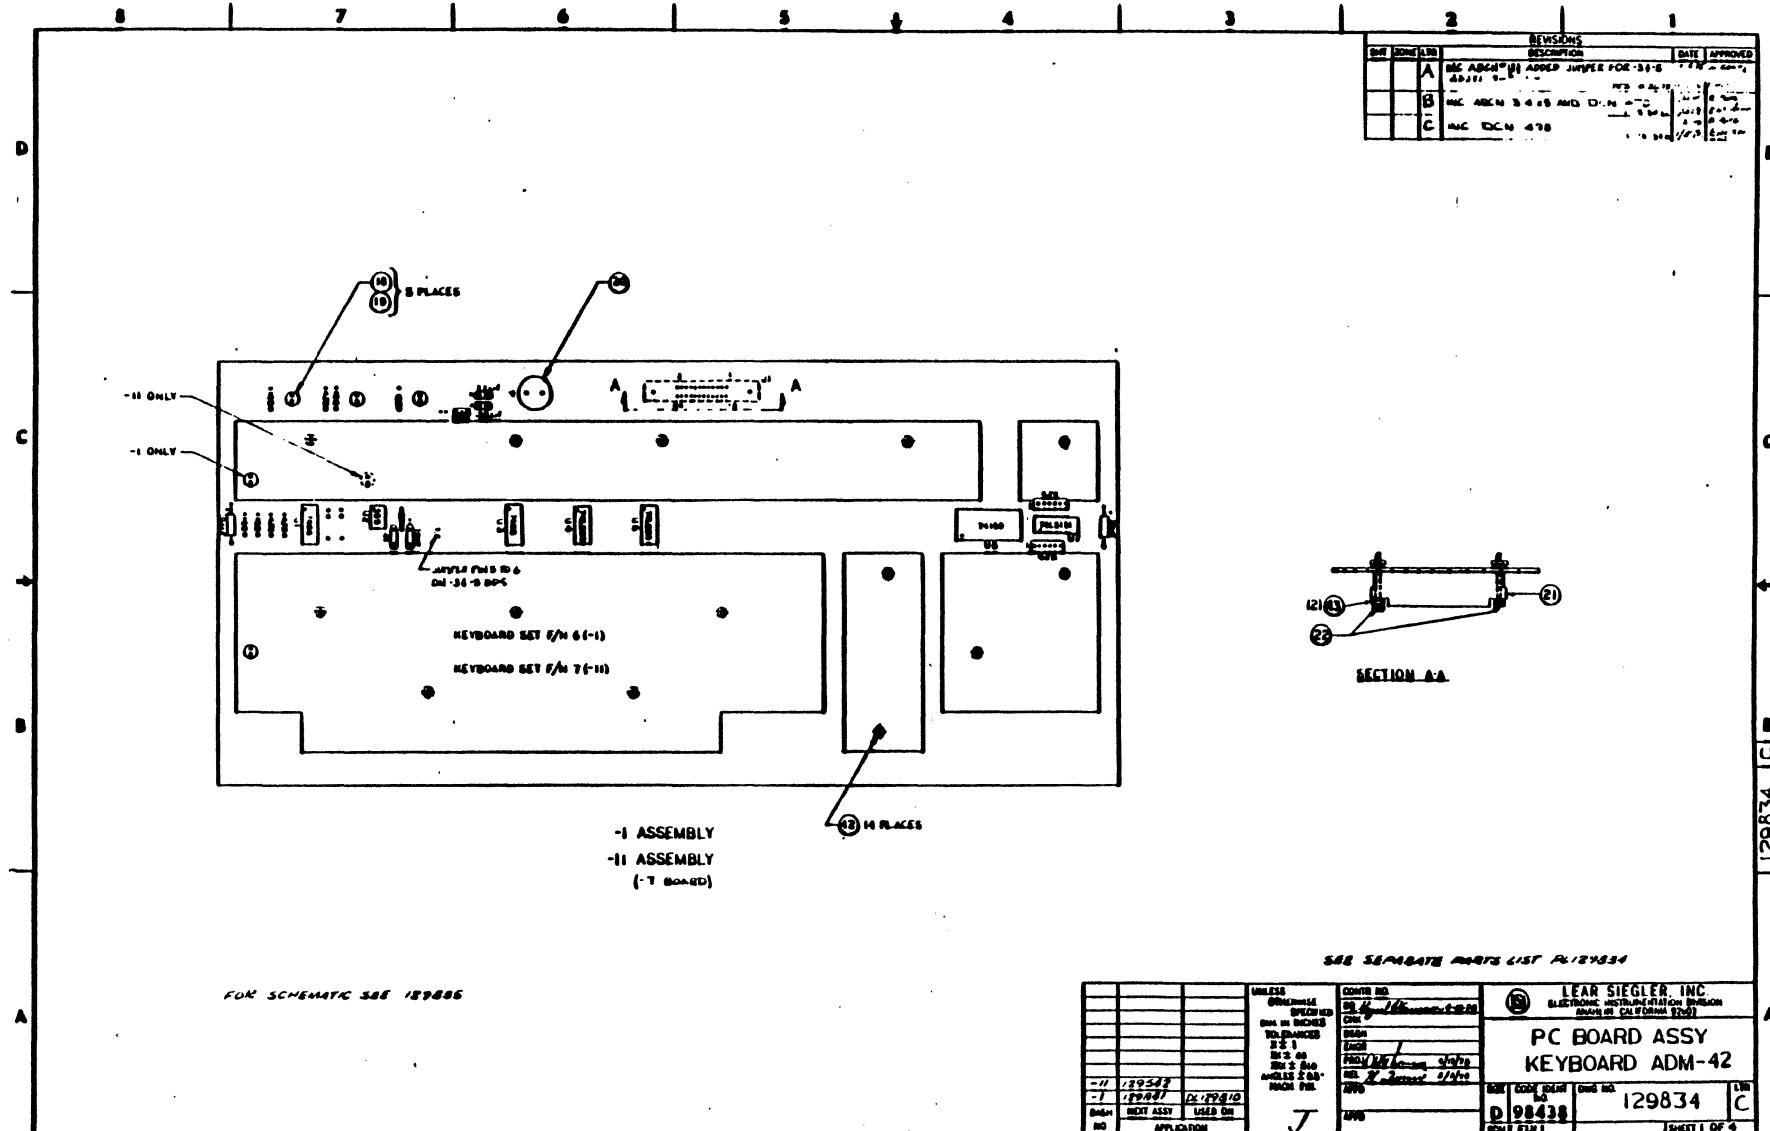

FOR SCHEMATIC USE ONLY

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INCORR ADCN 1-6 1-18-80 R. Clegg	1/21/80 1/30/80	R. Clegg B. Hyderman
C		SKIP REV LEVEL B TO CORRESPOND WITH 129834. INCORP DCN 49B 1-18-80	1/21/80 1/30/80	R. Clegg B. Hyderman

		129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. <input checked="" type="checkbox"/>	DR W. Kelly 4-11-78	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.			
	CHK	 P.C. BOARD ASSY - KEYBOARD, ADM-4			
	DSGN				
	ENGR				
	PROJ O.H. Thomas 4/13/78				
	REL H. Turner 4/13/78	SIZE	CODE IDENT	REV C	
	CUSTOMER APPRO	A	98438	PL129834	
		SCALE		SHEET 1 OF 3	

FIND NO.	QTY REOD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
1		✓		-1 P.C. BOARD ASSY - KBD	STD
2	✓			-11 P.C. BOARD ASSY - KBD	G.E.
3					
4					
5	1 1		-7	PRINTED WIRING BOARD	
6	1	129828-1		KEYBOARD SET	
7	1	129825-1		KEYBOARD SET	
8					
9	1 1	128348-159		I.C.	
10	1 1		-555		
11	1 1		-7805		
12	1 1		-06		
13					
14	2 2	129467-04			
15					
16	1 1		-151		
17	1 1	128578-04			
18	5 5	5082-4650	LED		HEWLETT-PACKARD
19	3 3	211447	FORMING BLOCK		TEC
20	1 1	AI-254	AUDIO INDICATOR		PROJECTS UNLIMITED
21	1 1	552221-1	CONNECTOR		AMP
22	1 1	552563-1	HARDWARE KIT		AMP
23					
24					
25					

A

98438

PL/29834

SH

2

REV C

FIND NO.	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-11	-1				
26	2	2		129476-472	RES MODULE 4.7K	
27						
28	5	5		128533-121	RES 120	
29	1	1		-472	4.7K	
30	1	1		-154	150K	
31						
32						
33	1	1		128518-103	CAP .01 UF	
34						
35	2	2		128518-334	.33 UF	
36	1	1		128518-225	2.2 UF	
37	2	2		129469-106	10UF	
38						
39						
40						
41						
42	1/4	1/4		4-40 X 3/8 TYPE F	SCREW, SLOT, PAN HD	
43	2	2		823411	WASHER, FL H 4. (.250 DD X .115 ID X .032) SMALL PATTERN	
44						
45						
46						
47						
48						
49						
50						

A
SIZE
98438
FSCM NO.

P/L 29834
SH 3

REV C

4

3

2

1

REVISIONS					
SHT	ZONE	LTR	DESCRIPTION	DATE	APPROVED
		A	KEY NOMENCLATURE REV 5-2-78	5-2-78 12/1/78	W. Siegler R. Davis
		B	INCORP DCN NO. 498	1/17/79 1/17/79	R. Davis R. Siegler

D

D

C

C

B

B


B

B

A

A

			UNLESS OTHERWISE SPECIFIED: DIM. IN INCHES	CONTR NO DR 725 7-5-78	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIVISION ANAHEIM, CALIFORNIA 92803	
			TOLERANCES: X±.1 XX±.03 XXX±.010 ANGLES ±0.5°	CHK DSGN 725 7-5-78		
				ENGR PROJ 129835-7/6/78		
				REL 725 7-5-78		
129835	DL/129835/0	DASH NO	NEXT ASSY USED ON	APPD	SCHEMATIC - KEYBOARD ADM-42	
			APPLICATION	APPD		
PROPRIETARY LEGEND EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR SIEGLER INC., ARE ISSUED IN STRICT CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED, OR USED FOR THE MANUFACTURE OR SALE OF THE APPARATUS WITHOUT WRITTEN PERMISSION				SIZE C	FSCM NO. 98438	DWG NO. 129835
				SCALE		LTR B
						SHEET 1 OF 2

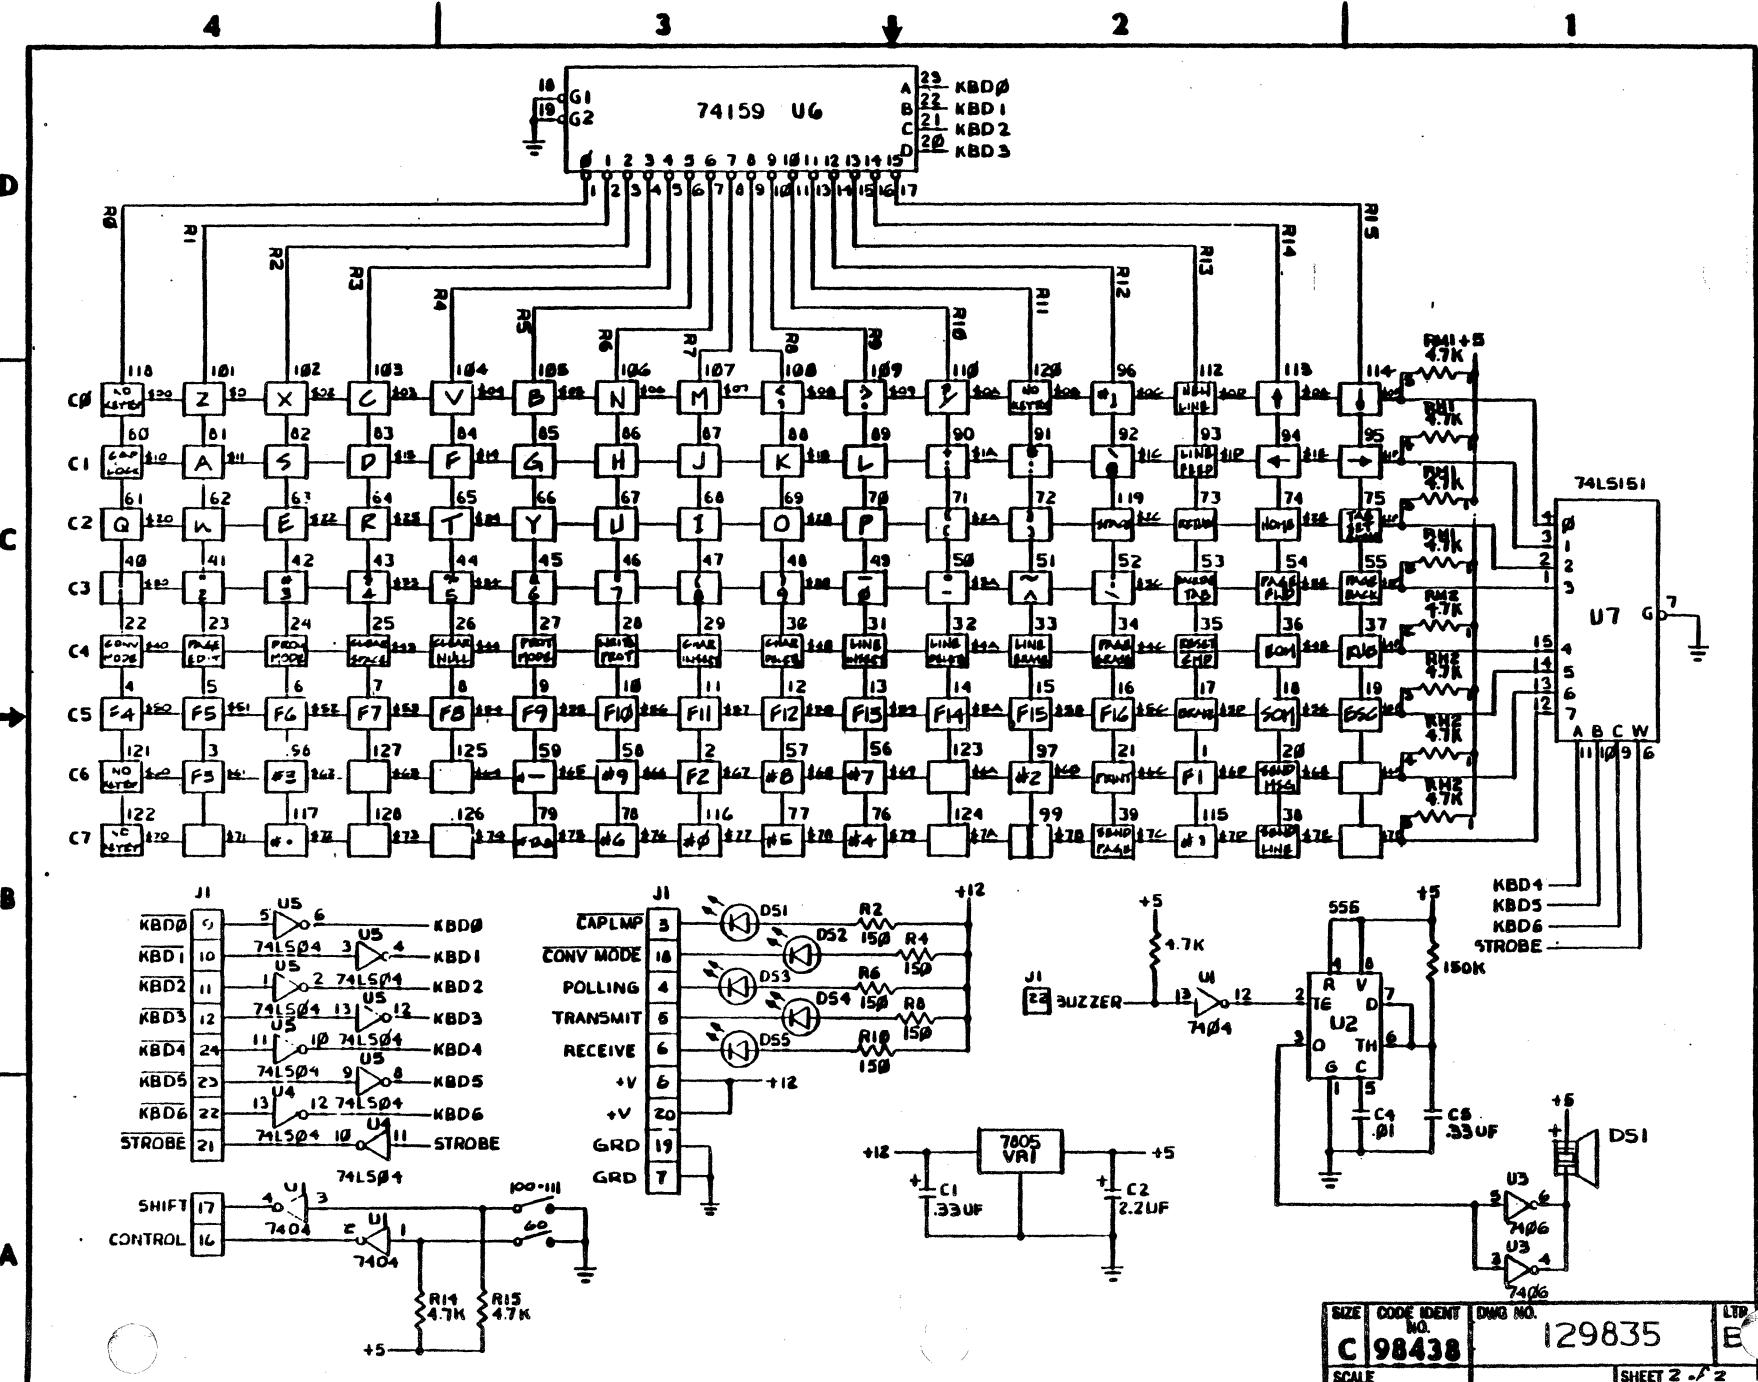

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC ADGN 1-4 ADDED -11 SHT 4,5 REDRAWN; ADDED NEW SHT 5 RENUMBER SHT 5 AS SHT 6 W. Kelly 5-10-79	5-10-79	W. Kelly
B		INC. ADGN 5-7. DEN 469, 574, ADDED SHT 7 & LSI P/N TO PARTS LIST. W. Kelly 3-20-80	3-20-80	W. Kelly

-11	129542	
-1	129842	DL129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. ✓	DR W. Kelly 6-30-71	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
	CHK			
	DSGN	WIRES ASSY - MONITOR		
	ENGR D. Johnson 6/30/78	ADM 42		
	PROJ H. Turner 4/30/78			
	REL	SIZE	CODE IDENT	REV B
	CUSTOMER APPD	A	98438	
		SCALE		
			SHEET 1 OF 7	

NOTES:

1. APPLY PART NO. TO TAG.
2. UL LISTED & CERTIFIED PART OR MATERIAL.
3. BRAID CABLE JACKET WITH 24 CARRIER
NEW ENGLAND BUTT BRAIDING MACHINE.
BRAID ANGLE 45°, 90% COVERAGE, BRAID
IS NYLON, YARN SIZE 840/2, LIGHT GRAY
(TO MATCH 129726 CABLE)

SIZE	CODE IDENT	129839	8
A	98438		
SCALE NONE		SHEET 2	

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-1/-11				
1	1		129839 - 1/-11	WIRE ASSY	
2	1/2		812112	WIRE, TWISTED PAIR, UL 1061, 7x30 STRAND (BLK/WHT)	
3	1		801029	POT, 100Ω (R1-CONTRAST)	
4	1		801026	POT, 100K (R2-BRIGHTNESS)	
5	1		809206	CONNECTOR HOUSING	P6 NOTE 2
6	1		809207	CABLE CLAMP	
7	7		809079	CONTACT, PIN, 24-20AWG	
8	1		835010	TERM LUG, SPADE, #6	
9	1		809025	HOUSING, CONN.	P101 NOTE 2
10	9		809062	CONTACT	
11	6		809038	CONTACT	
12	1/2			BRAID CLEAR	NOTE 3
13	1/2		839040	INSULATION (.106 ID) YOKE & PVC	NOTE 2
14	1		830026	MARKER TIE	NOTE 1
15	8		830003	CABLE TIE	
16	1/2		812019	WIRE, INSL, UL 1061 WHT	NOTE 2
17			812091	↑ BLK	
18			812020	↑ RED	
19			812092	↑ GRN	
20			812021	↑ YEL	
21			812093	↑ BLU	
22			812082	↑ BRN	
23			812023	↓ ORN	
24			812089	↓ GRY	
25	1/2		812090	WIRE, INSL, UL 1061 VIO	

A
SIZE
98438
FSCM NO.
129839


SH
3
REV
B


LINE NO.	TERMINATION INFORMATION						WIRE INFORMATION						ROUTING	LGHTH		
	CABLE NO.	WIRE NO. OR COLOR	42" MONITOR"		CRT		FIND NO./NOTES		FROM END		TO END					
			REF DES	PIN	REF DES	PIN	CONN	TERMINATION	CONN	TERMINATION	WIRE OR CABLE					
1	EQ GND	GRN	P6	1	GND SCREW				7		8	19		54		
2	HDR	BLU		2	P101	6			7		10	21		54		
3	VDE	BLK		3	P101	9			7		10	17		54		
4	VIDEO	BLK		4	R1	3			7		△	11		53 1/2		
5	GND	WHT		6	R1	1			7		SECOND WIRE)	2				
6	+V	VIO		5	P101	7			7		10	25		54		
7	GND	WHT		7	P101	1			7		10	16		54		
8	-	-		8	(NOT USED)											
9	-	-	P6	9	(NOT USED)											
10	GRD	GRAY	R1	1	P101	10		3	(TWO WIRES) △		10	24		24		
11	VIDEO	YEL	R1	2		8			△	11		10	20	24		
12	+23 BRT	ORN	R2	3		2			△	11		10	23	23		
13	-100 BRT	BRN	R2	1		3		4	△	11		10	22	23		
14	BRT	RED	R2	2	P101	4			△	11		10	18			
15																
16																
17																
18																
19																
20																
21																
22																
23																
24																
25																

CODE NOTES:  INSULATE TERMINATION WITH F/N 13.

LINE NO.	TERMINATION INFORMATION						WIRE INFORMATION						ROUTING	LGH
	CABLE NO.	WIRE NO. OR COLOR	42 MONITOR CRT		FROM TO		FIND NO./NOTES				WIRE OR CABLE			
			FUNCTION	REF DES	PIN	REF DES	PIN	FROM END	TO END	WIRE OR CABLE				
1	EQ GND	GRN	P6	1	GRD SCREEN				7		8	19		102
2	HDR	BLU		1	2	P101	6		7		10	21		102
3	VDR	BLK		3	3	P101	9		7		10	17		102
4	VIDEO	BLK		4	R1	3			7		△	11		101 1/2
5	GRD	WHT		6	R1	1		5,	7		SECOND WIRE	2		
6	+V	VIO		5	P101	7		6	7		10	25		102
7	GRD	WHT		7	P101	1			7		10	16		102
8		-		8	(NOT USED)									
9		-	P6	9	(NOT USED)									
10	GRD	GRAY	R1	1	P101	10		3	(TWO WIRES)	11	10	24		24
11	VIDEO	YEL	R1	2		8			△	11	10	20		24
12	+28 VBT	ORN	R2	3		2			△	11	10	23		23
13	+100 VBT	BRN	R2	1		3		4	△	11	10	22		23
14	BVT	RED	R2	2	P101	4			△	11	10	18		23
15														
16														
17														
18														
19														
20														
21														
22														
23														
24														
25														

CODE NOTES: INSULATE TERMINATION WITH F/N 13

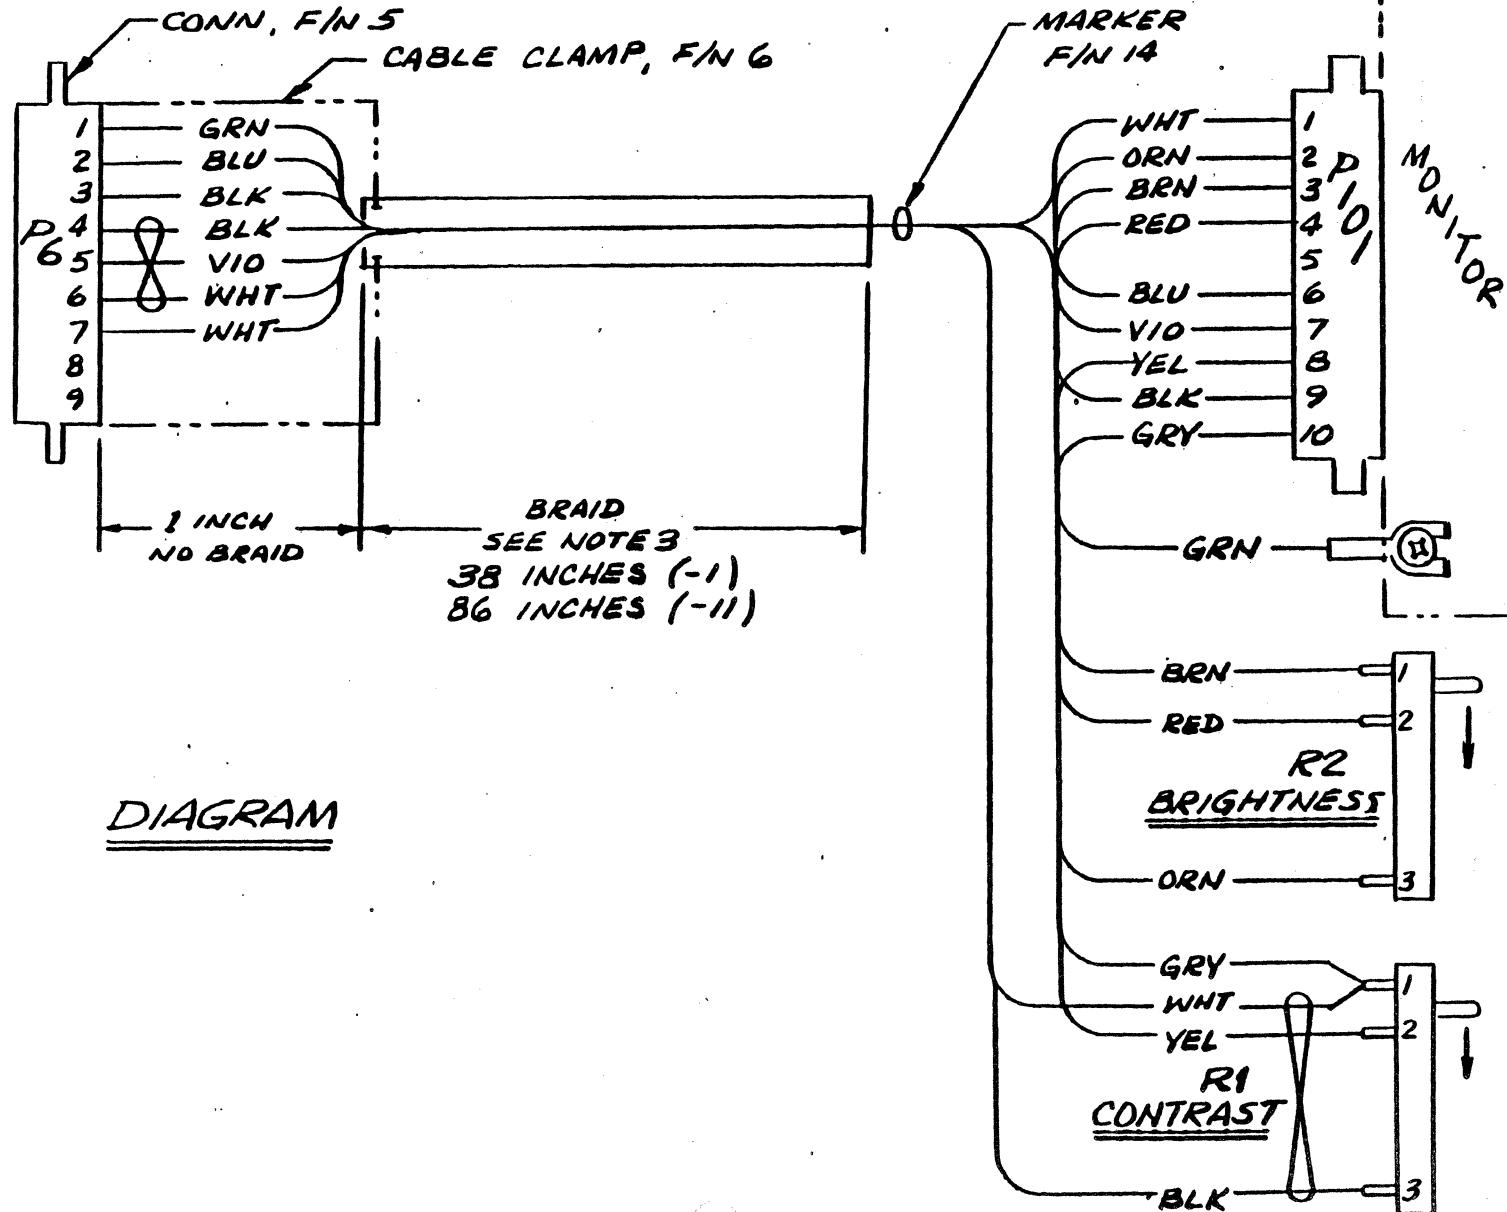

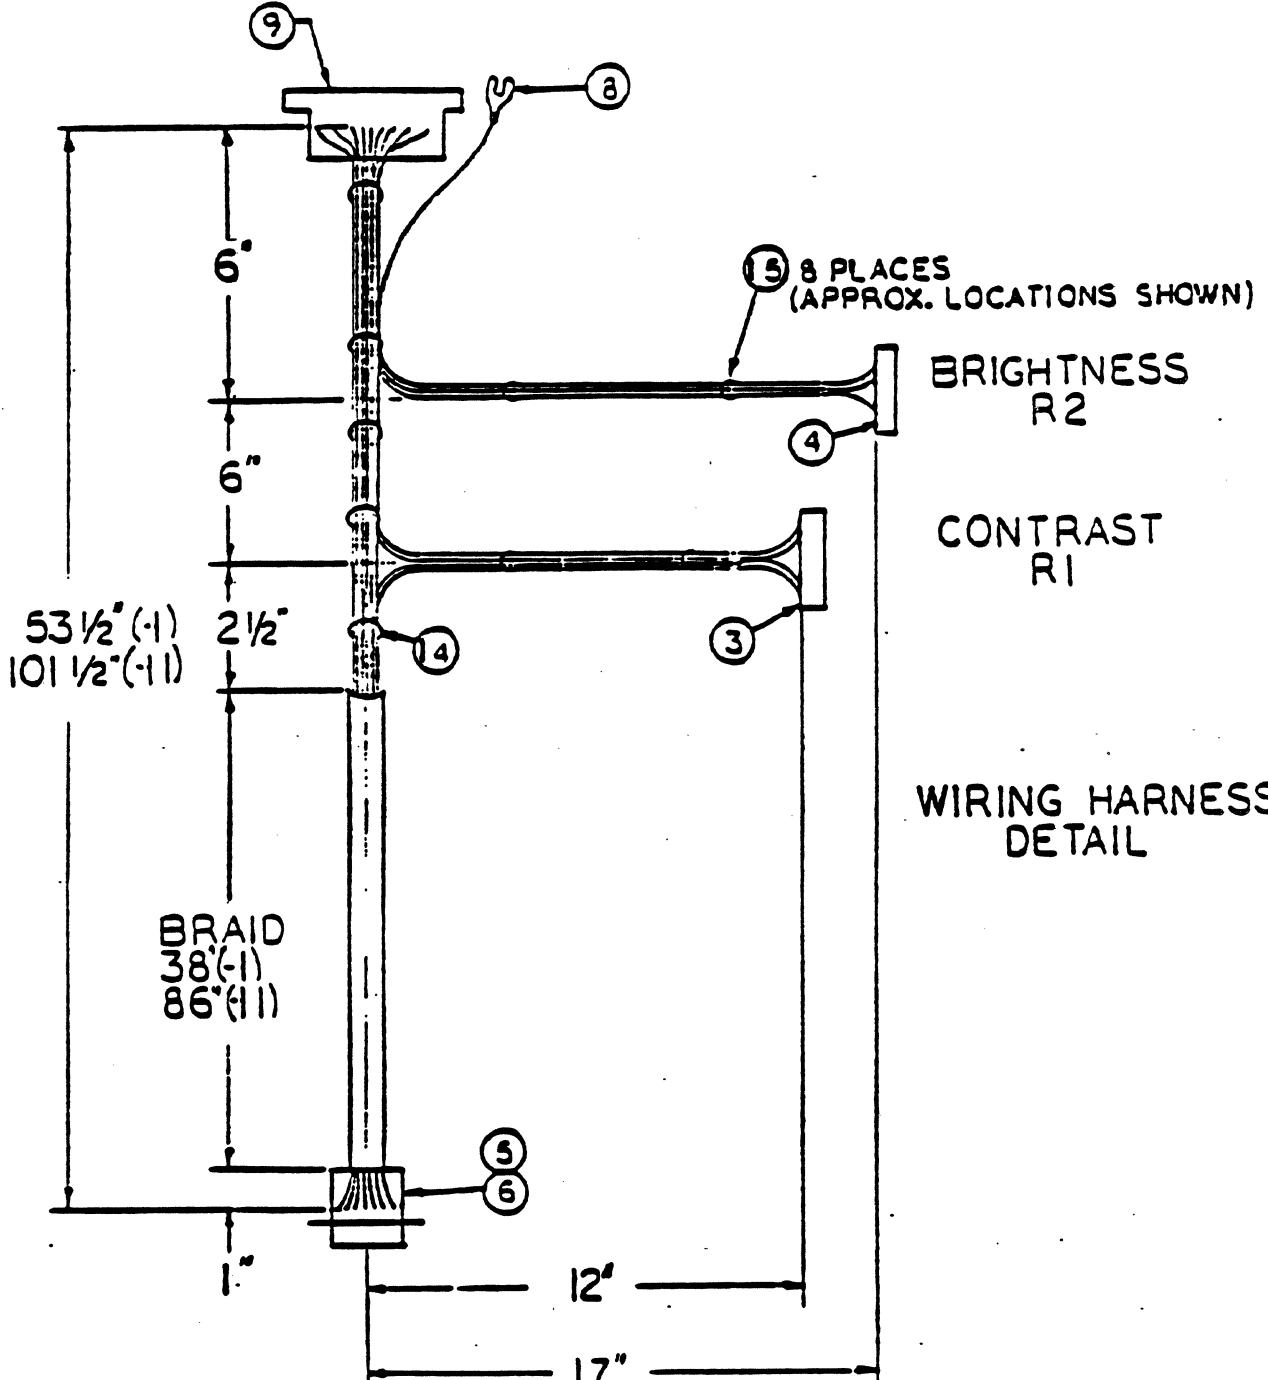

NOTE:
ALL DIMENSIONS $\pm 1/2''$




SIZE A	CODE IDENT 98438	129839	REV B
SCALE NONE		SHEET 7	

4

3

2

1

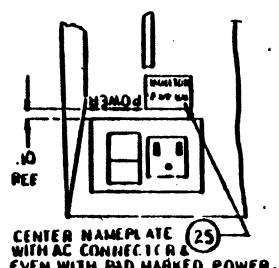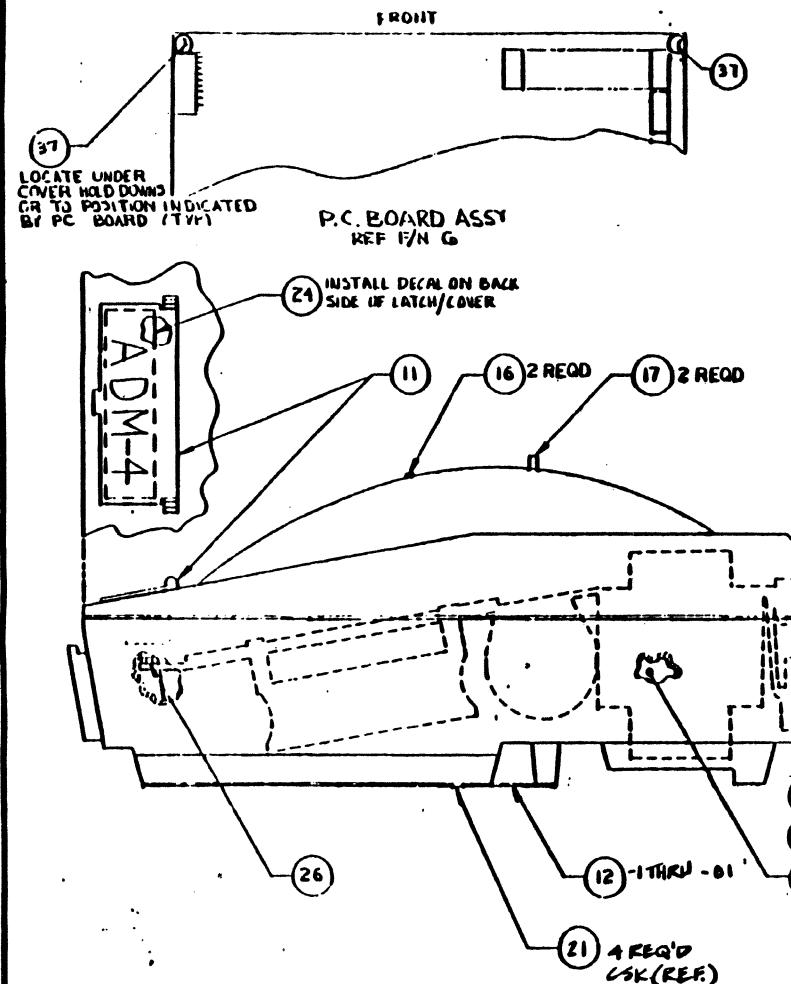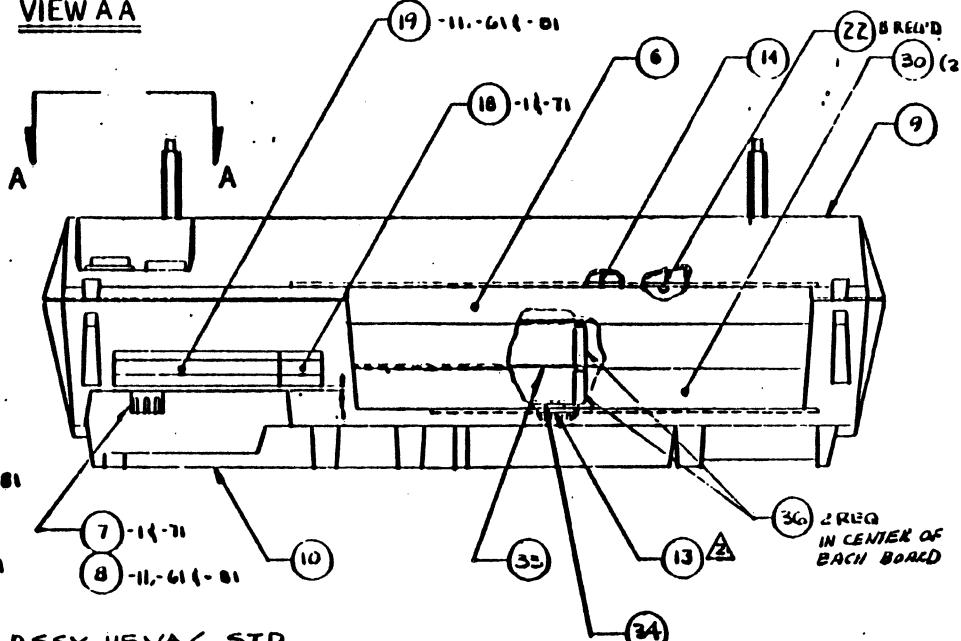VIEW A-A

NOTE:

1. FOR OPTIONS REFER TO 129842.

△ BOND IN PLACE WITH HOT MELT.

△ -61 ASSY TO REPLACE -II ASSY. -61 HAS NEW PHR CONN. FOR MONITOR ATTACHMENT & WILL MATE WITH MONITOR 129842 -81 ONLY. SEE 129842 FOR INTERCHANGEABILITY DATA.

FOR SEPARATE PARTS LIST SEE PL 129840

-81	129810	UNLESS OTHERWISE SPECIFIED: DIM. IN INCHES TOLERANCES: ±.01 XX±.03 XXX±.010 ANGLES ±0.5°	CONTR NO. DR. <i>L. Siegler</i> 61278
-71	129810		CHM
-61	129810		DSGN
-II	129810		ENGR
-I	129810 (TL129810)		PROJ. <i>PL-129840</i> 7/17/78
DASH NO.	NEXT ASSY USED ON		REL <i>PL-129840</i> 7/17/78
APPLICATION			

PROPRIETARY LEGEND

EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR SIEGLER INC. AND ARE HELD IN STRICT CONFIDENCE AND SHALL NOT BE COPIED.

 LEAR SIEGLER, INC.
ELECTRONIC INSTRUMENTATION DIVISION
ANAHEIM, CALIFORNIA 92803

TERMINAL CONTROL UNIT
ASSY - ADM 42

SIZE	FSCM NO.	DWG NO.	LTR
C	98438	129840	D

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC. ADCN 1 THRU 8 & CREATED -11, -21 & -31 7.E.S 3-6-79	4-30-79 4/30/79	W. Kelly Blyden
B		INC. ADCN #9 THRU 11. DELETE ALL REF TO ASSEMBLIES - 21 THRU -51 & ADDED - 61 ASSY. G. JAROSEK 1/3/79	3-9-79 9/13/79	J. Jarosek Blyden
C		INC ADCN 12, DCN 461 & 414 RM 3-6-80	4-17-79 3-5-79 3-6-80	W. Kelly Blyden
D		INC DCN 915 BAB 6-17-80	6-17-80 6/16/80	W. Kelly Blyden

⚠ -61 ASSY TO REPLACE -11 ASSY.
-61 HAS NEW POWER CONN. FOR
MONITOR ATTACHMENT. WILL MATE
WITH MONITOR 129842-31 ONLY
SEE 129842 FOR INTERCHANGABILITY
NOTES. DATA.

-61	129810	DL129810
-11	129810	DL129810
-1	129810	DL129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED	DR <i>W. Kelly 4/27/79</i>	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.
DIM. IN INCHES	CHK 	
TOLERANCES	DSGN	TERMINAL CONTROL UNIT
X ± .1	ENGR /	ADM-42
XX ± .03	PROJ <i>W. Turner 5/2/78</i>	
XXX ± .010	REL <i>W. Turner 5/3/78</i>	PL 129840
ANGLES ± 0.5°	CUSTOMER APPD	REV D
MACH. FIN.	SIZE A	CODE IDENT 98438
✓	SCALE	SHEET 1 OF 3

FIND NO.	QTY REQ'D	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	1	✓	-1	TERMINAL CONTROL UNIT 115V	
	2	✓	-11	" " " 230V	
	3	✓	-61	TERMINAL CONTROL UNIT 230V	△
	4	1	129730-21	POWER SUPPLY 230V	
	5	1	129730-31	POWER SUPPLY 115V	
	6	1 1 1	129830-11	P.C. BOARD ASSY - LOGIC	
	7	1	313003	FUSE 3A	LITTLE FUSE
	8	1 1	31301.5	FUSE 1.5A	"
	9	1 1 1	129705-9	COVER	
	10	1 1 1	129705-3	BASE	
	11	1 1 1	129718-06	LATCH COVER/LOGO	
	12	1 1 1	129748-3	BOTTOM DEFLECTOR	
	13	1 1 1	129750-3	INNER CLOSURE	
	14	1 1 1	129749-5	TOP CLOSURE	
	15		129705-7	COVER	
	16	2 2 2	129751-3	PIN, NYLON	
	17	2 2 2	129766-3	PIN, STEEL	
	18	1	129497-47	NAMEPLATE UL	
	19	1 1	129717-27	NAMEPLATE 230V	
	20	1	129730-41	POWER SUPPLY 230VAC	
	21	4 4 4 4	#4 x 3/8	SCREW OVAL HD. PUSH TITE	ENDURION FINISH
	22	8 8 8 8	821403	SCREW #4 x .312 PAN HD	
	23		131370-1	P.C. BD ASSY	
	24		131397	DECAL	
	25		129497-55	NAMEPLATE	

A

98438

FSCM NO.

PL 129840


SH

N

REV D

FIND NO.	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
26	1	1	1	1		10-32 X 3/8	SCREW, SEMS, HEX INDENTED	
27								
28								
29								
30	2	2	2	2		129746-131	CLOSURE (BLANK)	
31								
32								
33	1	1	1	1		129837-05	FILLER PANEL CENTER	
34	1	1	1	1		129837-03	FILLER PANEL BOTTOM	
35								
36	2	2	2	2		129747-3	P.C. BOARD SPACER	
37	2	2	2	2		5B16 X 3/8 DIA PAD		DECOFELT
38								
39								
40						129840-71	TERM CONTROL UNIT - 115V	
41						- B1	TERM CONTROL UNIT - 230V	
42								
43								
44								
45								
46								
47								
48								
49								
50								

A SIZE
 98438 FSCM NO.
 PL/29840 SH
 REV D

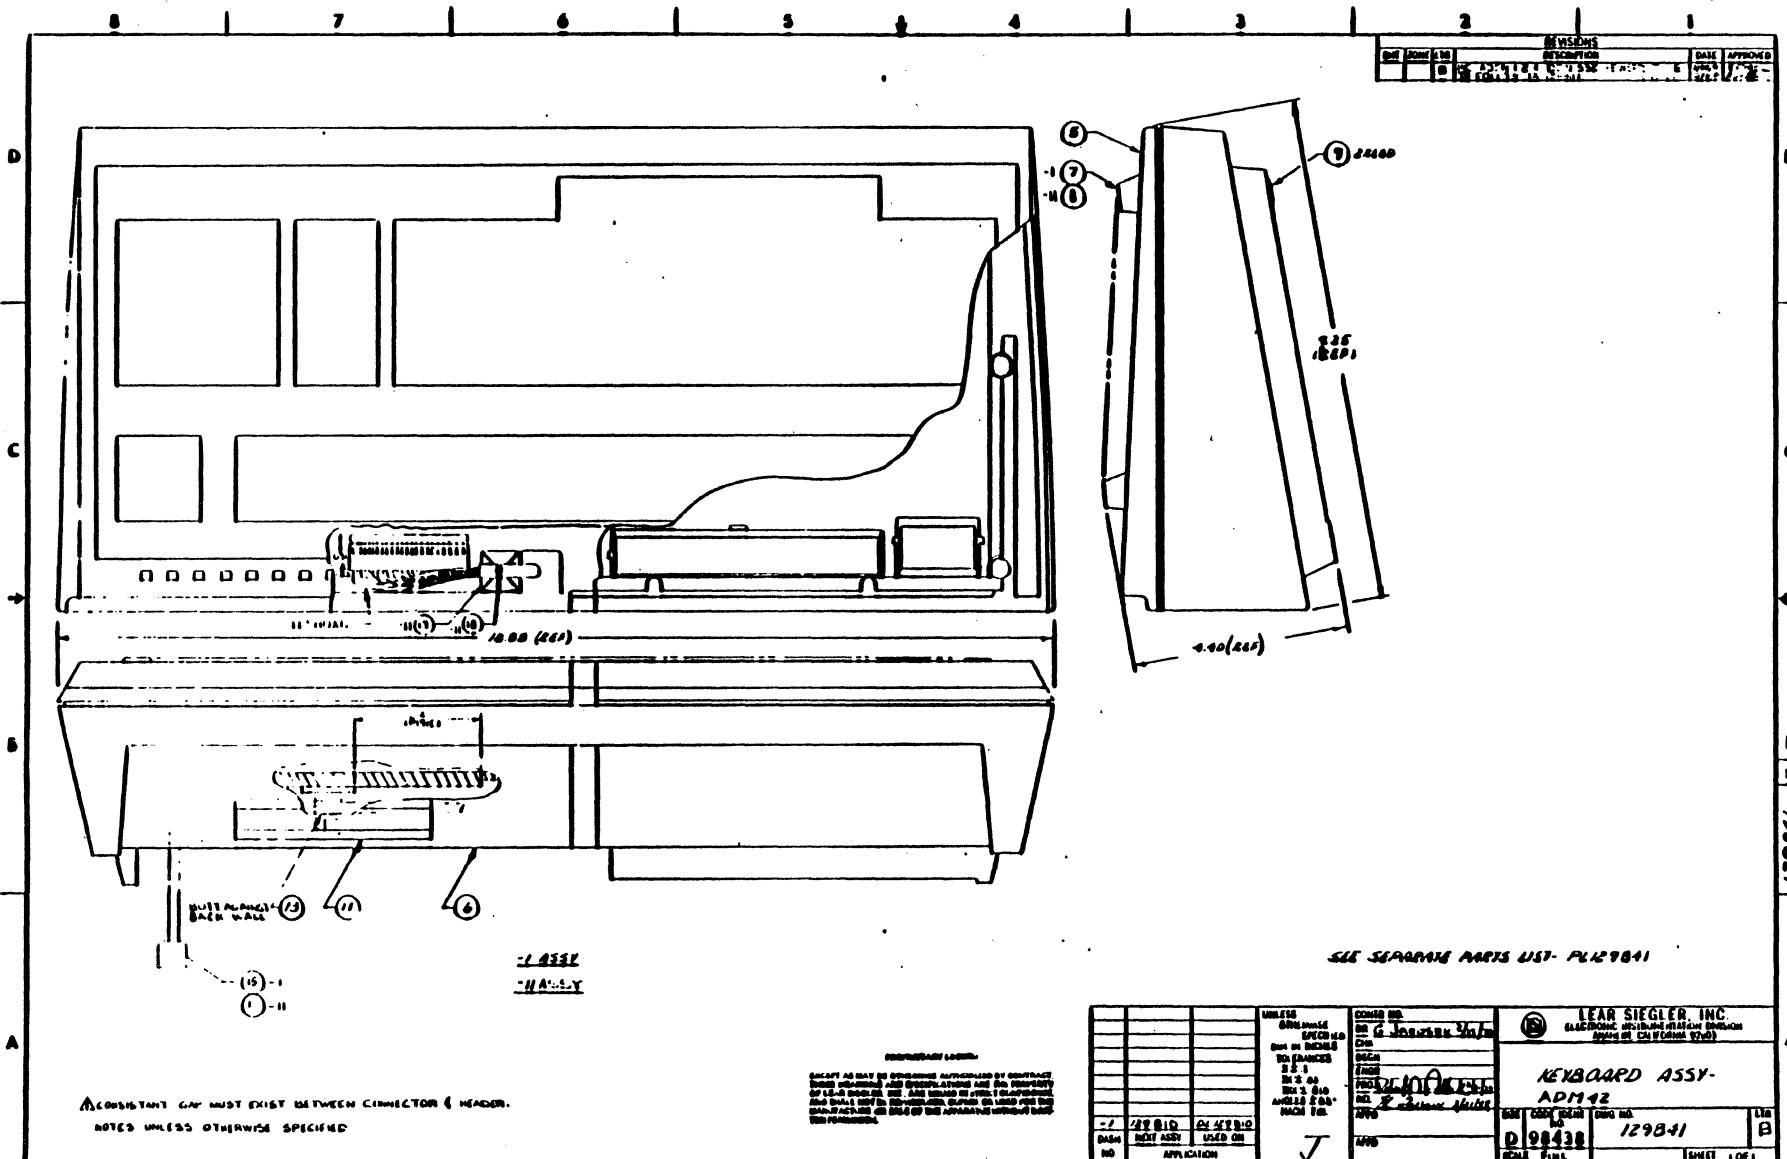

REVISIONS








FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-11-1		-1	KEYBOARD ASSY, ADM-42	
1	✓		-11	KEYBOARD ASSY, ADM-42	
2	✓				
3					
4					
5	1 1		129706-9	COVER	
6	1 1		129706-3	BASE	
7	1		129834-1	P.C. BOARD ASSY	
8	1		129829-00	KEYBOARD ASSY	
9	2 2		5816 - 3/8 DIA	PAD, 1/16 THK	DECCOFELT CORP
10					
11	1 1		129717-29	NAMEPLATE	
12	1 1		129836-3	DECAL	
13	1 1		021-0375	CABLE CLIP	DEK
14					
15	1		129723-1	CABLE ASSY.	
16	1		129817-1	CABLE ASSY	
17	1		B30002	TIE MOUNT, ADHESIVE BACK	
18	1		B30003	CABLE TIE	
19					
20					
21					
22					
23					
24					
25					

SIZE
A
 FSCM NO.
98438


SH
P2 / 29841

Z

REV
B

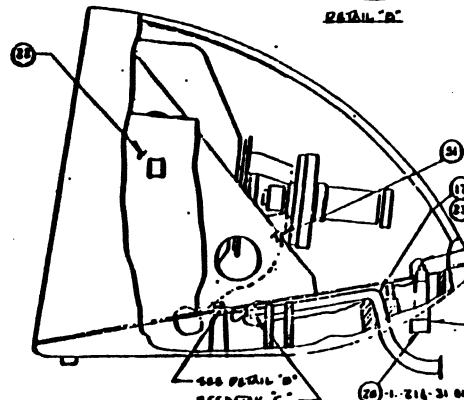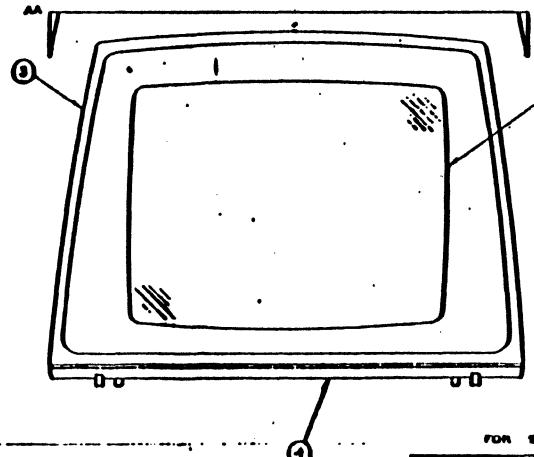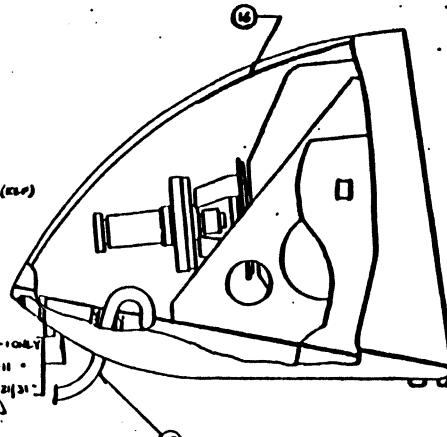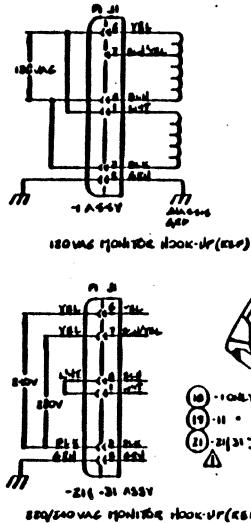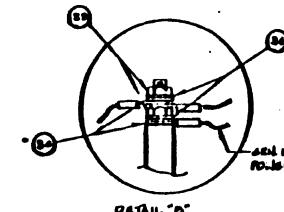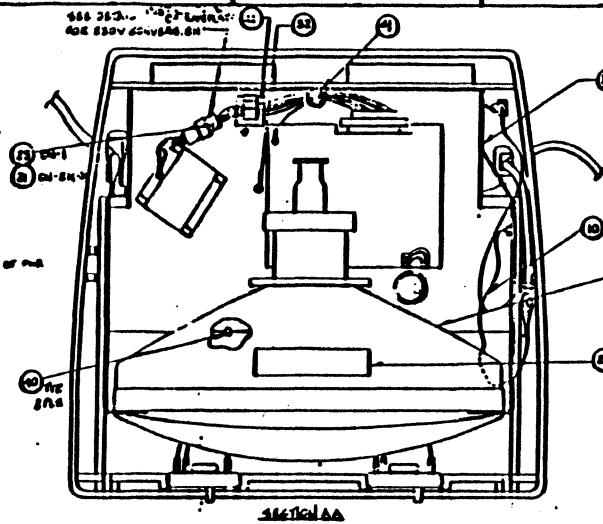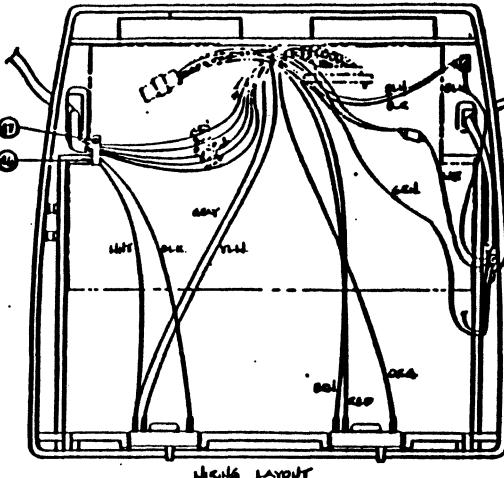

NOTED UNLESS OTHERWISE SPECIFIED
A CENTER ON UNIT.
B. -31 ASSY REPLACES -21 ASSY.

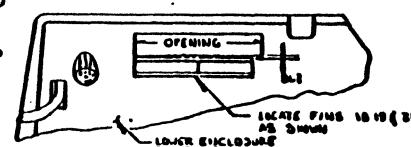

-1 A 45Y 115 VAC
-11 - 115 VAC LESS PS
-21 : 110 VAC
-21 : 110 VAC / SPEC. COUN.

FOR SEPARATE PARTS LIST SEE PL 120842			
			LEAR SIEGEL, INC. ELECTRONIC TEST EQUIPMENT DIVISION P.O. BOX 10000 (CHICAGO 99-7101)
UNLESS SPECIFIED DIM IN INCHES	CODE NO.	PLATE NO.	
REFERENCE	DN	162-8-2-70	(LSI)
5-5-1	CNC	1 1/4-1/2-1/2	
INCHES	DATE		
INCHES ± .005	TIME		
ANGLES ± .05°	REL		
BLACK PAINT	INFO		
DASH			
NOTE ASSY			
USED ON			
DASH	CODE NO.	PLATE NO.	LIN
APPLICATION	D	298438	B
J	INFO		

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INC ADCN #1 THRU 5, CREATED - Z1 ASSY. 7.ES. 2-16-79	3-21-79	J. J. Goycole T. P. Pollock
B		INC ADCN 6,8,9 & DCN 412 & 645 DCN 7. REWORK ONLY. REM - 2. 21. 80	3/20/80 4/1/80	A. Patel. B. L. Lewis

2. PANEL FILTER MATERIAL SHALL BE POLYCARBONATE. PANEL SHALL HAVE CLEAR ADHESIVE STRIPS.
1. UL RECOGNIZED COMPONENT

NOTE:

-1	129810	DL129810
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED	DR G. JAROSEK 9/20/78	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.
DIM. IN INCHES	CHK	(LSI)
TOLERANCES	DSGP	PARTS LIST - MONITOR ASSY
X ± .1	ENGR	ADM 42
.XX ± .03	PROJ. 0000000-1/5/78	
XXX ± .010	REL H. Turner 7/6/78	PL129842
ANGLES ± 0.5°	CUSTOMER APPD	REV B
MACH. FIN.	SIZE A	CODE IDENT 98438
✓	SCALE	SHEET 1 OF 3

FIND NO.	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-31	-21	-11	-1				
1				✓		-1	MONITOR ASSY 115VAC	
2				✓		-11	MONITOR ASSY WITH OUT POWER SUPPLY	
3	1	1	1	1		129704-03	COVER	
4	1	1	1	1		129704-09	BASE	
5								
6	1	1	1			129778-11	MONITOR, WITHOUT COMPOSITE VIDEO	
7		1				129778-21	MONITOR, WITHOUT COMPOSITE VIDEO & P.S.	
8								
9								
10	1	1	1	1		129712-41	JUMPER ASSY, GRD	
11		✓				-21	MONITOR ASSY 230VAC	
12	✓					-31	MONITOR ASSY 230VAC/SPECIAL CONN.	
13								
14								
15	1	1	1	1		129839-1	MONITOR CABLE, VIDEO	
16	1	1	1	1		129484-9	SCREEN	
17	1	1	1			129455-9	PWR CORD	
18	1		1			129497-49	NAMEPLATE - UL	
19		1				129717-37	NAMEPLATE	
20	1	1	1	1		128214-7	LABEL WARNING	
21	1	1				129717-35	NAMEPLATE	
22	2	2	2	2		129849-3 (TYP2)	RETAINER PANEL	
23	1					129844-1	PWR CORD	
24	1					129777-41	POWER ADAPTER ASSY	230VAC
25		1				129777-31	POWER ADAPTER ASSY	115 VAC

A
SIZE
FSCM NO.
98438
PL129842
SH2
REV B


FIND NO.	QTY REQD				STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	-3	-21	-11	-1				
26	1	1				B40026	FUSE .75 AMP SLO BLO	LITTEL FUSE
27			1			B40013	FUSE 1.5 AMP SLO BLO	LITTEL FUSE
28	1	1	1			B40005	FUSE HOLDER	LITTEL FUSE
29								
30	1	1	1	1		B19062	FACE PANEL	JUMFLEX CO.
31	1	1	1			BZ7001	GROUNDING CLIP	FASTEX
32	1	1	1	1		BZ1C50	SCREW, 6-32 X .312 SEMI HEX HD	
33								
34	2	2	2	2		BZ3001	WASHER NO.10 BRASS, NICKEL PLATED	
35	2	2	2	2		BZ2001	NUT, SIZE 10-32 BRASS NICKEL PLATED	
36	2	2	2	2		BZ3007	WSHR #10 EXT TOOTH, ^{BRONZE} NICKEL PL.	FED.
37	1	1	1	1		83Z014	GRUMMET 3.75 LONG	RICHCO
38								
39								
40	2	2	2	2		824015	BARB STUD NO.10X3/8	
41	1	1	1	1		BZ3013	GRUMMET, SPLIT	NYLON MOLDING
42								
43								
44	1	1	1	1		B30016	CABLE RETAINER	DEK
45								
46	1	1	1	1		B34006	CABLE CLAMP 1/4-NA	
47	1	1	1	1		BZ1648	SCREW #6 X 1/4 TYPE B, X RECESS, PNHD, CAD PL	
48								
49								
50								

A
 SIZE
 98438
 FSCM NO.

PL129842
 SH
 E
 REV W

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		INCORP. ADCN L. ADD LSI P/N TO P/L NE7124/80 ^{187124/80}	3-4-80 3-6-80	W. Kelly B. Kelly, C.

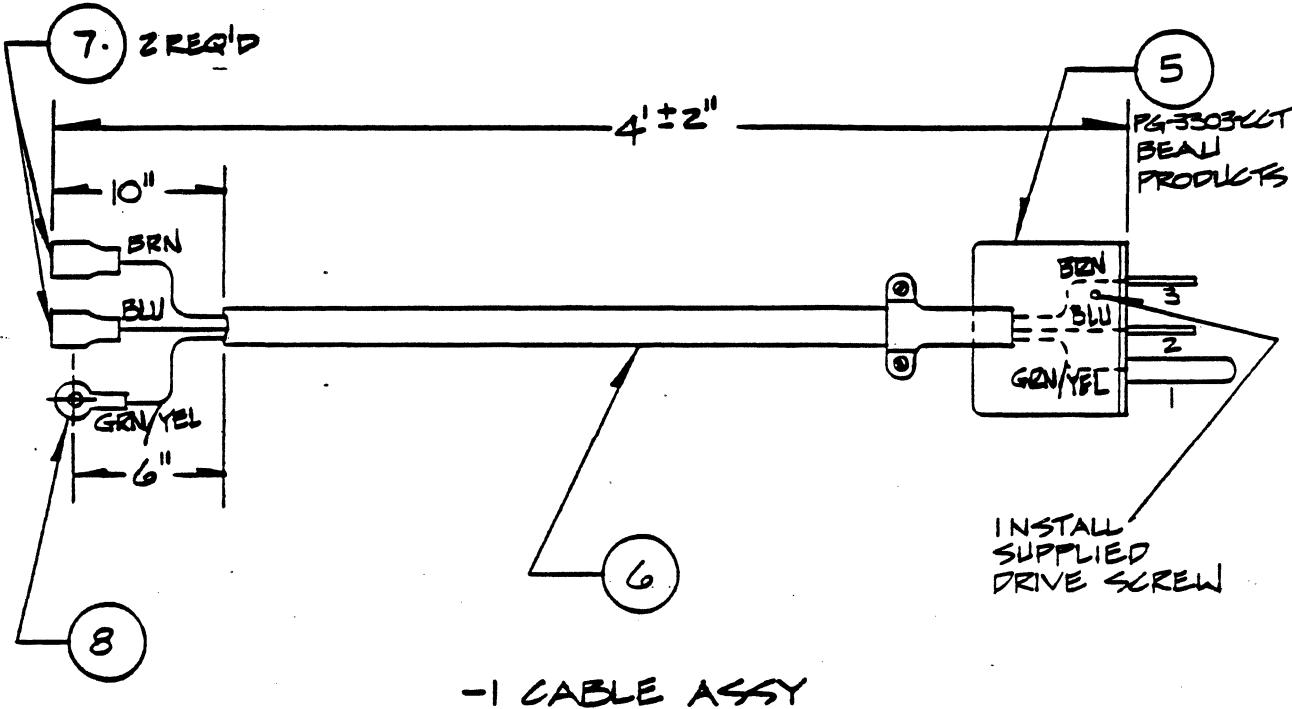

-1	129842	DL129810
DASH NO.	NEXT ASSY	USED ON

APPLICATION

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. ✓	DR	7ES. 7-3-79	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.
	CHK	Garrett	
	DSGN		
	ENGR		
	PROJ	W. Kelly 3/9/79	
	REL	L. Kelly 3/13/79	
	CUSTOMER APPD		
	SIZE	CODE IDENT	
	A	98438	
	SCALE	NONE	


AC CABLE ASSY
TCU TO MONITOR (230VAC)

REV A

SHEET 1 OF 2

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
1		✓	129844 -1	CABLE ASSY	
2					
3					
4					
5	1		802041	PLUG	
6	4'		812120	CABLE, 3 COND.	
7	2		809242	TAB RCPT. .250	
8	1		835050	TERM #10 RING, 18-22AWG	
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					

SIZE
AFSCM NO.
98438SH
2REV
A

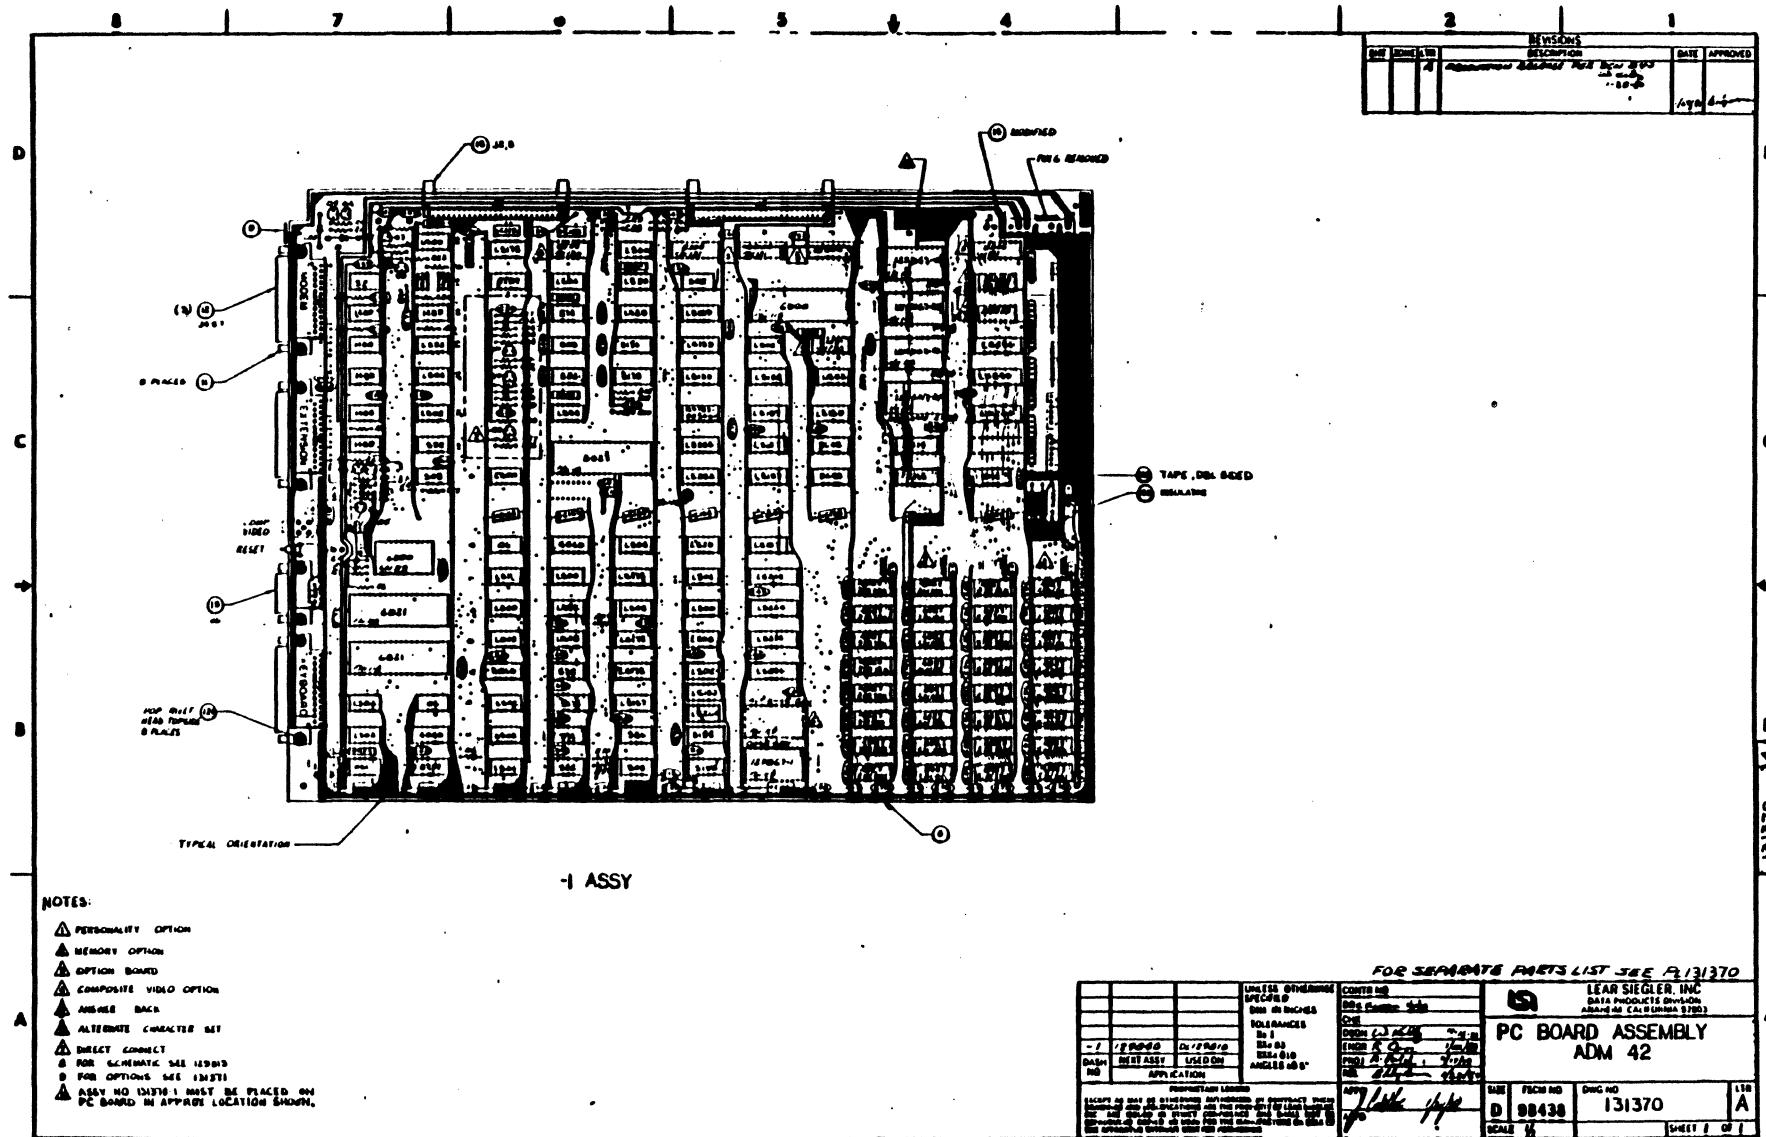

NOTES

- ▲ PERSONALITY OPTION
 - ▲ MEMORY OPTION
 - ▲ OPTION BOARD
 - ▲ COMPOSITE VIDEO OPTION
 - ▲ ANNEAL BACK
 - ▲ ALTERNATE CONTROL SET
 - ▲ DIRECT CONNECT
 - FOR SCHEMATIC SEE 120B03
 - FOR OPTIONS SEE 120B13
 - ALSO NO 120B13 MUST BE PLACED ON PCB BOARD IN APPROX LOCATION SHOWN.

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		RELEASE PER DCN	11-9-79 1/28/80	W. Kelly C J. H. Johnson

NOTES:

- △ VENDOR ITEM - SEE DWG BEFORE ORDERING.
- △ 128348-5016 MAY BE USED IN PLACE OF -8116.
- △ EPROM 129827-015011, -015012, -015013, -015014 (PROGRAM 131407) MAY BE USED IN PLACE OF 129867-30, -31, -32, -33 RESPECTIVELY

-1	129810	DL129810
DASH NO.	NEXT ASSY.	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED	DR W. Kelly "1/7/79"	LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.	
DIM. IN INCHES	CHK H. Craft "1/8/79"	(Si)	
TOLERANCES	DSGN	PC BOARD ASSY	
X ± .1	ENGR R. Owen "1/7/79"	MPU, ADM 42	
XX ± .03	PROJ A. P. L. 11/2/79		
XXX ± .010	REL J. H. Johnson 1/28/80	SIZE	CODE IDENT
ANGLES ± 0.5°	CUSTOMER APPRO	A	98438
MACH. FIN.	J. Hollingshead 1/24/80	PL 13137Q A	
	SCALE	REV A	
		SHEET 1 OF 6	

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
1	-1	V	-1	P.C. BOARD ASSY	
2					
3					
4					
5	1	129812-5		PRINTED WIRING BOARD	
6					
7	Ref	129813		SCHEMATIC	
8					
9	1	129746-121		CLOSURE	
10	1	129762-3		OSC	IA
11	1	811016		CRYSTAL, 5.0688MHz	Y1
12	3	131365-11		CONN ASSY, 25 PIN	J4,5,7
13	1	131365-1		CONN ASSY, 9 PIN	J6
14	1	809106		CONN, 9 PIN (09-75-1091)	J1
15	2	809096		CONN, 50 PIN	J2,3
16	2	804021		SWITCH, DIP, 8 POS	S5,6
17	1	804006		6 POS	S2
18	1	804028		3 POS	S7
19	1	804048		MOM, SPST (8125AV) S1	
20	1	804047		ROT, BCD (IA210031GFV)	S3
21	3	819046		RES MODULE, SIP, 4.7K	RM18-10
22	1	129476-102		1K	RM5
23	1		-202	2K	RM6
24	4		-302	3K	RM1-4
25	1		-472	4.7K	RM11

A
SIZE
FSCM NO.
98438

SH
2
131370

REV
A

FIND NO	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		-1				
26		1		129476-103	RES MODULE, SIP, 10K	RM7 ▲
27						
28		5		129467-00	IC, TYPE 74LS00	6C, 6F, 7D, 9C, 16E ▲
29		5		-02	74LS02	3C, 5C, 6D, 4F, 13H ▲
30		6		-04	74LS04	1C, 2A, 3A, 7F, 12B, 15D ▲
31		6		-08	74LS08	2C, 5F, 6F, 5D, 8E, 11B ▲
32		1		-09	74LS09	16B ▲
33		1		-11	74LS11	7C ▲
34		2		-20	74LS20	8F, 15E ▲
35		1		-28	74LS28	14E ▲
36		2		-32	74LS32	12J, 13B ▲
37		1		-74	74LS74	11D ▲
38		1		-138	74LS138	12H ▲
39		4		-139	74LS139	11J, 12F, 13F, 14F ▲
40		6		-157	74LS157	3E, 3F, 8H, 9H 10H, 11H ▲
41		4		-175	74LS175	4E, 5E, 7E, 16C ▲
42		5		-244	74LS244	6H, 7H, 11L, 12L, 13L ▲
43		1		-260	74LS260	2F-B ▲
44		2		-283	74LS283	9F, 10F ▲
45		2		-374	74LS374	4H, 5H ▲
46						
47		2		129466-2114	RAM, TYPE 2114, 1Kx4	9K, 10K ▲
48		16		129466-4027	RAM, TYPE 4027, 4Kx1	1J-BJ 1L-BL ▲
49						
50						

A
98438 FSCM NO.

D1/31370 SH 3 REV A

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS	
					-1	
51	1		129753-00500	PROM, TYPE 826123, 32x8 (TRANSLATION)	11F	⚠
52						
53	1		129867-1	ROM, 2Kx8 (CHUR G6N)	1H	⚠
54	1		-30	(PROGRAM E000)	13K	3⚠
55	1		-31	(PROGRAM E800)	14K	3⚠
56	1		-32	(PROGRAM F000)	15K	3⚠
57	1		-33	(PROGRAM F800)	16K	3⚠
58						
59	1		129826-00	IC, TYPE 74S00	13D	⚠
60	1		-02	74S02	15F	⚠
61	1		-05	74S05	9B	⚠
62	1		-08	74S08	1E	⚠
63	2		-32	74S32	4D, 10B	⚠
64	3		-74	74S74	1D, 2D, 14D	⚠
65	2		-86	74S86	2E, 12D	⚠
66	2		-174	74S174	3D, 13E	⚠
67	1		-175	74S175	12E	⚠
68	2		-195	74S195	1F, 2F-A	⚠
69						
70	1		129824-6800	IC, TYPE 6800	14H	⚠
71	2		-6821	6821	4A, 6A	⚠
72	1		-6850	6850	8A	⚠
73						
74	2		129498-01	IC, TYPE MCT-2 (OPT 1506)	15B-A, 15B-B	⚠
75						

A
SIZE
FSCM NO
98438

D
SH
4
4
131570
REV A

FIND NO	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
76	-1	2	128348-06	I.C., TYPE 7406	38, 8C
77	2		-8T97	8T97	18, 15C
78	3		-1488	1488	11A, 12A, 13A
79	3		-1489	1489	10A, 14A, 14B
80	2		-3648	3648	9J, 10J
81	3		-4040	4040B	28, 4C, 8D
82	1		-8304	8304	16J
83	1		-5027	5027	9D
84	1		-8116	8116	9L
85	1		-79M05	VOLT REG, TYPE 79M05 (-5V)	VRI
86					
A	2	808005	DIODE, SIL, TYPE IN4002	CR2, CR3	1
88	1	808004	DIODE, SIL, TYPE IN4001	CR1	1
89	3	808042	DIODE, SIL, TYPE IN914	CR4, 8, 9	1
90	3	810001	TRANS, NPN, TYPE 2N3904	Q1, 6, 7	1
91	2	810004	TRANS, NPN, TYPE 2N5550	Q4, 5	1
92					
93	1	128518-1011	CAP, 100 PF 10%, 1 KV, CER	C5	1
94	67	129876-103	.01 UF, 10%, 50V, MONO	C1, 4, 6, 7, 13, 59-126	1
95	49	129876-104	.1 UF, 10%, 50V, MONO	C3, 10, 11, 12, 14, 15-56	1
96	18	129469-106	10 UF, +100-10%, 25V, AL ELEC	C121-13B	1
97	10	128518-106	10 UF, 10%, 25V, TANT	C139-14B	1
98	1	128518-226	22 UF, 10%, 15V, TANT	C2	1
99					
100					

SIZE
FSCM NO.
A 98438

SH
D 131370

REV
4

FIND NO.	QTY REQD	STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
101	1		128533-470	RES, 47, 5%, 1/4W	R40
102	1		-101	100	R5
103	1		-151	150	R8
104	1		-221	220	R19
105	1		-271	270	R43
106	2		-391	390	R44,45
107	2		-471	470	R6,17
108	2		-621	620	R23,24
109	10		-102	1K	R1,3,16,37,38 39,41,42,46,47
110	2		-302	3K	R2,48
111	2		-472	47K	R14,25
112	4		-512	5.1K	R10,12,13,20
113	1		-822	8.2K	R18
114	1		-223	22K	R11
115	1		-473	47K	R4
116	3		-913	91K	R15,21,22
117					
118	4	802034		SOCKET, 40 PIN	4A,6A,9D,14H
119	7	802033		24 PIN	3A,1N,2H,13K-16L
120	35	802031		16 PIN	16D,13J,15L 1K-8K,1M-8M
121	3	129877-20		20 PIN	16F,16H,16L
122	1/2			TAPE, DBL SIDED, 1/2	
123	1	839012		INSULATOR, TO-5 (7717-5)	
124	8	824002		RIVET (R8479x200)	
125	1	129747-3		PACER, P.C. BOARD	

SIZE

98438
FSCM NO

SH

12/13/13/70

REV A

4


3

2

1

REVISIONS
DESCRIPTION

SHT	ZONE	LTR	DATE	APPROVED
A			RELEASED PER DCR 044	4/23/80

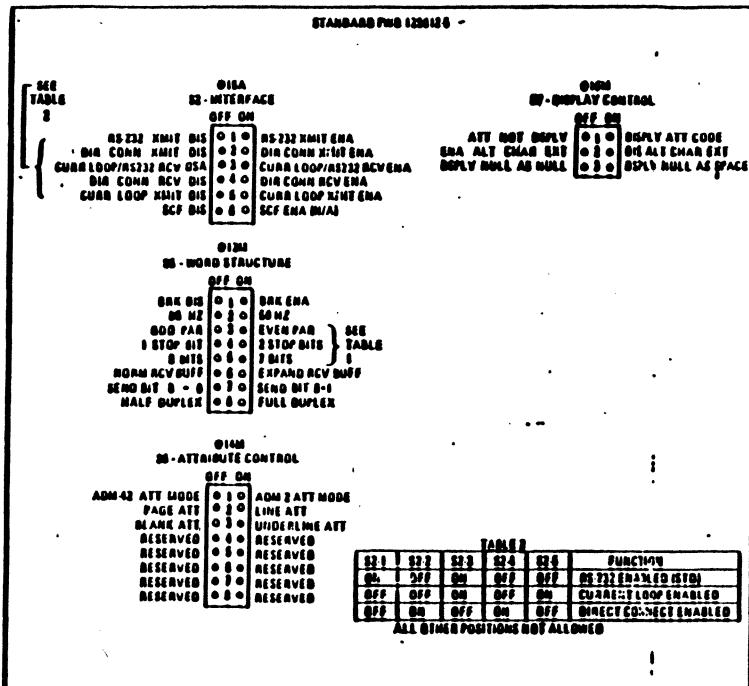


THE LOCATIONS AND FACTORY SETTINGS OF THE CONFIGURATION CONTROL SWITCHES SHOWN APPLY TO:

PRINTED WIRING BOARD (PWB) 1204186
OPTION PRINTED WIRING BOARD 1204187

IF YOU NEED TO MAKE CHANGES, PLEASE REFER TO THE USERS REFERENCE MANUAL.

- NOTES:
 1. SWITCH POSITION ON = CLOSED = LOGICAL 0
 2. SWITCH POSITION OFF = OPEN = LOGICAL 1
 3. 0 = STANDARD 0 = OPTIONAL 0 = RESERVED
 4. EXECUTE TERMINAL RESET AFTER CHANGING ANY SWITCH POSITION IN ORDER TO REINITIALIZE ADM-42 LOGIC

SW1	SW2	SW3	SW4	PARITY	ST20	MIS
ON	ON	ON	OFF	EVEN	1	/
OFF	ON	ON	OFF	ODD	1	/
ON	OFF	ON	OFF	EVEN	1	1
OFF	OFF	ON	OFF	ODD	1	1
ON	ON	OFF	ON	0	0	0
OFF	ON	OFF	ON	1	0	0
ON	OFF	OFF	ON	EVEN	1	0
OFF	OFF	OFF	ON	ODD	1	0

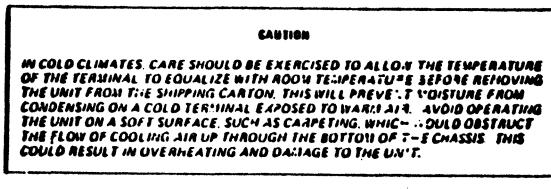

UNLESS OTHERWISE SPECIFIED	CONTR NO
DIM. IN INCHES	DR
TOLERANCES:	CHK
X±.1	DSGN
XX±.03	ENGR
XXX±.010	PROJ A/C 14 3/1/80
ANGLES ±0.5°	REL
PROPRIETARY LEGEND	
EXCEPT AS MAY BE OTHERWISE AUTHORIZED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF LEAR SIEGELER INC. AND ARE ISSUED IN STRICT CONFIDENCE, AND SHALL NOT BE REPRODUCED, COPIED OR USED FOR THE MANUFACTURE OR SALE OF	
APPD	SIZE
APPD	FCM NO.
C 98438	
DWG NO CS131370	
LTR A	



LEAR SIEGELER, INC.
DATA PRODUCTS DIVISION
ANAHEIM, CALIFORNIA 92803

ADM-42 CONFIGURATION CONTROL
SWITCH SETTINGS

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		PRODUCTION RELEASE PER DCN 4/4 W. Kelly	2/4/80	B. Kelly
B		INC DCN 604, ADD NEW SHEET 13 UPDATE OTHERS RM - 4.9.80	5-23-80 5/23/80	W. Kelly B. Kelly
C		INC DCN 759 RM 4.9.80	5-23-80 5/23/80	W. Kelly B. Kelly
D		INC DCN 867 RM 5-23-80	5-23-80 5/23/80	W. Kelly B. Kelly

NOTES

1. FOR USE WITH 129810-31 & -41.
LOGIC BOARD 131370(REF)

-	END ITEM	DL129500
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN. <input checked="" type="checkbox"/>	DR W. Kelly 1/9/79	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.
	CHK	
	DSGN W. Kelly 1/16/79	
	ENGR R. Omer 1/31/80	
	PROJ	
	REL L. Kelly, do... 2/4/80	
	CUSTOMER APPD	
	SIZE A	
	CODE IDENT 98438	
	SCALE	
REV D		
SHEET 1 OF 18		

CONTENTS

<u>OPTION</u>	<u>TITLE</u>	<u>SHEET</u>
1.	PERSONALITY	3
2.	8K MEMORY	4
3.	OPTION BOARD - GEN.	5
3-1	PARALLEL PTR PORT	6 (NOT AVAILABLE)
3-2	ASYNC PTR PORT (STD)	6
3-3	SYNCHRONOUS PORT	6 (NOT AVAILABLE)
3-4	POLLING ADDRESS	7 (AVAILABLE AS OF 3/18/80)
3-5-1 (32) 3-5-2 (64)	32/64 CHARACTER PROGRAMMABLE FUNCTION KEYS	8
3-6	EXPANDED PROGRAM	6 (NOT AVAILABLE)
3-7	EXTERNAL BUS	6 (NOT AVAILABLE)
4.	COMPOSITE VIDEO	9
5.	ANSWER BACK	10
6.	ALTERNATE CHARACTER SET	11
7.	DIRECT CONNECT	12
30/31	TCU DESK MOUNT (115/230)	14
32	MONITOR LONG CABLE	15
33	MONITOR COMPOSITE VIDEO	16 (NOT AVAILABLE)
	ACCESSORIES LIST	17
	STANDARD SWITCH POSITIONS	18

100-10-10101

SIZE	CODE IDENT	131371
A	98438	D
SCALE		SHEET 2

Ld	QTY PROD	PARTS LIST			LOCATION/REF DES	NOTES
		PART NUMBER	DESCRIPTION			
1						
2						
3	1	129753-00	PROM, TYPE 825123, 32x8	15L		1,2
4						
5						
6						
7						
8						
9						
10						
11						
12						
13						

DESCRIPTION: THIS OPTION ALLOWS THE USER TO SPECIFY AS PERMANENT CERTAIN TRANSMISSION DELIMITERS, THE COMMAND LEADIN CHARACTER, AND CONTROL OF VARIOUS FEATURES WITHIN THE FIRMWARE.

NOTES:

1. ENGINEERING MUST ESTABLISH A PROGRAM PART NUMBER FOR EACH APPLICATION.
2. INSTALL PART ON 131370 P.C.B. ASSY IN SOCKET AT LOCATION INDICATED.

OPTION	1	SIZE	CODE IDENT	131371	REV
TITLE	PERSONALITY	A	98438		D
SHEET	1 OF 1	SCALE		SHEET	3

No.	QTY PROD	PARTS LIST			NOTES
		PART NUMBER	DESCRIPTION	LOCATION/REF DES	
1					
2					
3	16	129466-4027	RAM, TYPE 4027, 4Kx1	1K-8K, 1M-8M	1
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					

DESCRIPTION: THIS OPTION ALLOWS ADDITIONAL FOUR PAGE OF DISPLAY.

NOTES:

1. ADD PARTS TO 131370 PCB ASSY
INSTALL IN SOCKETS AT LOCATIONS INDICATED

OPTION 2	SIZE A	CODE IDENT 131371	D
TITLE ... 8K MEMORY	A	98438	
SHEET 1 OF 1	SCALE		SHEET 4

QTY	ART NO	PARTS LIST			
NO.		PART NUMBER	DESCRIPTION	LOCATION/REF DES	NOTE
1					
2	3	128348-8304	IC, TYPE 8304	16H, 16F, 16L	1
3	1	128348-8T97	S.C. TYPE 8T97	16D	1
4	1	129826-133	I.C. TYPE 74S133	13J	1
5	1	804047	SWITCH, ROT, BCD	11M	1
6					
7					
8					
9	1	129832-11	PC. BOARD ASSY		2
10	2	129739-1	INTERCONNECT CABLE, 50X2		2
11	1	129746 -(NOTE 3)	CLOSURE		2,3
12					
13					

DESCRIPTION: ANY OF THE OPTIONS PREFIXED 3 REQUIRE
INSTALLATION OF 129832-11 P.C. BOARD, INTERCONNECT
CABLES, AND MAY REQUIRE A CLOSURE DIFFERENT
FROM THE ONE CALLED OUT ON 129832. ALSO
SEVERAL PARTS AS LISTED ABOVE MUST BE
INSTALLED ON 131370.

THE FOLLOWING OPTION COMBINATIONS REQUIRE
REAR CLOSURE CHANGE AS INDICATED IN TABLE:

PARALLEL PTR PORT (OPT 3-1)	•		•	•		
ASYNC PTR PORT (STANDARD)	•		•	•		
SYNCHRONOUS PORT (OPT 3-3)		•	•	•		
CLOSURE 129746 DASH NO.	-191	-181	-171	-161	-151	-111

NOTES:

1. PART INSTALLS ON 131370 - REFER TO DWG FOR LOCATION.
 2. PART INSTALLS IN 129840 CPU ASSY
 3. P.C. BOARD 129832 HAS 129746-181 CLOSURE STD.
OPTIONS TABULATED ABOVE WILL REQUIRE NEW CLOSURE
DEPENDING ON REQUESTED OPTIONS.

OPTION	3	SIZE	CODE IDENT	131371	REV
TITLE	OPTION BOARD-GENERAL	A	98438		D
SHEET	1 OF 1	SCALE		SHEET	5

OPTION 3-1 PARALLEL PRINTER PORT
(NOT AVAILABLE)

OPTION 3-2 ASYNC PRINTER PORT
NOW STANDARD - PARTS INCLUDED
IN 129832-11

OPTION 3-3 SYNCHRONOUS PORT
(NOT AVAILABLE)

OPTION 3-7 EXTERNAL BUS
(NOT AVAILABLE)

OPTION 3-6 EXPANDED PROGRAM
(NOT AVAILABLE)

OPTION 3-5-1 32 CHARACTER
NOW STANDARD - PARTS INCLUDED
IN 129832-11

SIZE	CODE IDENT	131371	D
A	98438		
SCALE		SHEET	6

ITEM	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF DES
1				
2	7	128348-8T97	1L, TYPE 8T97	2
3	5	804060	SWITCH, 8 POS	2
4	5	819046	RES MODULE, 47K (785)	2
5	1	129867-80	ROM (PROGRAM D000) 6E	2,3
6				
7				
8				
9				
10				
11				
12				
13				

DESCRIPTION: THIS OPTION ALLOWS USER TO HAVE POLLING COMMUNICATION PROTOCOL FOR MULTIPLE TERMINAL WITH UNIQUE ADDRESS ON THE SAME COMMUNICATIONS LINE.

NOTES:

1. THIS OPTION IS FACTORY INSTALLED ONLY
2. ADD PARTS TO 129832-11 P.C.B ASSY - SEE DWG FOR LOCATIONS.
3. IF ROM 129867-80 NOT AVAILABLE USE PROM 129827-80.

OPTION NOT AVAILABLE

OPTION 3-4.....	SIZE	CODE IDENT	131371	REV D
TITLE POLLING ADDRESS.....	A	98438		
SHEET 1 OF 1	SCALE		SHEET 7	

LINE	QTY/PROD	PARTS LIST			
		PART NUMBER	DESCRIPTION	LOCATION/REF. ODS	NOTES
1		-3-S-1	32 CHAR PROG KEYS (STD)		2
2	✓	-3-S-2	64 CHAR PROG KEYS		
3					
4	8	128348-2102A	RAM	2H-9H	1
5					
6					
7					
8					
9					
10					
11					
12					
13					

DESCRIPTION: THIS OPTION PROVIDES FUNCTION KEYS WITH CAPABILITY TO CONTAIN A VARIABLE LENGTH CHARACTER STREAM OF UP TO 64 BYTES.

NOTE

1. PARTS INSTALL ON 129832-11 PC. B IN SOCKETS
2. 32 CHAR. PROG. FUNCTION OPTION NOW STANDARD - PARTS INCLUDED ON 129832-11

OPTION 3-S
TITLE: 32 CHARACTER PROGRAMMABLE
SHEET 1 OF 1

SIZE

A

CODE IDENT

98438

131371

D

SCALE

SHEET

8

LINE	QTY PROD	PARTS LIST			LOCATION/REF DES	NOTES
		PART NUMBER	DESCRIPTION			
1						
2						
3	2	810001	TRANS, NPN, TYPE 2N3904	G2, 3		1
4	1	128533-100	RES 10 5% 1/4W	E9		1
5	1	128533-750	RES, 73, 5%, 1/4W	R7		1
6	1	809123	JACK (51-153-0000)	J8		1
7						
8	1	809118	CONN, MALE (51-107-3059)	P8		2
9						
10						
11						
12						
13						

DESCRIPTION: THIS OPTION PROVIDES COMPOSITE VIDEO OUTPUT SIGNAL FOR USE WITH A HIGH LINE RATE MONITOR AT SOME REMOTE LOCATION UP TO FEET. REQUIRES THE SPECIAL CONNECTOR (FURNISHED - F/N 8 ABOVE) AND CUSTOMER SUPPLIED RG59 CABLE TO COMPLETE INSTALLATION.

NOTES:

1. INSTALL PARTS ON 131370 P.C.B ASSY - SOLDER IN PLACE.
2. THIS PART SHIPPED SEPARATE FOR INSTALLATION ON CUSTOMER CABLE - TYPE RG59

P/N	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF'DS
1				
2				
3	1	129753-00	PROM, TYPE 82S123, 32 ¹ / ₂ 14L	1
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				

DESCRIPTION: THIS OPTION ALLOWS USER TO TRANSMIT
A CUSTOMER SPECIFIED FIXED MESSAGE WHEN
EXTERNALLY PROMPTED

NOTES:

1. PROGRAM PROM WITH CUSTOMER MESSAGE.
2. INSTALL PART ON 131370 PC.B ASSY
AT LOCATION INDICATED. SOLDER IN PLACE.

OPTION 5
TITLE ANSWER BACK
SHEET 1 OF 1

SIZE	CODE IDENT	131371	REV
A	98438		D
SCALE		SHEET	10

L#	QTY PROD	PARTS LIST			NOTES
		PART NUMBER	DESCRIPTION	LOCATION/REF. DES.	
1					
2					
3	1	129867-40	ROM - 2Kx8	ZH	1,2
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					

DESCRIPTION: THIS ADDITIONAL CHARACTER GENERATOR IS USED TO DISPLAY ELEVEN ASCII CHARACTERS AS VERTICAL AND HORIZONTAL LINE SEGMENTS.

NOTES:

1. INSTALL PART ON 131370 P.C.B ASSY IN SOCKET AT LOCATION INDICATED
2. EPROM 129827-19 MAY BE USED IN PLACE OF 129867-40.

Ld	QTY PROD	PARTS LIST			LOCATION / REF DES	Note
		No.	PART NUMBER	DESCRIPTION		
1	1	810004	TRANS, NPN, TYPE 2N5550		C9	1
2	2	810037	TRANS, PNP, TYPE 2N2907		Q8, 10	1
3	1	808044	DIODE, ZENER, 18V (IN5740B)		C27	1
4	3	808042	DIODE, SIL, TYPE IN914B		CR5, 6, 10	1
5	1	129876-103	CAP, .01, 10V, SOV, MOWA		C9	1
6	1	128518-472	CAP, 4700PF, -20%, 25V, CEA		C8	1
7	3	128533-222	RES, 2.2K, 5%, 1/4W		R26, 27, 33	1
8	2	-100	10		R32, 34	1
9	2	-472	4.7K		R30, 36	1
10	1	-102	1K		R28	1
11	1	-332	33K		R29	1
12	1	-103	10K		R31	1
13	1	-223	22K		R35	1

DESCRIPTION: THIS OPTION PROVIDES SERIAL DATA
ON J1-3 TO DRIVE DIRECT CONNECT TRANSMISSION,
RECEIVE LINE GENERALLY USED WITH BURROUGHS
2-WIRE DIRECT CONNECT INTERFACE

NOTES:

1. INSTALL PARTS ON 131370 P.C.B ASSY - SOLDER IN PLACE.


OPTION	7	SIZE	CODE IDENT	131371	D
TITLE	DIRECT CONNECT	A	98438		
SHEET	1 OF 2	SCALE		SHEET	1/2

REWORK INSTRUCTIONS

MODIFY 129812-5 PWE:

A. CUT PLATING PER DIAGRAM,
SOLDER SIDE.

B. CUT PLATING PER DIAGRAM,
SOLDER SIDE.

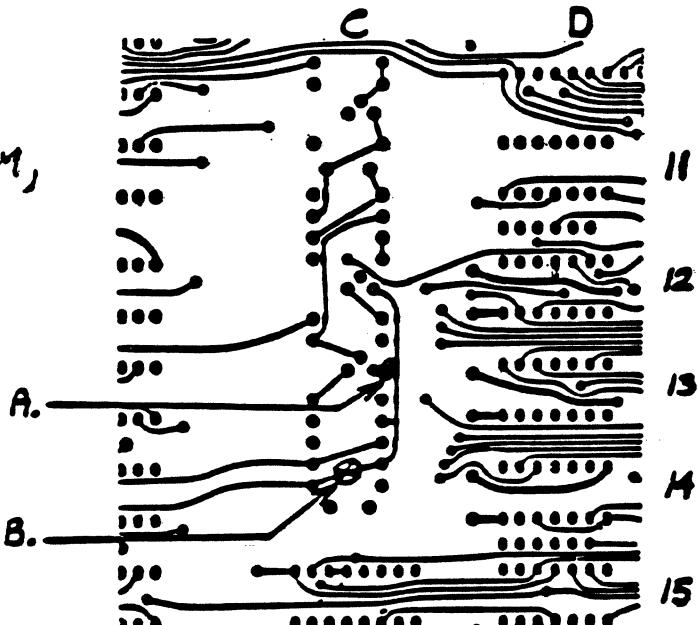


(SOLDER SIDE SHOWN)

MODIFY 131370 PCB ASSY:

A. ADD JUMPER WIRE (30 AWG)
FROM COLLECTOR OF Q10
TO ANODE OF CRT,
COMPONENT SIDE.

B. ADD CR10, IN914 DIODES,
FROM COLLECTOR OF Q10
TO COLLECTOR OF Q9,
COMPONENT SIDE.
USE SLEEVING AS REQ'D.

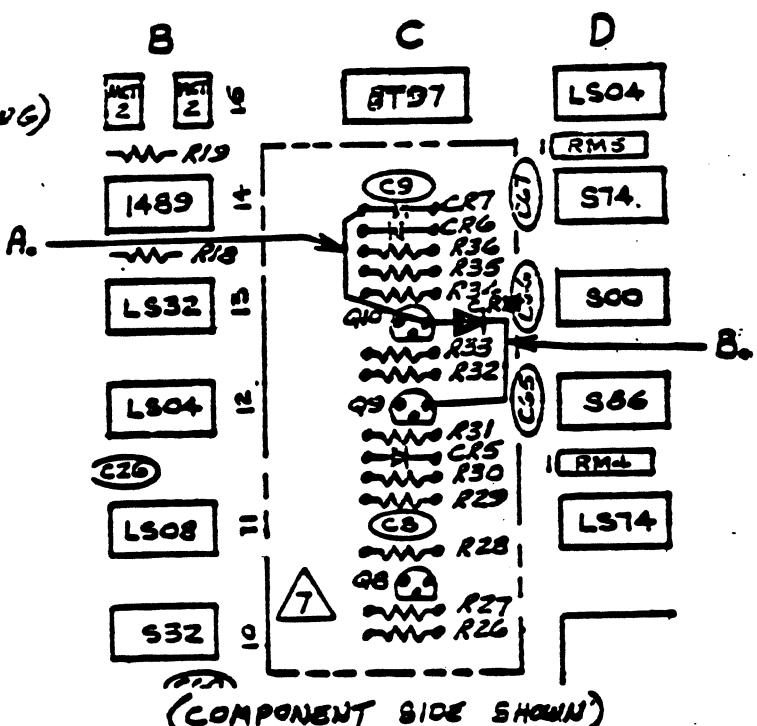

OPTION 7	SIZE	CODE IDENT	REV D
DIRECT CONNECT	A	98438	131371
SHEET Z OF Z	SCALE		SHEET 13

#	QTY PROD	PARTS LIST			LOCATION/REF DES	NOTE
		PART NUMBER	DESCRIPTION			
1	✓	-30				
2	✓	-31				
3	1	129845-1	ADM42 DESK MOUNT 115VAC			1
4	1	129845-21	ADM42 DESK MOUNT 230VAC			1
5						
6						
7						
8						
9						
10						
11						
12						
13						

DESCRIPTION: THIS OPTION MODIFIES ADM42 TO ALLOW ALTERNATE MOUNTING SUCH AS DESK MOUNTING. THE TCU TOP HOUSING IS EXCHANGED & MONITOR STAND INCLUDED. OPTION MUST BE FACTORY INSTALLED.

NOTES

1. MODIFY ADM42 AS INDICATED ON 129845 SHIP MONITOR STAND & CUSTOMER KIT IN SEPARATE PACKAGE.

Fig.	QTY PROD	PARTS LIST		
		PART NUMBER	DESCRIPTION	LOCATION/REF DES
1	✓	-32		
2				
3	1	129839-11	CABLE ASSY-MONITOR	1
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				

DESCRIPTION: THIS OPTION PROVIDES ADDITIONAL 4 FEET
OF MONITOR CABLE. OPTION MUST BE
FACTORY INSTALLED.

NOTE

1. REPLACE 129839-1 CABLE IN MONITOR ASSY
129842

OPTION 32
TITLE MONITOR LONG CABLE
SHEET

SIZE	CODE IDENT	131371	REV
A	98438	D	
SCALE		SHEET	15

OPTION 33 NOT DEFINED

SIZE A	CODE IDENT 98438	131371	XCV D
SCALE		SHEET	16

ACCESSORIES

1. CABLE, RS232/CURRENT LOOP P/N 129316-21
2. CABLE, PARALLEL PRINTER P/N 129787-1
3. CABLE, ASYNC PRINTER P/N 129949-1
4. MONITOR STAND
(ALSO SEE DESK MOUNT OPTION) P/N 129770-1

SIZE	CODE IDENT.	131371	REV
A	98438		D
SCALE		SHEET	17

SWITCH POSITIONS AND FUNCTIONS FOR ADM 42 STANDARD CONFIGURATION:

NOTES:

1. SOLID DOT INDICATES INITIAL SWITCH POSITION SETTINGS. CUSTOMER REQUIREMENTS MAY DEFINE OTHER SETTINGS.
2. SEE TABLE BELOW FOR SWITCH SETTINGS FOR "BIT-PARITY-STOP" COMBINATIONS AVAILABLE.


S2		S7	
@ 15A LOCATION		@ 16M LOCATION	
OFF	ON	OFF	ON
RS-232 XMIT DIS	● 1 ●	RS-232 XMIT ENA	ATT NOT DSPLY
DIR CONN XMIT DIS	● 2 ○	DIR CONN XMIT ENA	ENA ALT CHAR EXT
CURR LOOP RCV DIS	● 3 ○	CURR LOOP RCV ENA	NLL CODES
DIR CONN RCV DIS	● 4 ○	DIR CONN RCV ENA	
CURR LOOP XMIT DIS	● 5 ○	CURR LOOP XMIT ENA	
SCF DIS	● 6 ●	SCF ENA	

S5		S3 @ 10 M LOCATION	
@ 12M LOCATION		S4 @ 11 M LOCATION (PTR OPTION)	
OFF	ON	BAUD	POS RATE
BRK DIS	● 1 ●	BRK ENA	0 50
60 HZ	● 2 ○	50 HZ	1 75
ODD PAR	● 3 ○	EVEN PAR	2 110
1 STOP BIT	● 4 ○	2 STOP BITS	3 134.5
8 BITS	● 5 ○	7 BITS	4 150
NORM IN BUFFER	● 6 ○	EXPAND IN BUFFER	5 300
BIT 8 = 0	● 7 ○	BIT 8 = 1	6 600
HALF DUPLEX	● 8 ○	FULL DUPLEX	7 1200
			8 1800
			9 2000
			10 2400
			11 3600
			12 4800
		SEE NOTE 2	13 7200
			14 9600
			15 -

S6		S5 @ 14M LOCATION	
OFF	ON	ADM 42 ATT MODE	ADM 2 ATT MODE
PAGE ATT	● 1 ○	PAGE ATT	LINE ATT
BLANK ATT	● 2 ○	BLANK ATT	UNDERLINE ATT
	● 3 ○		
	● 4 ○		
	● 5 ○		
	● 6 ○		
	● 7 ○		
	● 8 ○		

S5-3	S5-4	S5-5	PARITY-STOP-BITS		
ON	ON	ON	EVEN	2	7 STD
OFF	ON	ON	ODD	2	7
ON	OFF	ON	EVEN	1	7
OFF	OFF	ON	ODD	1	7
ON	ON	OFF	NONE	2	3
OFF	ON	OFF	NONE	1	8
ON	OFF	OFF	EVEN	1	8
OFF	OFF	OFF	ODD	1	8

SIZE	CODE IDENT	/ 3 / 3 7 /
A	98438	D
SCALE	-	SHEET 18

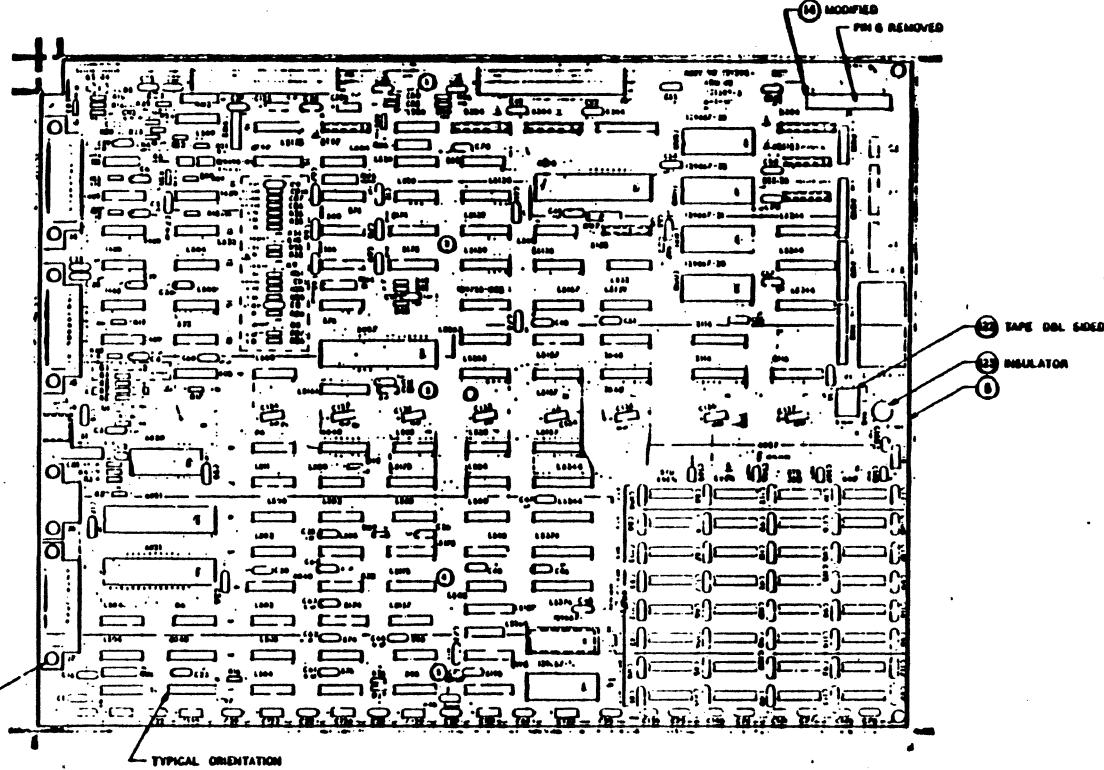

-1 ASSY (W/O ROMS SEE P/L)
-002 ASSY

NOTES:

- ▲ PERSONALITY OPTION
- ▲ MEMORY OPTION
- ▲ OPTION BOARD
- ▲ COMPOSITE VIDEO OPTION
- ▲ ANSWER BACK
- ▲ ALTERNATE CHARACTER SET
- ▲ DIRECT CONNECT
- ④ FOR SCHEMATIC SEE 131394
- ④ FOR OPTIONS SEE 131371
- ④ ④ DENOTES 16 SOCKET

FOR PARTS LIST SEE P/L 131394

131394	131394	LEAR SIEGLER, INC 131394
131394	131394	PC BOARD ASSEMBLY
131394	131394	ADM 42
D	131394	D
D	98438	D
D	131394	D
D	98438	D
D	131394	D

REVISIONS

LTR	SHEET	DESCRIPTION	DATE	APPROVED
A		RELEASE PER DCN #998 S.FIGUEROA	6-5-80	6-6-80 E. O. E.C.
B		INCORP DCN # 1471	DW A 11-17-80	11-21-80 E. O. E.C.
C		INCORP DCN # 1902	Eng 3-20-81	3-27-81 3/31/81
D		INCORP DCN # 2785	EC 10-5-81	10/5/81 J. Deek J. Miller

- ▲ 1Z8348-5027 MAY BE SUBSTITUTED FOR -5037.
- ▲ -1 SAME AS -002 EXCEPT WITHOUT PROGRAM ROMS AND CHARACTER GENERATOR.
- ▲ 1Z8348-5016 MAY BE USED IN PLACE OF -8116.
- ▲ VENDOR ITEM - SEE DWG BEFORE ORDERING.

NOTES:

-002	131390	DL12981
-1	131390	DL129810
DASH NO.	NEXT ASSY	USED ON
APPLICATION		

UNLESS OTHERWISE SPECIFIED DIM. IN INCHES TOLERANCES $X \pm .1$ $XX \pm .03$ $XXX \pm .010$ ANGLES $\pm 0.5^\circ$ MACH. FIN.	DR S. FIGUEROA	 LEAR SIEGLER, INC. ELECTRONIC INSTRUMENTATION DIV. ANAHEIM, CALIF.		
	CHK W. Kelly 6-4-80			
	DSGN	PC BOARD ASSY MPU, ADM 42		
	ENGR R. D. ... 6-4-80			
	PROJ	REL 6/1/83 CUSTOMER APPD		
	SIZE			
	A	98438	PL 131394	
	SCALE		C	
			SHEET 1 OF 6	
	✓			

FIND NO.	QTY REQD			STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		-002	-1				
1			✓		-1	P.C. BOARD HSSY	
2			✓		-002	P.C. BOARD ASSY	
3							
4							
5		1	1		131395 -3	PRINTED WIRING BOARD	
6							
7		REF	REF		131396	SCHEMATIC	
8							
9							
10		1	1		129762-3	OSC	1A
11		1	1		811016	CRYSTAL, 5.0658MHz	Y1
12		3	3		131365-11	CONN ASSY, 25 PIN	J4,5,7
13		1	1		131365-1	CONN ASSY, 9 PIN	J6
14		1	1		809106	CONN, 9 PIN (09-75-1091)	J1
15		2	2		809096	CONN, 50 PIN	J2,3
16		2	2		804021	SWITCH, DIP, 8 POS	S5,6
17		1	1		804006		S2
18		1	1		804028		S7
19		1	1		804048	MOM, SPST (8125AV2)	S1
20		1	1		804047	ROT, BCD (A210031GFY)	S3
21		3	3		819046	RES MODULE, SIP, 4.7K	RM8-10
22		1	1		129476-102		RM5
23		1	1		-202		RM6
24		4	4		-302		RMI-4
25		1	1		-472		RM11

A
SIZE
98438
FSCM NO.

PL 131394
SH 2

D
REV

FIND NO.	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	302	-1				
26	1	1		129476-103	RES MODULE, SIP, 10K	RM7 ▲
27						
28	5	5		129467-00	IC, TYPE 74LS00	6C, 6F, 7D, 9C, 16E ▲
29	5	5		-02	74LS02	3C, 5C, 6D, 4F, 13H ▲
30	6	6		-04	74LS04	1C, 2A, 3A, 7F, 12B, 15D ▲
31	6	6		-08	74LS08	2C, 5F, 6E, 5D, 8E, 11B ▲
32	1	1		-09	74LS09	16B ▲
33	1	1		-11	74LS11	7C ▲
34	2	2		-20	74LS20	8F, 15E ▲
35	1	1		-28	74LS28	14E ▲
36	2	2		-32	74LS32	12U, 13B ▲
37	1	1		-74	74LS74	11D ▲
38	1	1		-138	74LS138	12H ▲
39	4	4		-139	74LS139	1A, 12F, 13F, 14F ▲
40	6	6		-157	74LS157	3E, 3F, 8H, 9H 10I, 11H ▲
41	4	4		-175	74LS175	4E, 5E, 7E, 16C ▲
42	5	5		-244	74LS244	6H, 7H, 11L, 12L, 13L ▲
43	1	1		-260	74LS260	2F-B ▲
44	2	2		-283	74LS283	9F, 10F ▲
45	2	2		-374	74LS374	4H, 5H ▲
46	1	1		-161	74LS161	9D-A
47	2	2		129466-21143	RAM, TYPE 1Kx4	9K, 10K ▲
48	10	16		129466-4027	RAM, TYPE 4027, 4Kx1	1J-8J 1L-8L ▲
49						
50						

A
SIZE
98438
FSCM NO.

PL
SH

3
3/3/394

O
REV

FIND NO.	QTY RECD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
	102	-1				
51	1	1		129753-005	PROM, TYPE 82S123, 32x8 (TRANSLATION)	11F ▲
52						
53	1	0		129867-1	ROM 2KX8 (CHAR GEN)	1H ▲
54	1	0		-30	(PROG E000)	13K ▲
55	1	0		-31	(PROG E800)	14K ▲
56	1	0		-32	(PROG F000)	15K ▲
57	1	0		129867-33	ROM 2KX8 (PROG F800)	16K ▲
58						
59	1	1		129826-00	IC, TYPE 74S00	13D ▲
60	1	1		-02	74S02	15F ▲
61	1	1		-05	74S05	9B ▲
62	1	1		-08	74S08	1E ▲
63	2	2		-32	74S32	4D, 10B ▲
64	3	3		-74	74S74	1D, 2D, 14D ▲
65	2	2		-86	74S86	2E, 12D ▲
66	2	2		-174	74S174	3D, 13E ▲
67	1	1		-175	74S175	12E ▲
68	2	2		-195	74S195	1F, 2F-A ▲
69						
70	1	1		129824-6800	IC, TYPE 6800	14H ▲
71	2	2		-6821	6821	4A, 6A ▲
72	1	1		-6850	6850	8A ▲
73						
74	2	2		129498-01	IC, TYPE MCT-2 (OPT ISOL)	15B-A, 15B-B ▲
REV D	75					

FIND NO	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
76	2	2		128348-05	I.C., TYPE 7706	3B, BC
77	2	2		-8T97	8T97	1B, 15C
78	3	3		-1488	1488	11A, 12A, 13A
79	3	3		-1489	1489	10A, 11A, 14B
80	2	2		-3648	3648	9J, 10J
81	3	3		-4040	4040B	2B, 4C, 8D
82	1	1		-8304	8304	16J
83	1	1		-5037	5037	9D-B
84	1	1		-8116	8116	9L
85	1	1		-79M05	VOLT REG, TYPE 79M05 (-5V)	VR1
86						
A	SIZE	2 2		808005	DIODE, SIL, TYPE IN4002	CR2, CR3
98438	FSCM NO.	1 1		808004	DIODE, SIL, TYPE IN4001	CR1
5	SH	3 3		808042	DIODE, SIL, TYPE IN914	CR4, 8, 9
PL 13/394		3 3		810001	TRANS, NPN, TYPE 2N3904	Q1, 6, 7
D	REV	2 2		810004	TRANS, NPN, TYPE 2N5550	Q4, 5
100						

FIND NO.	QTY REQD		STOCK NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REMARKS
		Y _E -1				
101	1	1		128533-470	RES, 47, 5%, 1/4W	R40 ▲
102	1	1		-101	100	R5 ▲
103	1	1		-151	150	R8 ▲
104	1	1		-221	220	R19 ▲
105	1	1		-271	270	R43 ▲
106	2	2		-391	390	R44,45 ▲
107	3	3		-471	470	R6,17,49 ▲
108	2	2		-621	620	R23,24 ▲
109	10	10		-102	1K	R1,3,16,37,35, 39,41,42,44,47 ▲
110	2	2		-302	3K	R2,48 ▲
111	2	2		-472	4.7K	R14,25 ▲
112	4	4		-512	5.1K	R10,12,13,20 ▲
113	1	1		-822	8.2K	R18 ▲
114	1	1		-223	22K	R11 ▲
115	1	1		-473	47K	R4 ▲
116	3	3		-913	91K	R15,21,22 ▲
117						
118	4	4	802034	SOCKET, 40 PIN	4A,6A,9D,14H ▲	
119	7	7	802033	24 PIN	9A,1H,2H,13K-16L ▲	
120	35	35	802031	16 PIN	16D,13J,15L,1J-8J, 1K-8K,1L-8L,1M-AM ▲	
121	3	3	129877-20	20 PIN	16F,16H,16L ▲	
122	9/8	1/2		TAPE, DBL SIDED, 1/32	▲	
123	1	1	839012	INSULATOR, TO-5 (7717-5)	FOR VRI ▲	
124	8	8	824002	SPOT, (R3479 x 1/32)	▲	
125	1	1	129747-3	SPACER, P.C. BOARD	▲	

A
 SIZE
 FSCM NO.
 98438
 SH
 6
 REV D

PC 13/394


LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

**APPENDIX A
OPERATORS
QUICK REFERENCE
CHARTS**

ASCII CONTROL CODE CHART

		BITS 87 86 85 84				0 0 0 0		0 1 0 1		1 0 1 1		1 1 0 1		1 1 1 1			
		CONTROL				NUMBERS SYMBOLS				UPPER CASE				LOWER CASE			
		0 0 0 0	NUL	DLE	SP	0	@	P	1	0	1	1	0	1	P		
0 0 0 1	SOH	DC1	!	!	!	1	A	A	!	!	!	!	!	!	!		
0 0 1 0	STX	DC2	!	!	!	2	B	R	b	b	b	b	b	b	R		
0 0 1 1	ETX	DC3	!	!	!	3	C	S	c	c	c	c	c	c	S		
0 1 0 0	EOT	DC4	!	!	!	4	D	T	d	t	t	t	t	t	T		
0 1 0 1	ENQ	NAK	!	!	!	5	E	U	e	u	u	u	u	u	U		
0 1 1 0	ACK	SYN	!	!	!	6	F	V	f	v	v	v	v	v	V		
0 1 1 1	BEL	ETB	!	!	!	7	G	W	g	w	w	w	w	w	W		
1 0 0 0	BS	CAN	(8	H	X	h	x	!	!	!	!	!	!	X		
1 0 0 1	HT	EM)	9	I	Y	i	y	!	!	!	!	!	!	Y		
1 0 1 0	LF	SUB	!	:	J	Z	j	z	!	!	!	!	!	!	Z		
1 0 1 1	VT	ESC	+	;	K	[k	{	!	!	!	!	!	!	{		
1 1 0 0	FF	FS	<	L	\]	l	~	!	!	!	!	!	!	~		
1 1 0 1	CR	GS	-	=	M]	m	}	!	!	!	!	!	!	}		
1 1 1 0	SO	RS	.	>	N	\	n	~	!	!	!	!	!	!	~		
1 1 1 1	SI	US	/	?	O	-	o	RUBOUT	!	!	!	!	!	!	RUBOUT		

LEGEND

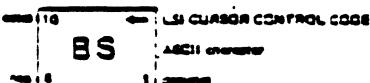

OPERATORS QUICK REFERENCE CHART OF
ADM 42 UTILIZED CONTROL CODES

HEX BYTE	1ST		CONTROL CHARACTERS		DISPLAYABLE CHARACTERS						
	BITS 4321	BITS 765	0	1	2	3	4	5	6	7	
0	0000		DEL	DLE		O	@	P	'	p	
1	0001		SDN	DC1	!	1	A	Q	a	q	
2	0010		STX	DC2	"	2	B	R	b	r	
3	0011		ETX	DC3	#	3	C	S	c	s	
4	0100		ESC	DC4	\$	4	D	T	d	t	
5	0101		ENQ	NAK	%	5	E	U	e	u	
6	0110		ACK	SYN	&	6	F	V	f	v	
7	0111		BSR	ETB	'	7	G	W	g	w	
8	1000		RS (←)	CAN	(8	H	X	h	x	
9	1001		(SKIP) RT	EM)	9	I	Y	i	y	
A	1010		LF (↓)	SUB	*	:	J	Z	j	z	
B	1011		VT (↑)	ESC	+	;	K	[k	{	
C	1100		FF (→)	FS	'	<	L	\	l	l	
D	1101		CR	GS	-	=	M]	m	}	
E	1110		SO	(HOME) PS	.	>	N	^	n	~	
F	1111		SI	(NEW LINE) US	/	?	O	—	o	DEL	

CONTROL CODES

- Utilized by Std ADM 42 with Printer Option
- Utilized by Polling ADM42

USE **CTRL** KEY
WITH DISPLAYABLE
CHARACTER KEYS TO
PRODUCE CONTROL
CODES

**OPERATORS QUICK REFERENCE CHART OF
STATUS LINE CONTROL OPERATION CODES**

OPERATION	SOURCE	OPERATION CODE	ACTIVITY
Initiate Override Message	Host	ESC F Message CR*	Message placed in Status Line positions 2 thru 80, overriding, but not erasing, current display.
Clear Override Message	Host Keyboard	ESC Z, ESC %, etc. RESET/CMD	Message is cleared from display but retained in memory by any operation code which affects Status Line.
Erase Override Message	Host	ESC F CR*	Message is erased from screen and memory; original Status Line display is restored.
Recall Status Line Message	Keyboard	RESET/CMD	Status Line display and Status Line message are swapped each time key is typed.

*Any control character (CR, LF, HT, etc.) may be used.

STATUS INDICATOR	S1	S2	S3	S4
ON	ESC c	ESC e	ESC g	ESC <
OFF	ESC b	ESC d	ESC f	ESC >

OPERATORS QUICK REFERENCE CHART OF
FUNCTION KEY/FUNKEY CHARACTERISTICS

EVOKING OPERATION		UNPROGRAMMED CODE TRANSMITTED	EVOKING OPERATION		UNPROGRAMMED CODE TRANSMITTED
EVOKE CODE	KEYBOARD		EVOKE CODE	KEYBOARD	
ESC \ @	F1	SOH @ CR*	ESC \ '	SHIFT F1	SOH ' CR*
ESC \ A	F2	SOH A CR*	ESC \ a	F2	SOH a CR*
ESC \ B	F3	SOH B CR*	ESC \ b	F3	SOH b CR*
ESC \ C	F4	SOH C CR*	ESC \ c	F4	SOH c CR*
ESC \ D	F5	SOH D CR*	ESC \ d	F5	SOH d CR*
ESC \ E	F6	SOH E CR*	ESC \ e	F6	SOH e CR*
ESC \ F	F7	SOH F CR*	ESC \ f	F7	SOH f CR*
ESC \ G	F8	SOH G CR*	ESC \ g	F8	SOH g CR*
ESC \ H	F9	SOH H CR*	ESC \ h	F9	SOH h CR*
ESC \ I	F10	SOH I CR*	ESC \ i	F10	SOH i CR*
ESC \ J	F11	SOH J CR*	ESC \ j	F11	SOH j CR*
ESC \ K	F12	SOH K CR*	ESC \ k	F12	SOH k CR*
ESC \ L	F13	SOH L CR*	ESC \ l	F13	SOH l CR*
ESC \ M	F14	SOH M CR*	ESC \ m	F14	SOH m CR*
ESC \ N	F15	SOH N CR*	ESC \ n	F15	SOH n CR*
ESC \ O	F16	SOH O CR*	ESC \ o	SHIFT F16	SOH o CR*

*If established by a Dynamic Personality Change operation, a second transmission terminator (End Block character) is also transmitted.

OPERATORS QUICK REFERENCE CHART OF
MODULO NUMBERS VS. ASCII CHARACTERS

ASCII CHARACTER	MODULO NUMBER	ASCII CHARACTER	MODULO NUMBER	ASCII CHARACTER	MODULO NUMBER
SPACE	0	@	32	.	64
!	1	A	33	a	65
"	2	B	34	b	66
#	3	C	35	c	67
\$	4	D	36	d	68
%	5	E	37	e	69
&	6	F	38	f	70
'	7	G	39	g	71
(8	H	40	h	72
)	9	I	41	i	73
*	10	J	42	j	74
+	11	K	43	k	75
.	12	L	44	l	76
-	13	M	45	m	77
/	14	N	46	n	78
0	15	O	47	o	79
1	16	P	48	p	80
2	17	Q	49	q	81
3	18	R	50	r	82
4	19	S	51	s	83
5	20	T	52	t	84
6	21	U	53	u	85
7	22	V	54	v	86
8	23	W	55	w	87
9	24	X	56	x	88
:	25	Y	57	y	89
:	26	Z	58	z	90
<	27	\	59	\	91
=	28	^	60	^	92
>	29		61		93
?	30		62		94
	31		63	DEL	95

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

OPERATOR'S QUICK REFERENCE GUIDE TO
ABSOLUTE CURSOR POSITIONING SEQUENCE
AND MODULO NUMBERS

X OR Y POSITION	MODULO NUMBER	ASCII CODE	HEX CODE	X OR Y POSITION	MODULO NUMBER	ASCII CODE	HEX CODE
1	0	SPACE	20	41	40	H	48
2	1	!	21	42	41	I	49
3	2	"	22	43	42	J	4A
4	3	#	23	44	43	K	4B
5	4	\$	24	45	44	L	4C
6	5	%	25	46	45	M	4D
7	6	&	26	47	46	N	4E
8	7	'	27	48	47	O	4F
9	8	(28	49	48	P	50
10	9)	29	50	49	Q	51
11	10	*	2A	51	50	R	52
12	11	+	2B	52	51	S	53
13	12	-	2C	53	52	T	54
14	13	.	2D	54	53	U	55
15	14	/	2E	55	54	V	56
16	15	0	2F	56	55	W	57
17	16	1	30	57	56	X	58
18	17	2	31	58	57	Y	59
19	18	3	32	59	58	Z	5A
20	19	4	33	60	59	\	5B
21	20	5	34	61	60	/	5C
22	21	6	35	62	61	-	5D
23	22	7	36	63	62	^	5E
24	23	8	37	64	63	-	5F
25	24	:	38	65	64	a	60
26	25	9	39	66	65	b	61
27	26	:	3A	67	66	c	62
28	27	:	3B	68	67	d	63
29	28	<	3C	69	68	e	64
30	29	=	3D	70	69	f	65
31	30	>	3E	71	70	g	66
32	31	?	3F	72	71	h	67
33	32	A	40	73	72	i	68
34	33	B	41	74	73	j	69
35	34	C	42	75	74	k	6A
36	35	D	43	76	75	l	6B
37	36	E	44	77	76	m	6C
38	37	F	45	78	77	n	6D
39	38	G	46	79	78	o	6E
40	39		47	80	79		6F

OPERATORS QUICK REFERENCE CHART OF
ABSOLUTE CURSOR ADDRESSING OPERATION CODES

OPERATIONAL CODES	POSITION		OPERATIONAL CODES	POSITION		OPERATIONAL CODES	POSITION	
	ROW	COL		ROW	COL		ROW	COL
SPACE	1	1	:	28		V	55	
!	2	2	<	29		W	56	
*	3	3	=	30		X	57	
#"	4	4	>	31		Y	58	
\$	5	5	?	32		Z	59	
%	6	6	@	33		[60	
&	7	7	A	34		\	61	
Same Page Load:	8	8	Same Page Load:	8	35	Same Page Load:	1	62
-	9	9	-	C	36	-	^	63
Same Page Read:	10	10	Same Page Read:	D	37	Same Page Read:	-	64
?	11	11	?	E	38	?	\	65
*Nth Page Load:	12	12	*Nth Page Load:	F	39	*Nth Page Load:	a	66
- N	13	13	- N	G	40	- N	b	67
*Nth Page Read:	14	14	*Nth Page Read:	H	41	*Nth Page Read:	c	68
/ N	15	15	/ N	I	42	/ N	d	69
/	16	16	J	43		e	70	
0	17	17	K	44		f	71	
1	18	18	L	45		g	72	
2	19	19	M	46		h	73	
3	20	20	N	47		i	74	
4	21	21	O	48		j	75	
5	22	22	P	49		k	76	
6	23	23	Q	50		l	77	
7	24	24	R	51		m	78	
8	25	25	S	52		n	79	
9	26	26	T	53		o	80	
:	27	27	U	54				

*N = Selected page 1 thru 4 (standard) or 1 thru 8 (optional)

OPERATORS QUICK REFERENCE CHART OF
DYNAMIC BAUD RATE CONTROL OPERATION CODES

DESIRED BAUD RATE	MODEM PORT	PRINTER PORT	EQUIVALENT BAUD RATE SWITCH POSITION
50	ESC: @	ESC: `	0
75	ESC: A	ESC: a	1
110	ESC: B	ESC: b	2
134.5	ESC: C	ESC: c	3
150	ESC: D	ESC: d	4
300	ESC: E	ESC: e	5
600	ESC: F	ESC: f	6
1200*	ESC: G	ESC: g	7
1800	ESC: H	ESC: h	8
2000	ESC: I	ESC: i	9
2400	ESC: J	ESC: j	10
3600	ESC: K	ESC: k	11
4800	ESC: L	ESC: l	12
7200	ESC: M	ESC: m	13
9600**	ESC: N	ESC: n	14

* Standard (default) baud rate for PRINTER port

** Standard (default) baud rate for MODEM port

OPERATOR'S QUICK REFERENCE GUIDE TO BAUD RATE CHANGE

Keys Used: ESC:[ASCII Character]

SWITCH POSITION	BAUD RATE	MODEM PORT		ASYNC PRNTR PORT	
		(KEYBOARD ASCII)	(REMOTE) HEX CODE	ASCII	HEX CODE
0	50	@	40	--	--
1	75	A	41	a	61
2	110	B	42	b	62
3	134.5	C	43	c	63
4	150	D	44	d	64
5	300	E	45	e	65
6	600	F	46	f	66
7	1200	G	47	g	67
8	1800	H	48	h	68
9	2000	I	49	i	69
10	2400	J	4A	j	6A
11	3600	K	4B	k	6B
12	4800	L	4C	l	6C
13	7200	M	4D	m	6D
14	9600	N	4E	n	6E

OPERATORS QUICK REFERENCE CHART OF PERSONALITY CHANGE OPERATION CODES

OPERATION	PERSONALITY BYTE OPERATION	DESCRIPTION	STD DEFAULT
Escape Lead-In Character	ESC . 0		ESC
End Block Character	ESC . 1	Enter HEX code associated with desired ASCII character. Example: If desired ASCII character is W, enter 57.	CR
2nd End Block Character	ESC . 2		NULL
New Line Character	ESC . 3		NULL
2nd New Line Character	ESC . 4		NULL
Field Separator Character	ESC . 5		NULL
Function Lead-In Character	ESC . 6		SOH
Parity Character	ESC . 7		NULL
Replacement Character	ESC . 8		SPACE
RTS-START Delay Time	ESC . 9	Enter HEX code whose value is 1/2 the desired delay in milliseconds. Example: If desired delay is 115 milliseconds, enter 3A.	00
RTS-OFF Delay Time	ESC . A	Calculated automatically by program when byte value is 00. If change is desired, enter HEX code appropriate to the desired delay, in accordance with chart below.	00

RECOMMENDED RTS OFF DELAY TIMES

RTS-OFF DELAY (MILLISECONDS)	BAUD RATE	OPERATION CODE	RTS-OFF DELAY (MILLISECONDS)	BAUD RATE	OPERATION CODE
343	50	ESC . A AC	9	1800	ESC . A 05
229	75	73	9	2000	05
175	1101	58	7	2400	04
127	134.5	40	7	3600	04
115	150	3A	5	4800	03
57	300	1D	5	7200	03
29	600	0F	5	9600	ESC . A 03
15	1200	ESC . A 08			

OPERATORS QUICK REFERENCE CHART OF PERSONALITY CHANGE OPERATION CODES (cont'd)

Personality Bytes B thru 11, following, are controlled by a HEXdecimal value which causes specific Operation Bits to be set to ON in accordance with the accompanying chart. Bits $X_7 X_6 X_5 X_4$ comprise the HI order bits, bits $X_3 X_2 X_1 X_0$ comprise the LO order bits. All bits to be set must be set simultaneously.

BYTE VALUE	F	E	D	C	B	A	G	S
OPERATION BITS SET TO ON HI	$X_7 X_6 X_5 X_4$	$X_7 X_6 X_5 \bullet$	$X_7 X_6 \bullet X_5$	$X_7 X_6 \bullet \bullet$	$X_7 \bullet X_6 X_5$	$X_7 \bullet X_6 \bullet$	$X_7 \bullet \bullet X_6$	$X_7 \bullet \bullet \bullet$
or LO	$X_3 X_2 X_1 X_0$	$X_3 X_2 X_1 \bullet$	$X_3 X_2 \bullet X_1$	$X_3 \bullet X_2 X_1$	$X_3 \bullet X_2 \bullet X_1$	$X_3 \bullet X_2 \bullet \bullet$	$X_3 \bullet \bullet X_2 X_1$	$X_3 \bullet \bullet \bullet X_2$
BYTE VALUE	7	6	5	4	3	2	1	0
OPERATION BITS SET TO ON HI	$\bullet X_6 X_5 X_4$	$\bullet X_6 X_5 \bullet$	$\bullet X_6 \bullet X_5$	$\bullet X_6 \bullet \bullet X_5$	$\bullet \bullet X_6 X_5$	$\bullet \bullet X_6 \bullet X_5$	$\bullet \bullet \bullet X_6 X_5$	$\bullet \bullet \bullet \bullet X_6 X_5$
or LO	$\bullet X_2 X_1 X_0$	$\bullet X_2 X_1 \bullet$	$\bullet X_2 \bullet X_1$	$\bullet X_2 \bullet \bullet X_1$	$\bullet \bullet X_2 X_1$	$\bullet \bullet X_2 \bullet X_1$	$\bullet \bullet \bullet X_2 X_1$	$\bullet \bullet \bullet \bullet X_2 X_1$

Polling Option Variants (ESC . B) Byte B

OPERATION	ESC . B (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION	
BIT	TITLE			
X_7	Reserved	80	Reserved	
X_6	Communications Buffer Control	40	ON = Polling Communications Buffer (last two pages) is enabled (DIP Switch S4-SWB ON). Incoming data held in buffer until message is completed. If no errors, message goes to screen. OFF = Polling Communications Buffer disabled; incoming data goes directly to screen.	OFF
X_5	Addressable Print Buffer Control	20	ON = Addressable Print Buffer (last page display memory) enabled (see Section VI). OFF = Addressable Print Buffer disabled.	OFF
X_4	Transmit Last Character	10	ON = Transmission of last character (under cursor) is inhibited. OFF = Last character (under cursor) is transmitted.	OFF
X_3	Return to Local/Idle State	08	ON = Terminal automatically returns to Local State upon completion of Polling message. OFF = Terminal automatically returns to Idle State upon completion of Polling message.	OFF
X_2	FAST SELECT Control	04	ON = FAST SELECT is conditional; terminal must be in Idle State to receive data. OFF = FAST SELECT is unconditional; terminal is commanded to Idle State and must respond.	OFF
X_1	Local Mode Control	02	ON = Any key may be used to establish Local State. OFF = CONV required to establish Local State (Compose Mode).	OFF
X_0	Headers Required	01	ON = Headers are required in all communications. OFF = Headers are not required.	OFF

**OPERATORS QUICK REFERENCE CHART OF
PERSONALITY CHANGE OPERATION CODES (cont'd)**

BIT	TITLE	BYTE	DESCRIPTION	STD (DEFAULT) BIT CONDITION
Polling Transmission Number Byte C (ESC . C)				
X ₇	Reserved	80	Reserved	OFF
X ₆		40		
X ₅		20		
X ₄		10		
X ₃	Limit = 8	08	Operation bits set establish number of transmissions counted before recycling the count. 00 = transmission number inhibited, 01 = count recycles between 0 and 1.	00
X ₂	Limit = 4	04		
X ₁	Limit = 2	02		
X ₀	Limit = 1	01		
Power-Up Default Modulus Tabs Byte D (ESC . D)				
X ₇	Typewriter Tab Clear	80	ON = Clear all typewriter tabs with Clear All (ESC * and ESC +) commands. OFF= Only Protect Mode tabs cleared by Clear All command. Typewriter Tabs and Modulo Tabs are cleared in normal manner.	OFF
X ₆	Power-Up Tab Mode	40	Bits ON or OFF as required to define the ASCII character selected which may be used at Power-Up time to initialize Modulo Tab Mode, without executing ESC 3. Nominally, character utilized is the same used when the sequence ESC 3 is used.	ALL OFF
X ₅		20		
X ₄		10		
X ₃		08		
X ₂		04		
X ₁		02		
X ₀		01		

**OPERATORS QUICK REFERENCE CHART OF
PERSONALITY CHANGE OPERATION CODES (cont'd)**

OPERATION		ESC . E (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
Special Function Control Byte E (ESC . E)				
X ₇	Keyboard Personality Changes	80	ON = Inhibit personality changes from the keyboard. OFF= Personality changes from keyboard are accepted.	OFF
X ₆	Line Erase With CR	40	ON = CR erases remainder of current line before executing normal CR operation. OFF= Normal CR operation.	OFF
X ₅	New Line With CR	20	ON = Executing CR also executes New Line. OFF= Normal CR operation.	OFF
X ₄	Auto Line Wrap	10	ON = Auto Line Wrap is inhibited. Operator must use CR ,NL, etc. to get to next line. OFF= Auto Line Wrap - New Line automatically executed when position 80 is filled.	OFF
X ₃	Auto Video Shut Off	08	ON = CRT video not shut off after approximately 20 minutes of no display activity. OFF= CRT video automatically shut off after approximately 20 minutes of no display activity.	ON
X ₂	Pseudo Send	04	ON = PRINT sends SOH P CR SHIFT PRINT sends SOH p CR SEND LINE sends SOH Q CR SHIFT SEND LINE sends SOH q CR SEND PAGE sends SOH R CR SHIFT SEND PAGE sends SOH r CR SEND MSG sends SOH S CR SHIFT SEND MSG sends SOH s CR OFF= Disables mode; normal SEND and PRINT operations	OFF

**OPERATORS QUICK REFERENCE CHART OF
PERSONALITY CHANGE OPERATION CODES (cont'd)**

OPERATION		ESC . E (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
Special Function Control Byte E (ESC . E) (cont'd)				
X ₁	Load Cursor Skip	02	ON = Cursor skips out of protected field if position is specified during a Load Cursor operation. OFF= Cursor remains in protected field if position is specified during a Load Cursor operation.	OFF
X ₀	FUNKEY Programming/ Display	01	ON = Inhibit programming of function keys and display of FUNKEY messages. OFF= Normal FUNKEY operations.	OFF

Status Line Visual Attribute Control Byte F (ESC . F)

OPERATION		ESC . . F (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
X ₇	Reserved	80	Reserved	OFF
X ₆		40		
X ₅		20		
X ₄		10		
X ₃		08		
X ₂	Reversing Control	04	ON = Status Line message reversed. OFF= Status Line message in normal or personality video.	OFF
X ₁	Blinking Control	02	ON = Status Line message blinking. OFF= Status Line message in normal or personality video.	ON
X ₀	Underlining or Blanking Control	01	ON = Status Line message underlined (S6-SW3 @ 14M set to ON) or blanked (S6-SW3 at OFF). OFF= Status Line message in normal or personality video.	OFF

**OPERATORS QUICK REFERENCE CHART OF
PERSONALITY CHANGE OPERATION CODE (cont'd)**

OPERATION		ESC .. 0 (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE			
Special Function Control Byte 10 (ESC .. 0)				
X ₇	Erase to Spaces Replacement Character	80	ON = Erase to Spaces operation uses replacement character specified by Personality Byte 8. OFF= Normal Erase to Spaces operation.	OFF
X ₆	Clear to Spaces Replacement Character	40	ON = Clear to Spaces operation uses replacement character specified by Personality Byte 8. OFF= Normal Clear to Spaces operation.	OFF
X ₅	FS vs. Protected Field Control	20	ON = Protected field delimiter, FS, is imbedded after unprotected field. OFF= Protected field delimiter, FS, is imbedded before unprotected field.	OFF
X ₄	Transmit NL Control	10	ON = Inhibit transmission of 1st and 2nd New Line characters (Personality Bytes 3 and 4) OFF= Normal transmission of 1st and 2nd New Line characters.	OFF
X ₃	Scrolling Control	08	ON = Scrolling of an unprotected page is inhibited. OFF= Normal Scrolling operation.	OFF
X ₂	Reserved	04	Reserved	OFF
X ₁	Erase Page vs. Write Protect	02	ON = Erase Page operation resets Write Protect Mode. OFF= Normal Erase Page operation.	ON
X ₀	Erase Line vs. Write Protect	01	ON = Erase Line operation resets Write Protect Mode (WPRT). OFF= Normal Erase Line operation.	OFF

**OPERATORS QUICK REFERENCE CHART OF
PERSONALITY CHANGE OPERATION CODES (cont'd)**

OPERATION		ESC . . 1 (BYTE)	DESCRIPTION	STD (DEFAULT) BIT CONDITION
BIT	TITLE	Special Function Control Byte 11 (ESC . . 1)		
Special Function Control Byte 11 (ESC . . 1)				
X ₇	Reserved	80	Reserved	ALL OFF
X ₆		40		
X ₅		20		
X ₄		10		
X ₃		08		
X ₂	Power-Up Conv Mode Control	04	ON = Conversation Mode is set when power-up is completed. OFF = Block Mode is set when power-up is completed.	OFF
X ₁	Reserved	02	Reserved	OFF
X ₀	Power-Up CAP LOCK Control	01	ON = CAP LOCK is set when power-up is completed. OFF = CAP LOCK is not set when power-up is completed.	ON

**OPERATORS QUICK REFERENCE CHART OF
VIDEO ATTRIBUTE CONTROL OPERATION CODES**

FUNCTION	DESCRIPTION
ESC ~ 0	Video OFF (data is retained)
ESC ~ 1	Video ON; cursor OFF
ESC ~ 2	Video ON; cursor steady
ESC ~ 3	Video ON; cursor blinking

FUNCTION	ADM 42 MODE	ADM 2 MODE
Blanking for entire page	ESC G (Space)	ESC G !
Blanking to end of line	ESC G "	ESC G #
Underlining for entire page	ESC G \$	ESC G %
Underlining to end of line	ESC G &	ESC G '

FUNCTION	STD CHAR.	ALT. CHAR.
Reset to Standard Video	ESC G 0	ESC G 0
Limited Graphics Mode Enable		ESC G 8
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) of area	ESC G 1 or ESC ~	ESC G 9 or ESC ~
Blinking of Area	ESC G 2 or ESC ~	ESC G A or ESC ~
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Blinking of Area	ESC G 3	ESC G B
Reversing of Area	ESC G 4	ESC G C
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Reversing of Area	ESC G 5	ESC G D
Blinking and Reversing of Area	ESC G 6	ESC G E
Blanking (S6-SW3 OFF) or Underlining (S6-SW3 ON) and Blinking and Reversing of Area	ESC G 7	ESC G F

OPERATORS QUICK REFERENCE CHART
OF ADM-42 ESCAPE SEQUENCES

ESCAPE SEQUENCE								
HEX BYTE ↓ 1ST BYTE → 2ND ↓	2	3	4	5	6	7		
0		0 CLEAR TABS	@ PRINT PROT AS SP	P PRINT PAGE ALL	' POLLING ADDRESS*	p PRINT UNFORMAT		
1	! FUNKEY PROG*	1 SET TYPWR TABS	A COPY PRINT*	Q INSERT CHAR	a AUX CONTROL*	q SET INS MODE		
2	" KBD ENA**	2 CLEAR COL OF TABS	B SET BLOCK MD	R DELETE LINE	b STATUS 1 OFF	r CLEAR INS MODE		
3	# KBD DISA**	3 TYPWR TAB CTRL*	C SET CONV MD	S SEND MSG	c STATUS 1 ON	s SEND MSG ALL		
4	S CLEAR ADM1 MD	4 SEND FG LINE	D SET DUPLH OR F	T ERASE LINE (PERS)	d STATUS 2 OF F	t ERASE LINE TO NUL		
5	% SET ADM 1 MD	5 SEND FG PAGE	E INSERT LINE	U SET PGM MODE	e STATUS 2 ON	u CLEAR PGM MOD		
6	& SET PROTECT	6 SEND ALL LINE	F MESSAGE TO ROW 25*	V SET COL PROT SP AT CURSOR	f STATUS 3 OFF	v SET AUTO PG		
7	' CLEAR PROTECT	7 SEND ALL PAGE	G ATTRIB CONTROL*	W DELETE CHAR	g STATUS 3 ON	w CLEAR AUTO PG		
8	(CLEAR WPROT	8 WRITE SOM (STX)	H	X CLEAR PGM MODE	h	x		
9) SET WPROT	9 WRITE EOM (ETX)	I BACK TAB	Y ERASE PAGE (PERS)	i TAB (SKIP)	y ERASE PG TO NULL		
A	* CLEAR ALL TO NULL	:	J PAGE BACK	Z CLEAR ALL MODES	j	z		
B	CLR ALL TO SPACE	:	K PAGE FWD	I BUFFERED PRINT CONTROL*	k	{		
C	CLR ALL TO PROT SP	< STATUS 4 ON	L GO TO PAGE N (1-8)*	\ EVOKE FUNKEY*	l	;	BAUD RATE CTRL*	
D	LOAD PRC*	= LOAD RC*	M MULT ESC*		m WRITE MULT CHAR*	}		
E	CHANGE PERS*) STATUS 4 OFF	N SET PAGE EDIT	^ BLINK CONTROL	n	~	CURSOR VIDEO CTRL*	
F	/ READ PRC**	? READ RC**	O CLEAR PAGE EDIT	- BLANK CONTROL	o DISPLAY PERS*	DEL		

*Multiple Characters Required

**Remote (from host) Only

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

OPERATOR'S QUICK REFERENCE GUIDE

TO GRAPHIC CHARACTER SET CODES

		FUNCTION			GRAPHIC CHARACTER SET						
HEX		0	1	2	3	4	5	6	7		
	LSBs 4321	MSBs 765	000	001	010	011	100	101	110	111	
0	0000		NUL	DLE		0	€	P		p	
1	0001		SOH	DC1	!	1	A	Q	a	q	
2	0010		STX	DC2	"	2	B	R	b	r	
3	0011		ETX	DC3	#	3	C	S	c	s	
4	0100		EOT	DC4	\$	4	D	T	d	t	
5	0101		ENQ	NAK	%	5	E	U	e	u	
6	0110		ACK	SYN	&	6	F	V	f	v	
7	0111		BEEP	ETB	'	7	G	W	g	w	
8	1000	(←) BS	CAN	(8	H	X	h	x		
9	1001	(SKIP) HT	EM)	9	I	Y	i	y		
A	1010	LF (↓)	SUB	*	:	J	Z	j	z		
B	1011	VT (↑)	ESC	+	;	K	[k	{		
C	1100	FF (→)	FS	,	<	L	\	l	!		
D	1101	CR	GS	-	=	M]	m	;		
E	1110	SO	(HOME) RS		.	>	N	^	n	~	
F	1111	SI	(NEW LINE) US		/	?	O	—	o	DEL	

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

OPERATOR'S QUICK REFERENCE GUIDE TO BUFFERED PRINT MODE

Keys Used: ESC [(ASCII Characters)

FUNCTION	ASCII CHARACTERS
Unbuffered Serial Printing	0P
Unbuffered Parallel Printing	1P
Buffered Serial Printing	2P
Buffered Parallel Printing	3P
Unbuffered Serial Printing Unformatted	0p
Unbuffered Parallel Printing Unformatted	1p
Buffered Serial Printing Unformatted	2p
Buffered Parallel Printing Unformatted	3p

APPENDIX B

TTL DATA DISPLAY MONITOR

120/150

SERVICE MANUAL

TTL DATA DISPLAY 120/150

5-017-1024

REV. A

July, 1978



**Electronic
Display
Division**



IM1024

CONTENTS

		Page
	ILLUSTRATIONS AND TABLES	iii
PART I	OPERATING DATA	1
Section		
1.	GENERAL INFORMATION	
1.1	Monitor Description	1-1
1.2	Customer Input Signal Requirements	1-1
1.2.1	PWA Signal Edge Connector	1-1
1.2.2	Video	1-1
1.2.3	Horizontal Drive	1-4
1.2.4	Vertical Drive	1-4
1.2.5	Skip Scan	1-4
1.3	Input Power Requirement	1-4
1.3.1	AC Input Power Requirement	1-4
1.3.1.1	Input Power Connector	1-4
1.3.1.2	Input Voltage	1-4
1.3.1.3	Input Power	1-4
1.3.1.4	Input Frequency	1-6
1.3.2	DC Input Power Requirements	1-6
1.3.2.1	Input Power Connector	1-6
1.3.2.2	Input Voltage	1-6
1.3.2.3	AC Ripple	1-6
1.3.2.4	Input Current	1-6
1.4	Display Monitor Electrical Characteristics	1-6
1.4.1	Video Amplifier	1-6
1.4.2	Horizontal Electronics	1-8
1.4.3	Vertical Electronics	1-8
1.4.4	Skip Scan Electronics	1-9
1.5	CRT Display Characteristics	1-9
1.5.1	CRT Resolution	1-9
1.5.2	Geometric Distortion	1-9
1.5.3	Linearity	1-9
1.5.4	Jitter	1-9
1.6	Mechanical Specifications	1-10
1.7	Environmental Specifications	1-10
1.8	Reliability	1-10
1.9	X-Ray Radiation	1-10
1.10	User Operating Controls	1-13
1.10.2	Internal Controls	1-13
2	INSTALLATION	2-1
2.1	Mechanical	2-1
2.2	Electrical	2-1
2.2.1	AC Input	2-1
2.2.2	DC Input	2-1
2.3	Location	2-1
2.4	Ground Techniques	2-1
2.5	Video Lead In Considerations	2-1



CONTENTS (Cont.)

Section		Page
3	OPERATION	3-1
	3.1 General	3-1
	3.2 Brightness Adjust	3-1
	3.3 Contrast Adjust	3-1
PART II	SERVICE DATA	4
4	THEORY OF OPERATION	4-1
	4.1 Video Amplifier	4-1
	4.2 Vertical Electronics	4-1
	4.3 Horizontal Electronics	4-6
	4.3.1 Horizontal Deflection	4-6
	4.3.2 CRT Operating Voltages	4-8
	4.4 X-Ray Protection Electronics	4-8
	4.5 Dynamic Focus Electronics	4-9
	4.6 Low Voltage Regulated Supply	4-9
5	ADJUSTMENT AND MAINTENANCE	5-1
	5.1 General	5-1
	5.2 Initial Turn-On	5-1
	5.3 Power Supply Adjustment	5-1
	5.4 Vertical Electronics	5-1
	5.4.1 Vertical Sync Adjust	5-1
	5.4.2 Vertical Linearity and Height Adjust	5-1
	5.4.3 Skip Scan Adjust	5-1
	5.5 Horizontal Electronics	5-2
	5.5.1 Width Adjustment	5-2
	5.5.2 Horizontal Centering Adjustment	5-2
	5.6 Raster Centering	5-2
	5.7 Focus	5-2
	5.8 Dynamic Focus	5-2
	5.9 Brightness and Contrast	5-3
	5.10 Troubleshooting Guide	5-3
6	SERVICE DATA	6-1
	6.1 General	6-1
	6.2 Ordering Parts	6-1
	6.3 Returning Parts	6-1
	6.4 Waveforms	6-2
	6.5 Board Assembly	6-2
	6.6 Component Replacement Parts Affecting Product Safety	6-2
	6.7 Chassis Mounted Component Parts List	6-2



IM1024

CONTENTS (Cont.)

	Page
ILLUSTRATIONS	
1.1	1-2
1.2	1-3
1.3	1-5
1.4	1-6
1.5	1-7
1.6	1-7
1.7	1-8
1.8	1-8
1.9	1-9
1.10	1-12
2.1	2-2
2.2	2-3
4.1	4-2
4.2	4-3
4.3	4-4
4.4	4-5
4.5	4-7
4.6	4-10
5.1	5-2
6.1	6-5
6.2	6-6
6.3	6-7
6.4	6-8
6.5	6-9
6.6	6-10
6.7	6-11
6.8	6-12
TABLES	
1-1	1-11
2-1	2-1



IM1024

PART I

OPERATING DATA

This section of the Service Manual provides data concerning the specifications, installation and operation of the TTL120/150 Data Monitor.



IM1024

SECTION 1

GENERAL INFORMATION

1.1 MONITOR DESCRIPTION

The TTL 120/150 Data Monitor is a solid state raster scan display for data terminal application. The Monitor is designed for high quality display of alphanumeric dot characters.

The Data Monitor is available with either a 12 inch or a 15 inch diagonal screen sizes CRT and each monitor uses a CRT with 110° deflection angle which results in a very dense package.

The Data Monitor requires three separate TTL compatible input signals for operation, they are 1) vertical drive, 2) horizontal drive and 3) video. These three separate TTL input signals eliminate costly redundancy associated with the mixing and stripping operation required in a composite (single input) monitor.

The unit is available with the following factory installed options. The TTL compatible skip scan option provides for variable spacing between character rows while using only one scan line per space. The dynamic focus PWA option is available to provide an overall focus improvement from the conventional static focus control. The horizontal frequency can be altered from 15.25kHz to 21kHz. The main PWA is available with or without a brightness control, with or without contrast control and the video termination can be changed.

1.2 CUSTOMER INPUT SIGNAL REQUIREMENTS

1.2.1 PWA Signal Edge Connector (Customer Supplied)

Viking	No. ZVK10S/1-2
Amphenol	No. 225-21031-101
Cinch	No. 250-10-30-170
Ball EDD	No. 1-039-0119

(Refer to Figure 2.1 for wiring detail of this connector)

1.2.2 Video

Amplitude: High - 4.0V \pm 2.0V into an external 500Ω or less contrast control.
2.0V max at J101-8 to prevent video amplifier saturation.

Low - 0.0V \pm 0.4V

Polarity: White High

Pulse Width: 40ns min

Rise and Fall Time: Less than 12ns (10% to 90%)

Video Blanking: Refer to Figures 1.1 and 1.2

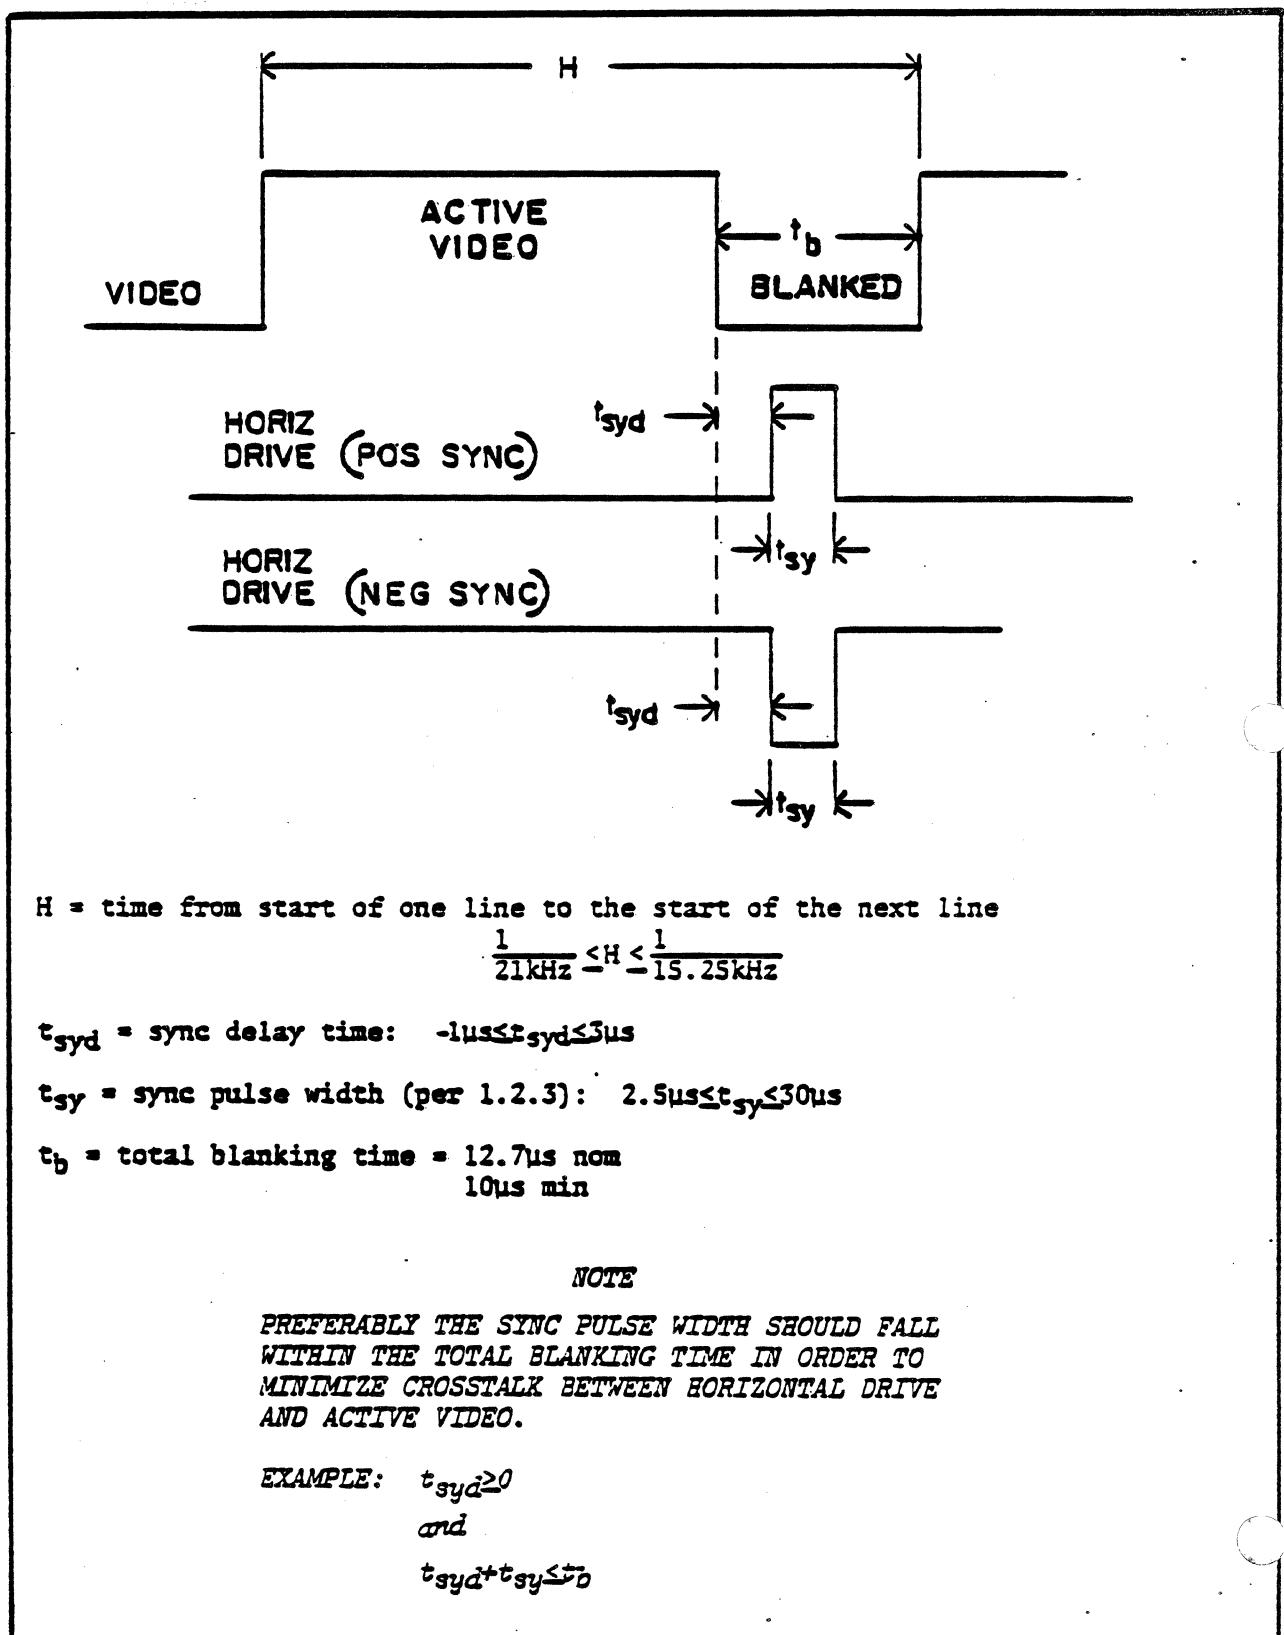


Figure 1.1 Horizontal/Video Timing



IM1024

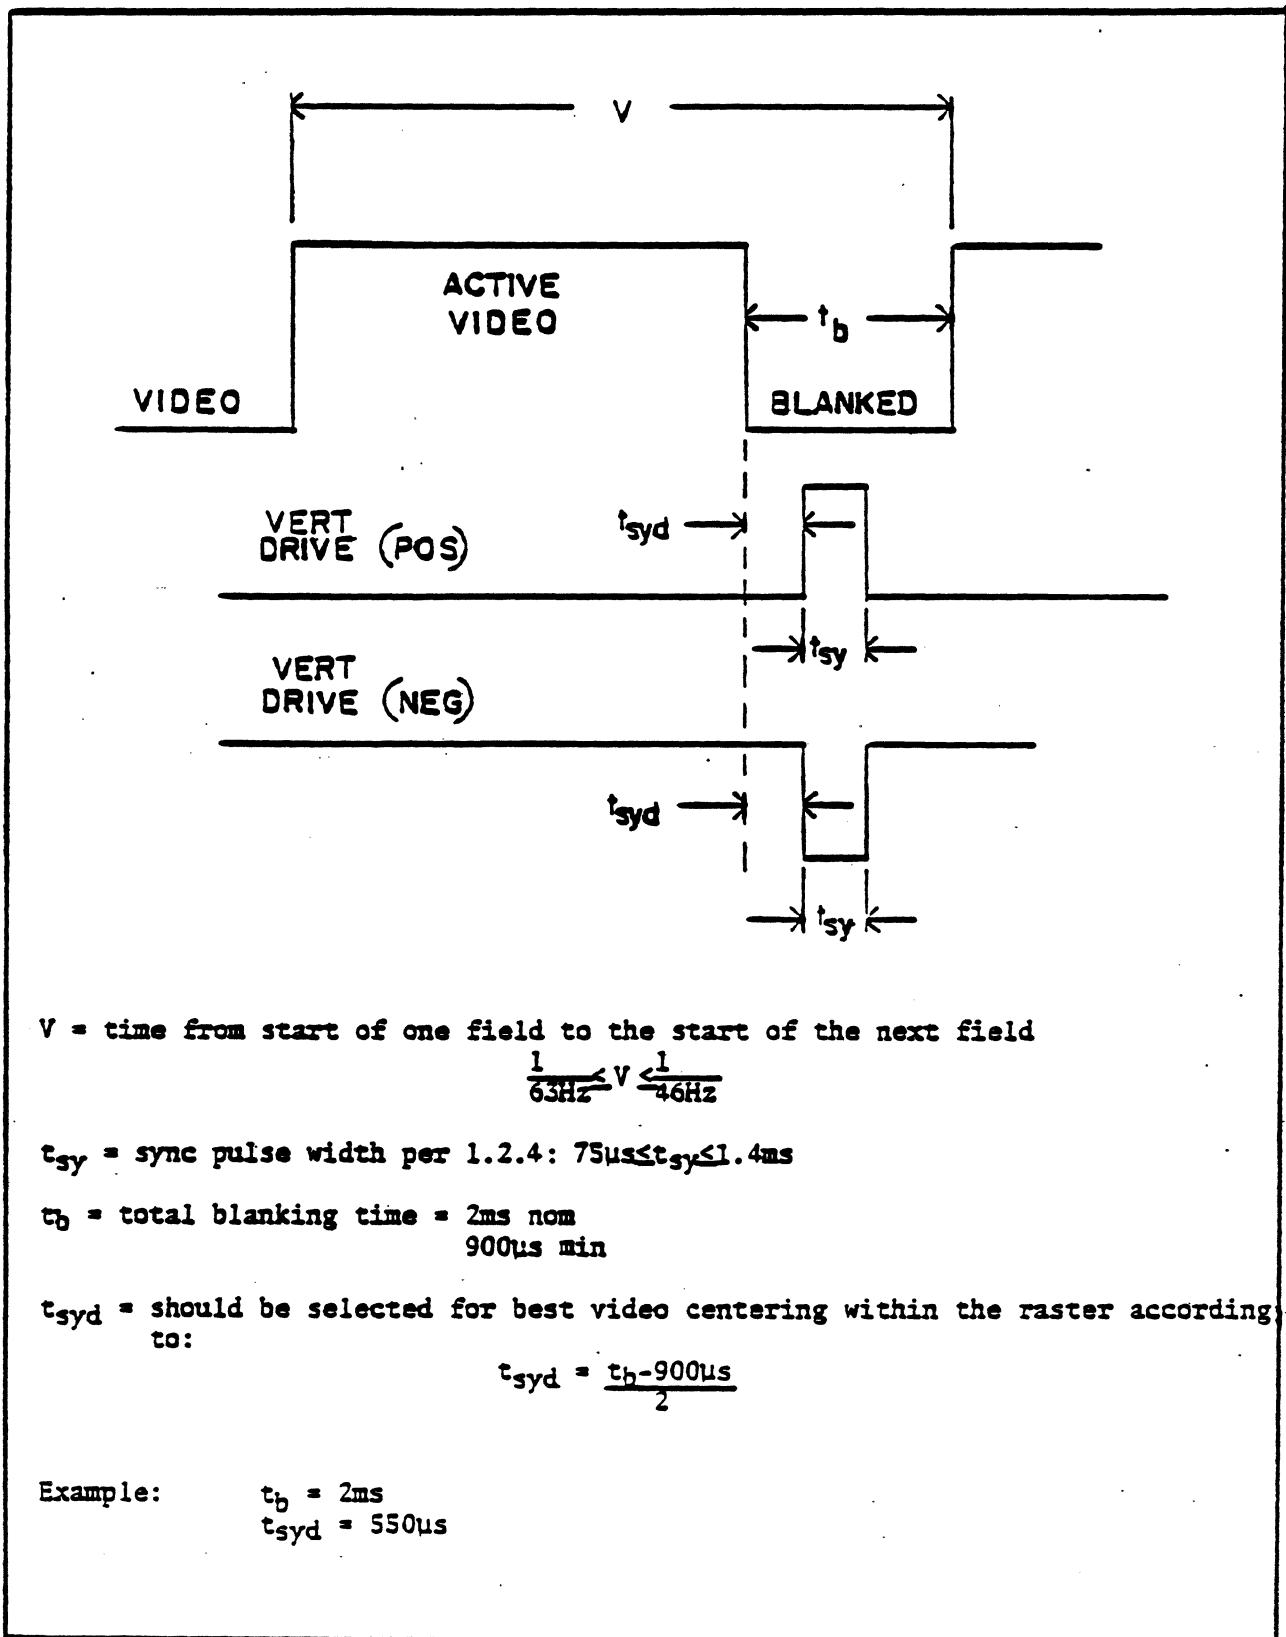


Figure 1.2 Vertical/Video Timing



1.2.3 Horizontal Drive

Horizontal Frequency: (f_H): 15,250Hz min to 21,000Hz max
 15,750Hz \pm 500Hz (Standard)

Amplitude: High - 4.0V \pm 1.5V
 Low - 0.0V \pm 0.4V

Polarity: Standard - Positive edge triggering
 Optional - Negative edge triggering

Pulse Width (t_{sy}): 2.5 μ s min to 30 μ s max

Rise and Fall Time: Less than 100ns (10% to 90%)

Horizontal/Video Timing: Refer to Figure 1.1

1.2.4 Vertical Drive

Vertical Frequency (f_V): 46Hz min to 63Hz max

Amplitude: High - 4.0V \pm 1.5V
 Low - 0.0V \pm 0.4V

Polarity: Standard - Negative edge triggering
 Optional - Positive edge triggering

Pulse Width (t_{sy}): 75 μ s min to 1.4ms max

Rise and Fall Time: Less than 100ns (10% to 90%)

Vertical/Video Time: Refer to Figure 1.2

1.2.5 Skip Scan

Amplitude: High - 4.0V \pm 1.5V
 Low - 0.0V \pm 0.4V

Polarity: Skip High

Pulse Width (t_{ss}): 3 μ s min to 10 μ s max

Rise and Fall Time: Less than 100ns (10% to 90%)

Skip Scan/Horizontal Timing: Refer to Figure 1.3

1.3 INPUT POWER REQUIREMENT

1.3.1 AC Input Power Requirement

1.3.1.1 Input Power Connector

A 9 pin male connector shell (Molex 03-06-1092) with female contacts (Molex 4529) is required to mate with J1 of the AC power supply. Refer to Figure 2.2 for wiring detail of the J1 mating connector.

1.3.1.2 Input Voltage


120V Nominal: 105V RMS min to 130V RMS max
 220V Nominal: 198V RMS min to 242V RMS max
 240V Nominal: 210V RMS min to 264V RMS max

1.3.1.3 Input Power

Nominal Wattage: 50 watts @ 120VAC, 220VAC or 240VAC
 Maximum Wattage: 65 watts @ 120VAC, 220VAC or 240VAC



IM1024

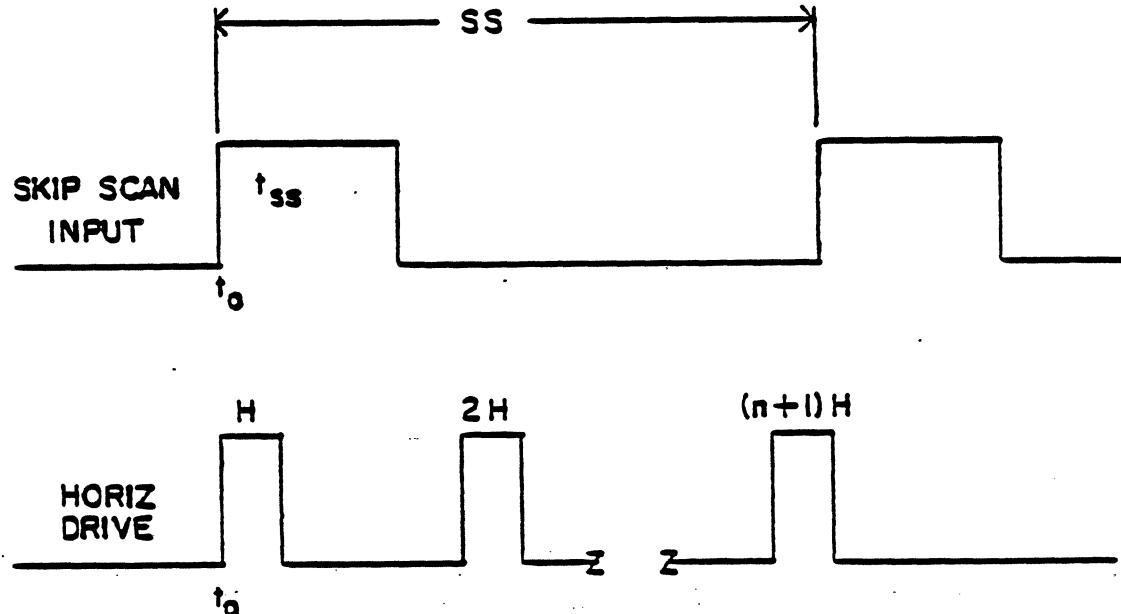

SS = Time between skip scan pulses nH which will conform to the number of lines ($n-1$) in the character matrix plus one line (H) for vertical setting

t_{ss} = Skip scan pulse width (per 1.2.5) $3\mu s \leq t_{ss} \leq 10\mu s$

The leading edges of the skip scan input and horizontal drive should be coincident at time t_0 .

Figure 1.3 Skip Scan/Horizontal Timing



1.3.1.4 Input Frequency

49Hz min to 61Hz max

1.3.2 DC Input Power Requirements (Optional)

1.3.2.1 Input Power Connector

The DC input voltage is applied through pin 7 of J101 on the main PWA.

1.3.2.2 Input Voltage

+55VDC $\pm 2\%$, with line, load and temperature.

1.3.2.3 AC Ripple

100mV p-p max for refresh synchronous with power frequency
35mV p-p max for refresh non-synchronous with power frequency

1.3.2.4 Input Current

Average Current Nominal: 0.5A


Average Current Maximum: 0.7A

Maximum Peak Current
from Horizontal and
Vertical AC Components: 1A

1.4 DISPLAY MONITOR ELECTRICAL CHARACTERISTICS

1.4.1 Video Amplifier

Input Impedance: Refer to Figure 1-4

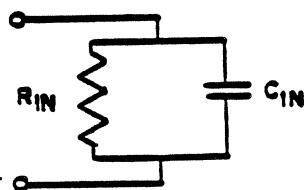

R_{IN} (Unterminated) = 5k typ; 3K min
 C_{IN} = 20pF typ; 30pF max

Figure 1.4 Video Amplifier Input Impedance



IM1024

Input Transfer Function (typ): Refer to Figure 1-5

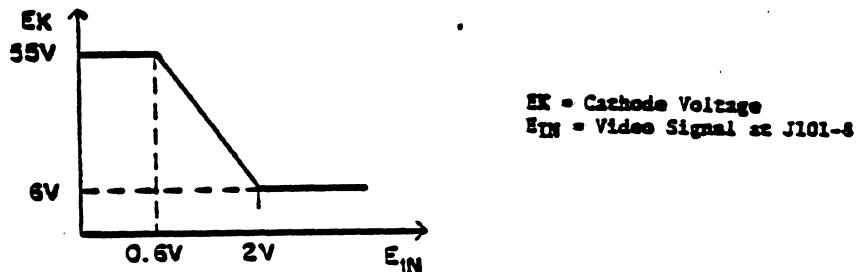


Figure 1.5 Video Amplifier Input Transfer Function

Bandwidth: DC 22MHz @ -3db typ; 20MHz @ -3db min

25V Pulse Response: Refer to Figure 1.6

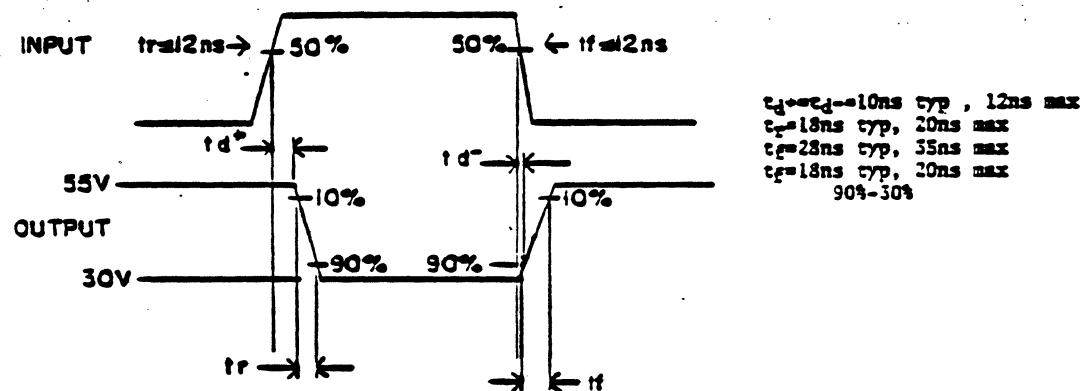


Figure 1.6 25V Pulse Response



1.4.2 Horizontal Electronics

Input Impedance: Refer to Figure 1.7

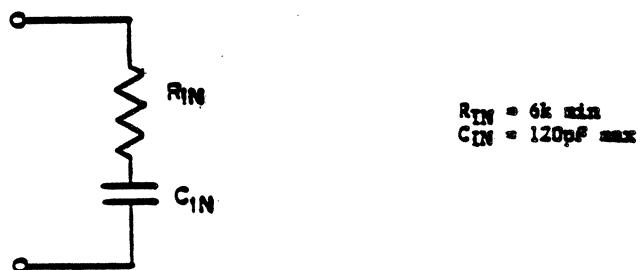


Figure 1.7 Horizontal Input Impedance

Retrace Time: 8.2μs typ; 9.0μs max

Horizontal Centering: Adjustment range is equal to $*t_{CTR} = 1.1(R153+R159)C153$
which translates to 8μs min to 28μs max

$*t$ = Time $*CTR$ = Centering

1.4.3 Vertical Electronics

Vertical Input Impedance: Refer to Figure 1.8

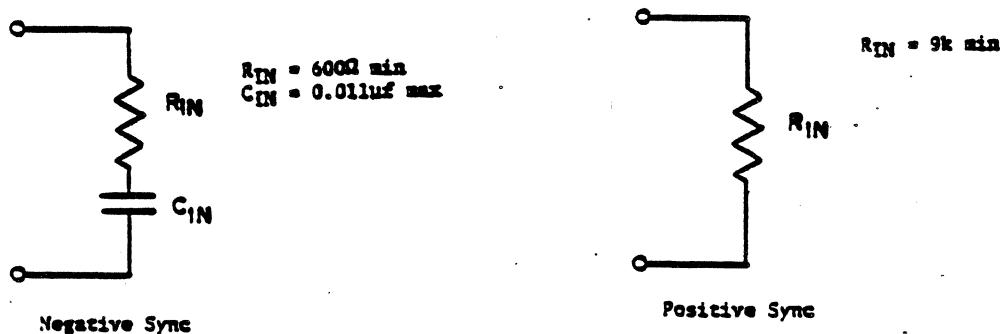


Figure 1.8 Vertical Input Impedance

Retrace Time: 700μs typ; 820μs max



IM1024

1.4.4 Skip Scan Electronics

Input Impedance: Refer to Figure 1.9

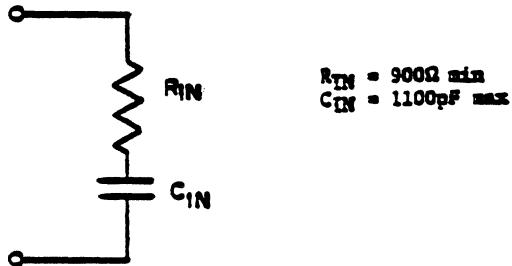


Figure 1.9 Skip Scan Input Impedance

Vertical Amplifier Delay Plus Settling Time: 60 μ s max to 90% of final value

1.5 CRT DISPLAY CHARACTERISTICS

1.5.1 CRT Resolution (without bonded panel)

Phosphor	*Resolution (TV Lines)	
	Center	Corner
P4	1000 ± 30fL	900 ± 30fL
P39	1000 ± 15fL	900 ± 15fL

*Resolution is measured in accordance with EIA RS-375 except Burst Modulation (or depth of modulation) is adjusted for 100%.

1.5.2 Geometric Distortion

The perimeter of a full field of characters approaches an ideal rectangle of 4 by 3 aspect ratio to within ±1.5% of rectangle height.

1.5.3 Linearity

Character height or width shall be within 10% of that of any adjacent character and within 20% of that for any character on the screen.

1.5.4 Jitter

Display jitter as a function of magnetic interference from the power transformer is:

60Hz - 0.006 inch p-p max
50Hz - 0.008 inch p-p max



1.6 MECHANICAL SPECIFICATIONS

Table 1-1 and Figure 1.10 lists the mechanical specifications for the TTL-120/150 Data Monitor. For further information, contact our General Sales Offices. They are:

Addison, Illinois (312) 279-7400
 Ocean, New Jersey (201) 922-2800
 Santa Clara, California (408) 244-1474
 Upland, California (714) 985-7110
 Lewisville, Texas (214) 436-2383

1.7 ENVIRONMENTAL SPECIFICATIONS

	<u>Operating Range</u>	<u>Storage Range</u>
Ambient Temperature	5°C to 55°C	-40°C to 65°C
Humidity (Non-Condensing)	5% to 80%	5% to 90%
Altitude	Up to 10,000Ft. (3048M)	Up to 30,000Ft. (9144M)

1.8 RELIABILITY

The calculated MTBF excluding CRT at 55°C is 24,500 hours. The calculations are based on MIL 217A assuming the military K Factors are "ground base equipment."

1.9 X-RAY RADIATION

The TTL 120/150 Data Monitor complies with the Federal Regulation for Radiation Control as required by the radiation Control for Health and Safety Act of 1968, and as implemented by Title 21, Subchapter J of the Code of Federal Regulation.

These regulations place certain requirements upon manufacturers of products which can emit x-rays under some conditions of operation or failure. This includes CRT data display monitors.

Certification of compliance with radiation regulations is shown by a label attached to each monitor. The user is responsible for labeling his product in a similar fashion or in making the DHEN label easily visible from the outside of the enclosure. The regulations state that "This (certification) information shall be provided in the form of a tag or label permanently affixed or inscribed on such product so as to be legible and readily accessible to view when the product is fully assembled for use..." Each monitor is supplied with an extra label attached to the CRT. The user will remove this label and use it as stated above.

DIMENSION (Inches/Millimeters)

MODEL		TILT (°)	A (in/mm)	B	C	Weight (Lbs/Kg)	OUTLINE DWG
TTL-120B	AC	0	4.51/115	4.72/120	9.03/229	15/6.8	2-030-0394
TTL-120B	AC	7½	4.70/119	4.11/104	8.95/227	15/6.8	3-030-0391
TTL-120A	AC	0	4.58/116	2.97/75	9.09/231	14.5/6.6	2-030-0388
TTL-120A	AC	5	4.72/120	2.57/65	9.06/230	14.5/6.6	2-030-0403
TTL-120A	AC	7½	4.78/121	2.37/60	9.01/229	14.5/6.6	2-030-0406
TTL-120A	AC	10	4.80/122	2.16/55	8.95/227	14.5/6.6	2-030-0390
TTL-120D	AC	0	4.66/118	5.30/135	9.20/234	15.5/7.0	2-030-0393
TTL-120D	AC	10	4.90/124	4.78/121	9.02/229	15.5/7.0	2-030-0392
TTL-150A	AC	0	5.33/135	2.38/60	10.66/271	18.5/8.4	2-030-0395
TTL-150A	AC	5	5.42/138	1.91/48	10.62/270	18.5/8.4	2-030-0389
TTL-150A	AC	7½	5.47/139	1.67/42	10.57/268	18.5/8.4	2-030-0405
TTL-150D	AC	0	5.30/135	5.40/137	10.62/270	19.75/9.0	2-030-0387
TTL-150D	AC	5	5.92/150	4.58/116	11.03/280	19.75/9.0	2-030-0387

NOTES:

1. For DC models subtract 4 lbs/1.8kg
2. Dimensions based on standard unit with plain face CRT.

IM1024


Table 1-1 Mechanical Specifications

IM1024




DIMENSIONS FIGURE 1-12


TTL-120 12-INCH DIAGONAL A

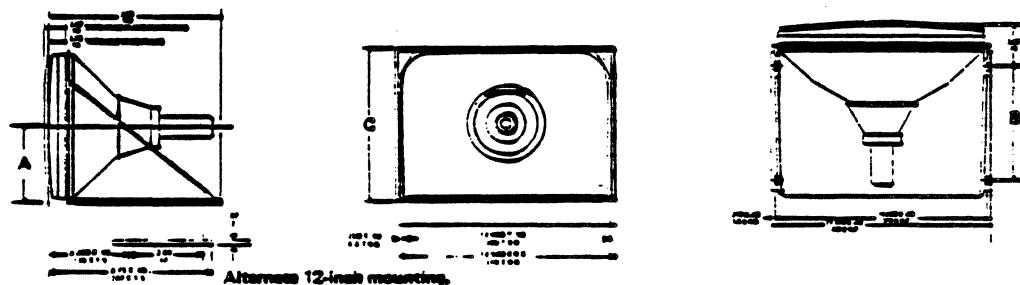

TTL-150 15-INCH DIAGONAL A

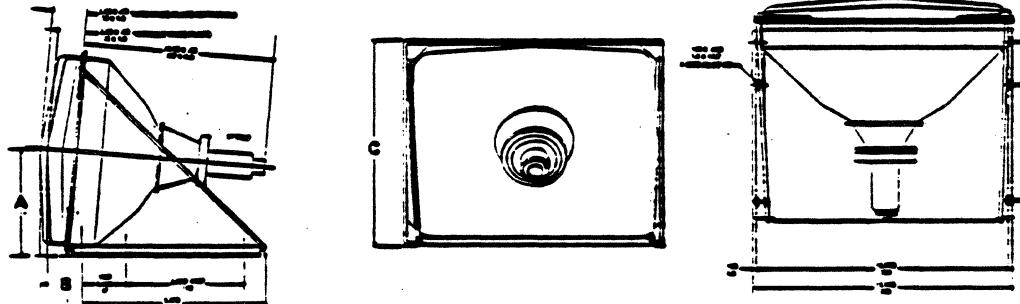

TTL-150 15-INCH DIAGONAL * D

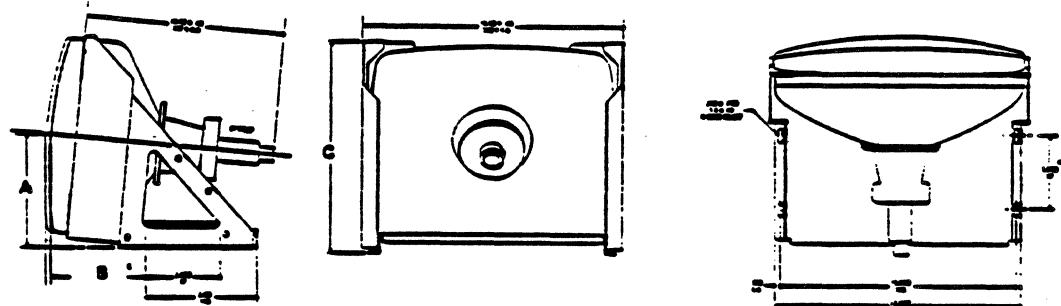

*Alternates 15-inch frame style.

Figure 1.10 TTL 120, 0° and TTL 150 5° Tilt Dimensions



IM1024

1.10 USER OPERATING CONTROLS

1.10.1 External Controls

The only external control required for operation of the standard TTL 120/150 display unit is a contrast control. The impedance level of this control shall be no greater than 50Ω to keep frequency response limitations to a minimum.

An option is available where the contrast control can be placed on the PWA.

Another option is available, where the brightness control is removed from the PWA. A remote brightness control supplied by the customer is used and is connected to the PWA via J101.

1.10.2 Internal Controls

The following controls are mounted on the main PWA:

Width	Skip Height (Optional)
Horizontal Video Centering	Internal Contrast (Optional)
Vertical Sync	Brightness
Vertical Linearity	Focus
Height	Dynamic Focus (Located on Dynamic Focus PWA)



Section 2

INSTALLATION

2.1 MECHANICAL

Refer to Table 2-1 for the Display Monitor mounting data and to Section 1.6 for its mechanical specifications.

<u>MODEL</u>	<u>MOUNTING DATA</u>
TTL120B	4 Clinch Nuts
TTL120A	4 .188X.500 radius end slots
TTL120D	4 .218X.750 radius end slots
TTL150A	6 .188X.500 radius end slots

Table 2-1 Mounting Data

2.2 ELECTRICAL

2.2.1 AC Input

The TTL120/150 Data Monitor with a internal AC power supply operates from either a 120VAC or 220/240VAC source depending on the wiring of the AC mating connector (customer supplied) for J1. Refer to Figure 2.2 for wiring data of J1 mating connector.

2.2.2 DC Input

The TTL120/150 Display Monitor without an internal AC power supply is operated from an external +55VDC source. The DC input voltage of +55V is applied to pin 7 of J101.

2.3 LOCATION

The Display Monitor shall not be located in an area such that the operating ambient temperature exceeds +55°C.

2.4 GROUND TECHNIQUES

The Display Monitor is normally mounted in a system where the frame and chassis plate is an integral part of the system ground. The vertical/video ground and horizontal ground (located on pins 1 and 10 of J101) are tied to the chassis plate through a #6 tapping screw located at one corner of the PWA. Ground connections to the Display Monitor can then be made through the chassis mounting plate or via connections to pins 1 and 10 of J101. Refer to Figure 2.1 for Interface Connections.

2.5 VIDEO LEAD IN CONSIDERATIONS

For the best display, the video input line requires special consideration.

IM1024


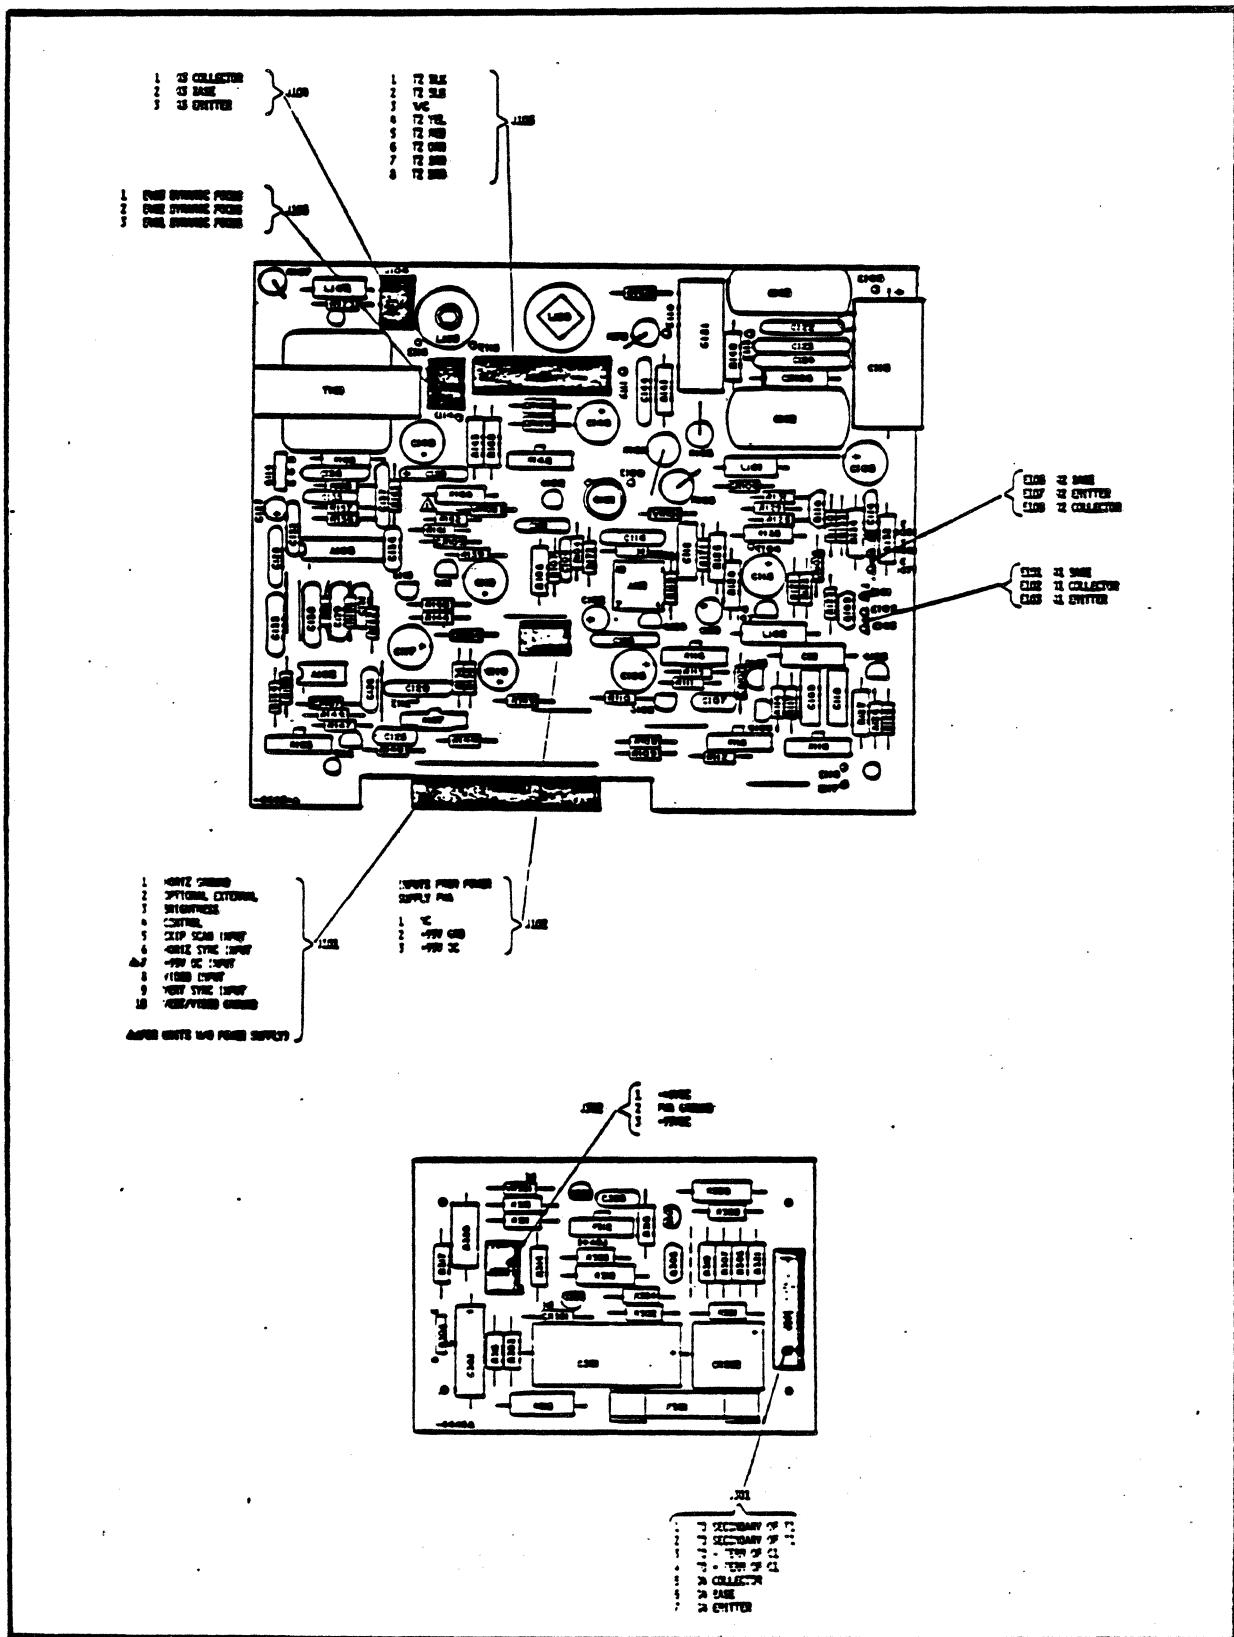



Figure 2.1 PWA Interface Connection and Signal Output




IM1024

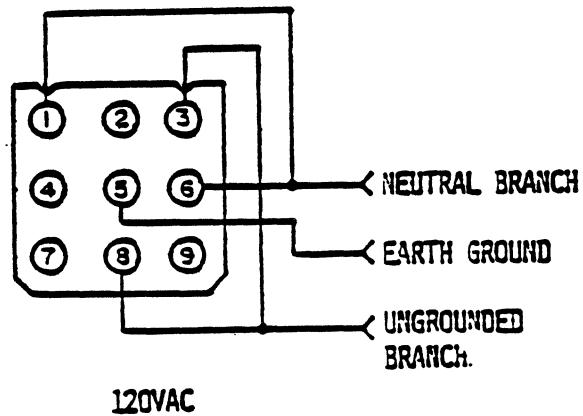

120VAC

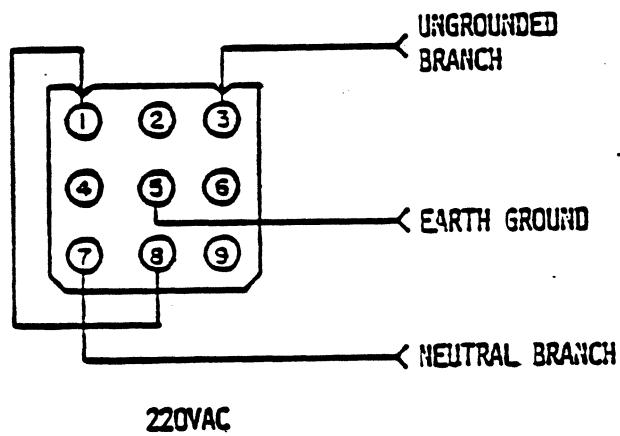

220VAC

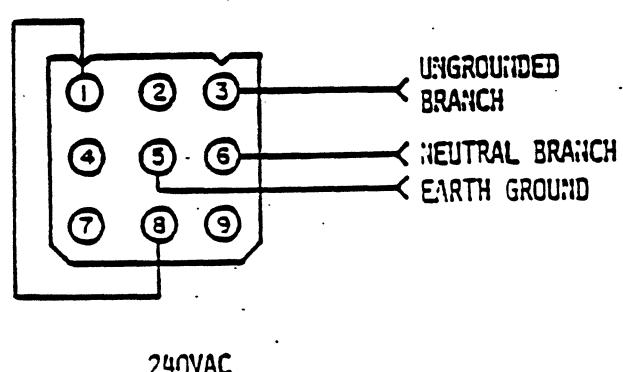

240VAC

Figure 2.2 Wiring Data for J1 Mating Connector



1. To avoid capacitive coupling from adjacent lines, the video leads should be routed away from all other wiring and the horizontal sync width should not extend into the active video area (Refer to Figure 1.1).

If this is not possible, a shielded or twisted pair video lead may become necessary.

2. The video line should be kept as short as possible in order to minimize line capacitance and the bandwidth limitation this capacitance imposes. Unfortunately low line capacitance is contradictory to a shielded or twisted pair line mentioned in item 1 above. To resolve this contradiction, a terminated system may have to be used, where by the video line is terminated in the characteristic impedance of the shielded (coaxial) or twisted pair line generally $50 \leq Z_o \leq 120\Omega$. This termination resistor is available on the Main PWA as an optional component.



IM1024

Section 3

OPERATION

3.1 GENERAL

After power, video and drive signals have been applied to the Display Monitor, the contrast and brightness controls are adjusted for the best looking display.

3.2 BRIGHTNESS ADJUST

The brightness control is used to adjust the raster just beyond visual cutoff; in this manner, maximum contrast ratio is obtained when video is applied.

3.3 CONTRAST ADJUST

The contrast control is used to vary the data brightness level as dictated by ambient lighting conditions.



IM1024

PART II

SERVICE DATA

Section 4 through 6 and the supplement are for qualified service personnel.

The TTL 120/150 has no end user serviceable parts inside. Refer service to qualified service personnel.



IM1024

Section 4

THEORY OF OPERATION

4.1 VIDEO AMPLIFIER

Video amplification is provided by Q101 and Q102. Q101 and Q102 are connected in a cascode arrangement; Q102 operates as an emitter follower and Q101 operates in the common base configuration. This minimizes the Miller effect input capacitance and the defining breakdown parameter for Q101 becomes V_{BCBO} as opposed to V_{BCEO} for the common emitter configuration. This enables selection of a higher speed/lower breakdown transistor to be used in the video amplifier.

The video amplifier is normally off. That is, in the absence of a video input signal or with a signal level of less than 0.6V at J101-8, the CRT cathode voltage at the collector of Q101 will be at +55V. When the input signal exceeds 0.6V, the amplifier begins operation in the linear region and the CRT cathode voltage starts to decrease with a nominal voltage gain of 35 V/V.

The dynamic range capability of the amplifier is 48V which provides more than adequate head room to meet the normal viewing brightness requirement of 18 to 30 volts of modulation. Emitter degeneration resistor R106 stabilizes the gain against hfe variations and V_{BE} temperature variations. High frequency peaking is provided by C104 and L101 resulting in a nominal bandwidth of 22MHz. CR101 provides arc protection for Q101 by clamping the collector voltage to a maximum value of 55V.

Optional resistors R102, R103 and R174 (Refer to Figure 4.1) are used to tailor the video amplifier characteristics to meet certain performance requirements. R102 is a termination resistor used for those applications where the frequency limiting effects of the input cable capacitance must be minimized. R103 is a contrast control which can be provided as an internal adjustment while R174 is used to convert the video amplifier to a normally on Class A amplifier. R174 eliminates the initial 0.6V dead zone which normally exists and modifies the amplifier transfer characteristic (Refer to Figure 1.5) for compatibility with competitive monitors with Class A video amplifiers.

4.2 VERTICAL ELECTRONICS

The vertical electronics circuit consists of a positive sync inverter, a vertical oscillator, an emitter follower, a vertical output amplifier and the vertical deflection coil of the yoke. Refer to figure 4.2.

Q105 is a programmable unijunction transistor and operates as a relaxation sawtooth oscillator. The free running frequency range of 40Hz to 65Hz is governed by R115, C109, C110 and the voltage at the gate of Q105. CR102 provides temperature compensation for the free running frequency. Q105 operates like a switch; in the off condition, a ramp voltage is produced at the anode of Q105 (TP104). This ramp voltage will increase until the anode voltage exceeds the gate voltage and turns Q105 on to rapidly discharge the voltage across C109 and

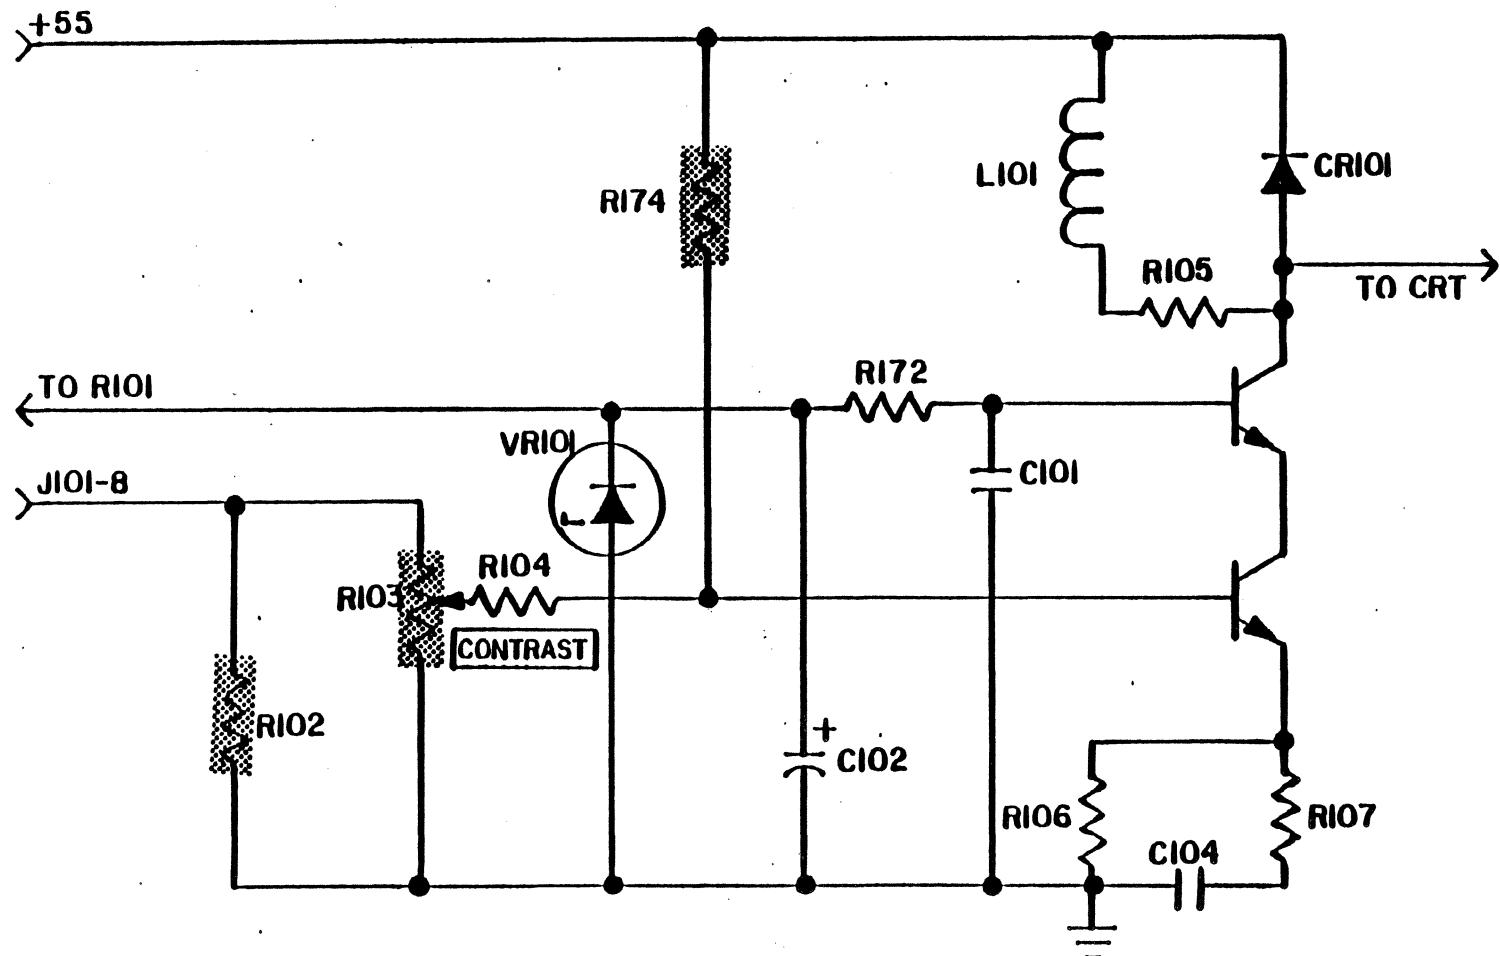


Figure 4.1 Optional Video Amplifier Schematic

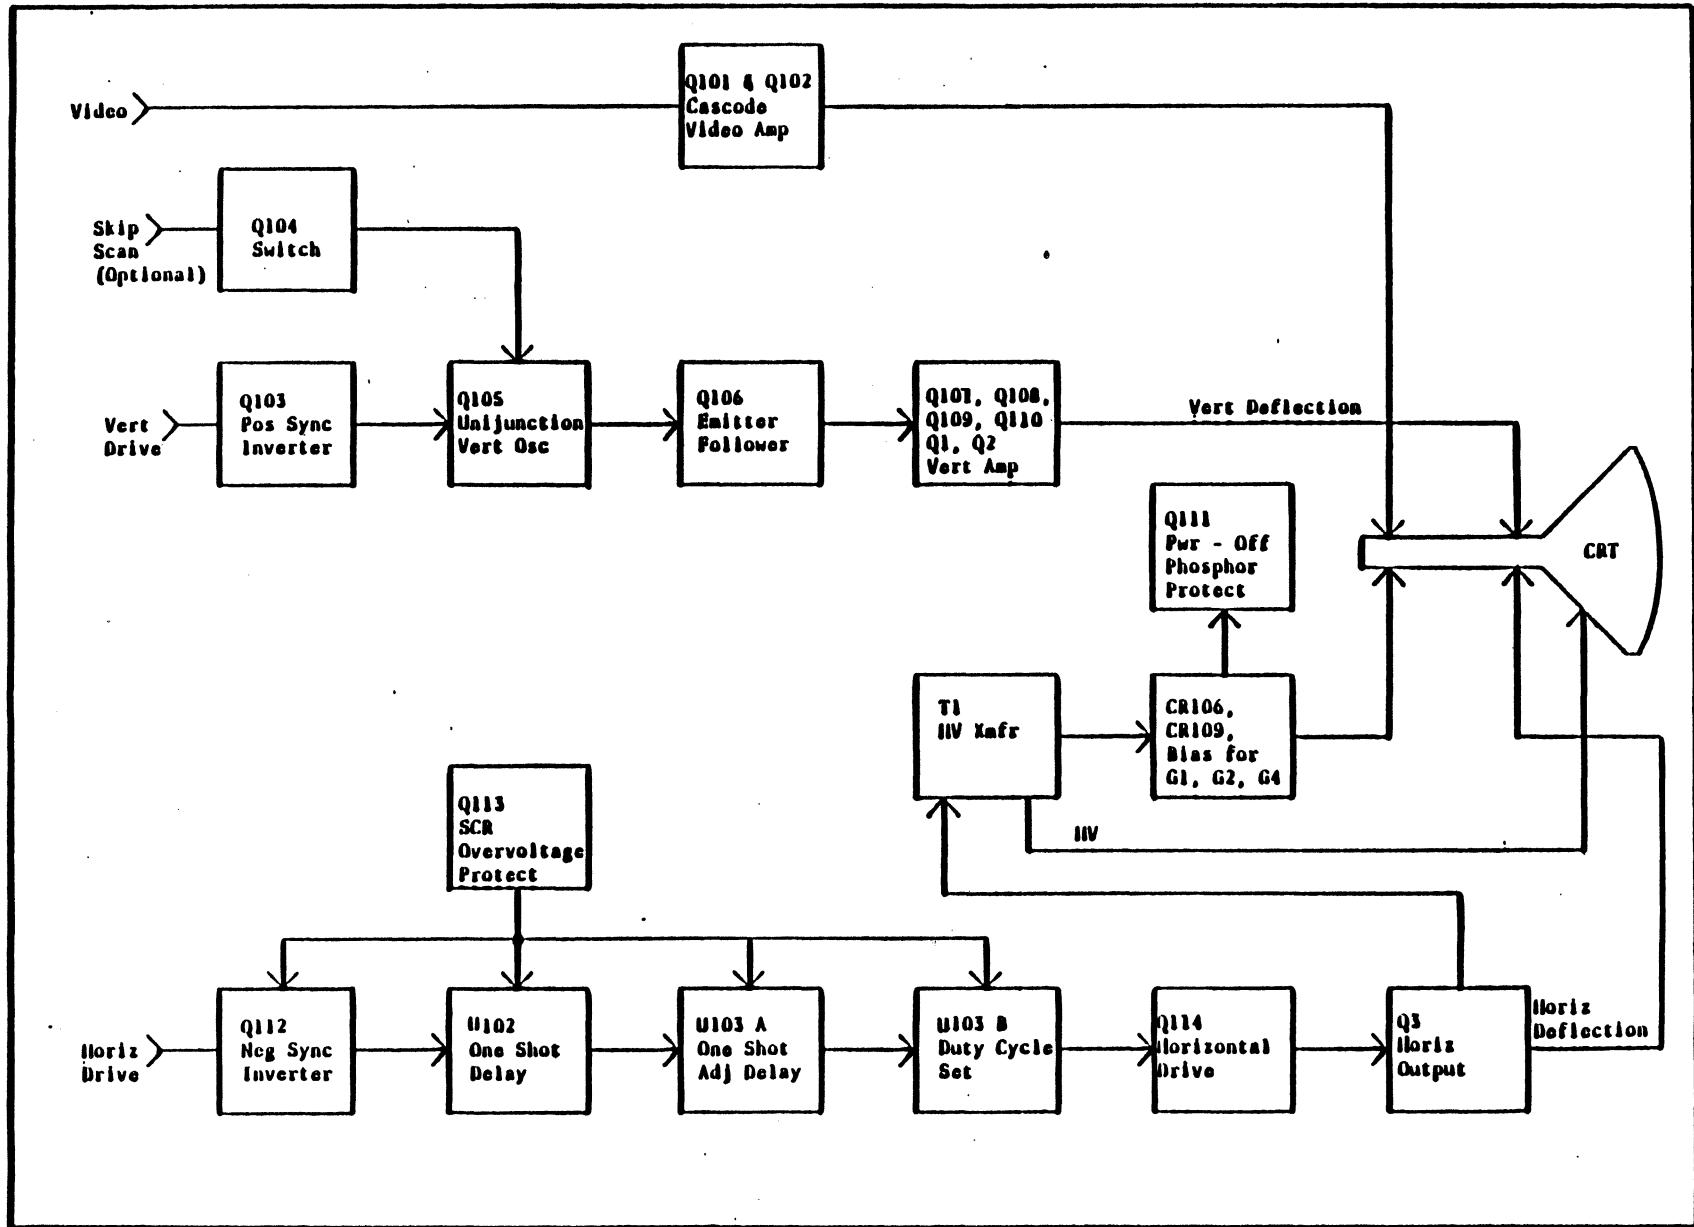


Figure 4.2 TTL120/150 Block Diagram

IM1024





C110 through L102. The decay time is governed by the resonant frequency of the tuned circuit consisting of L102, C109 and C110.

The oscillator is synchronized by the application of a negative pulse at the gate of Q105. Negative sync at J101-9 is standard but positive sync can be accommodated with inverter Q103 by removing the negative sync jumper wire between R109 and C107 and adding the positive jumper wire between the collector of Q103 and C107. The negative sync pulse lowers the gate voltage and forces the oscillator to run at the incoming frequency as long as the vertical sync control R113 is adjusted to produce a free running frequency slightly lower than the incoming frequency.

Height control R116 varies the amplitude of the sawtooth voltage and subsequent raster height by controlling the effective B+ voltage applied to R115. The B+ voltage is established through the voltage divider action between R111, R112, R113, R116 and R119.

If a true sawtooth current waveform (linear ramp) is supplied to the yoke, the displayed video would be stretched at the top and bottom of the CRT because of the large difference between the faceplate radius curvature and the yoke center of deflection. As such, the sawtooth waveform must be modified to produce the classic "S" shaped yoke current waveform as shown in Figure 4.3.


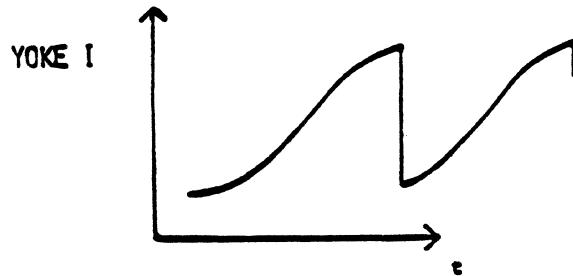


Figure 4.3 Yoke Current Waveform

The required "S" shaping is produced by linearity electronics Q106, R117, R118 and C110 in combination with the low frequency response limitation of the vertical amplifier. The linearity electronics modifies the sawtooth waveform at the emitter of Q106 by integrating this waveform through R117, R118 and C110 and inserting the resultant parabola in series with the ramp. Q106 is a darlington emitter follower which provides excellent isolation between the vertical oscillator and output amplifier.

The output amplifier consists of Q106 through Q110 and chassis mounted transistors Q1 and Q2. As indicated by Figure 4.4, the amplifier is of the closed loop variety which makes the input to output transfer function independent of the transistor parameters. The Class AB push-pull output stage eliminates the requirement for an output transformer or choke which is required for a Class A output amplifier. If one neglects the finite open loop gain, the input to

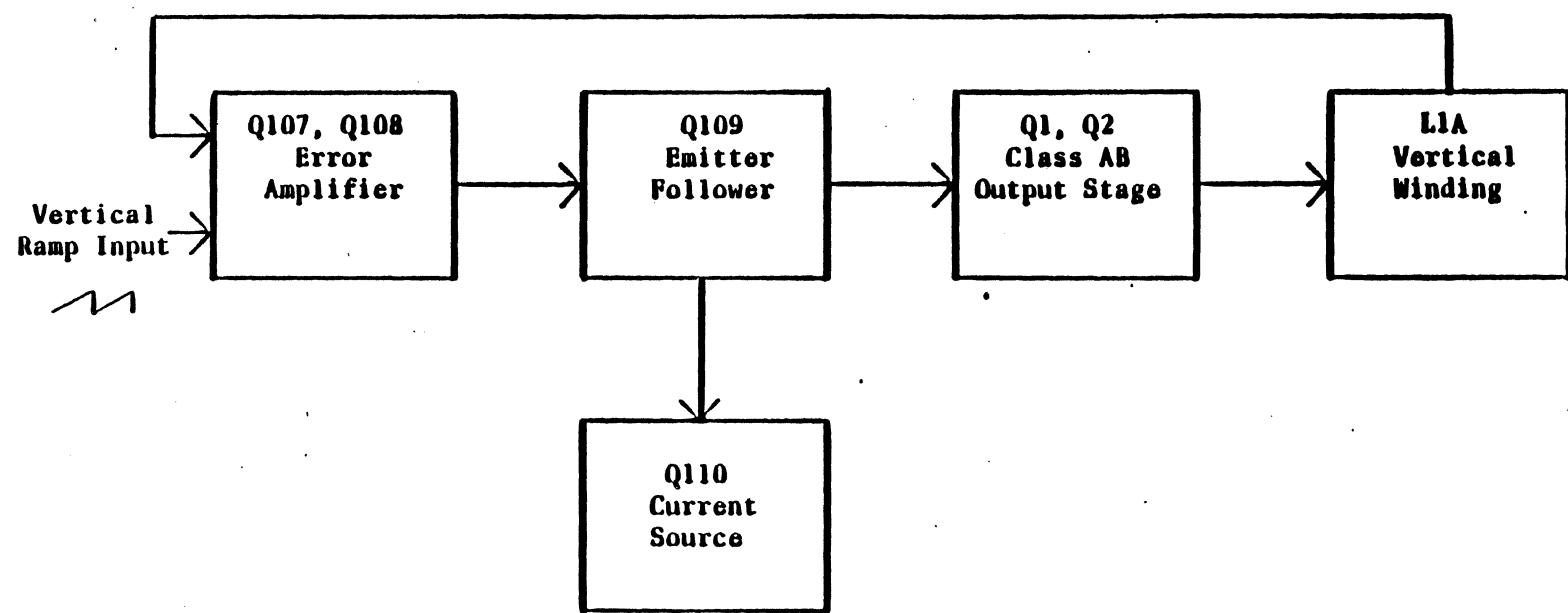

Bell

IM1024

Figure 4.4 Block Diagram of Vertical Amplifier



output transfer function (voltage at the base of Q108 to the yoke current) is defined by:

$$\frac{I_{out}}{E_{IN}} = \frac{R_{125}}{R_{127}} \times \frac{1}{R_{135}}$$

This insures that the output yoke current becomes an exact replica of the input ramp voltage.

A voltage replica of the yoke current is produced across R135. This voltage is fed back through C113 to the base of Q107. Q107 together with Q108 comprises a high gain error amplifier that amplifies the voltage difference between the two bases. The amplified voltage difference produces the necessary base current for emitter follower Q109. The base current requirement is a function of the current gain (hfe) of Q109, Q1, Q2 and the output yoke current. Q1 and Q2 comprise a class AB emitter follower output stage. Q1 supplies current during the first half of vertical scan (CRT screen top to center) with Q2 supplying current during the last half of scan (CRT screen center to bottom). During vertical retrace, the yoke current is quickly reversed when the peak yoke current is transferred from Q2 to Q1. The retrace time is governed by the flyback voltage which is defined by the natural clamping action of the amplifier at +52V (TP112). Q110 is a current source of sufficient magnitude to handle the peak base current requirement of Q2. The class A bias to eliminate crossover distortion is provided by CR103 and R130. R121, R122, R123, R124 and R133 are DC biasing resistors to insure the amplifier operates within the linear region.

Optional skip scan electronics Q104, U101, C105, C108 and VR102 provides the ability to step the vertical amplifier. Q104 operates as a normally off switch. With the application of a positive pulse at J101-5, Q104 turns on and the collector voltage jumps to 22V as defined by zener VR102. The collector voltage and the 7.5K, 100K resistors in U101 combine to charge C109 and C110 for the duration of the input pulse (as defined in section 1.2.5). The resultant voltage step across C109 and C110 (TP104) is processed by the vertical amplifier to produce a corresponding jump in yoke current. For CRT deflection jumps of <0.16", the settling time of the vertical amplifier is <50us. Capacitor C108 couples the ramp waveform back to Q104 to provide linearity correction to the skip scan waveform.

4.3 HORIZONTAL ELECTRONICS

4.3.1 Horizontal Deflection

Integrated circuits U102 and U103 are used as one shot delays to perform 2 functions: 1) U102 and one half U103 provide an adjustable one horizontal line sync delay which permits the video to be centered horizontally within the raster and 2) the other half of U103 generates the proper duty cycle for the horizontal output transistor.

The standard main PWA is wired for a positive sync signal applied at J101-6. The input circuit can be modified to accept a negative sync signal at J101-6 removing the positive sync jumper wire between the collector of Q112 and C126 and inserting a jumper wire connecting R145 to C126.



IM1024

The positive sync pulse is inverted by Q112 and applied to pin U102-2 to produce a positive going pulse at pin U102-3. The time out of this positive pulse is equal to $1.1(R151 C130)$. After the pulse times out, the negative going edge applied to pin U103-6 produces another positive pulse at pin U103-5. In this case, the pulse duration is variable according to $1.1(R153+R154)C133$. This completes the one line sync delay. The negative going edge of this pulse is coupled to pin U103-8 by C134 to produce another positive pulse at pin U103-9 with a time duration equal to $1.1(R158 C136)$. This provides a duty cycle consistent with proper operation of the horizontal output transistor.

The complete timing relationship is shown in Figure 4.5.

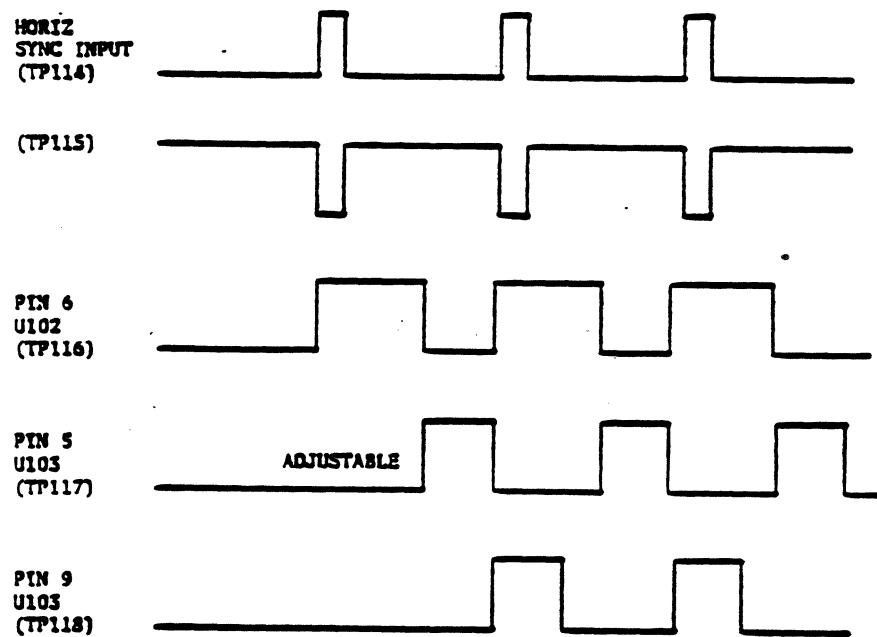


Figure 4.5 Horizontal Timing Diagram of U102 & U103

Horizontal driver Q114 and horizontal output transistor Q3 both operate as switches. The positive pulse at pin U103-9 drives Q114 into saturation. Transformer T101 is phased so that Q3 is turned off during this time. When the primary current of T101 is interrupted by the turn off of Q114, the secondary voltage reverses to turn Q3 on.

The horizontal output stage performs 2 functions: 1) to supply the yoke with the necessary scanning current and 2) develop the CRT anode, G1, G2 and focus voltages. Item 2 will be discussed in section 4.3.2.

Just before horizontal flyback (or when the electron beam moves rapidly from the extreme right side of the CRT screen to the left), maximum yoke current is flowing out of terminal E115 through switch Q3 to ground. Flyback is initiated by the turn off of Q3. With Q3 off, the yoke energy as well as the energy in the flyback primary (T1) is transferred through resonance action to retrace capacitor C142, the yoke distributed capacitance and T1 capacitance. When this



energy transfer is complete, the capacitor voltage (TP120) is maximum (400-600V depending upon line rate), the inductive current is zero and the electron beam has returned to screen center. Now the capacitive energy transfers back to inductive energy to produce a yoke current of the same magnitude but of the opposite direction to that just prior to flyback. This completes beam retrace to the left side of the screen.

The capacitor voltage now swings negative but is clamped near ground by damper diode CR108 which results in the inductive current transferring from the capacitor to CR108. Linear scan now begins as a result of the DC voltage on C143 being impressed across the yoke. C143 is charged to the power supply voltage of +55 VDC and prevents any DC currents from flowing through the yoke.

After the electron beam has moved a distance of about 35% across the screen, Q3 is turned on and the yoke current is transferred from CR108 to Q3. Q3 now carries the yoke current for the remainder of the linear scan time.

As discussed in the vertical section, the desired current waveform for a linear scan on the CRT is an "S" shaped ramp. C143 also provides this "S" shaping by impressing a parabolic voltage across the yoke in addition to a DC voltage.

Additional linearity correction is provided by saturable inductor L104. Without L104, the video would be stretched on the left side of the screen because of the R losses present in the yoke, Q3 etc.

L103 is an adjustable coil placed in series with the horizontal yoke winding to provide width control. The coil inductance controls the voltage magnitude available to the yoke and controls the resultant current magnitude and raster width.

4.3.2 CRT Operating Voltages

The DC operating voltages for the CRT with the exception of the filament voltage are all obtained by rectification and filtering of the horizontal flyback pulse. CR106 and C121 rectify and filter the flyback pulse across Q3 to produce a G2 voltage of 400-600 volts depending upon the horizontal operating frequency. This voltage also feeds the focus grid of the CRT through R141 and focus control R142.

The flyback pulse is transformer coupled by T2, rectified and filtered by CR109 and C119 to produce -90V which is used as the source voltage for G1 to control raster brightness. Q111 aids in eliminating CRT spot burn during power turn off by rapidly discharging the CRT aquadag capacitance.

The CRT anode voltage is developed by T2, rectification diode CR1 and the aquadag filter capacitance. The voltage is typically 17kV for the 15" CRT size and 14kV for the 12" CRT size.

The filament voltage of 6.3V RMS is obtained from a 6 turn winding added to T2.

4.4 X-RAY PROTECTION ELECTRONICS

To comply with the DHEN requirements on X-ray radiation, Q113 and VR103 are



employed to shut down the high voltage in the event the DC supply voltage exceeds 60V DC. If by misadjustment or failure in the regulator electronics, the input voltage should exceed about 60V DC, zener VR108 will start to conduct and turn Q113 on. With Q113 conducting, the supply voltage for U102 and U103 is reduced to zero; this removes the horizontal drive signal and subsequently the high voltage.

4.5 DYNAMIC FOCUS ELECTRONICS

For optimum electron beam focusing over the complete CRT face, the focus voltage should increase as the deflection angle increases. As such, the focus voltage would be at a minimum in the CRT center and at a maximum in the corners. The optional dynamic focus electronics approximates this requirement by varying the focus voltage as a function of horizontal position from tube center.

The horizontal waveform across Q3 is processed by the C403, L401, C402 tank network to produce the parabolic waveform (See Figure 5.1). L401 provides for amplitude adjustment over the range of 200V to 400V p-p. C401 couples the waveform to the focus electrode.

4.6 LOW VOLTAGE REGULATED SUPPLY

The AC line voltage is applied to transformer T1 (Refer to Figure 4.6). The secondary voltage developed is rectified and filtered by CR302 and C1 to produce a DC voltage for the regulator electronics of 76V DC. The 76V DC input is dropped to +55V DC through the series pass transistor Q4. DC regulation of +55 volts is maintained by tapping down the voltage through the divider network of R311, R312 and R313. The resultant 6.3V DC at the wiper arm of R312 is applied to the base of Q302. Also a DC reference voltage from VR301 is applied to the emitter of Q302. This transistor then develops a DC error current that flows through R310 to the base of emitter follower Q305. Current source Q301 supplies current to the base of Q305 and collector of Q302. This bias current from Q301 will tend to shift the base of Q305 in a positive direction whereas the current from Q302 will tend to shift the base in the negative direction. This results in an error current from the collector of Q302 that controls emitter follower Q305 and also the series pass transistor Q4. This enables the DC output voltage to be maintained at +55V DC, independent of the input voltage and output load current.

Foldback current limiting of the +55V DC supply is provided by means of transistor Q303 and resistors R306, R307, R308 bias network. When the load current exceeds about 2 amps, the voltage drop across R309 is of sufficient magnitude to turn on Q303. As Q303 turns on, the base current supplied to Q305 decreases to produce a corresponding decrease in output voltage. In the event of a direct short on the +55V DC bus, the short circuit current will be approximately 100ma. Removing the external short circuit will allow the regulator to resume normal operation.

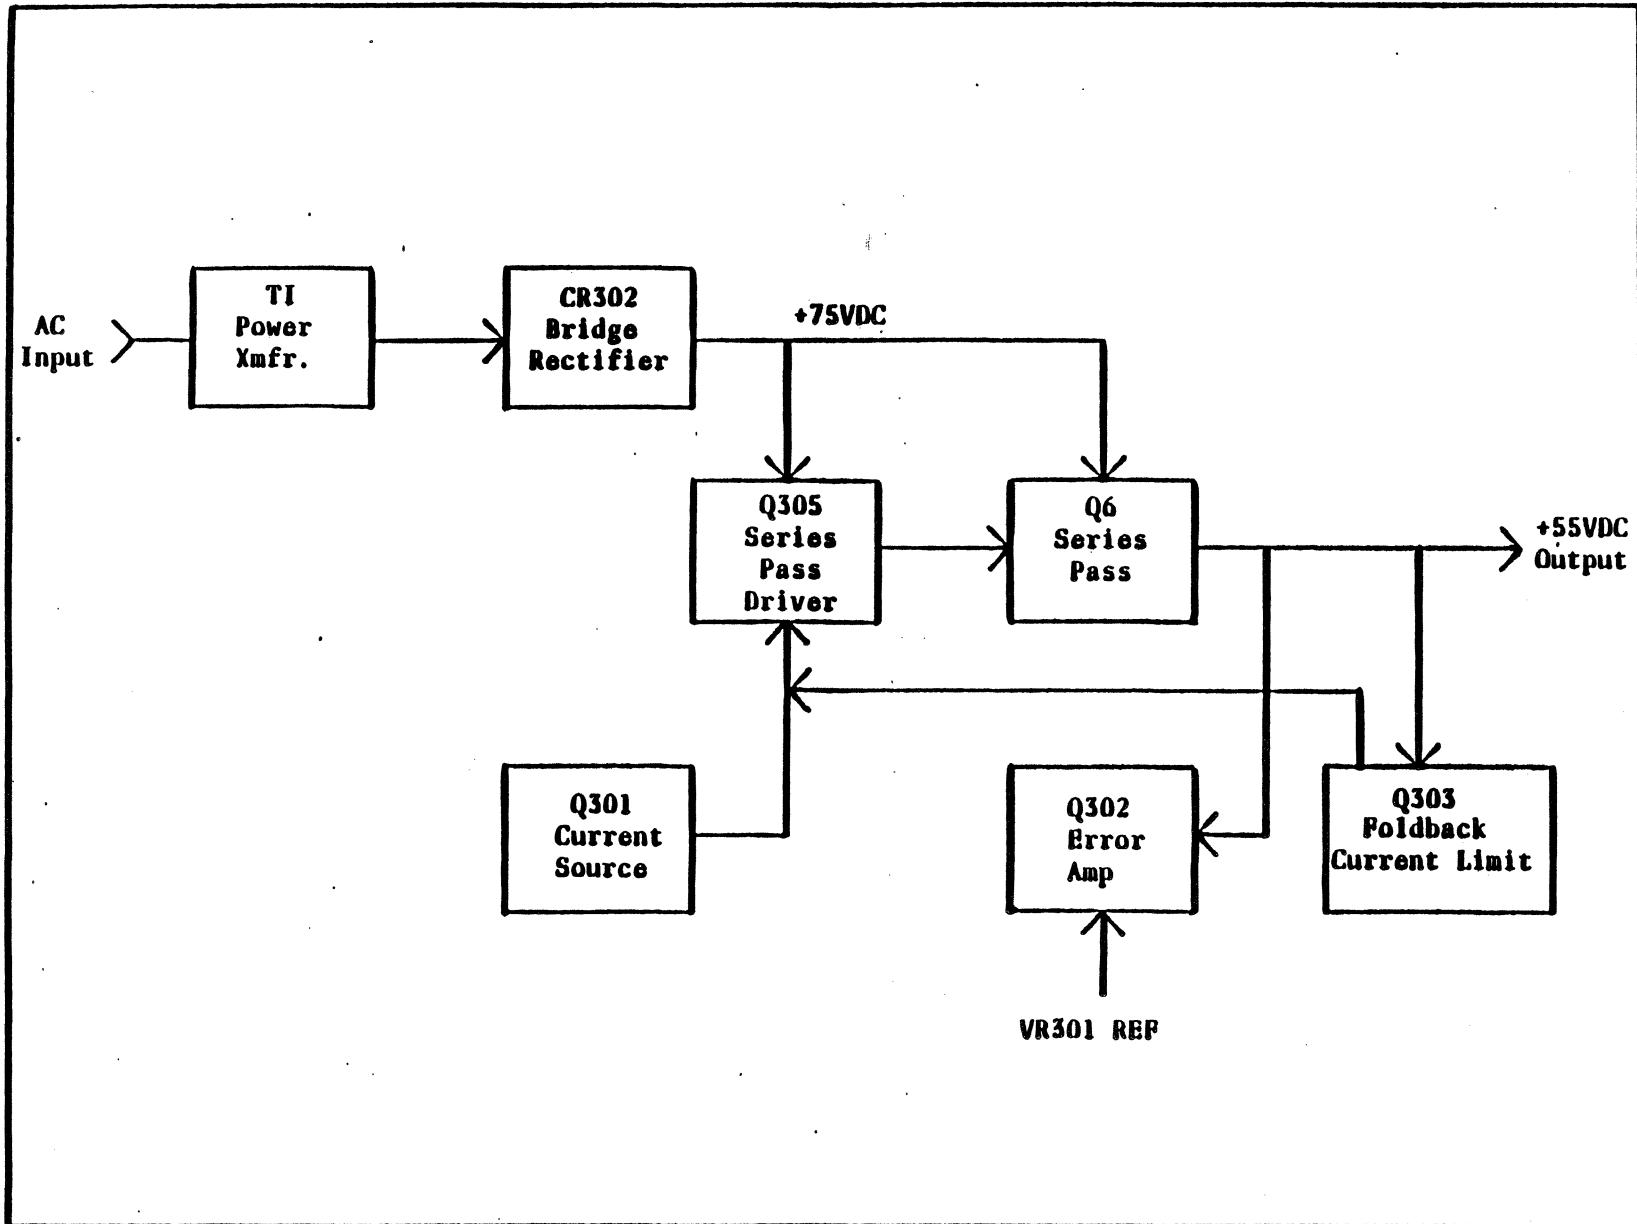


Figure 4.6 Power Supply Block Diagram



Section 5

ADJUSTMENT AND MAINTENANCE

5.1 GENERAL

This section describes the adjustment procedures to be used for set up of the various circuits during routine maintenance or after component replacement.

5.2 INITIAL TURN-ON

Connect the signal input connector to J101 of the main PWA and connect the power input connector to J1 of the power transformer T1. Turn on the Display Monitor and the test equipment; allow 15 minutes for warm-up.

All the horizontal and vertical circuits adjustments can be made using an "E" or "#" character. Adjust the raster brightness to just beyond visual extinction with the brightness control.

5.3 POWER SUPPLY ADJUSTMENT

Connect a DC volt meter to the anode of CR104, located near J102-3 on the main PWA. Adjust the B+ adjust control on the LV regulator PWA for a meter reading of $+55V \pm 0.5V$.

5.4 VERTICAL ELECTRONICS

5.4.1 Vertical Sync Adjust

The Vertical Sync Adjust control is located on the main PWA. Adjust this control clockwise (as viewed from the rear of the Display Monitor) until the picture just rolls down. Now back off the control (CCW) until the picture snaps back into sync.

5.4.2 Vertical Linearity and Height Adjust

Both of these controls are located on the main PWA. The vertical linearity control R118 is adjusted for the best vertical linearity. The vertical height control R116 is adjusted for the proper vertical height.

5.4.3 Skip Scan Adjust

This adjustment procedure will apply only to the Display Monitor that has the skip scan option.

Apply the skip scan signal and adjust control U101 until the proper skip height is obtained. In general, the proper skip height is obtained by removing the skip scan signal and establishing a given video height as described in Section 5.4.2. The skip scan signal is then applied and the height is increased to the final height requirement with control U101. As the increase from initial height



to final height becomes larger there will be interaction between the skip scan control and the vertical sync and linearity controls such that R113 and R118 may have to be readjusted.

5.5 HORIZONTAL ELECTRONICS

5.5.1 Width Adjustment

Adjust the Width Control L103 for the desired picture width.

5.5.2 Horizontal Centring Adjustment

Adjust the Horizontal Centering control R153 to center the video horizontally within the raster.

5.6 RASTER CENTERING

The centering magnets located at the back of the yoke are used to center the raster on the CRT. The magnets should never be used to center the video horizontally as this may cause display focus problems as well as the possibility of neck shadow. The rings may have to be used to center the video vertically since the vertical position of the video within the raster is strictly dependent on customer timing and vertical flyback time. Picture tilt is corrected by rotating the yoke.

5.7 FOCUS

Adjust focus control R142 for the best overall focus on the CRT.

5.8 DYNAMIC FOCUS

Place oscilloscope probe between TP112 and ground. The waveform should look like Figure 5.1.

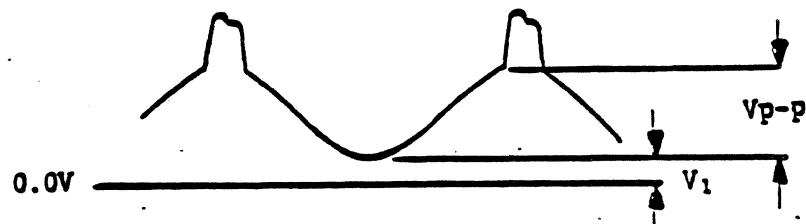


Figure 5.1 Dynamic Focus Waveform

The voltage level at the bottom portion of the waveform (V_1) is controlled with the static Focus control R142 while the peak-to-peak amplitude (V_{p-p}) is controlled with L401 on the dynamic focus PWA.

V_1 corresponds to CRT center focus and is adjusted for $25V \pm 75V$ to give best center focus while the peak-to-peak amplitude is adjusted for $300V \pm 100V$. This



IM1024

will give the best focus compromise at the edges of the display pattern. The adjustments do interact in that increasing the V_{p-p} will lower the V_i voltage and vice versa.

5.9 BRIGHTNESS AND CONTRAST

The brightness and contrast controls are adjusted per Section 3 of the manual.

5.10 TROUBLESHOOTING GUIDE

Symptoms/Possible Solutions

1. Screen is dark - Check to see if the +55V is present. A convenient point of measurement is at CR104 on the main PWA. If there is no +55V, disconnect J104 which isolates the horizontal transistor. If the +55V is still not present, disconnect J105 which isolates the remainder of the horizontal output stage. If the +55V now returns to normal, the problem is most likely the damper diode CR108.

If the +55V is still not present after disconnecting J104 and J105, the problem is either with the +55V power supply or the vertical amplifier. This can be determined by disconnecting J102 and measuring the +55V at the power supply itself. Actual isolation of a fault to a specific transistor stage is best accomplished by the use of an oscilloscope and reference to the typical waveforms in Figure 6.7 in Section 6.

2. Loss of Video - Check Q101, Q102 and VR101.
3. Loss of Brightness Control - Check CR109 and CR106.



IM1024

Section 6

SERVICE DATA

6.1 GENERAL

This section contains the replaceable electrical parts list, schematic, PWA component layout and waveforms for servicing of the TTL 120/150 Data Monitor.

If a part you have ordered has been replaced with a new part or an improved part, our customer service representative will contact you concerning any change in the part.

Change information concerning the TTL 120/150 units is located at the rear of the manual in the supplement section.

6.2 ORDERING PARTS

Most parts contained in the monitor are available commercially from electronic parts outlets. When it is necessary to order spare or replacement parts from Ball Electronic Display Division (Ball E.D.D.), include the part description, part number, model and serial number data of the Data Monitor as listed on the serial number plate and, if applicable, the schematic reference number listed in the parts list. Orders for these parts should be sent to:

Ball Electronic Display Division
P.O. Box 43376
St. Paul, Minnesota 55164

For rapid service: Telephone area (612) 786-8900

OR

TWX area (910) 563-3552

6.3 RETURNING PARTS

When the monitor requires service or repair in accordance with the enclosed warranty, return the unit or part to:

Ball Electronic Display Division
4501 Ball Road N.E.
Circle Pines, Minnesota 55014

ATTN: Customer Service

Telephone area (612) 786-8900
TWX area (910) 563-3552



Unnecessary delays may be avoided when parts are returned to Ball Electronic Display Division using the following procedures:

- (1) Package the unit or part in accordance with the method of shipment. Enclose a list of the material being returned and the reason for returning it.
- (2) Send the unit or part, transportation prepaid, to the address stipulated for returning parts.

All equipment and parts described in the warranty will be replaced, provided our examination discloses that the defects are within the limits of the warranty. If damages or defects are not within the limits of the warranty, the customer will be notified of the extent of repairs required and the cost. The unit will be repaired and returned upon agreement.

6.4 WAVEFORMS

The waveforms on the component layout were taken with 1.5V peak-to-peak character signal (Refer to Section 5.2) applied to the Data Monitor. These waveforms can be used as a check point to localize problems to a specific circuit area. The waveform photographs indicate the actual peak amplitude for each test point.

6.5 BOARD ASSEMBLY

The board assembly part number has a 6-002-XXXX prefix. The last four digits of the part number is found under the "use on 6-002" column in the parts list. The last four digits of the board assembly part number is stamped on the component side of the board.

6.6 COMPONENT REPLACEMENT PARTS AFFECTING PRODUCT SAFETY

Product safety must be considered when any components is replaced in this monitor. The critical components that affect X-radiation are denoted in the shaded areas on the schematics. Components in the shaded area are to be replaced only with Ball Electronic Display Division approved components.

The use of substitute components which do not have the same characteristics as the original components may create excessive X-radiation.

6.7 CHASSIS MOUNTED COMPONENT PARTS LIST

REF SYM	DESCRIPTION	PART NUMBER
C1	Cap, 1500-100, ER	1-012-2186
CR1	Diode, HV, D0463	1-021-0463
J1	Connector Shell, 9 Pin Female	1-034-0313
L1	Deflection Coil - Refer to part number on yoke; i.e. 1-023-XXXX	



IM1024

Transistor

Q1	2N4923	78-85-4923
Q2	2N4920	1-015-1169
Q3	B0402 (15,750)	78-85-0402
or	B1213 (18,240)	1-015-1213
Q4	DTS410	78-85-0410

Transformer

T1	Power	
T2	High Voltage Stamp on Coil Form; i.e. 6-003-XXXX - Refer to last four digits of part number.	

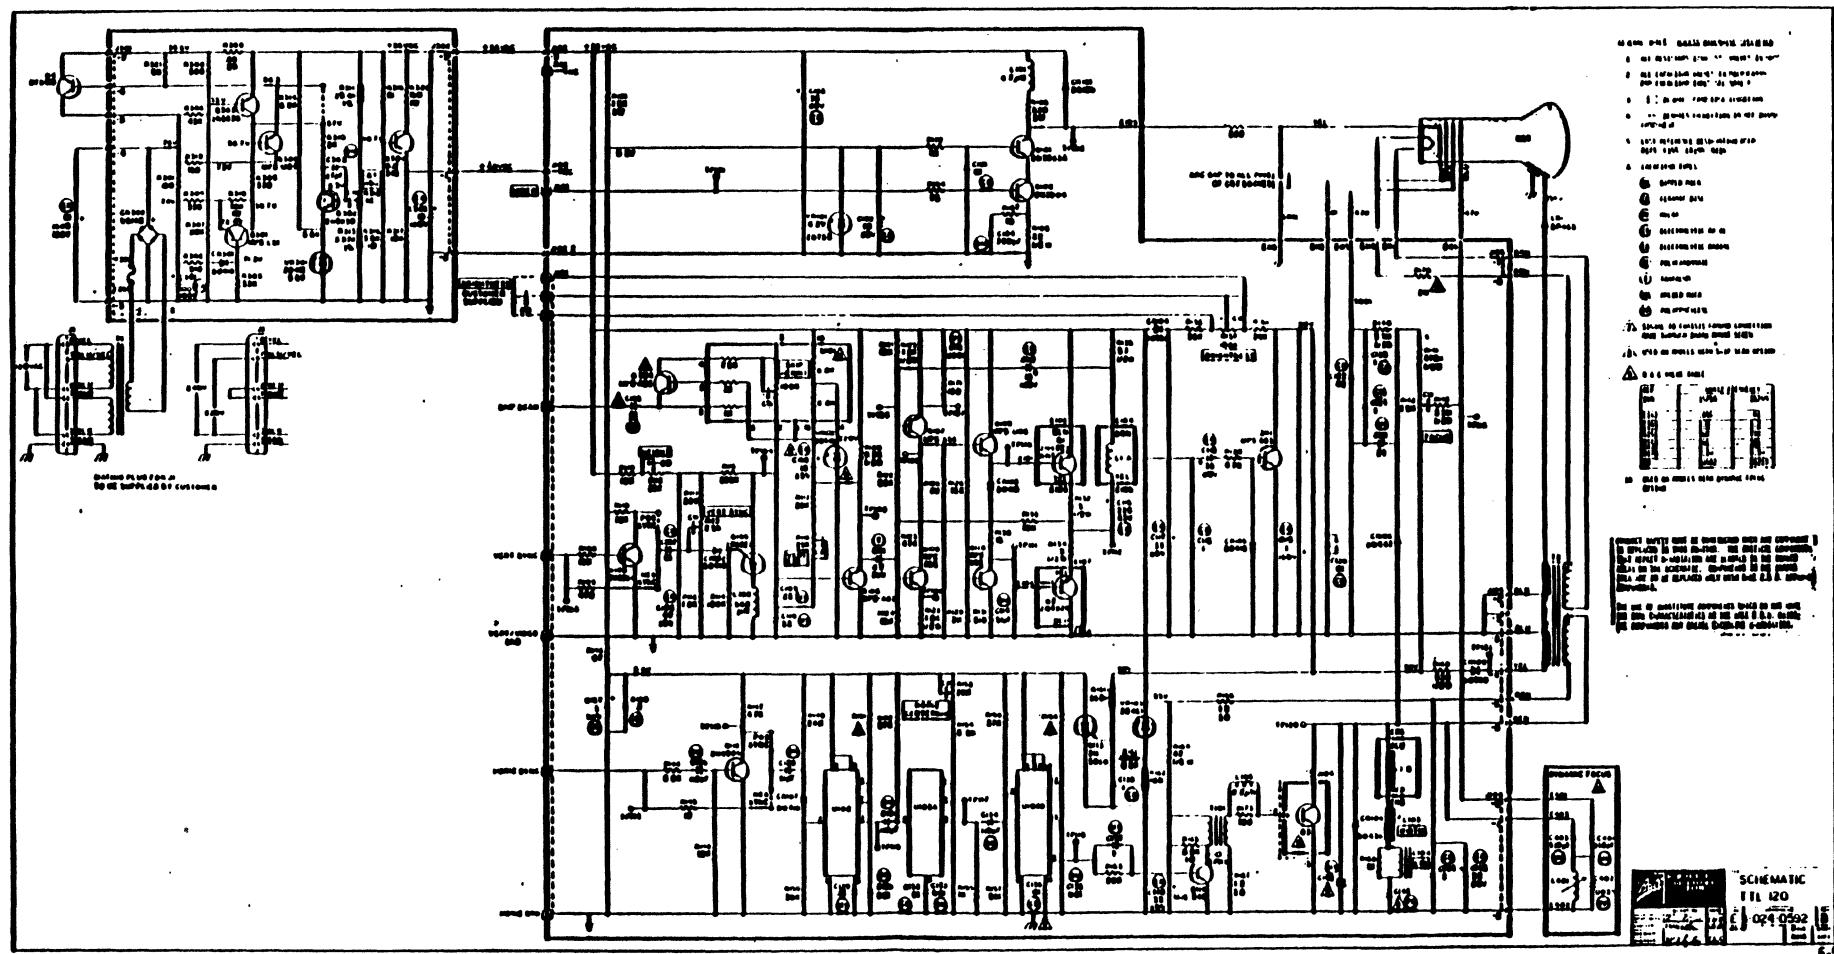


FIGURE 6.1 TIL 120 SCHEMATIC

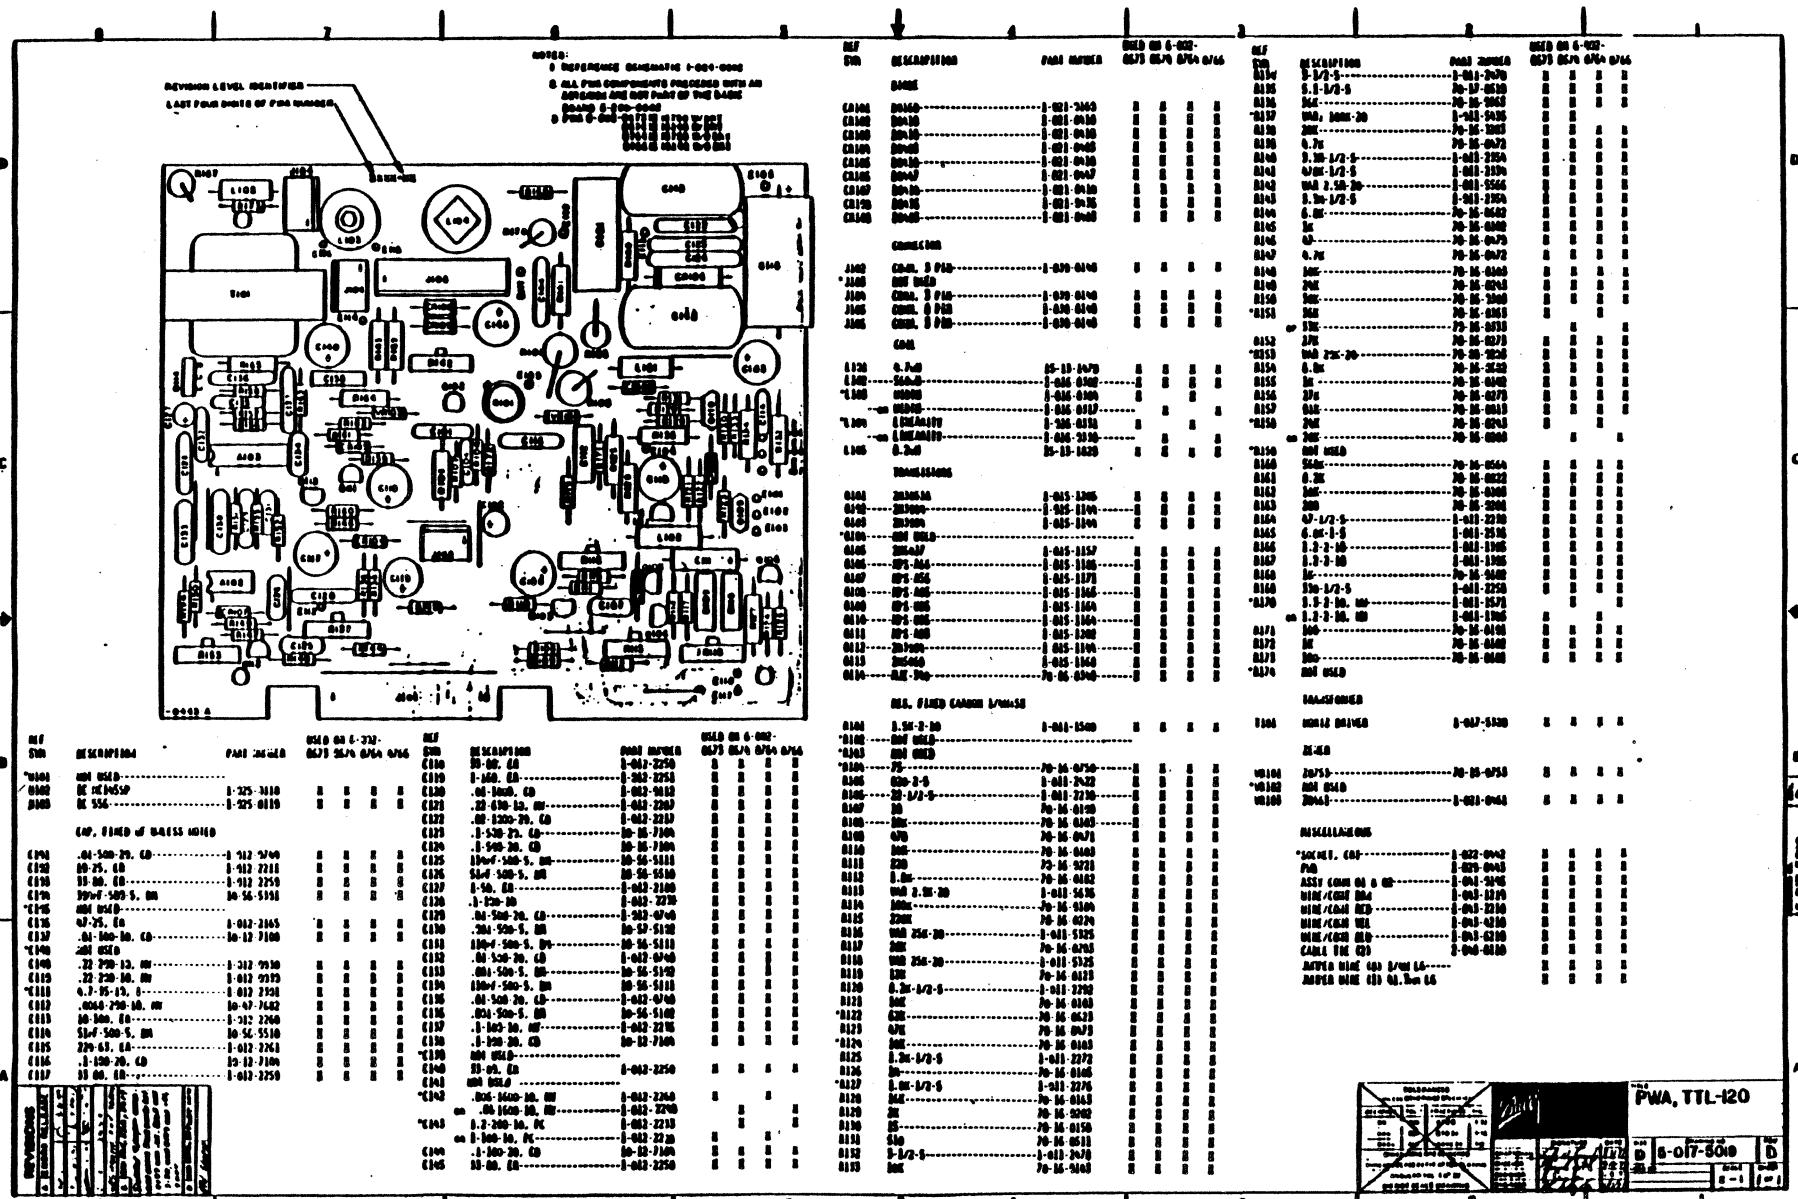


FIGURE 6.2 TTL 820 MAIN PWB COMPONENT LAYOUT AND PARTS LIST

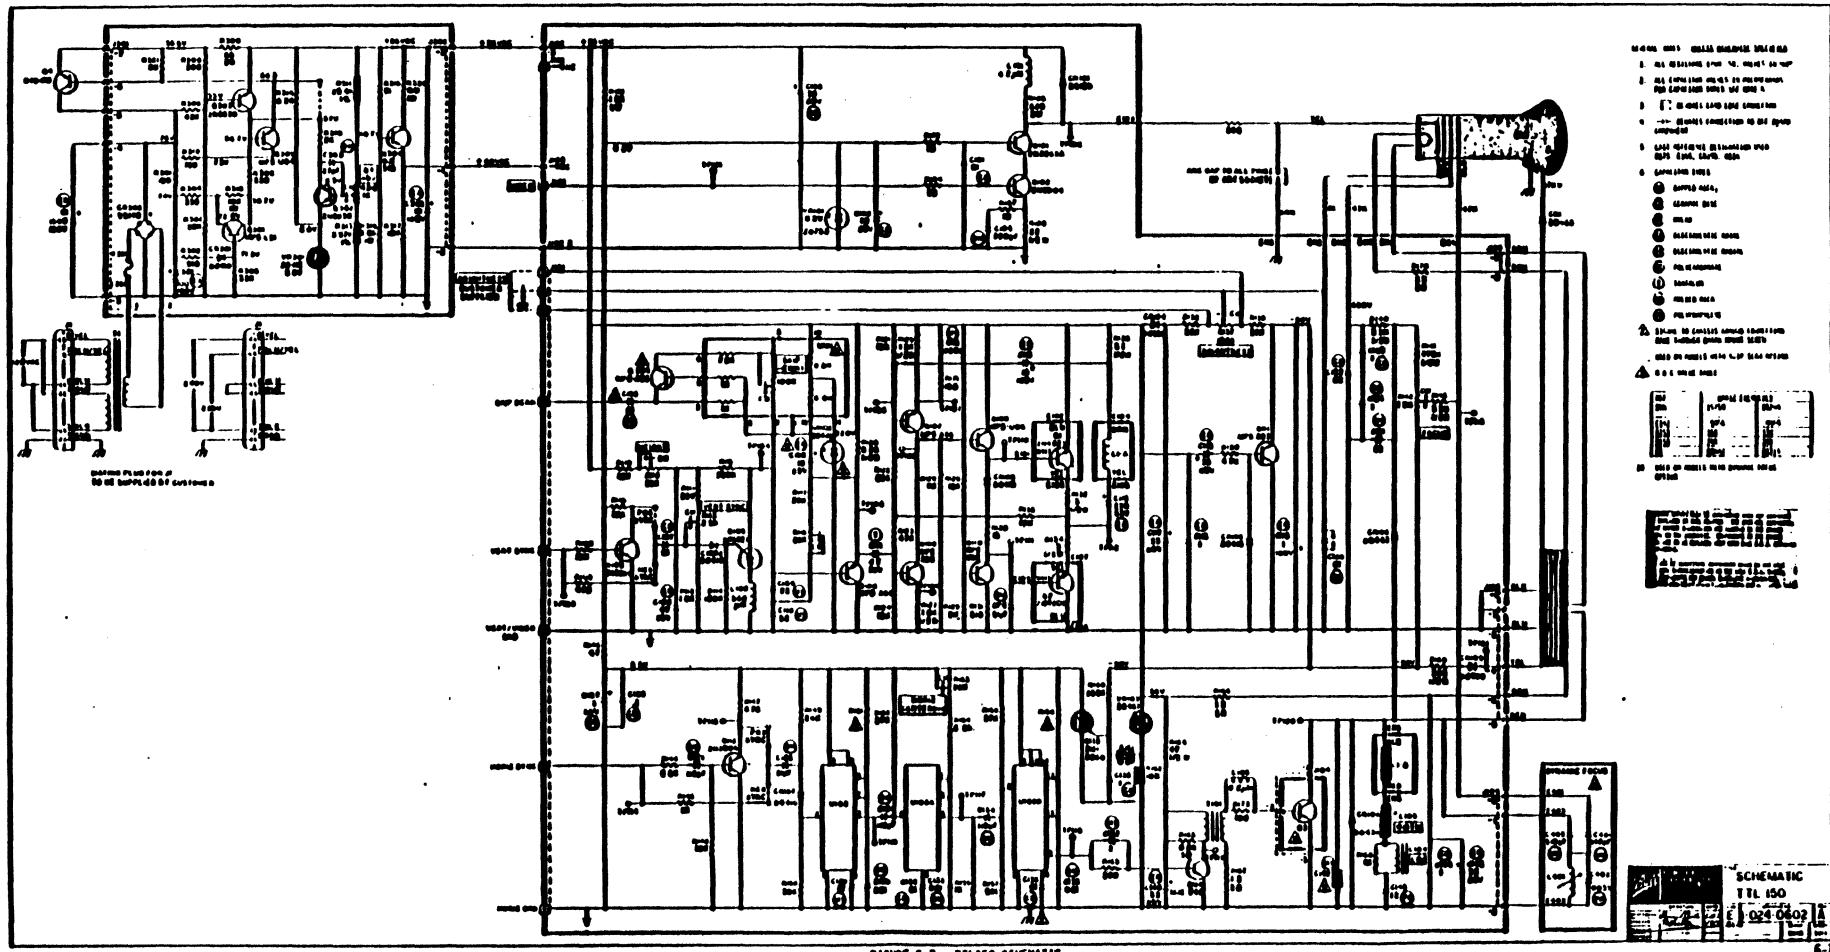


FIGURE 6.3 TIL150 SCHEMATIC

REF ID: S-REFERENCE DOCUMENT NO. 1-000-0000
A. ALL PMA DOCUMENTS 1-000-0000
B. PMA 0-000-0000

REVISON LEVEL IDENTIFICATION
LAST FOUR DIGITS OF PMA NUMBER

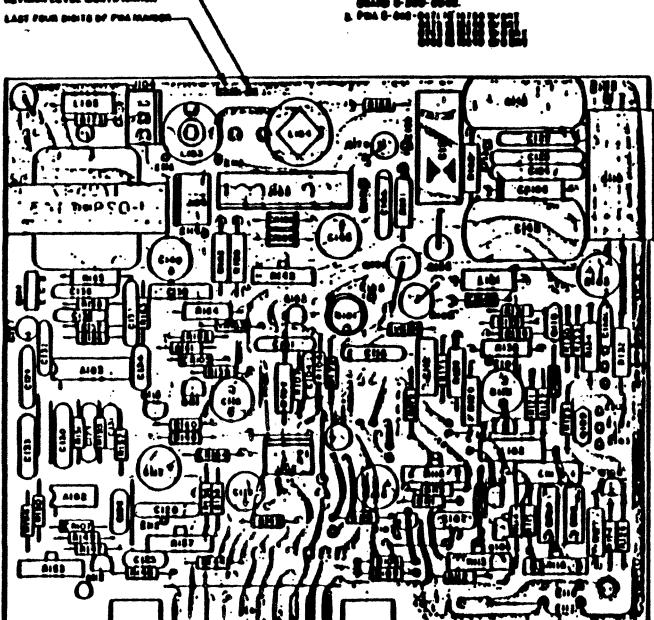


FIGURE 6.0 TTL 150 MAIN PMA COMPONENT LAYOUT AND PARTS LIST

REF ID	DESCRIPTION	PART NUMBER	USED ON S-000				REF ID	DESCRIPTION	PART NUMBER	USED ON S-000				REF ID	DESCRIPTION	PART NUMBER	USED ON S-000			
			001	002	003	004				001	002	003	004				001	002	003	004
001	IC 40100						010	10-10-10	1-002-2750					010	10-10-10	1-002-2750				
002	IC 40165P	1-017-0110					010	1-00-10	1-002-2751					010	1-00-10	1-002-2751				
003	IC 514	1-005-0110					010	00-100-10	1-002-2752					010	00-100-10	1-002-2752				
004	CAP. FIELD OF WEAK FIELD						010	00-100-10-10	1-002-2753					010	00-100-10-10	1-002-2753				
005	.01-500-10-10	-1-012-2100					010	00-100-10-10	1-002-2754					010	00-100-10-10	1-002-2754				
006	.01-25-10	1-012-2110					010	00-100-10-10	1-002-2755					010	00-100-10-10	1-002-2755				
007	.01-10-10	1-012-2250					010	00-100-10-10	1-002-2756					010	00-100-10-10	1-002-2756				
008	IC 510-10-10	10-56-5501					010	00-100-10-10	1-002-2757					010	00-100-10-10	1-002-2757				
009	IC 510						010	00-100-10-10	1-002-2758					010	00-100-10-10	1-002-2758				
010	IC 71-10	1-047-2165					010	00-100-10-10	1-002-2759					010	00-100-10-10	1-002-2759				
011	.01-100-10-10	10-10-2100					010	00-100-10-10	1-002-2760					010	00-100-10-10	1-002-2760				
012	IC 510						010	00-100-10-10	1-002-2761					010	00-100-10-10	1-002-2761				
013	.01-200-10-10	1-012-0910					010	00-100-10-10	1-002-2762					010	00-100-10-10	1-002-2762				
014	.01-200-10-10	1-012-0910					010	00-100-10-10	1-002-2763					010	00-100-10-10	1-002-2763				
015	.01-10-10-1	1-012-2300					010	00-100-10-10	1-002-2764					010	00-100-10-10	1-002-2764				
016	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2765					010	00-100-10-10	1-002-2765				
017	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2766					010	00-100-10-10	1-002-2766				
018	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2767					010	00-100-10-10	1-002-2767				
019	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2768					010	00-100-10-10	1-002-2768				
020	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2769					010	00-100-10-10	1-002-2769				
021	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2770					010	00-100-10-10	1-002-2770				
022	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2771					010	00-100-10-10	1-002-2771				
023	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2772					010	00-100-10-10	1-002-2772				
024	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2773					010	00-100-10-10	1-002-2773				
025	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2774					010	00-100-10-10	1-002-2774				
026	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2775					010	00-100-10-10	1-002-2775				
027	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2776					010	00-100-10-10	1-002-2776				
028	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2777					010	00-100-10-10	1-002-2777				
029	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2778					010	00-100-10-10	1-002-2778				
030	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2779					010	00-100-10-10	1-002-2779				
031	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2780					010	00-100-10-10	1-002-2780				
032	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2781					010	00-100-10-10	1-002-2781				
033	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2782					010	00-100-10-10	1-002-2782				
034	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2783					010	00-100-10-10	1-002-2783				
035	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2784					010	00-100-10-10	1-002-2784				
036	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2785					010	00-100-10-10	1-002-2785				
037	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2786					010	00-100-10-10	1-002-2786				
038	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2787					010	00-100-10-10	1-002-2787				
039	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2788					010	00-100-10-10	1-002-2788				
040	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2789					010	00-100-10-10	1-002-2789				
041	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2790					010	00-100-10-10	1-002-2790				
042	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2791					010	00-100-10-10	1-002-2791				
043	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2792					010	00-100-10-10	1-002-2792				
044	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2793					010	00-100-10-10	1-002-2793				
045	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2794					010	00-100-10-10	1-002-2794				
046	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2795					010	00-100-10-10	1-002-2795				
047	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2796					010	00-100-10-10	1-002-2796				
048	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2797					010	00-100-10-10	1-002-2797				
049	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2798					010	00-100-10-10	1-002-2798				
050	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2799					010	00-100-10-10	1-002-2799				
051	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2800					010	00-100-10-10	1-002-2800				
052	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2801					010	00-100-10-10	1-002-2801				
053	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2802					010	00-100-10-10	1-002-2802				
054	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2803					010	00-100-10-10	1-002-2803				
055	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2804					010	00-100-10-10	1-002-2804				
056	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2805					010	00-100-10-10	1-002-2805				
057	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2806					010	00-100-10-10	1-002-2806				
058	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2807					010	00-100-10-10	1-002-2807				
059	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2808					010	00-100-10-10	1-002-2808				
060	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2809					010	00-100-10-10	1-002-2809				
061	.01-10-10-10	1-012-2300					010	00-100-10-10	1-002-2810					010	00-100-10-10	1-002-2810				

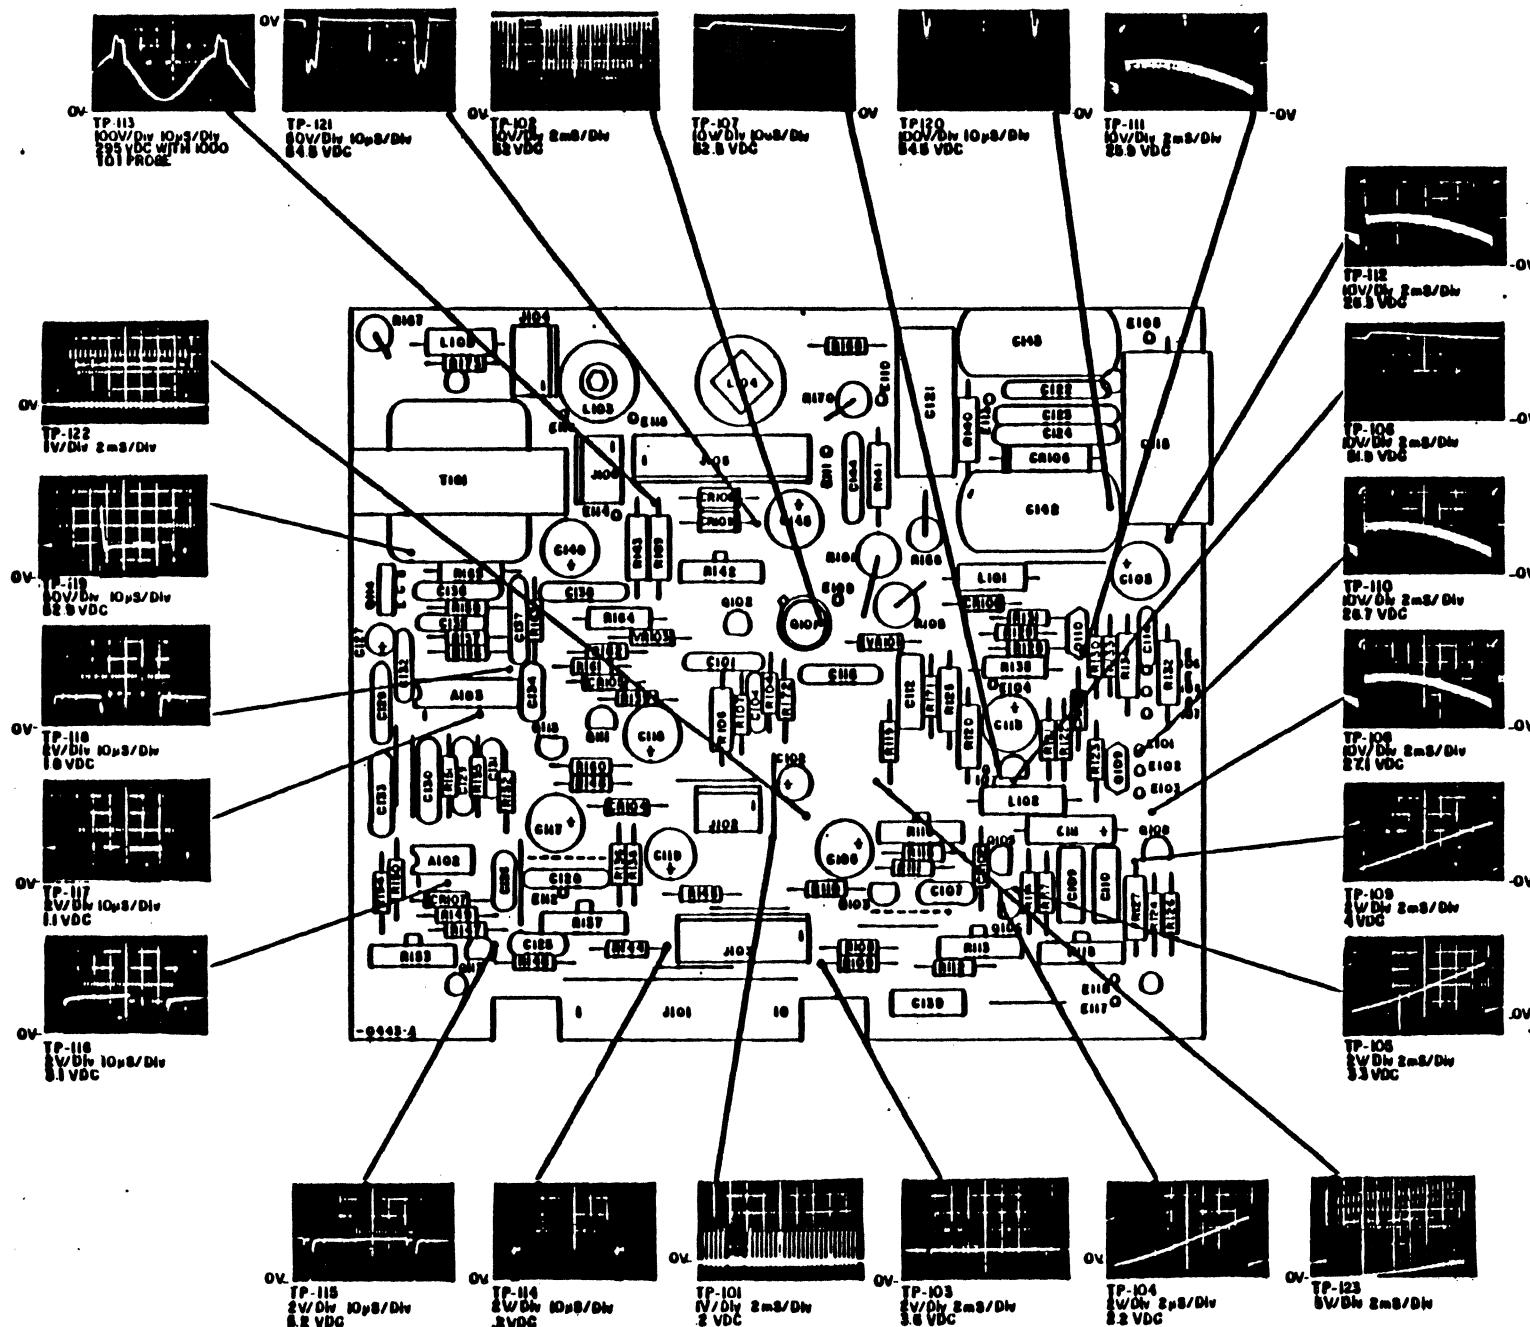


FIGURE 6.5 TTL120/150 WAVEFORMS


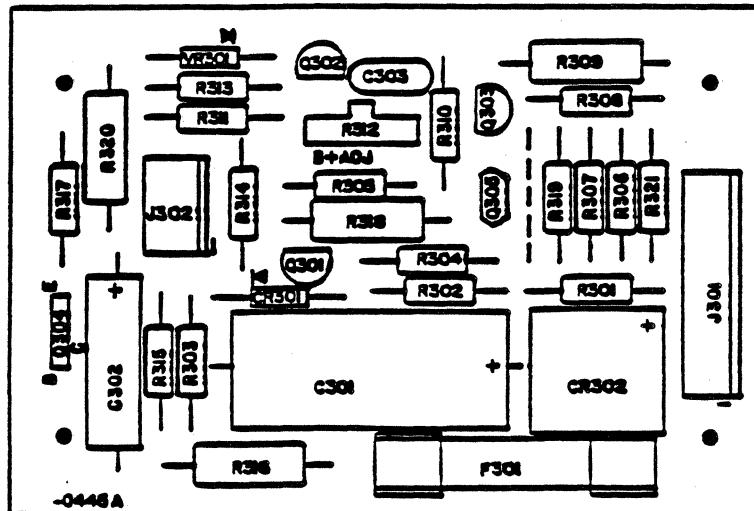



FIGURE 6.6 COMPONENT LAYOUT LOW VOLTAGE REGULATOR PWA

REF SYM	DESCRIPTION	PART NUMBER	REF SYM	DESCRIPTION	PART NUMBER
	CAP. FIXED UF UNLESS NOTED		R512	VAR 1K-1/4-20Z. CO	1-011-5182
C301	100-100. EA	1-012-2127	R513	3.57K-1Z	1-011-2517
C302	10-100. EA	1-012-2115	R514	8.2K	1-011-2292
C303	274F-500-5. DN	1-012-2151	R515	1K	1-011-2270
	CONNECTOR		R516	3.5K-1	1-011-2527
J301	CONN 7 PIN MALE	1-039-0145	R517	10K	1-011-2294
J302	CONN 3 PIN MALE	1-039-0148	R518	10K-1-10. CO	1-011-2508
	DIODES		R519	150	1-011-2250
CR301	D0410	1-021-0410	R520	150-1-10. CO	1-011-1155
CR302	VS1A8 2 AMP	1-021-0413	R521	68	1-011-2242
	FUSE			TRANSISTORS	
F301	FUSE 1.25A-250V	28-13-0125	Q301	MPS-L51	1-015-1175
	RES. FIXED CARBON 1/2W ±5% UNLESS NOTED		Q302	ZKS830	1-015-1172
R301	180	1-011-2252	Q303	ZKS830	1-015-1172
R302	910	1-011-2269	Q304	NJE340	78-86-0340
R303	53K	1-011-2306	Q305	MPS-404	1-015-1157
R304	350	1-011-2258		ZENER	
R305	350	1-011-2258	W1301	ZD412	1-021-0412
R306	45K	1-011-2309		MISCELLANEOUS	
R307	30K	1-011-2375		FUSE CLIP (2)	13-14-6008
R308	300	1-011-2257		PWB	1-029-0445
R309	.68-2-10. MN	1-011-2217			
R310	2K	1-011-2277			
R311	29.4K-1Z	1-011-2518			

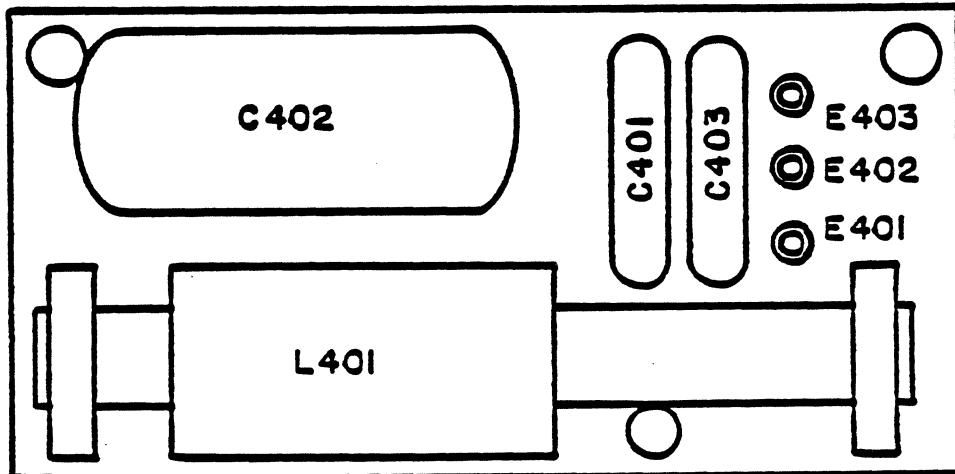

REF SYM	DESCRIPTION	PART NUMBER
CAP, FIXED uF UNLESS NOTED		
C401	910-1000-5, MM	1-012-0523
C402	3900-1600-10, PP	1-012-2262
C403	910-1000-5, MM	1-012-0523
COIL		
L401	FOCUS	1-016-0249
MISCELLANEOUS		
	PWB	1-029-0446
	CONN, SHELL, 3 PIN	1-034-0356
E401	WIRE/CONT ORN	1-043-3271
E402	WIRE/CONT BLK	1-043-0270
E403	WIRE/CONT RED	1-043-2271

Figure 6.7 Component Layout for Dynamic Focus PWA

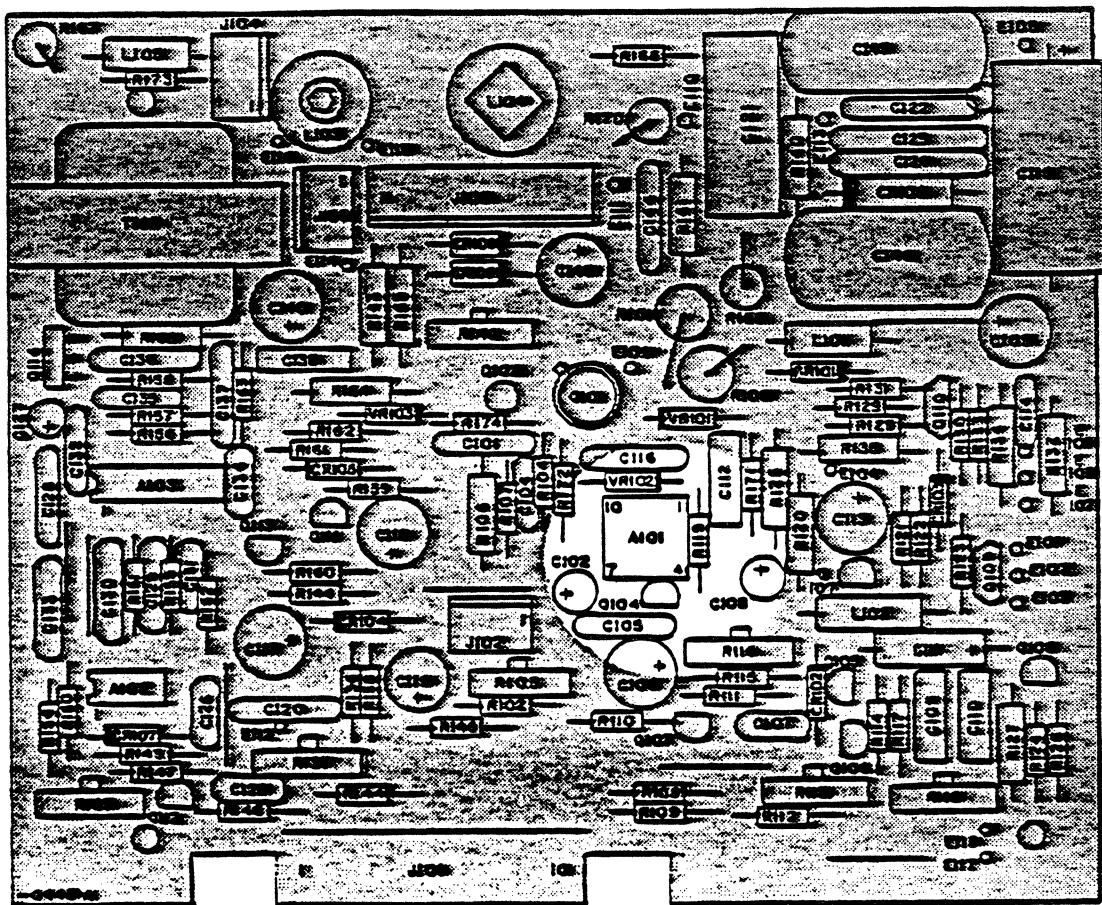

PART NUMBERS FOR PMA'S WITH THE SKIP SCAN OPTION ARE:

6-002-0738	TTL 150. 15.750 W/BRT
6-002-0768	TTL 150. 15.280 W/BRT
6-002-0769	TTL 150. 15.750 W/O BRT
6-002-0770	TTL 150. 15.280 W/O BRT
6-002-0771	TTL 120. 15.750 W/BRT
6-002-0772	TTL 120. 15.280 W/BRT
6-002-0773	TTL 120. 15.750 W/O BRT
6-002-0774	TTL 120. 15.280 W/O BRT

THE BALANCE OF THE COMPONENT PARTS AND PART NUMBERS CAN BE FOUND ON THE APPROPRIATE COMPONENT LAYOUTS WITHOUT THE SKIP SCAN OPTION; FOR EXAMPLE, BALANCE OF THE PARTS USED ON 6-002-0738 TTL 150. 15.750 W/BRT CAN BE LOCATED ON FIGURE 6.4.

SKIP SCAN COMPONENT PARTS LIST

REF	SYN	DESCRIPTION	PART NUMBER
U101	RES TRIM 100K		1-11-3078
C105	CAP .01μF-500-20. C		1-012-3740
C108	CAP 10μF-25. ER		1-012-2211
Q108	TRANSISTOR 2N5-456		1-015-1171
VR102	ZENER. 20V46		1-021-3446

Figure 6.8 Skip Scan Component Layout and Parts List

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

APPENDIX C

FACTORY SERVICE AND MAINTENANCE INFORMATION

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

APPENDIX C

FACTORY SERVICE AND MAINTENANCE INFORMATION

DEPOT REPAIR

Equipment returned to LSI must be shipped prepaid and must have a Return Goods Authorization (RGA) number on the outside top of the carton or the shipment may be lost, misrouted, or returned to you.

STEP 1

Prepare the following information:

Model type of equipment to be returned
Serial Number
Report Symptom (if failure)
Type of modification or option to be installed (if applicable)

STEP 2

Please call (714) 774-1010 ext. 371 or write to:

Lear Siegler, Inc.
Data Products Division
714 N. Brookhurst St.
Anaheim, CA 92803
Attn: Customer Service

or teletype:

TELEX 655444
TWX 910-591-1157

Please state that you would like a Return Goods Authorization number. At this time, we will record the information you prepared, as well as a purchase order number, if applicable.

STEP 3

You will then be provided with an RGA number and the address of the depot where we request that you return the equipment.

Notes

All modifications and repairs are FOB Anaheim, California, Chicago, Illinois, or Philadelphia, Pennsylvania, whichever depot is used. All repairs are warranted for a period of 30 days. The freight responsibility for repairs made on out-of-warranty equipment is that of the customers. Return freight on repairs in warranty is paid by LSI/DPD.

On-site service and maintenance is provided by factory trained service representatives at each of the service cities listed on the following page. Please call your local Lear Siegler Service Representative for more information.

**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

SERVICE CITIES

On-site maintenance for the equipment is available within a 50 mile radius of the below listed cities.

ALABAMA Birmingham	INDIANA Indianapolis	NEW JERSEY Clifton Princeton	SOUTH CAROLINA Columbia
ARIZONA Phoenix	IOWA Des Moines	NEW MEXICO Albuquerque	TENNESSEE Knoxville Memphis
ARKANSAS El Dorado	KENTUCKY Louisville	NEW YORK Albany Buffalo Great Neck, LI New York City Rochester Syracuse	TEXAS Dallas Houston Lubbock San Antonio
CALIFORNIA Los Angeles Palo Alto San Diego San Francisco Santa Ana Stockton Ventura	LOUISIANA New Orleans	NORTH CAROLINA Charlotte Greensboro	UTAH Salt Lake City
MARYLAND Silver Springs	MASSACHUSETTS Boston Chicopee	OHIO Cincinnati Cleveland Columbus	VIRGINIA Richmond
COLORADO Denver	MICHIGAN Detroit Grand Rapids	OKLAHOMA Oklahoma City	WASHINGTON Seattle
CONNECTICUT Norwalk	MINNESOTA Minneapolis	OREGON Portland	WISCONSIN Appleton Milwaukee
FLORIDA Miami Orlando Tampa	MISSOURI Kansas City St. Louis	PENNSYLVANIA Allentown Harrisburg Philadelphia Pittsburgh	CANADA Montreal Toronto Vancouver
GEORGIA Atlanta	NEBRASKA Omaha		
ILLINOIS Chicago Highland Peoria			

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION

INDEX

INDEX

A

Absolute Cursor Addressing.....	4-13,4-16
Addressable Printer Port	5-13
ADM 1 Mode	3-7
ADM 42/ADM 2 Attribute Mode	4-35
ADM 42 Polling	5-1
Alternate Character.....	1-3
Attributes, Video.....	4-31,4-44,4-36
Auto Page	4-13

B

Baud Rate	2-16,4-21,4-25
Block Mode	3-4,4-4,4-21
BROADCAST SELECT	5-6,5-10
Buffered Print Mode	3-9

C

Character Format, Standard	1-2,3-4
Cleaning	2-17
Clear/Erase/Insert/Delete Character.....	4-27
Configuration Control DIP Switch Settings, Main Board	2-3,2-7
Configuration Control DIP Switch Settings, Option Board	2-3,2-9
Control Codes	3-5,4-1,4-3
Controls	2-3
Control Section (MPU)	3-2
Conversation Mode	3-4,4-4
Copy Print Mode.....	3-8
CTRL	3-1
Current Loop	2-15
Cursor and Video Attribute Control	4-31
Cursor Addressing	4-13,4-14
Cursor Control	4-16

INDEX (cont'd)

D

Data Transmission Characteristics	3-4,4-21
Delay Time, RTS START/OFF	4-28
Designated Protected Field	4-12
Dimensions, Physical	2-1
DIP Switch Settings	2-3
Direct Connect	1-1,2-11,2-18
Displayable Character Video	4-35
Displayable Characters	3-5
Displaying FUNKEY Messages	4-6

E

Editing	4-18,4-19
End of Block Character	4-23
Erasing FUNKEY Messages	4-11
Escape Lead-In Character	4-23
Escape Sequences	4-1,4-2
Evoking FUNKEY Messages	4-11
Extra-Length FUNKEY Messages	4-9

F

FAST SELECT Responses	5-6,5-9
Field Separator Character	4-25
Firmware RESET	4-5
Format Control	4-11
Formatted Print Mode	3-7
Function Key (FUNKEY)	4-9
FUNKEY Lead-In Character	4-6,4-7

G-H

Go To Page "N"	4-14
GROUP POLL Operations	5-12
GROUP SELECT Operations	5-13

I-J

Initiating Polling Sequence	5-2
Inspection	3-17
Installation	2-1,2-11
Interface	
Current Loop	2-11,2-15
Direct Connect	2-11,2-18
Printer	2-11,2-18
Standard or RS-232C Extension	2-11,2-14
Interface Section	3-2

INDEX (cont'd)

K

Keyboard	1-1,3-2
Keyboard Enable/Disable	4-5,5-2
Keystroke Conventions	3-1

L

Line Voltage Selection	2-1
Limited Graphics	4-13,4-14
Line Voltage Selection	2-1
Linking FUNKEY Messages	4-8
Linking Multiple Commands	4-11
Load Cursor	4-13
LRC Character	5-3

M-N

Main Board DIP Switches	2-3
Maintenance Manual	1-4
Modifications:	
Clear/Erase/Insert/Delete	4-27
Dynamic Personality	4-21
End of Block	4-23
Escape Lead-In	4-23
Field Separator	4-25
FUNKEY Lead-In	4-25
New Line	4-23
Parity Error	4-27
Polling Option Variant	4-28,4-29
Polling Transmission Number	4-28
Power-Up Tab Mode	4-28,4-30
RTS START/OFF Delay	4-28,4-30
Special Functions	4-31,4-32
Status Line Attribute	4-31
Multi-Point Contention	5-13
New Line	4-23
Non-Addressed Cursor Positioning	4-13

INDEX (cont'd)

O

Operational Description	3-2
Format Control	3-4
Interface Section	3-2
Keyboard Section	3-2
MPU Section	3-2
Power Supply, Regulated	3-4
System Configuration Switches	3-2
Video Logic and Control	3-2
Operational RESETS	4-5
Operators Quick Reference Manual	1-4
Option Board DIP Switches	2-3
Options:	
Alternate Character Generator Set	1-3
Answer Back Memory	1-3
31-Character Function Key	1-3
63-Character Function Key	1-4
Direct Connect	1-1,2-11,2-17
Memory Extension	1-1
Polling and Addressing	1-4
Serial Printer	1-3,2-11,2-17
TCU Desk Mount	1-3

P

Parity Error	4-27
Personality Control	4-23
Personality Display	4-23
POLL Responses	5-3,5-4
Polling, ADM 42	5-1
Polling Communications Buffer	5-14
Polling Control	4-28,4-29,5-2
Polling Option	1-4
Power ON	2-16
Power ON Reset	4-4
Power OFF	2-16
Power Supply	3-4
Print Mode	3-7
Print Mode Transmission:	
Characteristics Control Operations	3-7,4-22,4-23
Printer Interface	2-11,2-18
Printer Option	1-3,2-11,2-17
Program Display	4-6
Program Mode	4-12
Protect Mode	4-12
Protect Mode Tabs	4-18
Protected Fields	4-12

INDEX (cont'd)

Q

Quick Reference Manual, Operators 1-4, 4-1

R

Read Cursor 4-14
Related Documents 1-4
Remove from Polling Status 5-2
RESET Button 4-5
RESET Operations 4-4
RS-232 Interface 2-11, 2-14
RTS START Delay 4-28
RTS OFF Delay 4-28

S

Safety Requirements 2-1
Scrolling 4-5
SELECT Responses 5-5, 5-7
Selected Protected Fields 4-12
Send Line (v) 5-1, 5-12
Send Line (x) 5-12
Send Page (w) 5-2
SEND Responses 5-6, 5-11
SEQUENTIAL SELECT Responses 5-5, 5-8
Setting ADM 42 Address 5-1
Shift 3-1
Site Requirements 2-1
Special Function Control Bytes (Personality) 4-31, 4-32, 4-33, 4-34, 4-35
Specifications 1-5
Status Code Control 4-7, 4-8
Status Line 25 4-6, 4-7, 4-31, 4-33
Storing FUNKEY Messages 4-6
STX Character 5-3
System Configuration Switches 3-2

T

Tab Mode 4-17, 4-29, 4-32
Terminal Control Unit (TCU) 1-1
Terminal RESET 4-4
Typewriter Tabs 4-18

INDEX (cont'd)

U

Unformatted Print Mode 3-8

V

Video Attribute Control 4-36

Video Logic 3-2


Voltage Selection 2-1

W-X-Y-Z

Word Structure 3-4

Write Character "N" Times 4-13

Write Protect Mode 4-12

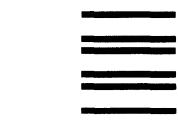

NO POSTAGE
STAMP
NECESSARY
IF MAILED IN THE
UNITED STATES


BUSINESS REPLY CARD

FIRST CLASS

PERMIT NO. 3061 ANAHEIM, CALIFORNIA

POSTAGE WILL BE PAID BY ADDRESSEE:
Attn: Marketing Communications

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION
714 NORTH BROOKHURST STREET
ANAHEIM, CALIFORNIA 92803

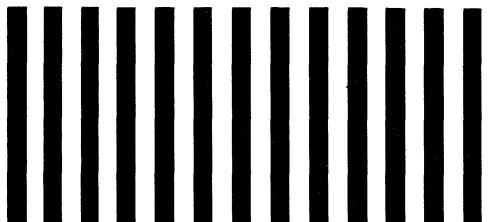

NO POSTAGE
STAMP
NECESSARY
IF MAILED IN THE
UNITED STATES


BUSINESS REPLY CARD

FIRST CLASS

PERMIT NO. 3061 ANAHEIM, CALIFORNIA

POSTAGE WILL BE PAID BY ADDRESSEE:
Attn: Marketing Communications

LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION
714 NORTH BROOKHURST STREET
ANAHEIM, CALIFORNIA 92803

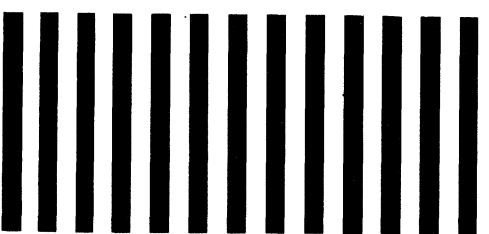

COMMENTS AND SUGGESTIONS

Let us know...

If you have any suggestions for improving this publication. After writing your comments, carefully cut out and mail the pre-addressed, post-paid card to us. All comments will be given careful consideration, and become the property of LEAR SIEGLER, INC.

PUBLICATION TITLE _____

PUBLICATION NO. _____ DATE _____

YOUR NAME _____

TITLE _____

COMPANY _____

ADDRESS _____

SUGGESTIONS _____

PUBLICATION TITLE _____

PUBLICATION NO. _____ DATE _____

YOUR NAME _____

TITLE _____

COMPANY _____

ADDRESS _____

SUGGESTIONS _____



**LEAR SIEGLER, INC.
DATA PRODUCTS DIVISION**

714 NORTH BROOKHURST STREET, ANAHEIM, CALIFORNIA 92803
PHONE: (714) 774-1010 TELEX: 65-5444 TWX: 910-591-1157