

# Z60m series Setup Poster

P/N 39T6066

11.07.2005

Size : 11x14 inches

Color : 2 color job = ■ Process Black (This plate must be printed in PMS Process Black C)

■ Process Magenta (This plate must be printed in PMS 032cvc)

Font : IBM Fonts and Helvetica Neue Family

Material : 100 gsm gloss art paper (Use 100% recycled paper in only Japan.)

Blue line shows die-cut. DO NOT PRINT.

Please change the barcode No.

Please change the country name if the poster is printed in other than China.

# ThinkPad®

## Upute za početni postav

Za detaljnije informacije pritisnite ThinkVantage tipku.

 
 


**1**



Otpakirajte:

- ThinkPad® računalo     Baterija     Naponska žica     AC adaptor



- 2 TrackPoint® kapice     Knjige




\* Pogledajte otraga radi napomena o nepopisanim, nedostajućim ili oštećenim stavkama i o CD-u za obnavljanje.

Napomena: Prije upotrebe računala pročitajte napomene o sigurnosti u Vodiču za servis i rješavanje problema.

- Upute za Postav (ovaj list)
- Vodič za servis i rješavanje problema
- Drugi dodaci i letci


**2**

Instalirajte baterijski uložak:  
Vaša baterija je spremna za upotrebu.

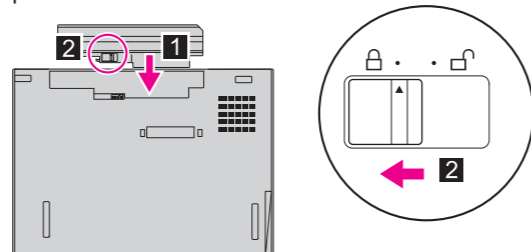

**3**

Spojite na struju:

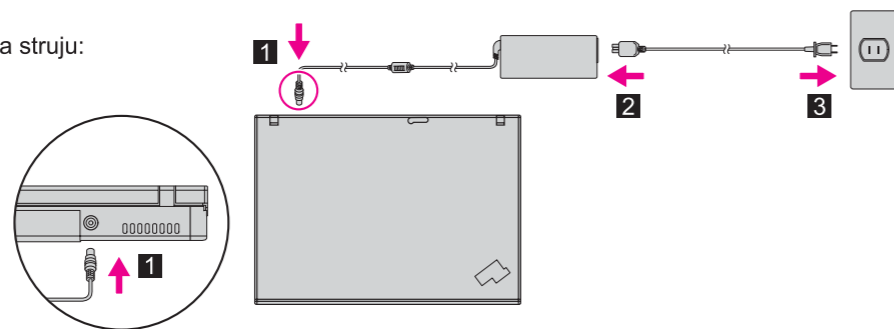

**4**

Uključite napajanje:



**5**

Pokažite i kliknite s UltraNav TrackPoint™ Multi-pointing navigacijskim sistemom:  
Pritisnite TrackPoint kapicu ili se pomaknite po dodirnoj podlozi u smjeru u kojem želite pomaknuti pointer. Lijeva i desna tipka ispod razmaknice i dodirne podloge funkcioniraju kao tipke na mišu. Neki modeli možda imaju samo TrackPoint.

**6**

Konfigurirajte Operativni sistem slijedeći upute s ekrana:  
Ovaj proces traje nekoliko minuta i vaše računalo će se nekoliko puta ponovno pokrenuti.

**7**

Da bi naučili više pritisnite ThinkVantage tipku:



## ThinkVantageDesign

**1** UltraConnect™ bežična LAN antena

**2** ThinkLight® svjetlo tipkovnice

**3** Jednoručni zasun

**4** Bežična WAN antena\*  
\*Samo određeni modeli.

**5** Tipke za glasnoću i stišavanje



**6** Prekidač za uključivanje



**7** ThinkVantage tipka



**8** Web pretražitelj natrag i naprijed



**9** Čitač otiska prsta\*  
\*Samo određeni modeli.

**10** Centralni TrackPoint gumb

**11** Fn tipka

Upotrijebite u kombinaciji s drugim tipkama za pristup specijalnim ThinkPad funkcijama



Zaključavanje radne stanice



Ulaz u zamrznutost



Upravljanje shemama napajanja



ThinkLight on/off



Odgoda



Multimedijske kontrole



Konfiguriranje profila lokacije



Multimedijske kontrole



Konfiguriranje postavki prikaza



Promjena sjajnosti prikaza



Konfiguriranje postavki ulaznih uređaja



Povećanje sadržaja ekrana



Upravljanje eksternim uređajima

P/N: 39T6066