

X41 Tablet Setup Poster

P/N 39T9234

11/15/2005

Size : 11x13 inches

Color : 2 color job = ■ Process Black (This plate must be printed in PMS Process Black C)

■ Process Magenta (This plate must be printed in PMS 032cvc)

Font : IBM Fonts and Helvetica Neue Family

Material : 100 gsm gloss art paper (Use 100% recycled paper in only Japan.)

Blue line shows die-cut. DO NOT PRINT.

Please change the barcode No.

Please change printing country name if the poster is printed in other than China.

ThinkPad

Initial Setup Instructions

For more detailed information, press the Access IBM button.

1

Unpack:

- ThinkPad(R) computer
- Battery pack (4-cell) or (8-cell)
- Power cord
- AC adapter
- Modem cord
- 2 TrackPoint(R) caps
- Tablet Digitizer Pen
- Books
 - Setup Instructions (this sheet)
 - Service and Troubleshooting Guide
 - Other supplements or flyers
- Pen
- Spare pen tips
- Tip remover

* See reverse for notes about unlisted, missing, or damaged items and recovery CD.

Note: Please read the safety notices in the Service and Troubleshooting Guide before you use the computer.

2

Install battery pack:

Your battery is ready to use.

Note: Some models have a battery that is shaped differently.

3

Connect to power:



4

Turn on the power:



5

Point and click with TrackPoint(R) Navigation System:

Press the TrackPoint cap in the direction you want to move the pointer. The left and right buttons below the space bar function like mouse buttons.

6

Configure the Operating System following on-screen instructions:

This process takes several minutes, and your computer may restart multiple times.

7

For more detailed information, press the Access IBM button:

 


8


Convert to Tablet

Slide the latch release and open the display. Rotate the display 180 degrees clockwise.

Close the display and press the latch down.

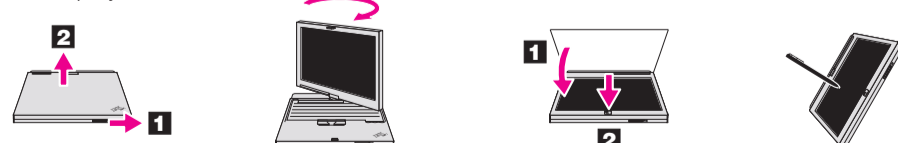

ThinkVantageDesign

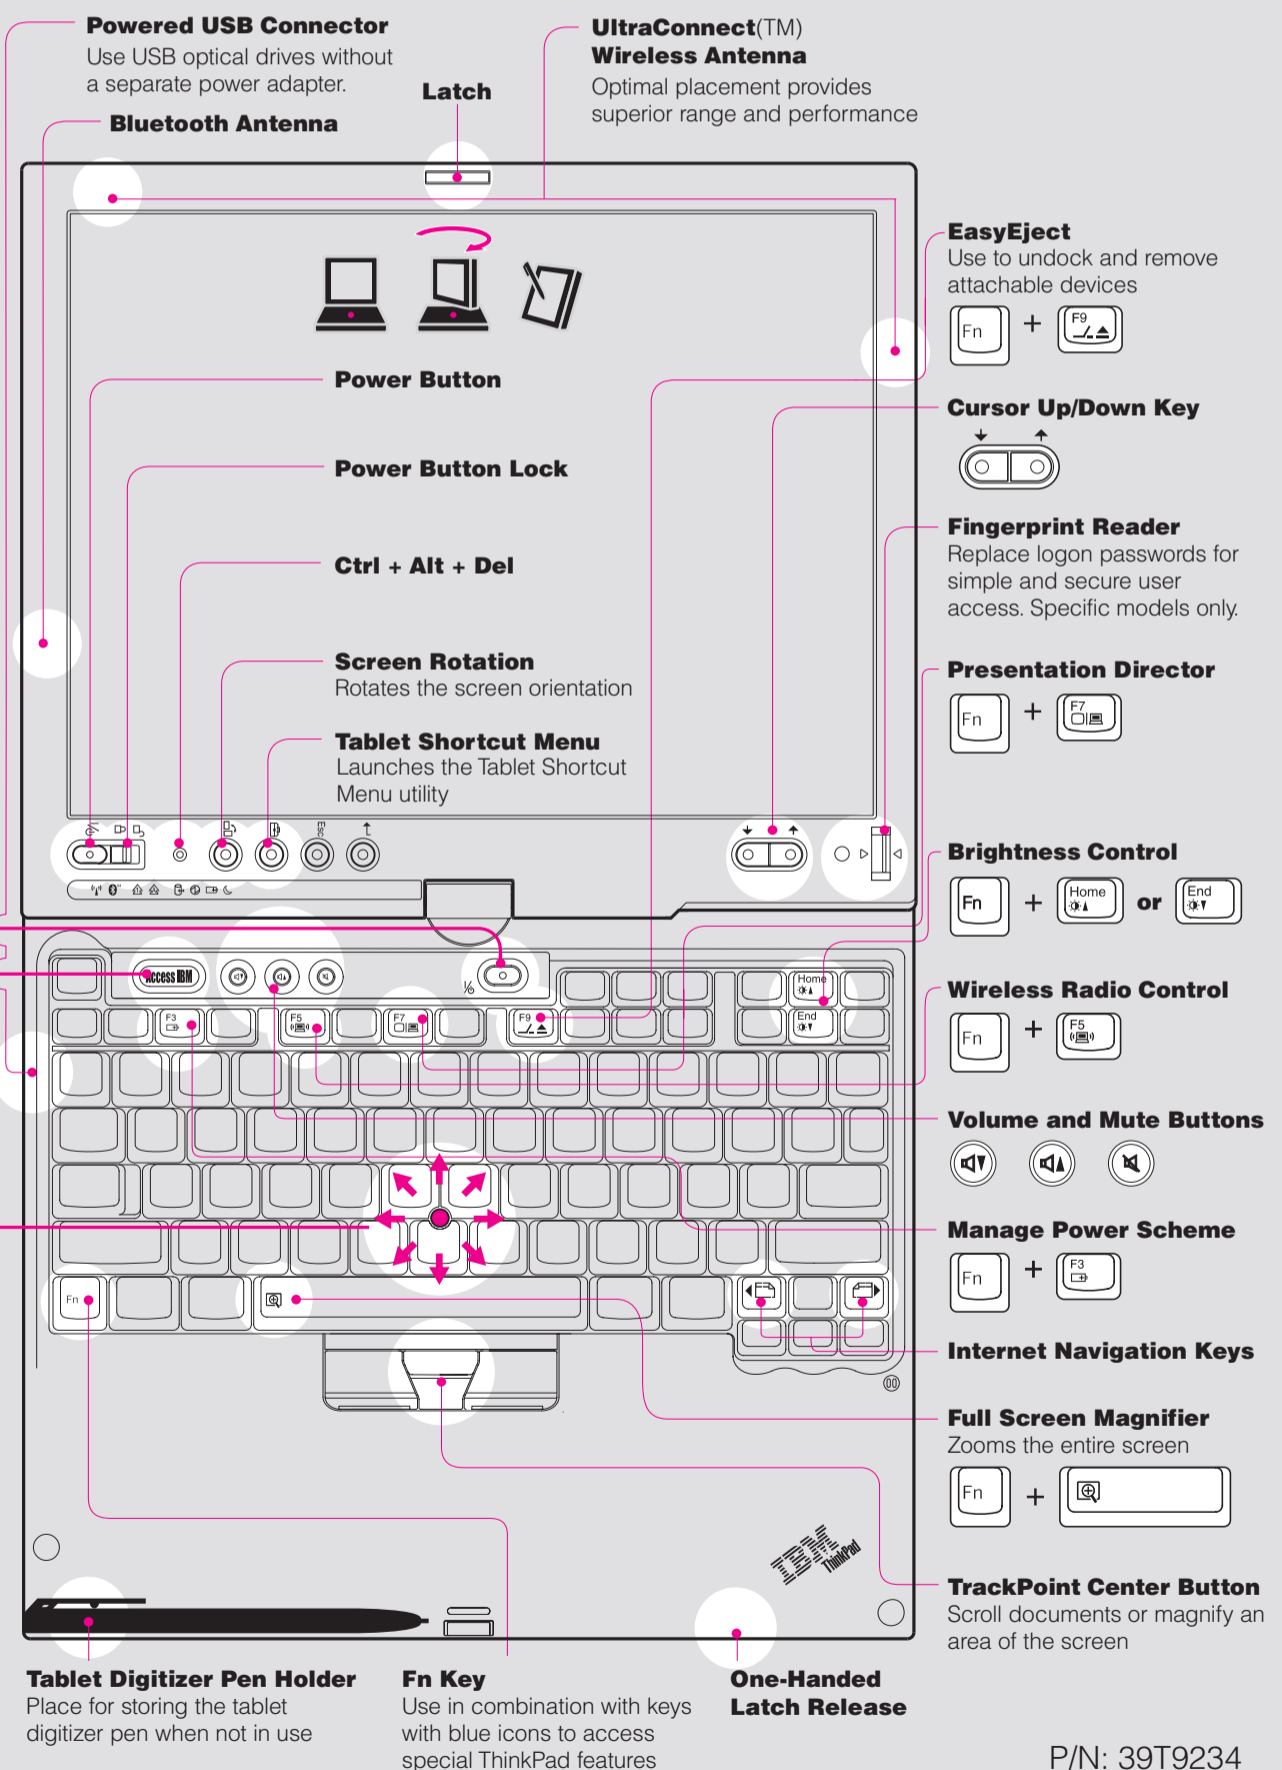 

P/N: 39T9234

X41 Tablet Setup Poster

P/N 39T9234

11/15/2005

Size : 11x13 inches

Color : 2 color job = ■ Process Black (This plate must be printed in PMS Process Black C)

■ Process Magenta (This plate must be printed in PMS 032cvc)

Font : IBM Fonts and Helvetica Neue Family

Material : 100 gsm gloss art paper (Use 100% recycled paper in only Japan.)

 
Blue line shows die-cut. DO NOT PRINT.

Please change the barcode No.

Please change printing country name if poster is printed in other than China.

Optional ThinkPad X4 Dock

This option is available to expand the functionality of your ThinkPad X41 Tablet computer. To learn more, press the blue Access IBM button and enter "X4 Dock" in the Help Center keyword search field.

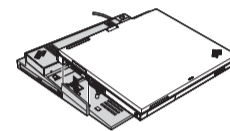




Installing Optional memory

You can increase the amount of memory in your computer.

Note: Use only memory types supported by your computer. If you install the optional memory incorrectly or install an unsupported memory type, a warning beep will sound when you try to start the computer.

1 Install the optional SO-DIMM:

   - 1 Touch a grounded metal object to reduce any static electricity in your body that could damage the SO-DIMM. Avoid touching the contact edge of the SO-DIMM.
- 2 Turn off the computer.
- 3 Disconnect the AC adapter and all cables from the computer.
- 4 Close the computer display and turn the computer over.
- 5 Remove the battery.
- 6 Loosen the screws next to DIMM icons on the expansion slot cover, and then remove the cover.
- 7 If a SO-DIMM is already installed, remove it as shown. Save the SO-DIMM for future use.
- 8 Align the notch in the contact edge of the SO-DIMM with the divider in the socket. Firmly insert the SO-DIMM into the socket at an angle of 20 degrees **1**, and then pivot it downward until it snaps into place **2**.

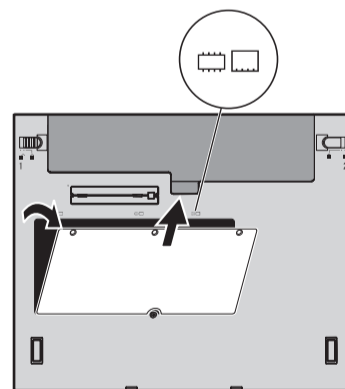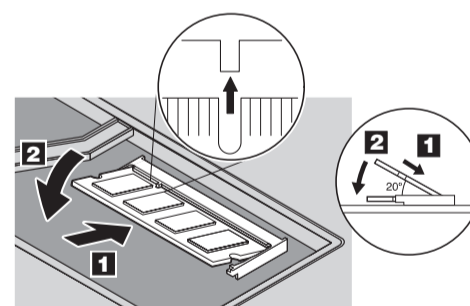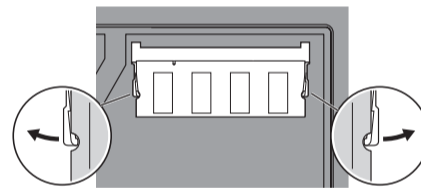

- 9 Replace the expansion slot cover. **Attention:** Never use the computer with the expansion slot cover open.
- 10 Replace the battery and re-connect the AC adapter and cables.

2 Verify proper installation of the optional SO-DIMM:

- 1 Turn on the computer.
- 2 Press the Access IBM button when prompted during startup.
- 3 Open the BIOS Setup Utility by clicking "Access BIOS" under the "Configure" category.
- 4 Verify that the "Installed memory" item shows the total amount of memory installed in your computer. For example, if your computer had 256 MB of standard memory and you install an additional 512 MB SO-DIMM, the quantity shown in "Installed memory" should be 768 MB.

ThinkVantageTechnologies

You can get information about ThinkVantage Technologies at any time by pressing the blue Access IBM button on your keyboard.



Security

Some ThinkPad computers have an embedded security chip. To learn about using the software and enabling the chip, enter "security chip" in the Help Center keyword search field.

Some ThinkPad computers also have a fingerprint reader. To learn more about the reader, enter "fingerprint reader" in the Help Center keyword search field.



Access Connections

Some ThinkPad computers are equipped with a wireless LAN adapter. To learn more about configuring wireless LAN and other communication adapters including your wired connections, enter "Access Connections" in the Help Center keyword search field.



Migration

You can move data from your old computer to this ThinkPad computer. Enter "migration" in the Help Center keyword search field to learn about using data migration software.

Help and Support

To learn about Help and Support, choose "Learn and get help" in Productivity Center, and choose "Get Help & Support", then open Help Center.

* Additional unpacking notes:

- 1) Some models may contain items that are not listed.
- 2) If any item is missing or damaged, please contact your place of purchase.
- 3) Everything for recovering factory-installed files and applications is on your hard disk eliminating the need for a recovery CD. For more information, see "Recovering Pre-Installed Software" in the Service and Troubleshooting Guide.

Your name: _____

Company name: _____

Model number: _____

Serial number: _____

Company or reseller service: _____

Support Web site: _____

Support number: _____

Printed in China

© Copyright Lenovo 2005

Portions © Copyright International Business Machines Corporation 2005. All rights reserved.

Thinkpad is a registered trademark of Lenovo. IBM is a trademark of IBM Corp.

For Barcode Position Only