

X40 series Setup poster

P/N 39T2162

02.08.2005

Size : 11x13 inches

Color : 2 color job = ■ Process Black (This plate must be printed in PMS Process Black C)

■ Process Magenta (This plate must be printed in PMS 032cvc)

Font : IBM Fonts and Helvetica Neue Family

Material : 100 gsm gloss art paper (Use 100% recycled paper in only Japan.)

Blue line shows die-cut. DO NOT PRINT.

Please change the barcode No.


Please change the country name if the poster is printed in other than China.

ThinkPad

Upute za početni postav

Za detaljnije informacije pritisnite tipku Pristup IBM-u.

1 Otpakirajte:

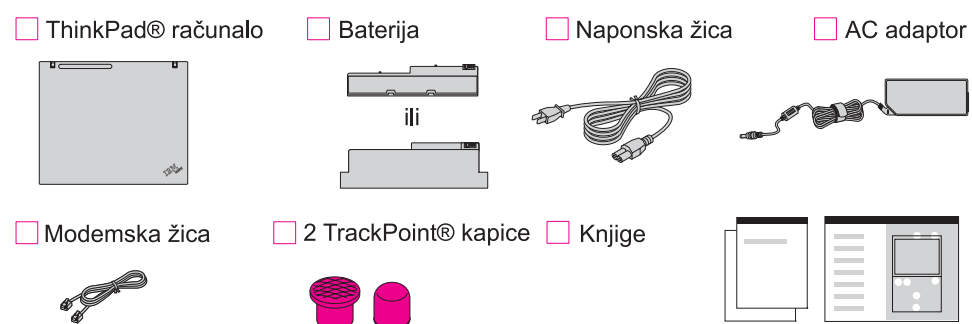

* Pogledajte otraga radi napomena o nepopisanim, nedostajućim ili oštećenim stavkama i o CD-u za obnavljanje.

Napomena: Molimo pročitajte napomene o sigurnosti u Vodiču za servis i rješavanje problema, prije upotrebe računala.


- Upute za Postav (ovaj list)
- Vodič za servis i rješavanje problema
- Drugi dodaci i letci

2 Instalirajte baterijski uložak:

Vaša baterija je spremna za upotrebu.

Napomena: Neki modeli imaju drukčije oblikovanu bateriju.

3 Spojite na struju:

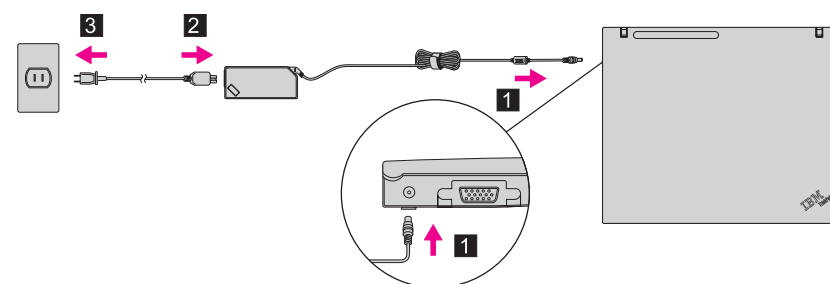

4 Uključite napajanje:



5 Pokažite i kliknite s TrackPoint® navigacijskim sistemom:

Pritisnite TrackPoint kapicu u smjeru u kojem želite pomaknuti pointer. Lijevi i desni gumb ispod razmaknice funkcioniraju kao gumbi na mišu.

6 Konfigurirajte Operativni sistem slijedeći upute s ekrana:

Ovaj proces traje nekoliko minuta i vaše računalo će se nekoliko puta ponovno pokrenuti.

7 Za detaljnije informacije pritisnite tipku Pristup IBM-u:



ThinkVantage™ Design

UltraConnect™ bežična antena
Optimalan smještaj pruža izvrstan raspon i izvedbu

Jednoručni zasun

ThinkLight® svjetlo tipkovnice
Osvjetljava vašu tipkovnicu, tako da možete raditi i u mraku



Tipke za glasnoću i stišavanje



Bežična radio kontrola



Direktor predstavljanja
Lako napravite prezentacije ili upotrebite višestruke monitore



EasyEject
Upotrijebite za odspajanje i uklanjanje pripojenih uređaja



Kontrola sjaja



Napajani USB konektor
Koristite USB optičke pogone bez posebnog naponskog adaptora.

Tipke za Internet navigaciju
Web pretražitelj natrag i naprijed

Povećalo za puni ekran
Zumira cijeli ekran



Upravljanje shemom napajanja



Fn tipka
Upotrijebite u kombinaciji s tipkama s plavim ikonama za pristup specijalnim ThinkPad funkcijama

Centralni TrackPoint gumb
Pregledajte dokumente ili povećajte područje ekrana

Čitač otiska prsta
Zamjena lozinki za prijavu za jednostavan i siguran pristup korisnika.
Samo specifični modeli.

P/N: 39T2162