

Note: Before using this information and the product it supports, be sure to read the general information under "Safety Information" on page viii, and "Notices" on page 138. For ergonomics information, see the *Online User's Guide*.

First Edition (August 1999)

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT ANY WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE LIMITED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimers or express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements or changes in the products or the programs described in this publication at any time.

Requests for technical information about IBM products should be made to your IBM Authorized Dealer or your IBM Marketing Representative.

© **Copyright International Business Machines Corporation 1999. All rights reserved.** Note to US Government Users — Documentation related to restricted rights — Use, duplication, or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Thank You for Selecting an IBM ThinkPad i Series 1400/1500 Computer

We at IBM have developed this ThinkPad computer to meet both your technical requirements and your high expectations. To help us continue to build products that address your mobile computing needs, please take a moment to complete the ThinkPad Registration.



Functional Highlights

All-in-one design with core technology The well-balanced, all-in-one design of the ThinkPad i Series 1400/1500 brings ease-of-use to your computing needs.

High-speed processor The Intel® high-speed processor enables high-speed data processing and provides advanced performance.

Large-capacity hard disk drive The large-capacity hard disk drive can respond to a wide variety of your business demands.

Large color LCD The large TFT (thin-film transistor) or HPA (high performance addressing) display provides clear and brilliant text and graphics.

Lithium ion or nickel metal hydride battery pack The large-capacity battery pack extends the operating time of your computer, further enhancing its portability.

Audio with 3D Stereo Sound Your computer is equipped with internal audio record and playback capabilities including 3D audio from four speakers. When you enable the 3D stereo feature, sounds will appear to be generated all around you.

The audio feature supports the following:

- Wave audio recording and playback of up to 16 bits, stereo, and 48 KHz sampling.
- Music CD playback with the computer turned off.

For more information on using the audio function, see the *Online User's Guide*.

ThinkPad Modem The ThinkPad modem enables you to send or receive data and faxes over a telephone line.

For more information on using the ThinkPad modem, see the *Online User's Guide*.

TrackPoint with Enhanced Controls Your computer has an enhanced TrackPoint function that enables you to make selections merely by pressing on the TrackPoint. A new

Functional Highlights

center button, the Internet Scroll Bar, converts the TrackPoint into a scroll controlling device or a magnifying glass on the screen.

For more information on using the TrackPoint, see “TrackPoint” on page 10.

PC Card Support Your computer provides a PC Card slot that accepts a 16-bit PC Card, CardBus Card, or Zoomed Video Card.

For more information on installing PC Cards, see “Inserting a PC Card” on page 72.

Keyboard Light (select models only) Your computer is equipped with a light that illuminates the keyboard area for computer use in dimly lit areas.

For more information on using the Keyboard Light, see “Keyboard Light” on page 16.

Easy Launch buttons Your computer is equipped with four customizable buttons that allow you to connect to the Internet or to run programs at a single press of a button.

For more information on customizing the Easy Launch buttons, see “Easy Launch Buttons Customization Utility” on page 37.

Media Center Your computer is equipped with the Media Center, consisting of a status LCD and playback buttons for CDs or DVDs (for DVD models). You can also play music CDs without turning on the computer.

For more information, see “Playing Music CDs” on page 19.

About This Book

About This Book

This book contains information that will help you operate the IBM ThinkPad i Series 1400/1500 computer. Be sure to read the *ThinkPad i Series 1400/1500 Setup Guide* and Chapter 1 of this book before using the computer.

Chapter 1. "Getting Familiar with Your Computer," acquaints you with the basic features of your computer



Chapter 2. "Extending the Features of Your Computer," provides information on installing options and using your computer's high-technology features.

Chapter 3. "Protecting Your Computer," provides information on using passwords, and using locks.

Chapter 4. "Solving Computer Problems," describes what to do when you have a computer problem. The chapter includes a troubleshooting guide and information on how to recover lost or damaged software.

Chapter 5. "Getting Service," describes various options of IBM's support and service.

Appendix A, Features and Specifications describes the features and specifications associated with your computer, including information on power cords.

Appendix B, Product Warranties and Notices contains the warranty statements for your computer and notices for this book.

About This Book

The book concludes with an **index**.

Safety Information

Electrical Safety Notice

Note: In the U.K., by law:

- The telephone line cable must be connected after the power cord.
- The power cord must be disconnected after the telephone line cable.





DANGER

Electrical current from power, telephone, and communication cables is hazardous. Reduce the risk of fire and electric shock by always following basic safety precautions, including the following:

- **Do not use your computer in or near water.**
- **During electrical storms, do not connect the cable to or disconnect it from the telephone outlet on the wall.**

To avoid shock hazard, connect and disconnect cables as shown below when installing, moving, or opening the covers of this product or attached devices. The 3-pin power cord must be used with a properly grounded outlet.

Safety Information

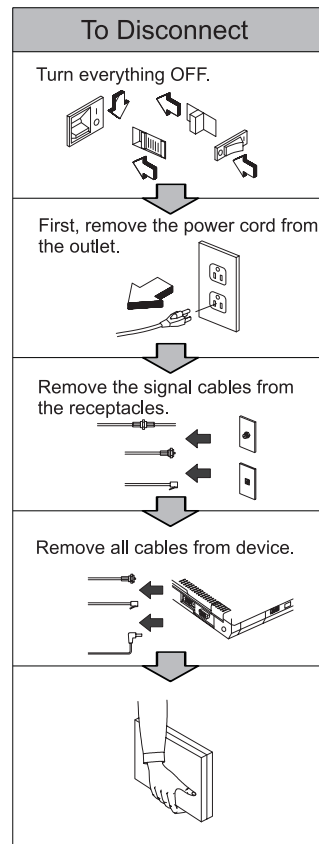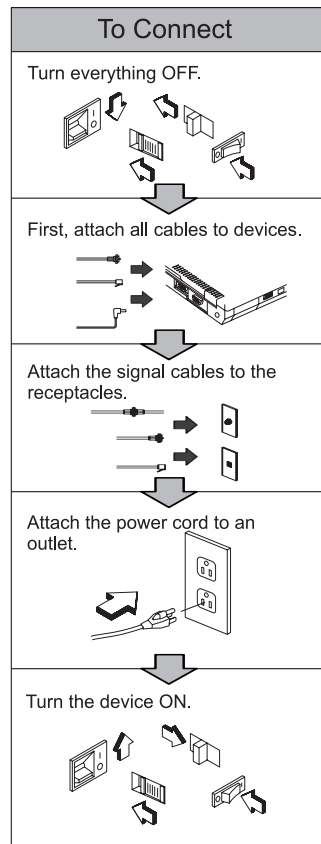

DANGER

Do not disassemble, incinerate, or short-circuit the rechargeable battery pack. Do not put it in trash that is disposed of in landfills. Dispose of it as required by local ordinances or regulations. In the United States, call IBM at 1-800-IBM-4333 for information on disposal.

Safety Information



DANGER

There is a danger of an explosion if the battery is incorrectly replaced.

The lithium battery (IBM P/N 02K6502 UL-recognized component [file no. MH12210]) contains lithium and can explode if it is not properly handled or disposed of.

Replace only with a battery of the same type.

Do not: (1) throw or immerse it into water, (2) allow it to heat to more than 100°C (212°F), or (3) attempt to repair or disassemble it. Dispose of it as required by local ordinances or regulations.

CAUTION:

The fluorescent lamp in the liquid crystal display (LCD) contains mercury. Do not put it in trash that is disposed of in landfills. Dispose of it as required by local ordinances or regulations.

The LCD is made of glass, and rough handling or dropping the computer can cause the LCD to break. If the LCD breaks and the internal fluid gets into your eyes or on your hands, immediately wash the affected areas with water for at least 15 minutes; then get medical care if any symptoms are present after washing.

Laser Compliance Statement

The CD-ROM or DVD-ROM drive of the ThinkPad i Series 1400/1500 computer is a laser product. The CD-ROM or DVD-ROM drive's classification label (shown below) is located on the top of the drive.

CLASS 1 LASER PRODUCT
LASER KLASSE 1
LUOKAN 1 LASERLAITE

Safety Information

APPAREIL A LASER DE CLASSE 1 KLASS 1 LASER APPARAT

The CD-ROM or DVD-ROM drive is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products.

In other countries, the drive is certified to conform to the requirements of EN60825.



CAUTION:

Do not open the CD-ROM or DVD-ROM drive; no user adjustments or serviceable parts are inside.

Use of controls, adjustments, or the performance of procedures other than those specified may result in hazardous radiation exposure.

Class 1 laser products are not considered to be hazardous. The CD-ROM or DVD-ROM drive has an internal, Class 1, 0.5-milliwatt, aluminum gallium-arsenide laser that operates at a wavelength of 760 to 810 nanometers. The design of the laser system and the CD-ROM or DVD-ROM drive ensures that there is no exposure to laser radiation above a Class 1 level during normal operation, user maintenance, or servicing conditions.

Contents

Thank You for Selecting an IBM ThinkPad i Series 1400/1500 Computer	iii
Functional Highlights	iv
About This Book	vi
Safety Information	viii
Electrical Safety Notice	viii
Laser Compliance Statement	x
Getting Familiar with Your Computer	1
Identifying the Hardware Features	3
Front View of the Computer	3
Rear View of the Computer	5
Bottom View of the Computer	7
System Status Indicators	8
Distinctive Functions of Your Computer	10
Keyboard Functions	10
CD-ROM or DVD-ROM Drive	17
ThinkPad Utility Programs	24
Online User's Guide	41
Reinstalling Software	42
ThinkPad Software Selections CD	42
Recovery CD	42
ThinkPad Web Site or Bulletin Board	42
Replacing the Battery Pack	43
Service Hints & Tips	44
Handling Your ThinkPad Computer	44
ThinkPad Don'ts	44
ThinkPad Do's	46
Carrying Your Computer	46
Cleaning Your Computer	46
Extending Your Battery Life	47
Ruggedized Mobile Computers	47
For More Information	48
Extending the Features of Your Computer	49
Customizing the TrackPoint	50

Using the Press-to-Select Window	51
Using the Sensitivity Window	52
Using the Scrolling Window	53
Increasing Memory	55
Attaching an External Mouse, Keypad or Keyboard	59
Attaching an External Mouse or Numeric Keypad	59
Attaching an External Keyboard and Mouse	61
Disabling the TrackPoint	62
Attaching an External Monitor	63
Display Output Location	64
Display Modes	66
Using the Dual Display Function	67
Attaching a Television to Your Computer (select models only)	69
Attaching a Printer	71
Inserting a PC Card	72
Removing the PC Card	73
Protecting Your Computer	75
Using Passwords	76
Setting a Password	77
Entering a Password	79
Removing and Changing a Password	80
Using Locks	82
Solving Computer Problems	83
Frequently Asked Questions	84
Hints, Tips and Considerations	89
Playing DVD Movies	89
USB Connector Considerations	89
Using an External Condenser Microphone	89
Troubleshooting Guide	90
Troubleshooting Charts	91
Error Codes or Messages	92
No Error Codes or Messages	94
Input Problems	95
Standby or Hibernation Problems	97
LCD Problems	99
Indicator Problems	100
Battery Problems	100
CD-ROM or DVD-ROM Problems	101
Audio Problems	103

Universal Serial Bus (USB) Problems	103
Modem Problems	104
PC Card Problems	105
Printer Problems	106
External Monitor Problems	107
Other Option Problems	109
Software Problems	110
Other Problems	111
Recovering Lost or Damaged Software	112
Using the PC-Doctor Program	112
Using the ThinkPad Software Selections CD	112
Using the Recovery CD	113
ThinkPad Web Site or Bulletin Board	114
Getting Service	115
Information on Your Computer	116
Option List	116
Identification Numbers	116
Problem Recording Sheet	117
Customer Service and Support	118
Online Support Services	118
Fax Information	118
Help by Telephone	119
EasyServ	120
Getting Help Around the World	120
Purchasing Additional Services	121
Enhanced PC Support Line	121
Ordering Support Line Services	122
Warranty and Repair Services	122
Appendix A. Features and Specifications	125
Features	126
Specifications	128
IBM Power Cords	130
Appendix B. Product Warranties and Notices	133
Notices	138
Year 2000 Readiness and Instructions	138
Trademarks	139
Macrovision Copyright Protection Statement	139
Electronic Emission Notices	140

Telecommunication Notice	141
Industry Canada Requirements	143
Regions where ThinkPad i Series 1400/1500 has ThinkPad Modem Integrated	146
Notice to European Users of the IBM ThinkPad Modem	146
Warning Notice to New Zealand Users of the IBM ThinkPad Modem	147
Index	149


Getting Familiar with Your Computer

This chapter provides basic information about your computer.	
Identifying the Hardware Features	3
Front View of the Computer	3
Rear View of the Computer	5
Bottom View of the Computer	7
System Status Indicators	8
Distinctive Functions of Your Computer	10
Keyboard Functions	10
TrackPoint	10
Fn Key	13
Easy Launch Buttons	14
Numeric Keypad	15
Keyboard Light	16
CD-ROM or DVD-ROM Drive	17
Using the CD-ROM or DVD-ROM Drive	17
Handling CDs and DVDs	18
Playing Music CDs	19
Playing DVD Movies	19
ThinkPad Utility Programs	24
BIOS Utility	24
Notebook Manager	31
Sleep Manager	35
Easy Launch Buttons Customization Utility	37
Online User's Guide	41
Reinstalling Software	42
ThinkPad Software Selections CD	42
Recovery CD	42
ThinkPad Web Site or Bulletin Board	42
Replacing the Battery Pack	43
Service Hints & Tips	44
Handling Your ThinkPad Computer	44
ThinkPad Don'ts	44
ThinkPad Do's	46
Carrying Your Computer	46
Cleaning Your Computer	46
Extending Your Battery Life	47

Ruggedized Mobile Computers	47
For More Information	48



Identifying the Hardware Features

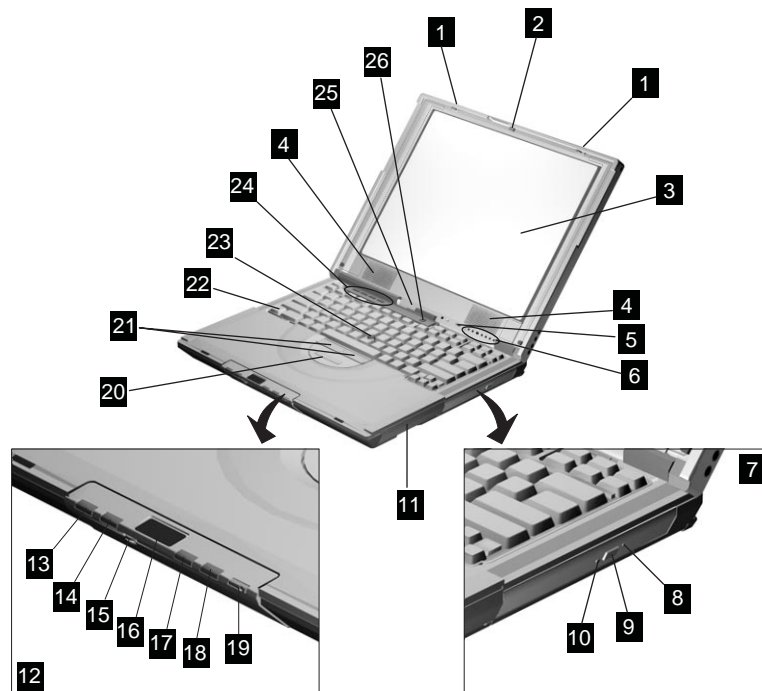Front View of the Computer




- (1) The **LCD latches** release the LCD when pressed and allow it to be opened.
- (2) The **Keyboard Light** (select models only) illuminates the keyboard area for computer use in dimly lit areas.
- (3) The **color LCD screen** displays computer output.
- (4) The left and right **internal speakers** generate stereo sound.
- (5) The **Keyboard Light switch** turns the keyboard light on and off.
- (6) The **indicator panel** consists of the system-status indicators and their associated symbols.
- (7) The **CD-ROM or DVD-ROM drive**.
- (8) The **manual-eject hole** is used to eject the CD-ROM or DVD-ROM tray when it does not open with the eject button.
- (9) The **CD-ROM or DVD-ROM eject button** ejects the CD-ROM or DVD-ROM tray.









Identifying the Hardware Features

- (10) The **CD-ROM or DVD-ROM access indicator** is on when data is read from a CD or DVD in the CD-ROM or DVD-ROM drive.
- (11) The **battery pack** is a built-in power source for the computer.
- (12) The **Media Center control panel** allows your computer to function like an audio CD player without turning on the computer. When the computer is on, it also controls the playback of audio CDs, video CDs and DVD movies.
- (13) The **previous track/chapter button** jumps to the previous track in the audio CD or video CD, or the previous chapter in the DVD movie.
- (14) The **next track/chapter button** jumps to the next track in the audio CD or video CD, or the next chapter in the DVD movie.
- (15)  The **audio volume control** adjusts the volume of the speakers.
- (16) The **Media Center status LCD** displays the current track number in the audio CD or video CD, or the current chapter number in the DVD movie.
- (17) The **play/pause button** plays or pauses audio CD, video CD or DVD movie playback.
- (18) The **stop/eject button** stops audio CD, video CD or DVD movie playback. It also ejects the CD-ROM or DVD-ROM tray when playback is stopped.
- (19) The **Media Center power button** turns the Media Center on and off for audio CD playback when the computer power is off.
- (20) The **Internet Scroll Bar** works with the TrackPoint (23) and functions as a scroll controlling device to easily scroll through Web pages or program windows.
- (21) The **TrackPoint buttons** work with the TrackPoint (23) and function similar to the buttons on a mouse.
- (22) The **Fn key** is used with the function keys to activate the **Fn** key functions.
- (23) The **TrackPoint** is a built-in pointing device that provides a function similar to that of a mouse.
- (24) The **Easy Launch buttons** are four customizable keys that allow you to run programs at a single press of a button. See “Easy Launch Buttons Customization Utility” on page 37 for more information.
- (25) The **built-in microphone** captures sound and voice when it is used with an application program capable of handling audio.
- (26)  The **power switch** turns the computer on and off.

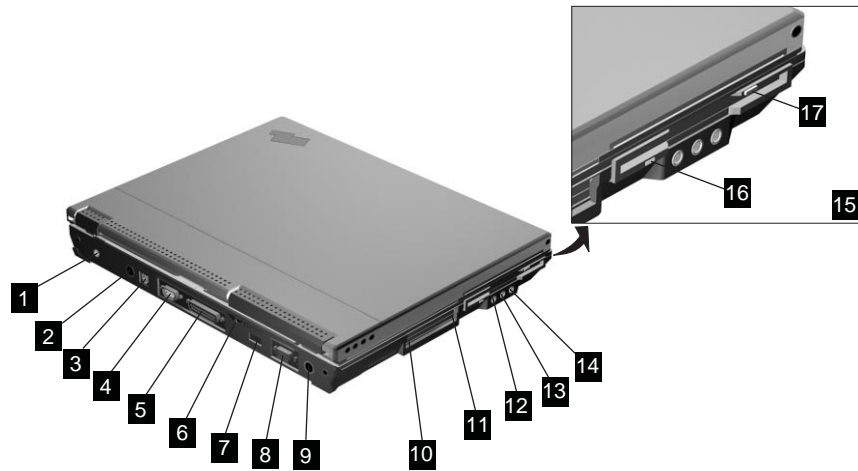


Identifying the Hardware Features

Rear View of the Computer




- (1)  The **power jack** is where the AC Adapter cable is connected.
- (2)  The **PS/2 mouse and keyboard connector** is used to attach a mouse, external keyboard, or external numeric keypad to the computer.
- (3)  The **internal modem port** is used for connecting your computer to an analog telephone line.
- (4)  The **serial connector** is where you connect a 9-pin, serial-device cable.
- (5)  The **parallel connector** is where you connect a parallel-printer signal cable.
- (6)  The **security keyhole** is used with a mechanical lock.
- (7)  The **universal serial bus (USB)** allows you to connect any device that conforms to the USB standard.
- (8)  The **external-monitor connector** is where you attach the external monitor.
- (9) The **S-video jack** (select models only) is where you connect a television or external display devices with an S-video in-out cable.
- (10) The **PC Card slot** accepts a PC Card.
- (11) The **PC Card eject button** ejects the PC Card from the PC Card slot.

Identifying the Hardware Features

- (12)  The **headphone jack**, a $\frac{1}{8}$ inch (3.5mm) diameter jack, is where you connect stereo headphones or external speakers.
- (13)  The **line-in jack**, a $\frac{1}{8}$ inch (3.5mm) diameter jack, is where you connect an external audio device.
- (14)  The **microphone jack**, a $\frac{1}{8}$ inch (3.5mm) diameter jack, is where you connect a self-powered stereo microphone.
- Note:** Do not plug any device into the microphone jack except a microphone.
- (15) The **diskette drive**.
- (16) The **diskette-drive-activity indicator** lights up when the computer is accessing the diskette drive.
- (17) The **diskette-eject button** ejects the diskette from the diskette drive.

Identifying the Hardware Features

Bottom View of the Computer

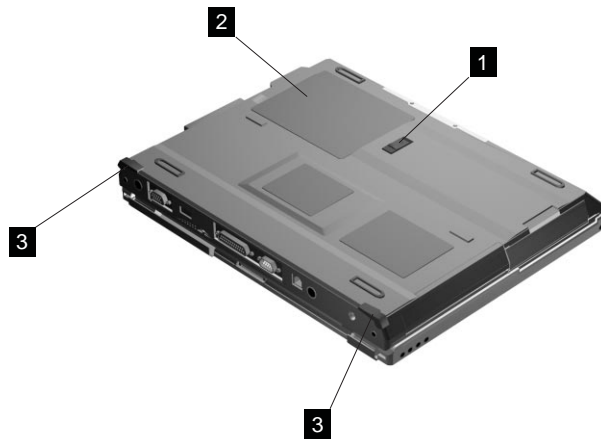


- (1) The **battery-pack latch** locks or releases the battery pack.
- (2) The **memory-slot cover** covers the memory slot.
The **two memory slots** accept dual inline memory module (DIMM) options.
Note: Base memory (32 MB or 64 MB) occupies one memory slot.
- (3) Flip out the **tilt feet** to tilt the computer to an angle for more comfortable use of your computer, especially when typing.






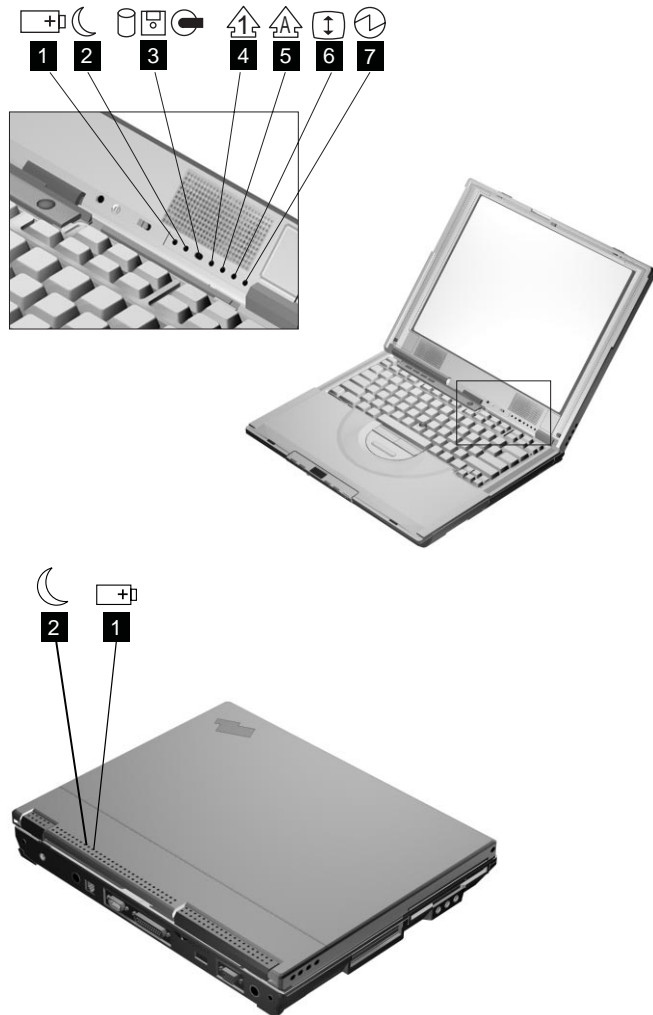

System Status Indicators

System Status Indicators

The system-status indicators on the computer show the current status of your computer by their on or off states and colors (green and orange). Each indicator is identified with a symbol. The following shows the location and the meaning of each icon:



System Status Indicators

Symbol	Color	Meaning
(1) Battery status 	Green	Enough battery power remains for operation.
	Blinking orange	The battery pack needs to be charged
	Orange	The battery pack is being charged.
(2) Standby mode 	Green	The computer is in standby mode
	Blinking green	The computer is entering or resuming from hibernation mode.
(3) Drive in use 	Orange	Data is being read from or written to the hard disk, floppy drive, or data is being read from the CD-ROM drive. Do not enter standby mode or power off the computer when this indicator is on.
(4) Numeric lock 	Green	The numeric keypad on the keyboard is enabled. You enable or disable the keypad by pressing and holding the Shift key, and pressing the NumLk key. For details, see "Numeric Keypad" on page 15.
(5) Caps lock 	Green	Caps Lock mode is enabled. All alphabetic characters (A-Z) are entered in capital letters without the Shift key being pressed. You enable or disable the Caps Lock mode by pressing the Caps Lock key.
(6) Scroll lock 	Green	Scroll Lock mode is enabled. The Arrow keys can be used as screen-scroll function keys. The cursor cannot be moved with the Arrow keys. <i>Not all application programs support this function.</i> You enable or disable Scroll Lock mode by pressing the ScrLk key.
(7) Power on 	Green	The computer is operational. This indicator is on when the computer is on.

Distinctive Functions of Your Computer

Your computer has unique keyboard functions and utility programs for easy configuration. This section includes the following topics:

- Keyboard functions
- CD-ROM or DVD-ROM drive
- ThinkPad utilities
- Online User's Guide

Keyboard Functions

Your computer's keyboard has the following functions:


- TrackPoint
- Fn key
- Easy Launch buttons
- Numeric keypad
- Keyboard Light

TrackPoint

The keyboard contains a unique cursor-pointing device called the *TrackPoint*. Pointing, selecting, and dragging all become part of a single process you can perform without moving your fingers from their typing position.

The TrackPoint consists of a **stick** on the keyboard and three **click buttons** below the keyboard. Movement of the pointer on the screen is controlled by the amount of pressure you apply to the nonslip cap on the stick in any direction parallel to the keyboard; the stick itself does not move. The speed at which the pointer moves corresponds to the pressure you apply to the stick. The function of the click buttons depends on the software you are using.

Distinctive Functions of Your Computer

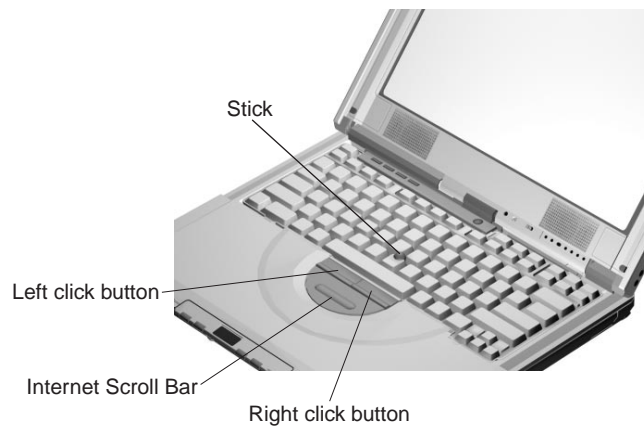


If you are not familiar with using the TrackPoint, these instructions will help you get started:

1. Place your hands in the typing position and press gently with either index finger on the stick in the direction you want the cursor to move.

Pressing the stick away from you moves the cursor up the screen; pressing it toward you moves the cursor down the screen. You can also move the cursor side to side by pressing sideways.

Note: The cursor may drift. This is not a defect. Do not use the TrackPoint until the cursor stops moving.


Distinctive Functions of Your Computer

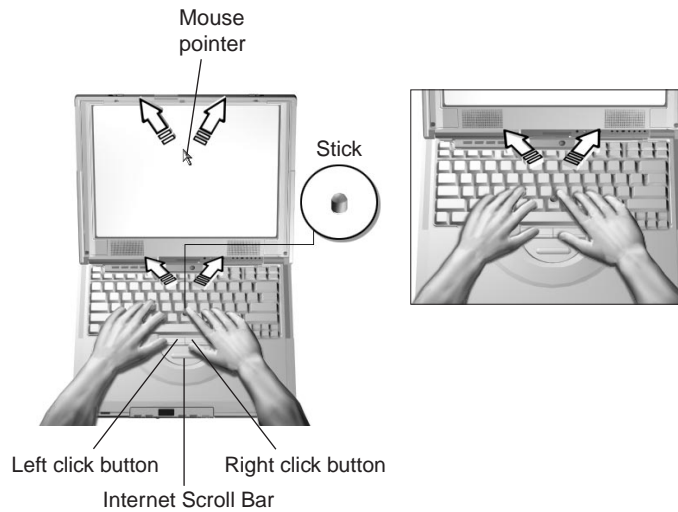

2. Press the click buttons with either thumb to select and drag as required by your software.

Changing the Cap

The cap (1) on the end of the TrackPoint is removable. You can replace it with the spare shipped with your computer.

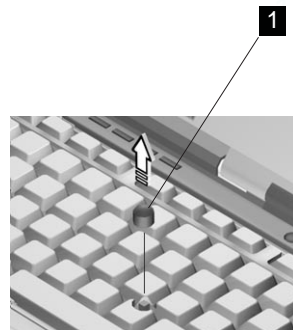


For more information on customizing the TrackPoint and using the Internet Scroll Bar, see “Customizing the TrackPoint” on page 50.

Distinctive Functions of Your Computer





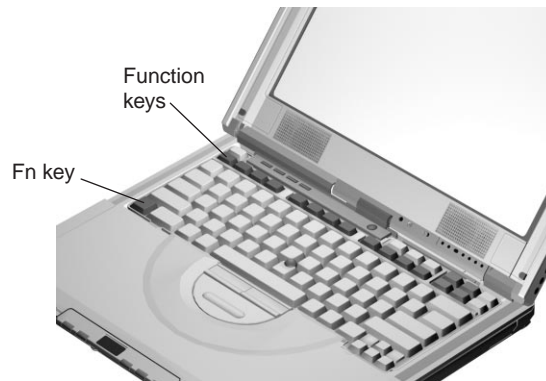


Fn Key

The **Fn** key function allows you to change operational features instantly. When you use the following functions, press and hold the **Fn** key; then press the appropriate function key (**F1** to **F12**) or other keys (**Home** and **End**).



Distinctive Functions of Your Computer

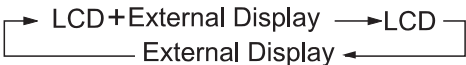The following table shows the function of the **Fn** key combined with keys:

Feature and Icon	Key Combination	Meaning
Power Mode Functions		
Power Management Properties 	Fn+F2	If you press this key combination, the Power Management Properties window appears. You can view and set parameters for battery status in the window.
Sleep 	Fn+F4	The computer enters sleep mode. You can set the sleep button function in the "Advanced" section of the Power Management Properties window.
Other Functions		
Control at a glance ? 	Fn+F1	The Control at a glance screen appears. This screen briefly describes the different user control features of the computer, including the Easy Launch buttons and the Media Center.
Switching between the LCD and the external monitor 	Fn+F7	Computer output is displayed in the following order when an external monitor is attached. 
Increase brightness ▲ 	Fn+Home	This increases the brightness of the computer LCD.
Decrease brightness ▼ 	Fn+End	This decreases the brightness of the computer LCD.
Contrast up	Fn+Insert	This increases the contrast of the computer LCD.
Contrast down	Fn+Delete	This decreases the contrast of the computer LCD.

Note: The contrast Fn key functions are available only on HPA models. The TFT models have optimized contrast settings.

Easy Launch Buttons

The Easy Launch buttons are four customizable keys located to the left of the power switch. These keys allow you to launch programs or visit Web sites at a single press of a button.

Distinctive Functions of Your Computer




For more information on customizing the Easy Launch buttons, see “Easy Launch Buttons Customization Utility” on page 37.

Numeric Keypad

The keyboard has some keys that, when enabled, work as if they were on a 10-key numeric keypad. (The numeric keypad on the keyboard is not active when the external keyboard or the external numeric keypad is attached to the computer.)


To enable or disable the numeric keypad, press and hold **Shift** and then press **NumLk**.

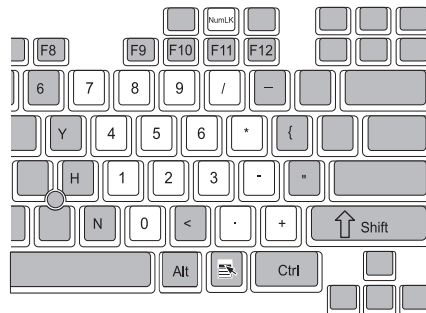

If the numeric keypad is enabled, press and hold **Shift** to temporarily use the cursor- and screen-control keys.

Note: The functions of the cursor- and screen-control keys are not printed on the keys.

Distinctive Functions of Your Computer

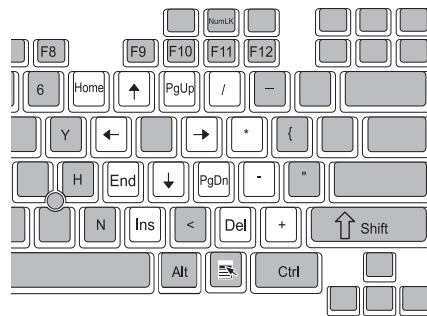


Keyboard Light

Some models include a unique, built-in Keyboard Light that lights up the keyboard area and allows you to use your computer at night or in dimly-lit areas.

Note: This feature is available only on select models.

To turn on the Keyboard Light, slide the Keyboard Light switch to the right.

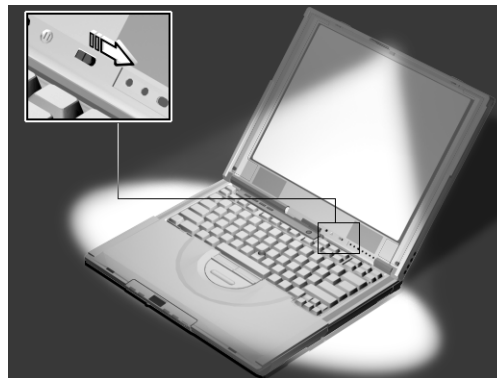

Important

- Do not use the Keyboard Light for an extended period of time.
- The Keyboard Light works even when the computer power is off. Do not forget to turn off the Keyboard Light when you are not using it.

CD-ROM or DVD-ROM Drive

The ThinkPad i Series 1400/1500 computer comes with either a built-in CD-ROM or DVD-ROM drive. The CD-ROM or DVD-ROM drive allows you to use compact discs (CDs).

The following CDs are supported by the computer:

- Music CDs
- Photo CDs
- CD-ROM or CD-ROM XA
- Video CDs

In addition, the DVD-ROM drive allows you to play back DVD Video movies.

Using the CD-ROM or DVD-ROM Drive

To use the CD-ROM or DVD-ROM drive, do the following:

1. Turn on the computer.
2. Push the CD-ROM or DVD-ROM eject button on the side of the computer; then pull out the CD-ROM or DVD-ROM tray.
3. **Fit your CD or DVD on the center pivot. Firmly press the CD or DVD down until you hear it click into place.**



4. Push the tray into the computer until it fully closes.

The way you access the data on the CD or DVD depends on what type it is.

Distinctive Functions of Your Computer

To remove the CD or DVD, do the following:

1. Close the application program that uses the CD or DVD.
2. Push the CD-ROM or DVD-ROM eject button on the side of the computer; then pull out the CD-ROM or DVD-ROM tray.
3. Lift the CD or DVD by its edge while pressing the pivot.



4. Push the tray into the computer until it fully closes.

Handling CDs and DVDs

CDs and DVDs are high-density media that must be handled with care and kept clean to ensure that data remains readable. Keep in mind the following to maintain reliability:

- Hold the disc by the edges. Do not touch the surface of the disc.
Note: DVDs may have data on both sides of the disc. In this case, do not touch the surface of both sides.
- To remove dust or fingerprints, wipe the disc from the center to the outside of the disc. Wiping the disc in a circular direction can cause loss of data.
- Do not write on the surface.
- Do not store or place the disc in direct sunlight
- Do not use benzene, thinner, or other cleaners to clean the disc. Use a CD-ROM or DVD-ROM cleaner kit.
- Do not flex or bend the disc.

Distinctive Functions of Your Computer

Playing Music CDs

The ThinkPad i Series 1400/1500 computer allows you to play music CDs without turning on the computer.

Easy-to-use front panel Media Center controls turn your computer into a music CD player. To play a music CD without turning on the system:

1. Slide the Media Center power button to the right, then release it.
2. Press the stop button to eject the CD-ROM or DVD-ROM tray; then pull out the tray.
3. Fit your music CD on the center pivot. Firmly press the CD down until you hear it click into place.
4. Push the tray into the computer until it fully closes.
5. Wait until the number "1" appears on the audio CD status LCD.
6. Press the audio CD playback controls to play the tracks on the music CD.
7. Adjust the volume if necessary.

Notes:

1. Using the Media Center control panel to control music CD playback with the computer on requires the ESS AudioRack (for CD models) or Mediamatics DVDEExpress software (for DVD models), and the Easy Launch buttons Customization Utility programs to be installed.
2. The music CD player has power-saving features. Press a playback control button to wake up the music CD player.

Playing DVD Movies

Distinctive Functions of Your Computer

DVD Movie Regions

DVD movies are divided into the following regions.

Country or Region	Movie Region
U.S.A., Canada	1
Europe, Middle East, South Africa, Japan	2
Southeast Asia, Taiwan, Korea (South)	3
Latin America, Australia, New Zealand	4
Former U.S.S.R., parts of Africa, India	5
People's Republic of China	6

The ThinkPad i Series 1400/1500 DVD allows you to play DVD movies of a selected region. You can set the region code of your DVD player a maximum of five times.


To start playing a DVD movie, do as follows:

Note: The first time you run the Mediamatics** DVD Player, you need to set the region code. Make sure you insert a DVD that corresponds to the region code that you will set.

1. Push the DVD-ROM eject button on the side of the computer; then pull out the DVD-ROM tray.
2. **Fit your DVD on the center pivot. Firmly press the DVD down until you hear it click into place.**
3. Push the tray into the computer until it fully closes.

The DVD Player appears.

Distinctive Functions of Your Computer

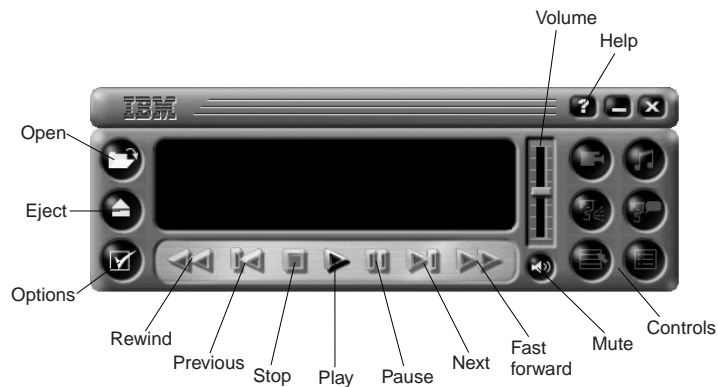

Note: You can also start the player as follows:

- Press the Media Center play/pause button.
- Click **Start**. Move the cursor to **Programs**, **Mediamatics DVDEExpress**; then click **Mediamatics DVD Player**.



4. Select the region code of the DVD movie you inserted, and click **OK**. The following window appears.

Distinctive Functions of Your Computer



5. Verify the setting and click on **OK**.

Note: You have now set the region code for the first time. You can change the region code four more times after this.


6. The DVD movie begins playing.

Note: You can use the Media Center control panel to control the playback of DVD movies.

Attention: You can set the region code of your DVD player a maximum of five times. The fifth time you set the region is permanent.


To change the region code of your DVD player:

1. Insert a DVD movie with a different region code (from the last time you set). The following dialog box appears.

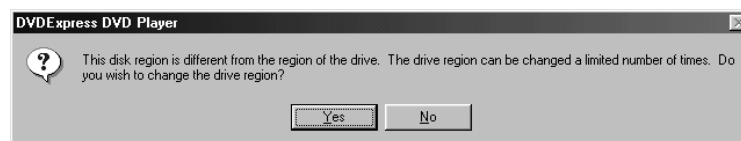


2. Click **Yes** to change the region code. The following dialog box appears.

Distinctive Functions of Your Computer

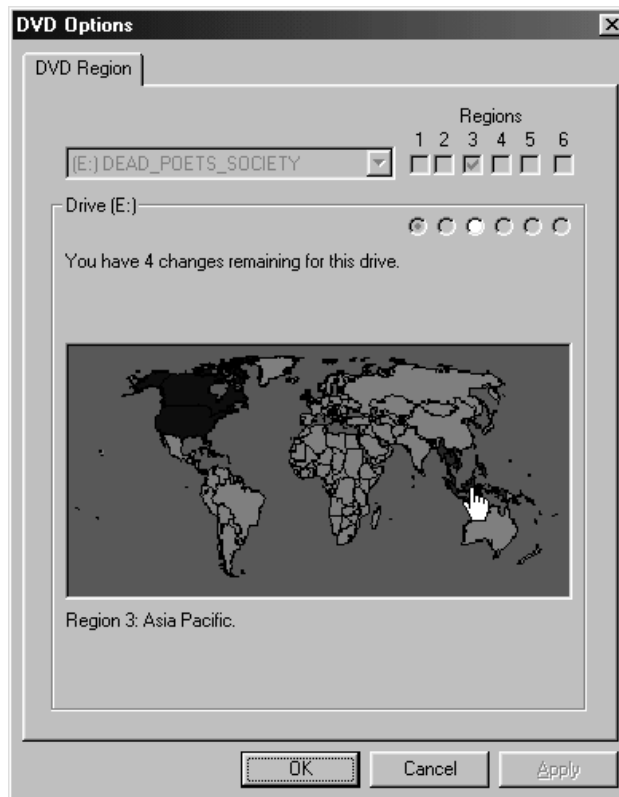

3. Select the region code of the DVD movie you inserted, and click **OK**. The following dialog box appears.

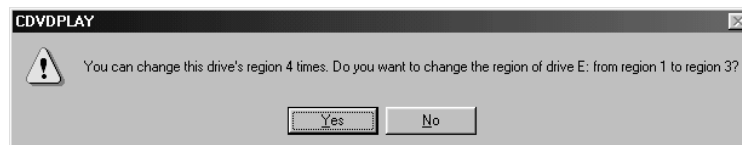

4. Click **Yes** to confirm.

Click the **Help** button for more information on how to use the DVD movie playback software.

To check how many times your DVD player's region code has been set:

1. Start the DVD player.

Distinctive Functions of Your Computer

2. Click the **DVD Options** button.
3. Click the DVD Region tab. The following dialog box appears:



ThinkPad Utility Programs

Your ThinkPad computer has the following utility programs for easy configuration:

- BIOS Utility
- Notebook Manager program
- Sleep Manager program
- Easy Launch Buttons Customization Utility

This section summarizes these utility programs.

BIOS Utility

Your computer provides a BIOS Utility which allows you to select various setup parameters:

Distinctive Functions of Your Computer

- **System Information:** View information about the computer.
- **Basic System Settings:** Set date and time.
- **Startup Configuration:** Set startup options.
- **Onboard Devices Configuration:** Set device resource settings.
- **System Security:** Set a password.
- **Load Default Settings:** Load the default settings for all parameters.

To start the BIOS Setup Utility, do as follows:

1. Remove any diskette from the diskette drive, and remove any CD from the CD-ROM drive; then turn off the computer.
2. Turn on the computer.
3. As the ThinkPad logo is being displayed, a message appears "Press F1 for IBM BIOS Setup Utility"; press **F1**.

The BIOS Utility menu appears:

BIOS Utility
System Information Basic System Settings Startup Configuration Onboard Devices Configuration System Security Load Default Settings
↑↓ = Move highlight bar, ↵ = Select, Esc = Exit

4. Move to an item you want to change using the up/down arrow keys, and press **Enter**.

A submenu is displayed.

Distinctive Functions of Your Computer

5. Change the items you wish to change.

To change the value of an item, use the left/right arrow keys.

6. Press **Esc** to exit from the submenu.

7. Press **Esc** from the main menu and press **Enter** to save your changes and exit from the BIOS Setup Utility menu.

Your computer restarts.

Note: If you would like to discard your changes, select **No** and press **Enter**.

System Information: Selecting the **System Information** item and pressing **Enter** displays the following "System Information" submenu.

System Information		Page 1/1
CPU Type & Speed	Celeron 400 MHz	
Diskette Drive A	1.44MB 3.5-inch	
System with	CD-ROM	
Hard Disk Drive	6194 MB	
HDD Serial Number	HROHRLH1686	
System BIOS Version	V3.0 R01-A0H	
VGA BIOS Version	ATI MACH64 SDRAM BIOS 4.213T	
Esc = Exit		

The "System Information" submenu includes the following:

- **CPU Type and Speed** shows the type and speed (in Megahertz) of the processor.
- **Diskette Drive A** shows information on the diskette drive.
- **System with** shows information on the internal high-capacity media drive.
- **Hard Disk Drive** shows the capacity of the hard disk drive.

Distinctive Functions of Your Computer

- **HDD Serial Number** shows the serial number of the hard disk drive.
- **System BIOS Version** shows the BIOS version of the computer.
- **VGA BIOS Version** shows the BIOS version of the computer's video.

Basic System Settings: Selecting the **Basic System Settings** item and pressing **Enter** displays the following "Basic System Settings" submenu.

Basic System Settings		Page 1/1
Date	[Mon May 31, 1999]	
Time	[09:52:00]	
↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help		

The "Basic System Settings" submenu includes the following:

- **Date** sets the system date.
- **Time** sets the system time.

Note: You can also set the current date and time in Windows 98.

Startup Configuration: Selecting the **Startup Configuration** item and pressing **Enter** displays the following "Startup Configuration" submenu.

Distinctive Functions of Your Computer

Startup Configuration		Page 1/1
Boot Display	[Auto]	
Screen Expansion	[Enabled]	
USB Function Support	[Enabled]	
Hotkey Beep	[Enabled]	
Fast Boot	[Enabled]	
Boot Drive Sequence:		
1st.	[Floppy Disk]	
2nd.	[CD-ROM]	
3rd.	[Hard Disk]	
↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help		

This submenu is used to set startup options and change the startup sequence of the drives in your computer. It includes the following:

- **Boot Display** sets the display output device on start up.
- **Screen Expansion** expands or shrinks the screen on your computer.
- **USB Function Support** enables or disables the USB function on your computer.
- **Hotkey Beep** enables or disables beeps when an Fn key function is pressed.
- **Fast Boot** enables or disables Fast Boot feature on your computer.

Fast Boot allows your computer to start up and resume faster. When enabled, the BIOS communicates with the Windows 98 operating system with ACPI about Plug-and-Play resources settings and information about previous start ups.

- **Boot Drive Sequence (1st, 2nd and 3rd)** specifies the start up sequence of local drives.

Distinctive Functions of Your Computer

Onboard Devices Configuration: Selecting the **Onboard Devices Configuration** item and pressing **Enter** displays the following "Onboard Devices Configuration" submenu.

Onboard Devices Configuration		Page 1/1
Serial Port	[Enabled]	
Base Address	[3F8h]	
IRQ	[4]	
Parallel Port	[Enabled]	
Base Address	[3BCh]	
IRQ	[7]	
Operation Mode	[Bi-directional]	
ECP DMA Channel	[-]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help

Note: You do not need to change the settings in the screen because the default settings are already optimized for you. Changing the values may cause device conflicts.

The "Onboard Devices Configuration" submenu includes the following:

- **Serial Port section** enables and sets the resources values for the serial port.
- **Parallel Port section** enables and sets the resource values for the parallel port.

Distinctive Functions of Your Computer

System Security: Selecting the **System Security** item and pressing **Enter** displays the following "System Security" submenu.

System Security		Page 1/1
Setup Password -----	[None]	
Power-on Password -----	[None]	
Hard Disk Password -----	[None]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help

This submenu is used to set the power-on password, setup password, and hard disk password. Refer to "Using Passwords" on page 76 for details.

Load Default Settings: Selecting this item displays the following dialog box.

Do you want to load default settings?	
[Yes]	[No]

To load factory-default settings for all the parameters in the BIOS Utility, select **Yes** and press **Enter**. Otherwise, select **No** and press **Enter**.

CAUTION:

Selecting Yes will erase all your changes.

Distinctive Functions of Your Computer

Notebook Manager

The Notebook Manager allows you to set passwords, the startup sequence of drives and power management settings. It also shows the current hardware configuration.

Note: Display-related **Fn** key functions are disabled when you access the Notebook Manager.

To start the Notebook Manager program, do as follows:

1. Click **Start**.
2. Move the cursor to **Programs, Notebook Manager**; then click **Notebook Manager**.


The Notebook Manager program consists of five pages:

- Information Viewer
- POST
- Boot Sequence
- Password
- Display Device

Note: Making changes to most settings in Notebook Manager take effect the next time the computer restarts. If you make changes in the Power Management and Display Device pages, these take effect immediately.

Information Viewer Page: The Information Viewer page summarizes and lists information about the specifications and settings of the different components of your computer.


Distinctive Functions of Your Computer

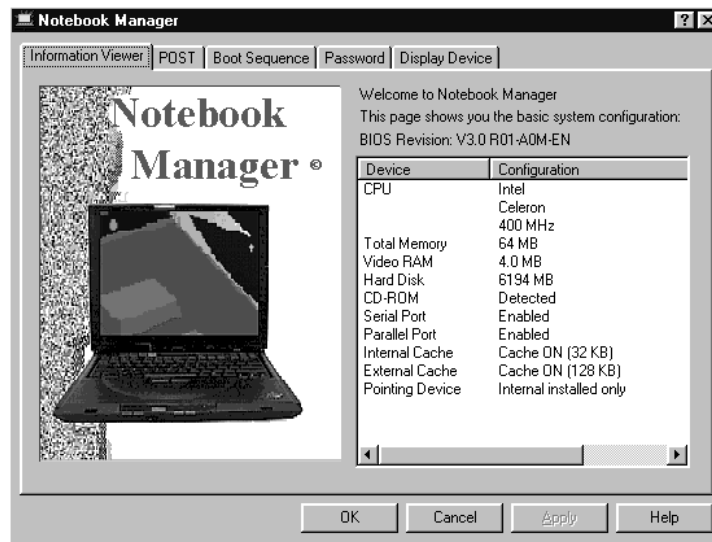

Note: The values and settings in the window above may differ from the ones on your computer.

Click the **Help** button to learn more about these system components.

POST Page

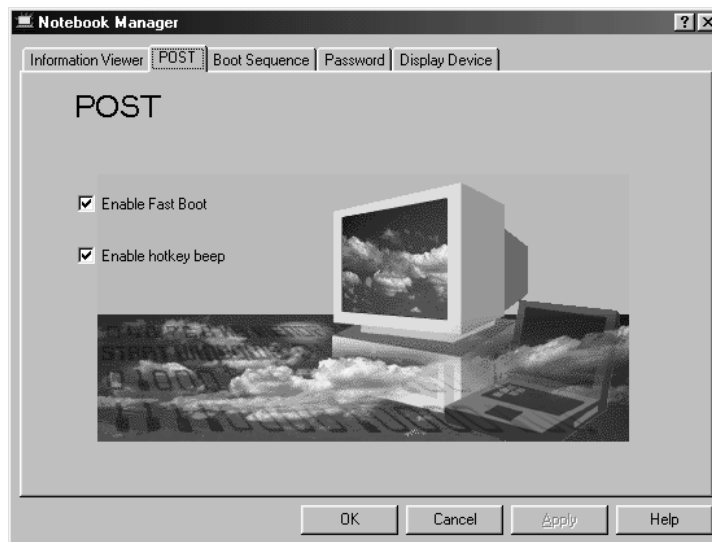

Distinctive Functions of Your Computer


The POST page displays the following items:

- *Enable Fast Boot.* enables or disables the Fast Boot feature on your computer.

Fast Boot allows your computer to start up and resume faster. When enabled, the BIOS communicates with the Windows 98 operating system with ACPI about Plug-and-Play resources settings and information about previous start ups.

- *Enable hotkey beep.* When enabled, the computer gives off beeps when an Fn key function is pressed.


Boot Sequence Page: In the Boot Sequence page, you can specify the startup sequence of the drives in your computer.

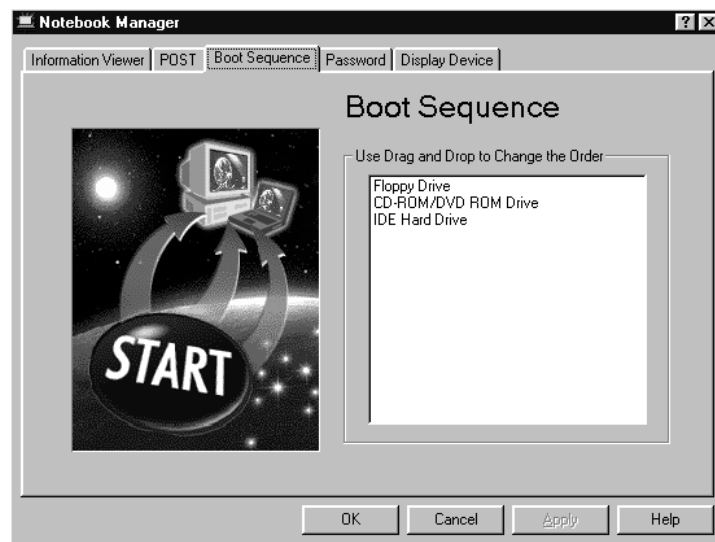

The Boot Sequence page allows you to set the startup sequence of the drives in your computer by simply dragging and dropping the drives in the list window. Click the **Help** button to learn more about these startup sequence settings.

Distinctive Functions of Your Computer

Password Page: In the Password page, you can set, modify, or delete the password(s) for your computer.

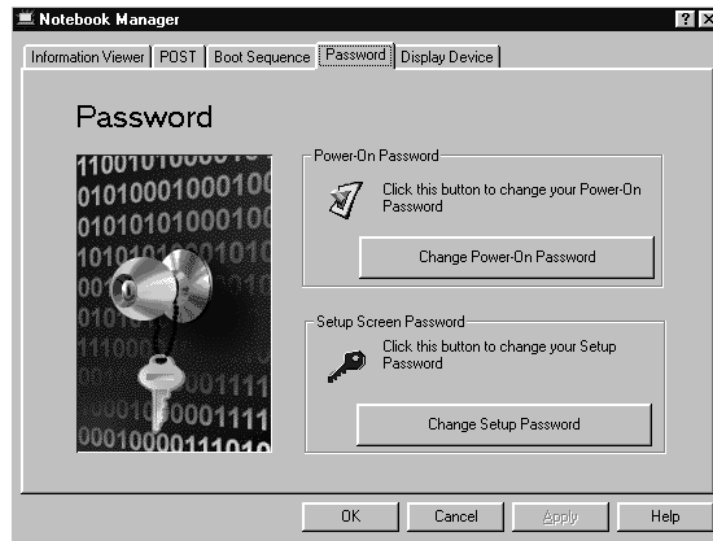


The Password page displays the following items:

- *Power-On Password.* The Power-On Password prevents unauthorized access to your computer at startup and when the computer resumes from hibernation mode.
- *Setup Password.* The Setup Password prevents unauthorized access to the BIOS Utility and Notebook Manager.

For more information on passwords, see “Protecting Your Computer” on page 75.

Distinctive Functions of Your Computer

Display Device Page: In the Display Device page, you can set options related to your display and attached external display devices.

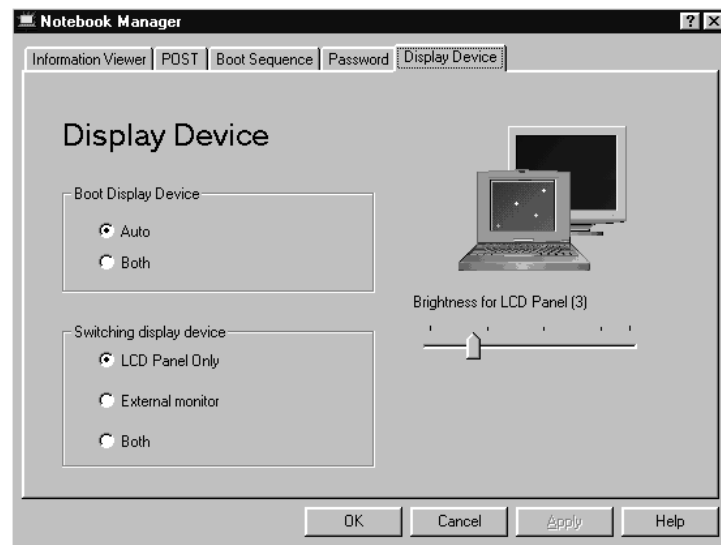

The Display Device page displays the following items:

- *Boot Display Device*. Sets the default display device on startup.
- *Switching Display Device*. Sets the current display device.

Notes:

1. You can also press **Fn+F7** to switch between display devices.
 2. Make sure an external monitor is connected before External Monitor is selected.
- *Brightness for LCD Panel*. Sets the brightness level for the computer LCD.

Note: A contrast slider is available for HPA models.

Sleep Manager

The Sleep Manager program works with your computer's BIOS and Windows ACPI (Advanced Configuration and Power Interface) to manage the hibernation operation on your computer. In hibernation mode, the computer shuts off after saving the current state of your

Distinctive Functions of Your Computer

computer into your hard disk drive. The next time you power on your computer, it resumes from where you left off.

Its functions include:


- creating the hibernation file where Sleep Manager saves the current state of the computer
- verifying if the hibernation file is valid, and automatically re-creates and adjusts the file if necessary
- saving and loading the contents of the hibernation file when entering into and resuming from hibernation mode

To open the Sleep Manager program, locate the Sleep Manager icon on the taskbar and double-click on it.

Note: You can also access Sleep Manager as follows:

1. Click **Start**.
2. Move the cursor to **Programs, Sleep Manager**; then click **Sleep Manager**.

The following window appears:

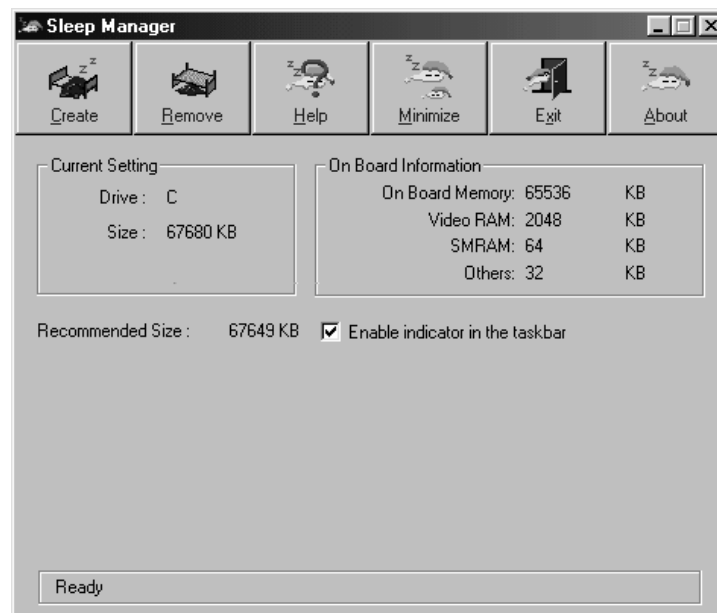

Distinctive Functions of Your Computer

Note: The computer automatically loads Sleep Manager everytime you start Windows 98. When Sleep Manager is active, it takes care of the hibernation file management chores in the background. Do not close this application or the computer may not enter hibernation mode properly.

Click the **Help** button to learn more about the Sleep Manager program.

Easy Launch Buttons Customization Utility

The Easy Launch buttons Customization Utility program enables you to start programs or launch Web sites by pressing one of four customizable keys found to the left of the power switch.

To start the Easy Launch buttons Customization Utility, double-click on the **Easy Launch buttons** icon on the taskbar.

Note: You can also run the Easy Launch buttons Customization Utility as follows:


1. Press **Fn+F1**.
2. Click the **Easy Launch buttons Utility** button in the **Control at a glance** window.

or

1. Open the Control Panel. (Click **Start, Settings, Control Panel**.)
2. Double-click the **IBM Easy Launch buttons** icon.

The following window appears:

Distinctive Functions of Your Computer

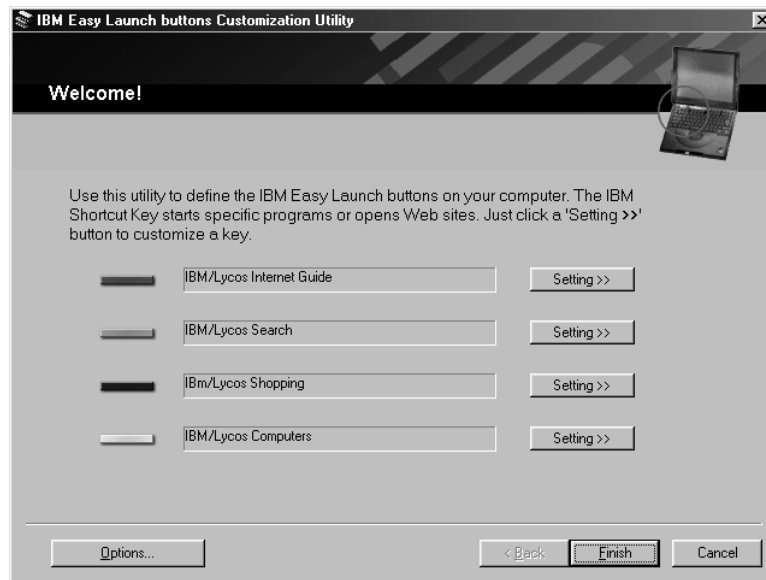

This window shows the current assignments of the Easy Launch buttons.

Note: The window includes instructions on how to use the Easy Launch buttons Customization Utility.

Easy Launch Buttons Options: When you click the Options button in the Easy Launch buttons Customization Utility window, the options window shows the following items:



Distinctive Functions of Your Computer

- **On Screen Display.** When enabled, the title of an application or a Web site is drawn on the desktop. You can customize the color and font.

Note: This feature is available for Easy Launch buttons, Fn+F1, Fn+F2, and Media Center buttons.

- **Sound.** When a wave file is defined as the event for an Easy Launch button in Sound Properties, the utility plays the wave file.

Note: This feature is available for Easy Launch buttons, Fn+F1, Fn+F2, and Media Center buttons.

- **Show icon on taskbar.** When enabled, the Easy Launch buttons icon appears on the taskbar.

Customizing the Easy Launch Buttons: To customize the Easy Launch buttons:

1. Start the Easy Launch buttons Customization Utility.
2. Click the **Setting>>** button for the key you want to customize.


The following window appears:




3. Mark the button beside **Web Site** or **Launch an Application**; then click **Next>**.

Distinctive Functions of Your Computer

If you mark **Web Site**, the following window appears:

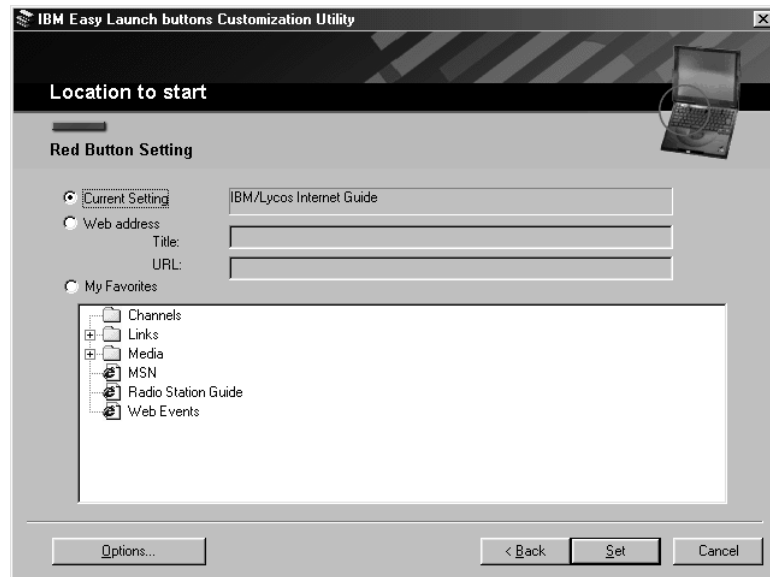

If you mark **Launch an Application**, the following window appears:

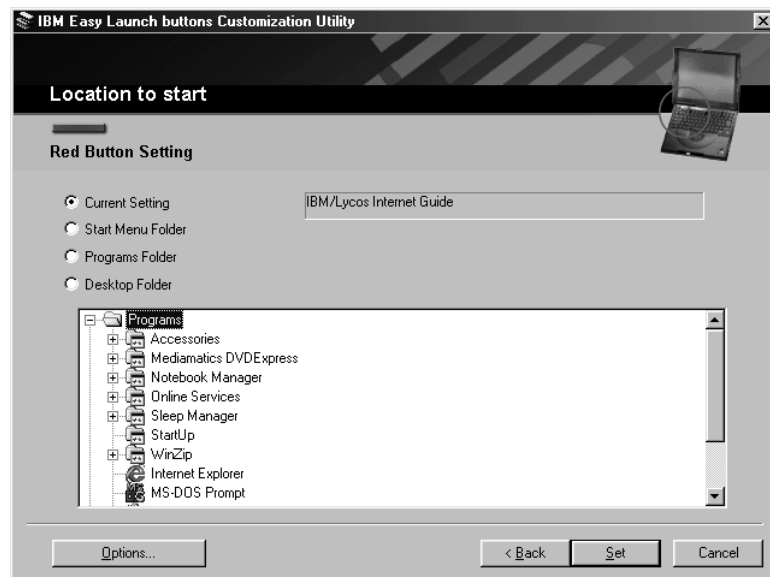

Distinctive Functions of Your Computer

4. Select a Web site or an application you want to assign to the button; then click **Set**.

The main window of Easy Launch buttons Customization Utility reopens.

5. Click **Finish** to complete the customization.

Online User's Guide

Your ThinkPad computer features an online user's guide, so that you will always have key information at your fingertips even if you are traveling. It contains the following information:

- Using your computer outside your home country
- Using the audio, modem and DVD features
- Using your computer with a battery pack
- Using your computer with a PC Card
- Resolving system resource conflicts
- Solving computer problems
- Installing software
- Handling the ThinkPad
- Getting service

To start the online user's guide, click **Start**, move the cursor to **Programs** and **ThinkPad i Series 1400/1500**; then click **ThinkPad i Series 1400/1500 User's Guide**.

The Online User's Guide appears. Go to the section you want, and make a printout if necessary.

Reinstalling Software

To back up your system or reinstall the operating system, your ThinkPad computer has the following features:

Note: These features are for Windows 98. You can also get the latest hardware device drivers from the ThinkPad Web site (see "ThinkPad Web Site or Bulletin Board").

- The ThinkPad Software Selections CD
- The Recovery CD
- ThinkPad Web site or bulletin board

For more information about recovering lost or damaged software, see "Recovering Lost or Damaged Software" on page 112.

ThinkPad Software Selections CD

You can customize your system using this CD. It contains all the software applications and hardware device drivers for your computer in the Windows 98 environment. It features the ThinkPad Software Selections program. (To use the ThinkPad Software Selections CD, see the *Online User's Guide*.)

Recovery CD

If you accidentally erase your hard disk, you can use the Recovery CD to restore the contents of the preinstalled hard disk to what it was at the time of purchase. To use the Recovery CD, see "Using the Recovery CD" on page 113.

ThinkPad Web Site or Bulletin Board

IBM supplies all of the latest hardware device drivers and system BIOS for your computer on the ThinkPad Web site:

<http://www.pc.ibm.com/thinkpad>


You can also use the IBM bulletin board service.

For more information about electronic service and support, see "Getting Service" on page 115.

Replacing the Battery Pack

To replace the battery pack, do as follows:

1. Power off your computer.
2. Disconnect the AC Adapter and cables.
3. Close the LCD and turn the computer over.
4. Slide and hold the battery pack latch to the unlocked position (1); then remove the battery pack (2).

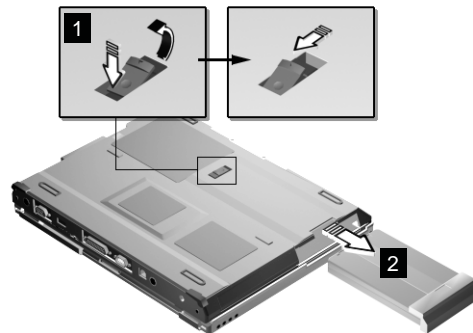

5. To install the new battery pack, insert it into the battery bay. The battery-pack latch automatically snaps into place.

You have finished replacing the battery pack.

Note: You can replace the battery pack when the computer is in hibernation mode or when it is powered off. If you are using a PC Card, the computer might not be able to enter hibernation mode. If this happens power off the computer.

Service Hints & Tips

ThinkPad computers are designed and tested to be durable and function reliably in normal environments. Using common sense and following these tips will help get you many years of comfortable and productive use from your computer.

Handling Your ThinkPad Computer

Laptop computers are precision machines that require a bit of careful handling. Though the IBM ThinkPad computer is designed and tested to be a durable notebook computer that functions reliably in normal work environments, you need to use some common sense in handling it.

ThinkPad Don'ts

- Do not leave the base of your computer in contact with your lap or any part of your body for an extended period when the computer is functioning or when the battery is charging. Your computer dissipates some heat during normal operation. Extended contact to the skin could cause discomfort or, eventually, a skin burn.
- Do not subject your computer to physical punishment, such as dropping or bumping.
- Do not place heavy objects on your computer.
- Do not spill or allow liquids into your computer.
- Do not use your computer in or near water (to avoid the danger of electrical shock).
- Do not pack your computer in a tightly packed suitcase or bag. The compression might cause internal damage.
- Do not disassemble your computer. Only an authorized IBM ThinkPad repair person should disassemble and repair your computer.
- Do not scratch, twist, hit, or push the surface of your computer display.

Service Hints & Tips

- Do not place any objects between the display and keyboard or under the keyboard.
- Do not pick up or hold your computer by the display. When picking up your open computer, hold it by the bottom (keyboard) half.
- Do not modify or tape the latches to keep the display open or closed.
- Do not turn your computer over while the AC Adapter is plugged in. This could break the adapter plug.
- Do not use or store your computer where the temperature is below 5° C or above 35°C (41°F and 95°F).
- Do not place your computer closer than 13 cm (5 in.) from any electrical appliance that generates a strong magnetic field, such as a motor, magnet, TV, refrigerator, or large audio speakers.
- Do not hard-mount your computer in a vehicle or anywhere that it is subject to strong vibration. See the section on ruggedized mobile computers for information on a more appropriate model for demanding applications.
- Do not insert a diskette at an angle. Not inserting the diskette straight into the drive can damage the drive.
- Do not place more than one label on a diskette. Multiple or loose labels can detach or tear and then lodge in the drive.
- Do not touch the lens on the CD-ROM or DVD-ROM tray. You should hold the compact disc by the edges and not touch its surface.
- Do not connect a PBX (private branch exchange) or other digital telephone extension line. **Your computer can use only a public-switched telephone network (PSTN).** Use of a phone line other than PSTN can damage your modem. If you are not sure which kind of phone line you are using, contact your telephone company. Many hotels or office buildings use digital telephone extension lines, so check before connecting the telephone cable in such places.
- Do not place an active cellular phone on the computer.

ThinkPad Do's

Choose a quality carrying case that will provide excellent protection for your computing investment. Treat your computer like a precision piece of electronic machinery.

Register your ThinkPad products with IBM. This can help authorities return your computer to you if it is lost or stolen. Registering your computer also enables IBM to notify you about possible upgrades.

Retain and store packing materials safely out of reach of children to prevent the risk of suffocation from plastic bags.

Check the IBM Web pages at <http://www.pc.ibm.com/support> periodically to get current information about your computer.

Carrying Your Computer

When carrying your computer, follow these instructions to prevent possible damage to your computer and data:

1. Remove any media from the diskette drive or CD-ROM/DVD-ROM drive.
2. Turn off all attached devices.
3. Turn off the computer and close the LCD.
4. Unplug all external cables and cords connected to your computer.
5. Make sure all computer doors and covers are closed.
6. Use a quality carrying case that provides adequate cushion and protection.

Cleaning Your Computer

You should occasionally clean your computer as follows:

- Use a soft cloth moistened with non-alkaline detergent to wipe the exterior of the computer.
- Don't spray cleaner directly on the display or keyboard.
- Gently wipe the LCD with a dry, soft cloth.

Extending Your Battery Life

The amount of battery power consumed by your computer depends on such conditions as the usage frequency, the operating temperature, and the period in storage (if unused). The following tips can help you to extend the life of your battery:

- If your battery is brand new and you are charging it for the first time, it might not become fully charged due to the characteristics of the chemicals in the cell. To maximize performance, ensure that all chemicals in the battery are fully activated by cycling the battery (fully charge, then fully discharge) three times. This procedure is also recommended if you stored the battery for a few months.
- Do not charge the battery pack until all of its power is used. Recharging a battery pack that is not completely discharged can shorten battery life.
- Once you start charging the battery pack, do not use it until it is fully charged.
- Whenever possible, use the ThinkPad battery power-saving modes:
 - standby: The LCD and the hard disk drive are turned off.
 - hibernation: All tasks are stopped. The memory data and the current status of the computer are stored in the hard disk drive; then the power is turned off.
- Decrease the LCD brightness.
- Stop the power supply to a serial device if it is not in use.
- Remove the battery pack and keep it in a cool place if you will not be using the computer for a long period.

Ruggedized Mobile Computers

Some professionals work in environments that may require special ruggedized features to protect their computers from extreme temperature, humidity, and physical punishment. Construction, public service, distribution, service repair, and utilities are some of the environmentally demanding professions that may require rugged mobile computers that can withstand stresses. For these applications, IBM offers such computers (not Thinkpad Systems), especially designed

Service Hints & Tips

for mobile professionals who need a system for managing and communicating information from the field. For more information on these computers, consult your IBM Business Partner or visit our website at www.networking.ibm.com/wireless.

For More Information

For information via the World Wide Web	http://www.pc.ibm.com/us/thinkpad www.networking.ibm.com/wireless
For product and dealer location information	1 800 426-2968
To access the IBM PC Company Bulletin Board	1 919 517-0001
For product information sent directly to your fax machine	1 800 IBM-3395 (1 800 426-3395)
IBM PC Product Guide Directory (to specific product sections)	Select FaxDoc #12745
IBM ThinkPad Information Directory	Select FaxDoc #11078

Extending the Features of Your Computer

This chapter provides information on how to customize and extend the ThinkPad computer's features. You can use the ThinkPad computer with external devices and increase the memory.

Customizing the TrackPoint	50
Using the Press-to-Select Window	51
Using the Sensitivity Window	52
Using the Scrolling Window	53
Increasing Memory	55
Attaching an External Mouse, Keypad or Keyboard	59
Attaching an External Mouse or Numeric Keypad	59
Attaching an External Keyboard and Mouse	61
Disabling the TrackPoint	62
Attaching an External Monitor	63
Display Output Location	64
Display Modes	66
Using the Dual Display Function	67
Disabling Dual Display	68
Considerations When Using Dual Display	68
Attaching a Television to Your Computer (select models only)	69
Attaching a Printer	71
Inserting a PC Card	72
Removing the PC Card	73

Customizing the TrackPoint

You can customize the TrackPoint by doing the following:

1. Click on **Start**.
2. Move the cursor to **Settings**, then click on **Control Panel**.
3. Double-click on **TrackPoint**.

The "TrackPoint Properties" window appears.


You can set the following features in this window:

- Press-to-Select
- Sensitivity
- Scrolling or Magnifying Glass

Note: To use the TrackPoint functions, you must disconnect any PS/2 mouse and enable the TrackPoint.

You can set the features by going to pages corresponding to the tabs.

Using the Press-to-Select Window

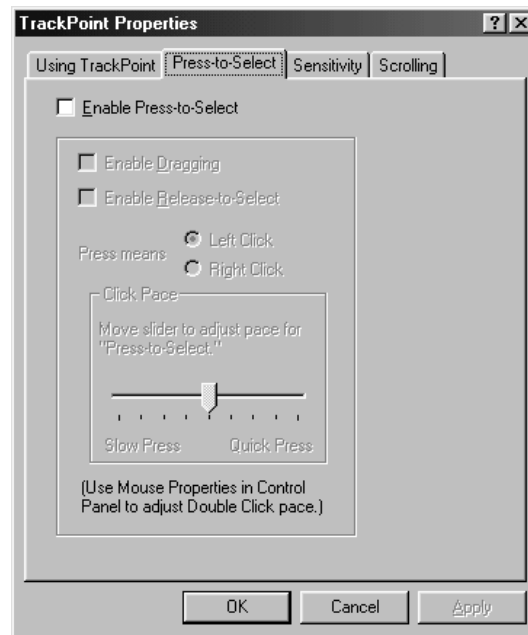

Note: To use the **Press-to-Select** function, you must disconnect any PS/2 mouse and enable the TrackPoint.

If you enable Press-to-Select by putting a check mark in the **Enable Press-to-Select** box, you can make the TrackPoint stick function the same as the left or right click button on the keyboard.


- Click one of the **Press means** radio buttons to select which button the stick will simulate: either the left or the right button. For example, if you select **Left Click**, you can start a program with the TrackPoint by putting the pointer on the program's icon and applying light pressure on the stick.

To adjust the pressing timing of the stick, set **Click Pace**.

Note: If you set the pace too slow, you might notice unintended clicks, a pointer delay, or a dragging delay. However, if you set the pace too fast, you might find Press-to-Select hard to use.


Customizing the TrackPoint

Using the Sensitivity Window

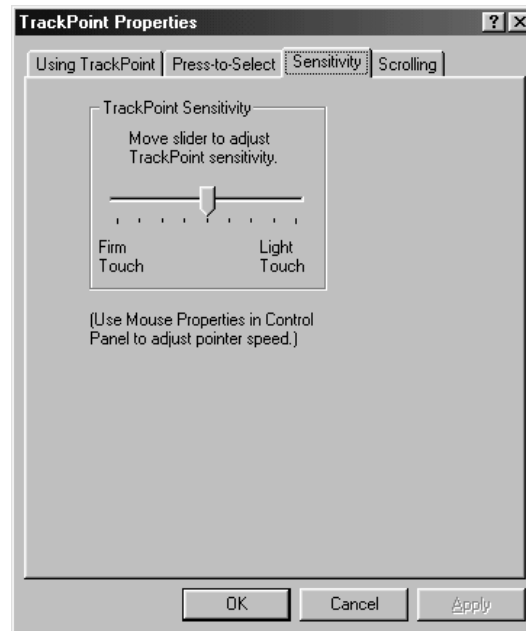

This function adjusts the force required for both cursor movement and Press-to-Select. Slide toward **Firm Touch** to increase the force needed to move the pointer, and to increase the force needed to activate Press-to-Select. Slide toward **Light Touch** to decrease the force needed to move the pointer, and to reduce the force needed to activate Press-to-Select.

Using the Scrolling Window

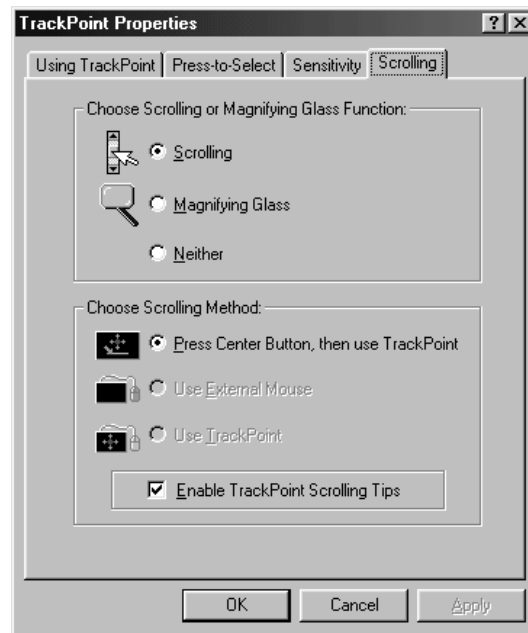

Note: To use the scrolling and magnifying glass functions, you must disconnect any PS/2 mouse and enable the TrackPoint.

By clicking on the **Scrolling** tab, you can set the scrolling properties of your TrackPoint:

- **Choose Scrolling or Magnifying Glass Function** Select one of the following radio buttons:

- **Scrolling**

This function enables you to navigate easily through long documents or large spreadsheets with a press of a button. To scroll, press the Internet Scroll Bar and then use the TrackPoint instead of the scroll bars in any program.

- **Magnifying Glass**

This function enables you to enlarge a movable area of your display. You can click on objects "through" the magnifying glass. The right button changes the size of the magnifying glass, and left button changes its magnifying power. Move

Customizing the TrackPoint

the magnified area the same way as you use the scrolling function; in other words, press the Internet Scroll Bar and then use the TrackPoint to move the magnified area.

- **Neither**

This function disables the scrolling and magnifying glass functions.

- **Choose Scrolling Method:**


- **Press Center Button, then use TrackPoint**

Holding down the Internet Scroll Bar on the keyboard allows the TrackPoint to control the scrolling or the magnifying glass. The TrackPoint operates normally (controls the mouse cursor) when the Internet Scroll Bar is not pressed.

Note: The **Use External Mouse** and the **Use TrackPoint** radio buttons are not supported.

Increasing Memory

Increasing memory capacity is an effective way to make programs run faster. You can increase the amount of memory in your computer by installing a dual inline memory module (DIMM), available as an option.

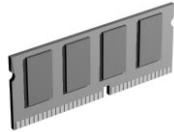

Different capacities of DIMM are available. You can install DIMMs directly in the memory slots on the bottom of the computer. Your computer memory capacity can be expanded up to 256 MB (two 128 MB DIMM options).


Note: Base memory (32 MB or 64 MB) occupies one DIMM slot.

Attention: The ThinkPad i Series 1400/1500 computer supports the static dynamic random access memory (SDRAM) card only. It does not support the enhanced data output dynamic random access memory (EDO DRAM) card. If you install a DIMM that is not supported by your computer, an error code might appear when the system starts. The appropriate memory option can be purchased through your IBM reseller or IBM marketing representative.

To install the DIMM, do the following:

1. Power off the computer; then disconnect the AC Adapter and all cables from the computer.
2. Close the LCD, turn the computer over, and then remove the battery pack.
3. Loosen the screw on the memory slot cover; then remove the cover.

Increasing Memory

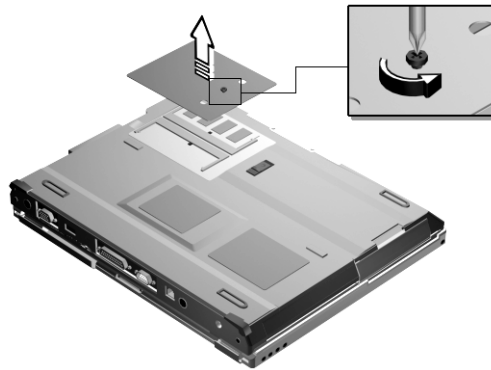


4. Install the DIMM into the memory slot.

Note: To avoid damaging the DIMM, do not touch its contact edge.

- a. Find the notch on the side of the DIMM.
- b. With the notched end of the DIMM toward the right side of the socket, insert the DIMM, at an angle or approximately 20°, into the socket; then press it firmly (1).
- c. Pivot the DIMM until it snaps into place (2).

If you want to install two DIMMs, repeat these steps.

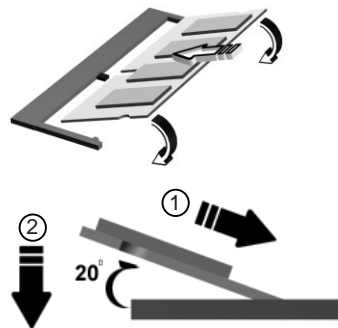

5. Replace the memory slot cover over the memory slot, aligning the back side of the cover first as shown; then tighten the screws.
6. Replace the battery pack.
7. Turn the computer over again, power on the computer.

Increasing Memory

8. Confirm that the new memory size is detected:
 - a. While the ThinkPad logo is being displayed, wait for the BIOS Utility prompt before pressing **F1**.
 - b. Select **Startup Configuration** and press **Enter**.
 - c. Disable **Fast Boot**.
 - d. Save the changes and exit the BIOS Utility.
 - e. Verify the memory value (shown near the top left corner of the screen) when the computer restarts.

Note: After you have verified the memory value, shutdown and restart the computer. Enter the BIOS Utility to enable Fast Boot.
9. You have finished installing the DIMM. Reconnect all cables.

Notes:

1. If the total memory size is not the same as the value you calculated, power off the computer and see pages 57 and 55 to reinstall the DIMM.
2. If you changed the memory installed in the computer, Sleep Manager automatically updates the hibernation file (see "Sleep Manager" on page 35).

How to Calculate Total Memory Size

Calculate your total memory size in kilobytes (KB) by adding the DIMM memory size to the base memory size (32384 KB for a computer with 32 MB base memory).

Note: 384 KB is reserved by the system.

For example, if you installed a 32MB DIMM to a computer with 32 MB base memory, you should have about 64 MB.


Your computer displays the memory size in kilobytes. For example, 640 KB (system memory) + 64512 (extended memory) = 65152 KB.

Removing a DIMM

If you need to remove a DIMM, follow these steps:

Increasing Memory

1. Power off the computer and disconnect the AC Adapter and all cables from the computer.
2. Close the LCD, turn the computer over, and then remove the battery pack.
3. Loosen the screw and remove the memory slot cover.
4. Press out on the latches on both edges of the socket at the same time.

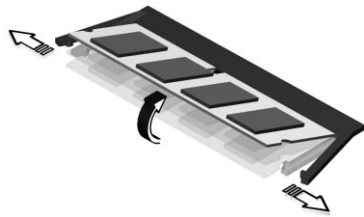

5. Remove the DIMM.
Be sure to save the DIMM for future use.
6. Replace the memory slot cover; then tighten the screws.
7. Replace the battery pack.
8. Turn the computer over again; then connect the AC Adapter and all the cables you disconnected.


Note: Base memory (32 MB or 64 MB) occupies one DIMM slot.

Attaching an External Mouse, Keypad or Keyboard

Attaching an External Mouse, Keypad or Keyboard

This section explains how to attach an external mouse, external numeric keypad, and external keyboard to your computer.

Attaching an External Mouse or Numeric Keypad

You can attach an external mouse or numeric keypad to the PS/2 mouse and keyboard connector () on the rear of the computer.



Mouse

External keypad

If you want to attach the mouse, attach it directly to the PS/2 mouse and keyboard connector as shown:



The TrackPoint is disabled automatically.

You can use an external serial or USB mouse simultaneously with the TrackPoint.

Attaching an External Mouse, Keypad or Keyboard


Note: If you have not installed the serial mouse device driver before, do as follows after attaching the serial mouse:

1. Click **Start**.
2. Move the cursor to **Settings**, then click **Control Panel**.
3. Double-click **Add New Hardware** to search for and install the serial mouse driver.
4. Follow the instructions on the screen.

If you want to use both the external numeric keypad and mouse at the same time, first connect the keypad cable to the computer; then connect the mouse cable to the connector at the rear of the keypad.




Note: You can remove the keypad cover and use it as a stand for the keypad.

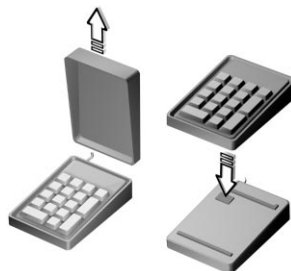

Attaching an External Mouse, Keypad or Keyboard

Attaching an External Keyboard and Mouse

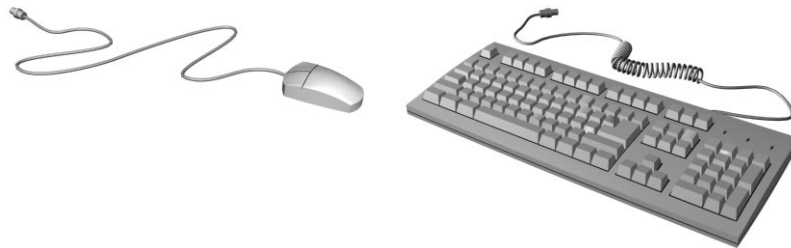

Mouse

External keyboard

You can connect an external keyboard to your computer either directly through the PS/2 mouse and keyboard connector or through the keyboard/mouse cable (available separately as an option).


When the external keyboard is attached, the following keys are not available:

- Numeric keypad on the computer keyboard
- External numeric keypad

Instead, use the numeric keypad on the external keyboard.

To attach the external keyboard, turn off the computer, attach the keyboard to the keyboard connector of the keyboard/mouse cable (1), and then attach the keyboard/mouse cable to the computer (2).

You can attach a mouse to the mouse connector of the keyboard/mouse cable.

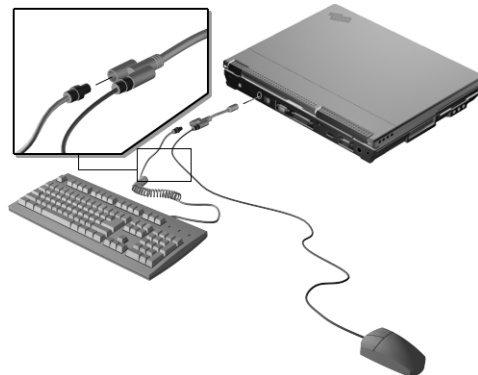

Attaching an External Mouse, Keypad or Keyboard

Using the IBM ThinkPad Space Saver Keyboard

When using the IBM ThinkPad Space Saver Keyboard, **do not** install the device driver supplied with the Space Saver Keyboard. The TrackPoint on the ThinkPad is disabled when you use the Space Saver Keyboard.

Disabling the TrackPoint

Attaching a PS/2 mouse automatically disables the TrackPoint. You can use a serial or USB mouse simultaneously with the TrackPoint. If you wish, you can choose to disable the TrackPoint.

To disable the TrackPoint:

Note: Before you disable the TrackPoint, make sure you connect and enable an external mouse.

1. Click **Start**, move the cursor to **Settings**, then click **Control Panel**.
2. Double-click **System**.
3. Click the **Device Manager** tab.
4. Double-click **Mouse**.
5. Double-click **PS/2 TrackPoint**.
6. Put a checkmark before **Disable in this hardware profile**.
7. Click **OK**.

Note: To enable the TrackPoint, remove the checkmark before **Disable in this hardware profile**.


Attaching an External Monitor

This section provides information about using the computer LCD and an external monitor. It also provides things to consider when using DOS applications.

The LCD of your computer uses thin-film transistor (TFT) technology or high performance addressing (HPA) technology. The TFT LCD displays output with XGA (1024x768 resolution) or SVGA (800x600 resolution) video mode and 16M colors, while the HPA LCD displays output with SVGA (800x600 resolution) video mode and 16M colors.

If you are attaching an external monitor that supports a resolution higher than XGA mode, you can achieve a maximum of 1280x1024 video resolution.

To attach an external monitor, do the following:

1. Connect the external monitor to the external-monitor connector () at the rear of the computer; then connect the monitor to an electrical outlet.
2. Turn on the monitor.
3. Press **Fn+F7**.

Note: You can also change the display output location as follows:

- a. Start the Notebook Manager program. (See "Notebook Manager" on page 31.)
- b. Click the **Display Device** tab.
- c. Change the display output location by clicking the **Both** or **External monitor** radio button in the "Switching display device" section.
- d. Click **OK**.

Attaching an External Monitor

Notes:

1. If you select **Both**, do not attach an external monitor that supports only VGA mode (640x480 resolution). Otherwise, the external monitor is scrambled and output is not displayed, or the screen might be damaged. Use **External monitor** instead.

2. Set your monitor type and display device driver as follows:

If you are attaching an SVGA monitor, refer “Display Modes” on page 66 for information on the supported color depth or resolution.

a. Click **Start, Settings, Control Panel**.

b. Double-click **Display**.

c. Double-click the **Settings** tab.

d. Click the **Advanced...** button.

e. Click the **Monitor** tab.

f. Click the **Change...** button.

You can select your monitor type from the monitor list, or click on a new resolution or refresh rates.

Note: Refer to the specifications for your external monitor to determine its supported resolutions and refresh rates.

3. Restart the computer to make the changes effective.

Display Output Location

Attention: Do not change the display output location while a moving picture is being drawn—for example, while playing a movie or a game. Stop the application before changing the display output location.

You can change the display output location with the Notebook Manager program. Select one of the following display output locations:


- **LCD Panel Only:** The computer output is displayed only on the LCD of the computer.
- **External monitor:** The computer output is display only on the attached external monitor.

Attaching an External Monitor

If no external monitor is attached to the computer and the display output location is set to External Display, the output is displayed on the LCD.

- Both: The computer output is displayed on both the LCD and the external monitor.

You can also change the display output location using the **Fn** key function. Press and hold the **Fn** key; then press the **F7** key. The output is displayed sequentially as follows:




Important

Do not disconnect the external monitor while the computer is in hibernation mode. If no external monitor is attached when the computer resumes, the LCD remains blank and output is not displayed. This restriction does not depend on the resolution value.

The DOS Screen Image on the LCD

If you use a DOS application that supports only VGA mode (640x480 resolution) with your computer, the screen image might appear smaller than the display size, as shown:



This is to maintain compatibility with DOS applications. To expand the screen image to the same size as the actual screen, you can use the screen expansion function.

- You can expand the screen image in DOS mode by enabling **Screen Expansion** in the Startup Configuration menu of the BIOS Utility. (See "Startup Configuration" on page 27.)
- The screen image in Windows 98 can be expanded by following these steps:
 1. Click **Start**.

Attaching an External Monitor

2. Move the cursor to **Settings**; then click **Control Panel**.
3. Double-click **Display**.
4. Click the **Settings** tab.
5. Click the **Advanced...** button.
6. Click the **Displays** tab.
7. Click the **Panel** button.
8. Click **Scale image to panel size**, so that it is checked.
9. Click **OK**.

However, the image might look slightly distorted.

Display Modes

The ThinkPad i Series 1400/1500 computer has an LCD that supports an XGA (1024x768 resolution) video mode or an SVGA (800x600 resolution) video mode. The following table shows the various display modes (resolution and color depth) available with your computer or external monitor. Use this table to set the display output (**LCD Panel Only**, **External monitor** or **Both**).

Note: When installing an operating system, you must install the display driver supplied with the computer to use SVGA mode.

- Display output on the LCD, or both on the LCD and external monitor (**LCD Panel Only** or **Both**).

Note: When using the **Both** setting, the external monitor must use the LCD resolution and refresh settings regardless of what resolution the LCD is set to display.

Resolution	Supported Color Depth
640x480 (VGA)	256, 65,536, and 16,777,216
800x600 (SVGA)	256, 65,536, and 16,777,216
1024x768 (XGA) (available only for 14.1-inch models)	256, 65,536, and 16,777,216

- Display output only on the external monitor (**External monitor**).

Attaching an External Monitor

Resolution	Supported Color Depth	Frame Rate
640x480 (VGA)	256	60 Hz, 70 Hz, 75 Hz, or 85 Hz
	65,536	
	16,777,216	
800x600 (SVGA)	256	60 Hz, 70 Hz, 75 Hz, or 85 Hz
	65,536	
	16,777,216	
1024x768 (XGA)	256	60 Hz, 70 Hz, 75 Hz, or 85Hz
	65,536	
	16,777,216	
1280x1024	256	60 Hz, or 75 Hz

Notes:

1. The resolution and color depth you can set depends on your external monitor.
2. If you are using an old external monitor, the resolution and color depth might be limited.

Note:

Using the Dual Display Function

Windows 98 supports a function named *Multiple Display Support*, and your computer supports a function named *dual display* in the Windows 98 environment. This function allows the Windows 98 desktop to display output on the LCD-CRT display pair. You can display different desktop images on each monitor.

To enable dual display, do as follows:

1. Attach the computer to an external monitor (CRT).
2. Click **Start**.
3. Move the cursor to **Settings** and **Control Panel**; then click **Control Panel**.
4. Double-click **Display**.

Attaching an External Monitor

5. Click the **Settings** tab.
6. Click the Monitor-2 icon (for the secondary display, the CRT).
7. Click **Yes** to enable monitor 2 (if disabled).
8. Click the Monitor-1 icon (for the primary display, the LCD).
9. Select the color depth and the resolution of the primary display.
10. Click the Monitor-2 icon (for the secondary display, the CRT).
11. Select the color depth and the resolution of the secondary display.
12. Set the relative position of each monitor by dragging its icon.

Note: You can set the monitors in any relative position, but the icons must touch each other.

Disabling Dual Display

1. Click **Start**.
2. Move the cursor to **Settings** and **Control Panel**; then click **Control Panel**.
3. Double-click **Display**.
4. Click the **Settings** tab.
5. Click the Monitor-2 icon (for the secondary display, the CRT).
6. Clear the **Extend my Windows desktop onto this monitor** check box.

The secondary display (monitor 2) is disabled.

Considerations When Using Dual Display


- You can select up to 64K colors for your secondary display.
- You can select a resolution up to 1024x768 for your secondary display.
- If you want to show DOS full screen, the secondary display shuts off. When you exit from the DOS full screen mode, the secondary display returns.
- You cannot use the **Fn+F7** (display switching) function when you are in dual display mode.

Attaching a Television to Your Computer (select models only)

Attaching a Television to Your Computer (select models only)

You can attach a television (NTSC or PAL) to your computer and display the computer screen on it. To display the computer screen on television, do the following:

1. Turn off the computer and television.
2. Connect an S-video in-out cable (1) to the TV-out jack (2); then connect your television.

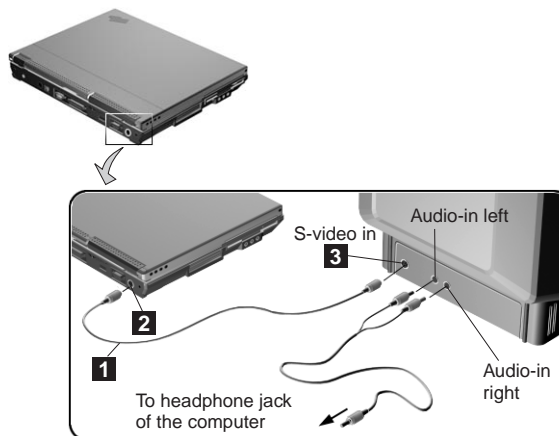

3. Set the external display device.
 - a. Click **Start**.
 - b. Move the cursor to **Settings**; then click **Control Panel**.
 - c. Double-click **Display**.
 - d. Click the **Settings** tab.
 - e. Click **Advanced...**
 - f. Click **Displays**.
 - g. Select **TV**.

Attaching a Printer


Notes:

1. The S-video in-out cable (1) and audio in-out cable are not supplied with your computer; you must purchase them.
2. If your video equipment has only one audio-input connector, use the left-audio connector of the audio cable.

Attaching a Printer

Any parallel printer with the standard Centronics** interface can be attached to the 25-pin, parallel connector at the rear of the computer.

1. Attach the printer as shown.

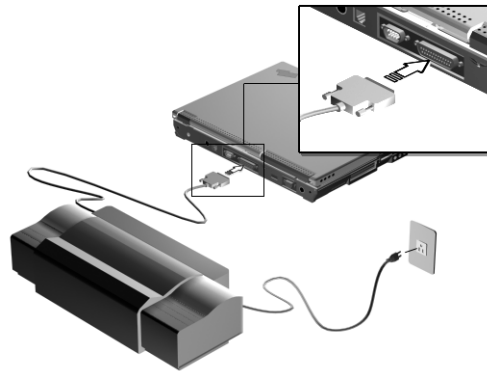

2. Turn on the printer.

Inserting a PC Card

Inserting a PC Card

This section describes how to prepare to use a PC Card.




Your computer has one PC Card slot and supports the following types of cards:

- PC Card (Type I, Type II, and Type III)
- CardBus
- Zoomed Video (ZV)

To install a PC Card in your computer, do the following:

1. Find the notched edge (1) of the PC Card as shown.

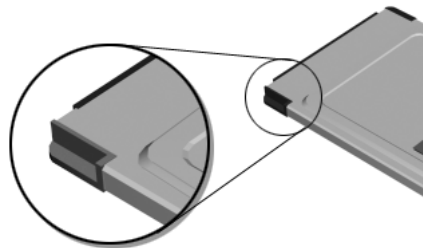

2. Insert the PC Card into the PC Card slot.

Inserting a PC Card



3. Press the PC Card firmly into the connector.

A window appears and informs you about the new card.

Note: If you have installed the PC Card driver, Windows 98 starts "PCMCIA Card Services Wizard" to install it. Follow the instructions on the screen.

You have completed setting up the PC Card, and you can now use it. For more information on how to use the PC Card software, refer to Windows help.

Removing the PC Card


Before removing a PC Card, **you must stop it**. Otherwise, the system might freeze or data might be corrupted or lost.

1. Stop the card.

To stop the PC Card, find the PC Card icon on the right side of the taskbar; then click the icon and click **Stop**. For more information, see the *Online User's Guide*.

2. Press the PC Card eject button to pop out the button. Then press it again until the PC Card pops out.
3. Remove the PC Card and store it safely for future use.

Inserting a PC Card

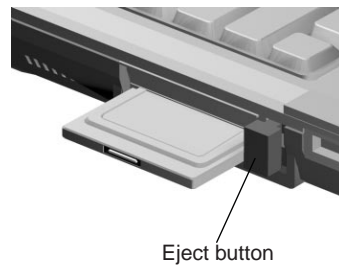

For more information for using a PC Card, see the *Online User's Guide*.

Protecting Your Computer

This chapter provides information about how to protect your computer from theft or unauthorized use.

Using Passwords	76
Setting a Password	77
Entering a Password	79
Removing and Changing a Password	80
Using Locks	82

Using Passwords

The password-setting feature helps to prevent your computer from being used by others. Once you set a password, a prompt appears on the screen each time you turn on the computer. You must enter your password at the prompt. You cannot use the computer unless you type the correct password. You can set the following passwords on your computer:

- Power-on password

Set the power-on password to protect your computer from use by another person. It provides the following security features:

- You need to type the power-on password at startup.
- You need to type the power-on password when resuming from hibernation mode.

Therefore, unauthorized users cannot use your computer.

- Setup password

Set the setup password to prevent unauthorized changes to your computer's configuration. It provides the following security features:

- You need to type the setup password to access the BIOS Utility.
- You need to type the setup password to access the Notebook Manager in Windows 98.
- You need to type the setup password before you can flash (update) the BIOS.

Therefore, unauthorized users cannot make changes to your computer's configuration.

- Hard disk password

The hard disk password provides an extra measure of security. Even if you set a power-on password, another user can remove the hard disk drive in your computer and put it in a different computer to access your data. If you set a hard disk password, however, another person cannot access the data on your hard

Using Passwords

disk without knowing the password. It provides the following features:

- You need to type the hard disk password at startup.
- If the hard disk drive is moved to another computer, the hard disk password must be typed at startup. Therefore, unauthorized users cannot access your hard disk even if the drive is removed from the computer.
- The hard disk password is required when the computer resumes from hibernation mode.

Note: If an incorrect hard disk password is entered three times, the system halts.

- Other password

Some Microsoft operating systems provide special Windows passwords. Refer to that system's user's guide for information on how to set, change, and use these passwords.

Do Not Forget Your Password

If you forget your setup password, you have to take your computer to an IBM reseller or IBM marketing representative to have the password reset. Proof of purchase is required, and an additional charge might be required for the service.

Attention: If you forget your hard disk password, you can no longer access the hard disk. The password cannot be reset and you will lose all data and files on the hard disk. To use the computer, you will need to replace the hard disk. This replacement will incur expenses for parts and labor.

Setting a Password

To set a password, do the following:

1. Restart the computer.
2. As the ThinkPad logo is being displayed, a message appears "Press F1 for IBM BIOS Setup Utility"; press **F1**.

The BIOS Utility menu appears.


Using Passwords

3. Select **System Security** and press **Enter**. The "System Security" submenu appears:

System Security		Page 1/1
Setup Password	[None]	
Power-on Password	[None]	
Hard Disk Password	[None]	

↑↓ = Move highlight bar, ←→ = Change setting, F1 = Help

- **Setup Password** Selecting this displays a window for setting the setup password.
 - **Power-On Password** Selecting this displays a window for setting the power-on password.
 - **Hard Disk Password** Selecting this displays a window for setting the hard disk password.
4. Select the type of password you want to set, and press the left/right arrow key. The set password box appears.



5. Type your desired password and press **Enter**.

Note: You can type a maximum of seven random characters using a combination of letters (A to Z) and numbers (0 to 9). Uppercase and lowercase letters (for example, A and a) are treated as the same character.

If you type a wrong character, use the **Backspace** key to erase it and then type the correct one.

Using Passwords

6. Type your password again and press **Enter** to verify it.

Note: Write down the password and keep it in a safe place.


Do Not Forget Your Password

If you forget your setup password, you have to take your computer to an IBM reseller or IBM marketing representative to have the password reset. Proof of purchase is required, and an additional charge might be required for the service.

Attention: If you forget your hard disk password, you can no longer access the hard disk. The password cannot be reset and you will lose all data and files on the hard disk. To use the computer, you will need to replace the hard disk. This replacement will incur expenses for parts and labor.

Entering a Password


- Power-on Password

Once you set a power-on password, the power-on password prompt () appears at the top left corner of the screen each time you turn on your computer or when your computer returns from hibernation mode to normal operation.

Notes:


1. When both power-on and hard disk passwords are set, the computer asks for the power-on password at boot-up and resume from hibernation mode.
2. When the power-on password is set, and you want to enter the BIOS Utility, you need to press **F1** immediately after correctly entering the power-on password.

- Setup Password

Once you set a setup password, the setup password prompt () appears at the top left corner of the screen when you press **F1** to enter the BIOS Setup Utility.

- Hard Disk Password

Using Passwords

Once you set a hard disk password, the hard disk password prompt () appears at the top left corner of the screen each time you turn on your computer or when your computer returns from hibernation mode to normal operation.

Notes:

1. When both power-on and hard disk passwords are set, the computer asks for the power-on password at boot-up and resume from hibernation mode.
2. When the hard disk password is set, and you want to enter the BIOS Utility, you need to press **F1** immediately after correctly entering the hard disk password.

To enter a password, do the following:

1. Type your password.

Don't hold down a key too long, because the same character will be entered continuously.

2. Press the **Enter** key.

An **X** appears if you enter the wrong password. If you fail to enter the correct password in three tries, you must press and hold the power switch for 5 seconds to turn off the computer, wait 5 seconds, and then turn it on again and retry.

Removing and Changing a Password

To change or remove a password, do the following:

1. Restart the computer.
2. While the ThinkPad logo is being displayed, wait for the the BIOS Utility prompt to appear.
 - If the power-on password or hard disk password is set, the corresponding password prompt appears. Enter the password correctly and press **Enter**. Then immediately press **F1** to enter the BIOS Utility.
 - If the setup password is set, the setup password prompt appears. Enter the setup password correctly and press **Enter**.

Using Passwords

3. Select **System Security** and press **Enter**. The "System Security" submenu appears.

4. Select the type of password you want to change or remove, and press the left/right arrow key to remove the current password.

Note: If you want to change or remove the hard disk password, you need to enter the hard disk password correctly.

5. To set a new password, type your desired new password and press **Enter**.

If you do not want to set a new password, do not type anything in the password boxes.

6. Type your new password again and press **Enter** to verify it.

Note: Write down the password and keep it in a safe place.

Note: You can also set, remove and change the power-on and setup passwords using the Notebook Manager program. See "Notebook Manager" on page 31.

Do Not Forget Your Password

If you forget your setup password, you have to take your computer to an IBM reseller or IBM marketing representative to have the password reset. Proof of purchase is required, and an additional charge might be required for the service.

Attention: If you forget your hard disk password, you can no longer access the hard disk. The password cannot be reset and you will lose all data and files on the hard disk. To use the computer, you will need to replace the hard disk. This replacement will incur expenses for parts and labor.

Using Locks

Using Locks

You can attach a mechanical lock to your computer, to help to prevent it from being removed without your permission.

Attach a mechanical lock to the keyhole on the rear side of the computer; then secure the chain on the lock to a secure stationary object.



Note: Please evaluate, select, and implement the locking devices and security features you choose to use. IBM makes no comments, judgments, or warranties about the function, quality, or performance of locking devices and security features.

Solving Computer Problems

Frequently Asked Questions	84
Hints, Tips and Considerations	89
Playing DVD Movies	89
USB Connector Considerations	89
Using an External Condenser Microphone	89
Troubleshooting Guide	90
Troubleshooting Charts	91
Error Codes or Messages	92
No Error Codes or Messages	94
Input Problems	95
Standby or Hibernation Problems	97
LCD Problems	99
Indicator Problems	100
Battery Problems	100
CD-ROM or DVD-ROM Problems	101
Audio Problems	103
Universal Serial Bus (USB) Problems	103
Modem Problems	104
PC Card Problems	105
Printer Problems	106
External Monitor Problems	107
Other Option Problems	109
Software Problems	110
Other Problems	111
Recovering Lost or Damaged Software	112
Using the PC-Doctor Program	112
Using the ThinkPad Software Selections CD	112
Using the Recovery CD	113
ThinkPad Web Site or Bulletin Board	114

Frequently Asked Questions

This section addresses frequently asked questions. Go to the page indicated in the following chart and do the specified action.

Questions	Page
How to stop the screen from blanking	85
How to switch the TrackPoint and mouse	85
How to set the display resolution	85
How to set the external monitor	86
How to maximize the battery life	87
How to install the operating system	87
How to use the Recovery CD	88
How to test/troubleshoot installed hardware	88
How to restart the computer if it locks	88
How to purchase accessories and upgrades	88
How to get service	88

Frequently Asked Questions

My screen keeps blanking when I do not want it to. How do I stop this?

You can change the power management timers with the Power Management Properties window.

1. Press **Fn+F2**.
 2. Set a longer time-out value for "Turn off monitor".
 3. Click **OK**.
-

How can I use an external mouse when I am at my desk, but then use the TrackPoint when I am away from my desk?

For a PS/2 mouse:

Connect the PS/2 mouse. The TrackPoint is automatically disabled. To use the TrackPoint again, disconnect the PS/2 mouse.

For a serial mouse:

To use a serial mouse, do as follows:

1. Save your work and quit any program you are using.
2. Connect the serial mouse.

Note: If you have not previously installed a serial mouse, you need to install the serial mouse device driver. See "Attaching an External Mouse or Numeric Keypad" on page 59 for instructions.

3. Restart the computer.

For a USB mouse:

To use a USB mouse, do as follows:

1. Save your work and quit any program you are using.
2. Connect the USB mouse.

Note: You can use the TrackPoint with the external serial or USB mouse simultaneously.

Why do I not get the highest possible resolution out of my external monitor when I am using the LCD and external monitor at the same time?

Frequently Asked Questions

You can set any resolution for either the ThinkPad LCD or the external monitor. When you use both at the same time, the resolution of both is the same. If you set a higher resolution for the ThinkPad LCD, you can see only part of the screen at a time. You can see other parts by moving the image with the TrackPoint or other pointing device. You can change the display output type to the LCD, external monitor, or both with the **Switching Display Device** buttons of the Notebook Manager program or with **Fn+F7**.

You can set up the external monitor as follows:

1. Click **Start** and move the cursor to **Settings**; then click **Control Panel**.
2. Double-click **Display**.

The "Display Properties" window appears.

3. Click the **Settings** tab.
4. Click **Advanced...** button.
5. Click the **Monitor** tab.
6. Click the **Change...** button.
7. Select the **Model** and **Manufacturer** of your monitor.
8. Click **OK**; then **Close**.
9. Set the **Colors** and **Screen area** in the "Display Properties" windows.
10. Click **OK**.

How can I set up the external monitor if the Windows plug-and-play feature does not detect it?

Frequently Asked Questions

If the external monitor you connected does not work properly, then the computer has not recognized the Plug and Play monitor. Do as follows:

1. Click **Start** and move the cursor to **Settings**; then click **Control Panel**.
2. Double-click **Display**.
The "Display Properties" window appears.
3. Click the **Settings** tab.
4. Click **Advanced...** button.
5. Click the **Monitor** tab.
6. Make sure that **Automatically detect Plug & Play monitors** is checked.
7. If the option is checked and your monitor is still not recognized after you restart the computer, click the **Change** button.
8. Select the **Model** and **Manufacturer** of your monitor.
9. Click **OK**; then **Close**.
10. If you are prompted to restart your computer, click **OK**.

How do I maximize battery life?

To maximize battery life, do the following:

- Use the battery pack until the charge is completely depleted (until the battery status LED flashes).
- Recharge the battery pack completely before using (the battery is fully charged when the AC Adapter is plugged in and the battery status LED is green).
- For a new battery pack or a battery pack that you have not used recently:
 1. Use the battery pack until the charge is completely depleted (until the battery status LED flashes).
 2. Recharge the battery pack completely before using the computer on battery power only (the battery is fully charged when the AC Adapter is plugged in and the battery status LED is green).
 3. Repeat steps 1 and 2 three times.
- For more detailed information about power management features, see the *Online User's Guide*.

Where do I get the ThinkPad device drivers for this operating system?

Frequently Asked Questions

See the *Online User's Guide* for information on installing device drivers. You can get the ThinkPad device drivers by using the ThinkPad Software Selections CD. Before installing a new operating system, do the following:

- Print the software installation section of the *Online User's Guide*.
- Make a Windows 98 startup diskette.

How do I use the Recovery CD to reload my factory-installed ThinkPad operating system and applications?

See "Using the Recovery CD" on page 113.

How do I test/troubleshoot my ThinkPad factory-installed hardware if I suspect a failure?

See "Using the PC-Doctor Program" on page 112.

How do I restart the computer if it locks, will not accept any input, or will not turn off using the power switch?

See "Other Problems" on page 111.

How do I purchase accessories and upgrades for my ThinkPad computer?

Please visit our Web site at <http://www.ibm.com> and click on Shop IBM. Here you can find a variety of accessories and upgrades that can be purchased online to be used with your ThinkPad computer.

How do I arrange for service if I suspect my ThinkPad computer has a hardware problem?

If you suspect there may be a hardware problem with a factory-installed device on your ThinkPad computer, you can test that device by running diagnostics (see "Using the PC-Doctor Program" on page 112). If servicing the ThinkPad computer becomes necessary, this should be arranged by calling 1-800-772-2227 and speaking to a technical support representative who will make those arrangements for you.

Hints, Tips and Considerations

This section provides hints, tips, and considerations.

If you are using the Intel USB camera and the system resumes from standby mode, the USB camera is disabled. To enable it, unplug it and plug it in again.

If you want to use the scrolling or magnifying glass functions of the TrackPoint, you need to disconnect any external mouse and enable the internal TrackPoint.

The ThinkPad i Series 1400/1500 computer supports only the Windows 98 operating system.

Playing DVD Movies

- The computer plays DVD movies of only one region at a time. You can change the region code a maximum of 4 times.
- If the computer enters standby mode during DVD movie playback, the DVD movie will start playing from the beginning again when you resume from standby mode.
- Do not change the screen resolution during DVD movie playback.

USB Connector Considerations

If the computer does not recognize your USB device, unplug and plug in the USB device. If your computer is in standby mode, your system might not recognize USB devices when operation resumes. Resume operation first, then plug in the USB device.

Using an External Condenser Microphone

The microphone-in jack supports a self-battery-powered condenser microphone which might need a battery. See the instructions which come with the microphone.

Troubleshooting Guide

The PC-Doctor program is available on your computer to help you perform diagnostics tests on your computer. See “Using the PC-Doctor Program” on page 112 for instructions on how to use the program.

If a beep sounds, a message appears, or a function-related problem occurs:

1. Find your symptom in the Troubleshooting Charts and try solving the problem. See “Troubleshooting Charts” on page 91
2. If you can't solve the problem, note the error code and have the computer serviced. See “Getting Service” on page 115

If you accidentally lose or damage software in your computer:

Recover it by using the ThinkPad Software Selections CD or the Recovery CD. See “Recovering Lost or Damaged Software” on page 112

Troubleshooting Charts



If your computer has an error, it often displays a message or an error code, or a beep sounds when you power it on. Go through the charts and look for your problem. If you find the problem, go to the page indicated and do the specified action.

Troubleshooting Chart	Page
Error codes or screen messages	92
No error codes or screen messages	94
Input problems	95
Standby or hibernation problems	97
LCD problems	99
Indicator problems	100
Battery problems	100
CD-ROM or DVD-ROM drive problems	101
Audio problems	103
Universal serial bus (USB) problems	103
Modem problems	104
PC Card problems	105
Printer problems	106
External display problems	107
Other option problems	109
Software problems	110
Other problems	111


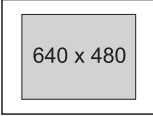
Troubleshooting Charts

Error Codes or Messages

Note: In the charts, x can be any character.

Problem	Action
006 (Equipment Configuration Error) 007 (Floppy Disk Controller Error)	Restart the computer. If the problem persists, have the computer serviced.
070 (Real Time Clock Error) 071 (CMOS Battery Bad)	Have the computer serviced.
072 (CMOS Checksum Error)	Do as follows: 1. Enter the BIOS Setup Utility. 2. Load default settings and exit the BIOS Setup Utility. If the problem persists, have the computer serviced.
110 (Incorrect password specified, system halted)	Turn off the computer; then turn it on again. Type in the correct password. You cannot access the computer without the correct password. If you forget your password, have the computer serviced.
252 (VPD checksum error)	Have the computer serviced.
The power-on password prompt 	If the power-on password prompt appears, a power-on password is set. Type the correct password and press Enter to use the computer (see “Entering a Password” on page 79). If you still have a problem, have the computer serviced.
The hard disk password prompt 	If the hard disk password prompt appears, a hard disk password is set. Type the correct password and press Enter to use the computer (see “Entering a Password” on page 79). Attention: If you forget your hard disk password, you can no longer access the hard disk. The password cannot be reset and you will lose all data and files on the hard disk. To use the computer, you will need to replace the hard disk. This replacement will incur expenses for parts and labor. If you still have a problem, have the computer serviced.

Troubleshooting Charts

Problem	Action
<p>The setup password prompt</p> 	<p>If the setup password prompt appears when you press F1 to access the BIOS Utility, a setup password is set.</p> <p>Type the correct password and press Enter to use the computer (see “Entering a Password” on page 79).</p> <p>Attention: If you forget your setup password, you have to take your computer to an IBM reseller or IBM marketing representative to have the password reset. Proof of purchase is required, and an additional charge might be required for the service.</p> <p>If you still have a problem, have the computer serviced.</p>
<p>The DOS full-screen looks smaller.</p> 	<p>When you use a DOS application that supports only the 640x480 resolution (VGA mode), the screen image might look slightly distorted or might appear smaller than the display size. This is to maintain compatibility with other DOS applications. This is not a defect.</p> <p>To expand the screen image to the same size as the actual screen, enter the BIOS Utility and enable the Screen Expansion parameter in the Startup Configuration menu. (The image might look slightly distorted.) See “Startup Configuration” on page 27.</p>
<p>The Windows 98 startup screen does not fill the screen.</p>	<p>When you enable Screen Expansion in the Startup Configuration menu of the BIOS Utility, the Windows 98 startup screen expands but does not fill the entire screen. This is not a defect. (The image might look slightly distorted.) See “Startup Configuration” on page 27.</p>

Troubleshooting Charts

No Error Codes or Messages

Problem	Action
<p>The screen is blank and you don't hear any beeps.</p> <p>Note: If you are not sure whether you hear any beeps, turn the computer off; then turn it on again, and listen again. Also check the volume control and the power indicator.</p> <p>If you are using an external monitor, go to "External Monitor Problems" on page 107.</p>	<p>Make sure that:</p> <ul style="list-style-type: none">• The battery pack is installed correctly.• The AC Adapter is connected to the computer and the power cord is plugged into a working electrical outlet.• The computer power is on. (Turn on the power switch again for confirmation.) <p>If a power-on password is set but does not appear, the brightness control might be set to minimum brightness. Adjust the brightness by pressing Fn+Home or Fn+End.</p> <p>If the screen still remains blank, have the computer serviced.</p>
<p>The screen is blank and you hear a continuous beep, or two or more beeps.</p>	<p>Have the computer serviced.</p>
<p>The computer cannot boot-up.</p>	<p>Have in hand a bootable diskette, such as the Windows 98 startup diskette, and do as follows:</p> <ol style="list-style-type: none">1. Turn off the computer.2. Insert the bootable diskette into the diskette drive. <p>The Windows 98 startup diskette can help diagnose the problem. If the problem remains, have the computer serviced.</p>

Input Problems

Problem	Action
The cursor does not move after the computer awakens from one of the power management modes.	Make sure you followed the instructions in the <i>Online User's Guide</i> correctly if you reinstalled Windows 98.
All or some keys on the keyboard do not work.	<ul style="list-style-type: none"> • If the problem occurred immediately after the computer returned from hibernation mode, enter the power-on password if it set. • If an external keyboard is connected, the numeric keypad on your computer will not work. This is not a defect. • If an external numeric keypad or a mouse is connected: <ol style="list-style-type: none"> 1. Turn off the computer. 2. Remove the external numeric keypad or the mouse. 3. Turn on the computer and try using the keyboard again. <p>If the keyboard problem is solved, check the connection of the external numeric keypad, external keyboard, or mouse.</p> <p>If you still have a problem, have the computer serviced.</p>
The cursor drifts when the computer is turned on or after it resumes normal operation.	<p>The cursor might drift when you are not using the TrackPoint during normal operation. This is a normal characteristic of the TrackPoint and is not a defect. Cursor drifting might occur for several seconds under the following conditions:</p> <ul style="list-style-type: none"> • When the computer is turned on. • When the computer resumes normal operation. • When the TrackPoint is pressed for a long time. • When the temperature changes.
The mouse or pointing device does not work.	<ul style="list-style-type: none"> • Make sure that the mouse or pointing-device cable is securely connected to the computer. • Try using the TrackPoint. If the TrackPoint works, the error might be due to the mouse. <p>Note: See the manual supplied with the mouse for more information.</p>
The mouse buttons do not work.	Reinstall the PS/2 TrackPoint driver. See the <i>Online User's Guide</i> for instructions on how to install the driver.

Troubleshooting Charts

Problem	Action
The scrolling or Magnifying Glass function does not work.	See the General tab page in "Mouse Properties", and make sure that the PS/2 TrackPoint driver is loaded. Note: The TrackPoint functions work only with the TrackPoint.
A number appears when you type a letter.	The numeric lock function is on. To disable it, press and hold Shift ; then press NumLk .
All or some keys on the external numeric keypad do not work.	Make sure that the external numeric keypad is correctly connected to the computer.
All or some keys on the external keyboard do not work.	To use an external keyboard, you can attach it to the computer either directly or through the keyboard/mouse cable. Make sure that: <ul style="list-style-type: none"> • The keyboard cable is correctly connected to the computer (if the keyboard is connected directly to the computer). • The keyboard/mouse cable is correctly connected to the computer. • The keyboard cable is connected to the correct side of the keyboard/mouse cable. If these items are correct, disconnect the keyboard/mouse cable from the computer and make sure that the operation of the system keyboard is correct. If the system keyboard works, have the keyboard/mouse cable or the external keyboard serviced.
The internal numeric keypad does not work.	If you connect an external numeric keypad or an external keyboard with a numeric keypad, the internal numeric keypad is disabled. Use the external numeric keypad instead.
All or some of the Fn key functions do not work.	If Notebook Manager is active, the Fn key functions related to Display Device (Fn+F7 , Fn+Home , Fn+End , Fn+Insert , and Fn+Delete) are disabled. Notes: <ol style="list-style-type: none"> 1. Fn+Insert and Fn+Delete are available only for HPA models. 2. The sleep key function (Fn+F4) is available on the external keyboard by pressing Ctrl+Alt+F4.

Standby or Hibernation Problems

Problem	Action
The computer enters standby mode automatically.	The computer enters standby mode automatically when the processor temperature reaches a certain level. This is not a defect.
Performance degrade when the computer gets hot during use.	The processor speed might decrease under the following conditions: <ul style="list-style-type: none"> • Use in a hot environment. • High-powered processing that requires high-power consumption. This is not a defect.
The computer enters standby mode immediately after POST (the standby indicator is on).	Make sure that: <ul style="list-style-type: none"> • The battery pack is charged. • The AC Adapter is connected to the computer. • The operating temperature is within the acceptable range. Refer to Appendix A, "Features and Specifications" on page 125. If these items are correct, have the computer serviced.
The computer turns on and immediately turns off.	The battery pack power is getting low. Connect the AC Adapter to the computer, or replace the battery pack with a fully charged one.
The computer does not return from standby mode, or the standby lamp stays on and the computer does not work.	The computer automatically enters standby or hibernation mode when the battery power is exhausted. Do one of the following: <ol style="list-style-type: none"> 1. Connect the AC Adapter to the computer. 2. Replace the battery pack with a fully charged one; then press Fn.
The LCD is blank after resuming.	Check if an external monitor was connected before the computer entered standby mode. Do not disconnect the external monitor while the computer is in hibernation mode. If no external monitor is attached when the computer resumes, the LCD remains blank and output is not displayed. This restriction does not depend on the resolution value.
Your computer does not enter standby or hibernation mode.	Check if the standby or hibernation options are set in the Power Management Properties window (Fn+F2). Make sure the hibernation file is created. (See "Sleep Manager" on page 35.) Note: If a communication program is running, you cannot enter hibernation mode. To enter hibernation mode, stop the communication program, and then remove the PC Card or turn off power to the PC Card slot using the Control Panel .

Troubleshooting Charts

Problem	Action
When creating a hibernation file, Sleep Manager gives off a "Not Enough Space for Allocation" message.	<p>Sleep Manager needs enough, contiguous hard disk drive space to create and manage the hibernation file.</p> <p>Make sure the hard disk drive space is sufficient for Sleep Manager's requirements. This can be viewed from the Sleep Manager main screen. If there are still problems, there might not be enough contiguous free space to create the hibernation file. Use a disk defragmentation utility to solve the problem.</p>

LCD Problems

Problem	Action
<p>The screen is unreadable or distorted.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • The ThinkPad display driver is installed correctly. <ol style="list-style-type: none"> 1. Click Start and move the cursor to Settings; then click Control Panel. 2. Double-click Display. 3. Select the Settings tab in the "Display Properties" window. 4. Click Advanced...; then click the Adapter tab. <p>Make sure that the display driver information is correct.</p> • The refresh rate setting is set to your display resolution and color depth by doing the following: <ol style="list-style-type: none"> 1. Click Start and move the cursor to Settings; then click Control Panel. 2. Double-click Display. <p>The "Display Properties" window appears.</p> <ol style="list-style-type: none"> 3. Make sure the settings in the "Display Properties" window are correct. 4. Click OK to close the window.
<p>Incorrect characters appear on the screen.</p>	<p>Did you install the operating system or application program with the correct procedure?</p> <p>If they are installed and configured correctly, have the computer serviced.</p>
<p>The screen stays on even after you power off the computer.</p>	<p>Push and hold the power switch for about five seconds; then release it to turn off your computer. Turn it on again.</p>
<p>Missing, discolored, or bright dots appear on the screen everytime you power on your computer (TFT model.)</p>	<p>This is a characteristic of TFT technology. Your computer display contains multiple thin-film transistors (TFTs). A small number of missing, discolored, or bright dots on the screen might exist all the time.</p>

Troubleshooting Charts

Indicator Problems

Problem	Action
The battery status indicator does not go on even though a battery pack is installed in the computer.	The over-current protection device inside the battery pack has been activated. Wait several hours and try again. If the indicator still does not go on, replace the battery pack or have the computer serviced.

Battery Problems

Problem	Action
The battery pack cannot be fully charged in 3.5 hours by the power-off charging method.	The battery pack might be over-discharged. Do the following: <ol style="list-style-type: none">1. Turn off the computer.2. Make sure that the over-discharged battery pack is in the computer.3. Connect the AC Adapter to the computer and let it charge. If the battery pack cannot be fully charged in 24 hours, use a new battery pack.
Your computer shuts down before the battery status indicator shows empty. -or- Your computer operates after the battery status indicator shows empty.	Repeat discharging and charging the battery pack at least three times.
The computer does not operate with a fully charged battery pack.	The over-current protective function in the battery pack might be activated. Turn off the computer and wait for several hours before you turn it back on again.

CD-ROM or DVD-ROM Problems

Problem	Action
The CD-ROM or DVD-ROM does not work.	<p>Make sure that:</p> <ul style="list-style-type: none"> • The computer power is turned on and a compact disc is in the CD-ROM or DVD-ROM drive. • The audio CD power button is turned on (the audio CD status LCD lights up). • The CD-ROM or DVD-ROM tray is firmly closed. • The device drivers are correctly installed.
You hear a noise from the CD-ROM or DVD-ROM when the disc is spinning.	The CD-ROM or DVD-ROM drive cover might be bent. Have the computer serviced.
The CD-ROM or DVD-ROM tray does not open even if you press the CD-ROM or DVD-ROM drive eject button.	Insert a pin into the CD-ROM or DVD-ROM emergency eject hole and eject the CD-ROM or DVD-ROM tray.
The compact disc or DVD cannot be read.	<p>Make sure that:</p> <ul style="list-style-type: none"> • The compact disc is not dirty. If it is, clean it with a CD-ROM cleaner kit. • The compact disc is not defective. If it is, try another compact disc. • The compact disc is placed in the tray with the label side up. • The compact disc format conforms with one of the following: <ul style="list-style-type: none"> – Music CD – CD-ROM or CD-ROM XA – Multisession photo CD – Video CD <p>Note: You can only playback DVD movies if your computer has a built-in DVD-ROM drive and the DVD movie playback software is installed.</p>
The DVD movie cannot be played.	<p>The region code of the DVD movie you inserted into the DVD-ROM drive must match the region code you set for the DVD Player software.</p> <p>You can set the region code a maximum of 5 times. If you have not reached the limit, a prompt appears and you change it to the region code of the inserted DVD movie. If not, you will only be able to play DVD movies of the last region you set.</p>

Troubleshooting Charts

Problem	Action
The control buttons on the DVD movie playback software do not work.	The DVD movie playback software is reading the DVD-ROM. Wait for a few seconds before trying the buttons again.

Audio Problems

Problem	Action
General problems.	<p>Problems may be due to such factors as:</p> <ul style="list-style-type: none"> • The audio volume control is not adjusted to the desired level. • The audio volume in Windows is muted or not adjusted to the desired level. • The audio cable configuration is not correct for your application. • The audio cable is defective. • The audio equipment is defective. • When playing back DVD movies, check if the sound is muted in the DVD movie playback software.

Universal Serial Bus (USB) Problems

Problem	Action
A device connected to the USB connector does not work.	<ol style="list-style-type: none"> 1. Make sure that the USB device is connected correctly. 2. Make sure that USB Function Support is enabled in the Startup Configuration menu of the BIOS Utility. See "Startup Configuration" on page 27. 3. Open the "Device Manager" window, and make sure that the USB device setup is correct, and that computer resource assignment and device driver installation are correct. <p>Note: To open the "Device Manager" window, click Start and move the cursor to Settings and click Control Panel. Double-click System; then click the Device Manager tab in the "System Properties" window.</p>
The computer does not recognize your USB device.	<p>Unplug and plug in the USB device.</p> <p>Note: If your computer is in standby mode, your system might not recognize USB devices when operation resumes. Resume operation first, then plug in the USB device.</p>

Modem Problems

Problem	Action
<p>Your modem application does not work with the ThinkPad modem.</p>	<p>Make sure that the internal modem port is enabled by opening the "Device Manager" window and running the Modem Wizard.</p> <p>If the modem does not work correctly, see the <i>Online User's Guide</i> and correct the resource conflict. If the modem works correctly, set the following modem settings by doing the following:</p> <ol style="list-style-type: none"> 1. Double-click My Computer, Control Panel, and Modem. The Lucent Win Modem is highlighted. 2. Click Properties, <i>not</i> Dialing Properties. 3. Click the Connection tab. 4. If there is a check mark (✓) in the Wait for dial tone before dialing box, click and remove it. 5. Click Advanced. 6. If there is a check mark (✓) in the Use error control box, click and remove it. 7. Add a check mark (✓) to the Use flow control box by clicking on the box and make sure that Hardware (RTS/CTS) is selected. 8. Click OK to close the window. 9. Click OK and return to the "Modem Properties" window. 10. Click Dialing Properties and fill in all boxes and click either Tone dialing or Pulse dialing. <ul style="list-style-type: none"> Note: Most telephones today use tone dialing, where each button produces a different tone, instead of pulse dialing. 11. Click OK. 12. Click Close to close the window. 13. Close all active windows. <p>Run your modem application again.</p>

PC Card Problems

Problem	Action
<p>The PC Card shows "Ready", but it does not work correctly.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • The system resources reserved for the PC Card do not conflict with other system devices. • Refer to "Resolving System Resource Conflicts" in the Online User's Guide. • The resources reserved for the PC Card match the settings in the application program. • If you are using a network card, check the I/O port address, IRQ level, and memory window address.
<p>A system resource conflict occurred when a PC Card was used.</p>	<p>See "Resolving System Resource Conflicts" in the <i>Online User's Guide</i>.</p>
<p>PC Card support software does not recognize your PC Card.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • If the PC Card is not a modem, an ATA, a Flash, or an SRAM card, you have the proper client device driver for the card. In Windows 98, the PC Card must have an INF file associated with it. • Your PC Card supports PCMCIA Release 2.0, 2.01, and 2.10. Refer to the manual that came with your PC Card. If your PC Card does not support those releases of PCMCIA, you cannot use the PC Card support software. Contact your PC Card supplier. • Your PC Card is working by following the diagnostic instructions for your PC Card, if any.
<p>The PC Card is recognized by PC Card support software, but the "Not Ready" or "Not Configured" message is shown.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • If the PC Card is not a modem, an ATA, a Flash, or an SRAM card, you have the proper client device driver for the card. In Windows 98, the PC Card must have an INF file associated with it. • The resources for the PC Card are correctly reserved. Refer to "Resolving System Resource Conflicts" in the <i>Online User's Guide</i>.

Troubleshooting Charts

Printer Problems

Problem	Action
The printer does not work.	<p>Make sure that:</p> <ul style="list-style-type: none">• The parallel port is enabled.<ol style="list-style-type: none">1. Save your work and quit any program you are using.2. Shutdown and restart your computer.3. While the ThinkPad logo is being displayed, wait for the the BIOS Utility prompt to appear, then press F1.4. Select Onboard Devices Configuration and press Enter.5. Verify if the Parallel Port is enabled.6. Save the changes and exit the BIOS Utility.• The printer is turned on and ready to print.• The printer signal cable is connected to the correct connector of your computer. <p>If these items are correct and the printer still does not work, run the tests described in the printer manual. If the tests show that the printer is OK, have the computer serviced.</p>

External Monitor Problems

Problem	Action
<p>The external monitor is blank.</p>	<p>Do the following:</p> <ol style="list-style-type: none"> 1. Connect the external monitor to another computer and make sure it works. 2. Reconnect the external monitor to your computer. 3. Press Fn+F7. <p>Note: You can also change the display output location using the Notebook Manager:</p> <ol style="list-style-type: none"> a. Start the Notebook Manager program. b. Click the Display Device tab. c. Click External monitor or Both radio button. d. Click OK. <p>If nothing appears on the external monitor, have the computer serviced.</p>
<p>You cannot set a higher resolution than the present one on your external monitor.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • The ThinkPad display driver is installed correctly. <ol style="list-style-type: none"> 1. Click Start and move the cursor to Settings; then click Control Panel. 2. Double-click Display. 3. Select the Settings tab in the "Display Properties" window. 4. Click Advanced...; then click the Adapter tab. <p>Make sure that the ThinkPad display driver is installed.</p> <p>If you are not sure that the ThinkPad display driver is installed correctly, reinstall it.</p> • An appropriate display type or refresh rate is selected. <ol style="list-style-type: none"> 1. Click Start and move the cursor to Settings; then click Control Panel. 2. Double-click Display. 3. Make sure the settings in the "Display Properties" window are correct. 4. Click OK to close the window.

Troubleshooting Charts

Problem	Action
The screen is unreadable or distorted.	<p>Make sure that:</p> <ul style="list-style-type: none">• The ThinkPad display driver is installed correctly.<ol style="list-style-type: none">1. Click Start and move the cursor to Settings; then click Control Panel.2. Double-click Display.3. Select the Settings tab in the "Display Properties" window.4. Click Advanced...; then click the Adapter tab.<p>Make sure that the ThinkPad display driver is installed.</p><p>If you are not sure that the ThinkPad display driver is installed correctly, reinstall it.</p>• The display is set correctly.<ol style="list-style-type: none">1. Click Start and move the cursor to Settings; then click Control Panel.2. Double-click Display.3. Make sure the settings in the "Display Properties" window are correct.4. Click OK to close the window.<p>If the settings are correct, run the tests described in the manual supplied with the external monitor. If the tests show that the external monitor is OK, have the computer serviced.</p>
Wrong characters appear on the screen.	<p>Did you install the operating system or application program with the correct procedure?</p> <p>If you did, have the external monitor serviced.</p>

Other Option Problems

Problem	Action
<p>An IBM option that you just installed does not work.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • The option is designed for your computer. • The option was installed following the instructions supplied with the option or this book. • Other installed options or cables are not loose. • There is no I/O address or interrupt level (IRQ) DMA channel conflict. To see the system resource status, double-click Device Manager from the Control Panel. (See also "Resolving System Resource Conflicts" in the <i>Online User's Guide</i>). <p>If the test program for the option did not find the problem, have the computer and option serviced.</p>
<p>An IBM option that used to work no longer works.</p>	<p>Make sure that:</p> <ul style="list-style-type: none"> • The option is securely connected to your computer. • If the option came with its own test instructions, use those instructions to test the option. • There is no system resource conflict (see "Resolving System Resource Conflicts" in the <i>Online User's Guide</i>). <p>If these items are correct and the test program did not find the problem, have the computer and the option serviced.</p>
<p>The serial port does not work.</p>	<p>Make sure that the serial port is enabled by doing the following:</p> <ol style="list-style-type: none"> 1. Save your work and quit any program you are using. 2. Shutdown and restart your computer. 3. While the ThinkPad logo is being displayed, wait for the the BIOS Utility prompt to appear, then press F1. 4. Select Onboard Devices Configuration and press Enter. 5. Verify if the Serial Port is enabled. 6. Save the changes and exit the BIOS Utility.

Troubleshooting Charts

Software Problems

Problem	Action
An application does not run correctly.	<p>Check the following to make sure that the problem is not being caused by the application:</p> <ul style="list-style-type: none">• Your computer has the minimum required memory to run the application. Refer to the manuals supplied with the application.• The application is designed to operate with the Windows 98 operating system.• Other applications run correctly on your computer.• The necessary device drivers are installed. See the <i>Online User's Guide</i>.• The application works OK when it is run on some other computer. <p>If an error message appears when you are using the application program, refer to the manuals supplied with the application. If these items are correct and you still have a problem, contact your place of purchase or the service representative for help.</p>
The Windows Safe Mode screen appears.	<p>Your computer may not have shutdown properly the last time. In Safe Mode, shutdown and restart your computer.</p> <p>If you still have a problem, contact your place of purchase or the service representative for help.</p>

Other Problems

Problem	Action
The computer locks or does not accept any input.	<ul style="list-style-type: none">• Push and hold the power switch for about five seconds, then release it to turn off the computer. Restart the computer.
The computer does not turn off with the power switch.	If the standby lamp is on and you are working under battery power, change the battery to a fully charged one or change your power source to ac power. If you still have a problem, push and hold the power switch for about five seconds, then release it to turn off the computer. Restart the computer.
The computer does not start from a diskette.	Make sure that the startup sequence in the BIOS Utility is set so that the computer starts up from the diskette drive (see "Startup Configuration" on page 27).
Performance degrades when the computer gets hot during use.	The processor speed might decrease under the following conditions: <ul style="list-style-type: none">• Use in a hot environment• High-powered processing that requires high-power consumption This is not a defect.

Recovering Lost or Damaged Software

Recovering Lost or Damaged Software

This section describes how to recover lost or damaged software. The following table shows what is needed to recover your system.

Problem	Tools Provided	For More Information
You need to diagnose the computer.	Use the PC-Doctor** program.	See "Using the PC-Doctor Program" for general information.
You need to recover a lost or damaged device driver.	Use the ThinkPad Software Selections CD.	See "Using the ThinkPad Software Selections CD" for general information. The CD-ROM also contains online help for detailed instructions.
You need to recover (reinstall) a lost or damaged software application.	Use the ThinkPad Software Selections CD.	See "Using the ThinkPad Software Selections CD" for general information. The CD-ROM also contains online help for detailed instructions.
You need to recover your entire hard disk.	Use the Recovery CD.	See "Using the Recovery CD" on page 113 for general information.

Using the PC-Doctor Program

The PC-Doctor program allows you to run diagnostics tests on your computer. You have the option to run test sets, or individual tests. To run PC-Doctor, do as follows:

1. Click **Start**.
2. Move the cursor to **Programs, PC-Doctor**; then click **PC-Doctor for Windows**.
3. Follow the instructions on the screen.

Using the ThinkPad Software Selections CD

The ThinkPad Software Selections CD is provided for your installation convenience. If you need to reinstall a software application or a hardware device driver, put the ThinkPad Software Selections CD in your CD-ROM or DVD-ROM drive. The menu of the features appears automatically.

Recovering Lost or Damaged Software

Your Software Selections CD contains telephone numbers for some software vendors. These vendors can help you with questions about their software. See the CD for details.

The following features are included:

- **Welcome**

This main page describes the Software Selections CD and its features.

- **Install Software**

Use this page to do the following:

- Reinstalling a software application
- Reinstalling hardware device drivers

- **Uninstall Software**

Use this page to remove software installed on your computer.

- **Advanced Functions**

Use this page to do the following:

- Change language and location settings for the ThinkPad Software Selections program.
- Create a Software Selections CD image on your computer.

- **Read the License Agreement**

This page contains the license agreement for using the ThinkPad Software Selections CD.

- **Help**

Use this page to learn how to use the ThinkPad Software Selections program.

Using the Recovery CD

You can restore the contents of your hard disk to what it was at the time of purchase.

Attention: The Recovery program erases your entire hard disk, including the operating system, software, and personal data. It then

Recovering Lost or Damaged Software

restores your operating system and hard disk to its factory-shipped configuration.

The Recovery CD consists of the original preinstalled software and device drivers.

The recovery process might take up to 2 hours.

Your computer supports startable CDs. To use the Recovery CD, do as follows:

1. Insert the Recovery CD into the CD-ROM or DVD-ROM drive.
2. Power off the computer; then turn on the computer.
Note: Make sure that the boot priority for CD-ROM is higher than the hard disk drive. See “Startup Configuration” on page 27.
3. Follow the instructions on the screen.
4. When a completion message appears, remove the Recovery CD from the CD-ROM or DVD-ROM drive.
5. Restart the computer.

The computer restarts with the preinstalled configuration.

ThinkPad Web Site or Bulletin Board

IBM supplies all of the latest hardware device drivers and system BIOS for your computer on the ThinkPad Web site at:

<http://www.pc.ibm.com/support>

You can also use the IBM bulletin board service.

For more information about online support services, see “Online Support Services” on page 118.

Getting Service

Preparations

If you need further assistance, you can call your IBM reseller or IBM marketing representative.

You will need to know the following information when requesting repair service:

- Identification number of your computer
- Options installed in your system

Note: Use the record sheet on "Option List" on page 116.

- Error message or problem

Note: Error messages can help identify which service action is required and help the service representative provide quick and efficient service.

Use the record sheet on "Problem Recording Sheet" on page 117.

About Your Warranty

During the warranty period, you might be responsible for repair costs if the product damage was due to misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance.

For full information on product warranties, see Appendix B, "Product Warranties and Notices" on page 133.

For your convenience, write the service phone numbers here:

Information on Your Computer

Information on Your Computer


Option List

- | | |
|---|---------------------------------------|
| <input type="checkbox"/> DIMM | <input type="checkbox"/> PC Cards |
| ___ MB | _____ |
| ___ MB | _____ |
| <input type="checkbox"/> ___ GB Hard Disk Drive | <input type="checkbox"/> Battery Pack |

Identification Numbers

The serial number label is on the bottom of your computer. Write down the machine type and serial number (S/N) in the following box.

IBM Product Name	ThinkPad i Series 1400/1500
Machine Type	2621-_____
Serial Number	_____

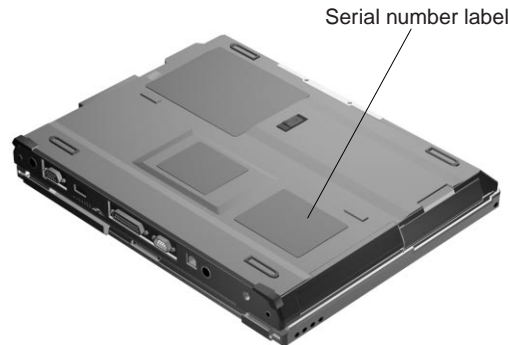

Problem Recording Sheet

- Computer information:

Machine type: _____

Serial number: _____

Date of purchase: ___/___/___

- Type of problem:

Continuous problem

Intermittent problem

- Error code:

- The operating system and its version number, if available:

Windows 98 Version _____

- Application programs running at the time of the problem:

- Problem symptom:

Describe the problem more specifically:

- Can the problem be reproduced?

Yes

No

If yes, describe how it can be reproduced:

Customer Service and Support

Purchasing an IBM PC hardware product entitles you to receive support and services during the limited warranty period. If you need additional support and services, a wide variety of extended solutions that addresses most needs are available for purchase.

Online Support Services

You can contact us on the Internet for answers to your technical support questions. If you link to our support home page, you can search for technical tips, download update drivers, and find out about many other things. You can visit the site at the following URL:

<http://www.pc.ibm.com/thinkpad>

Personalized web-based site PC support provides PC users easy access to online support, including personalized IBM website tailored to their machine type, computing environment, and individual interests such as business applications or games. Customers profile once with IBM and are thereafter greeted by name and presented targeted information selected specifically to meet their particular needs. For example, a corporate ThinkPad user might receive information on Microsoft Windows NT and remote connectivity. IBM customers can also elect to receive proactive e-mail, alerting them to time-saving hints and tips and product-specific update such as modem speed and BIOS files. Interactive web-based forums are monitored around the clock by IBM specialists, complementing its support on all the major internet service providers. You can set up your profile at:

<http://www.pc.ibm.com/support>

Fax Information

In the U.S. and Canada, if you have a touch-tone telephone and access to a fax machine, you can receive marketing and technical information on such topics as computer hardware, operating systems, and local area networks (LANs) by fax. You can call the IBM PC Company Automated Fax System 24 hours a day, 7 days a week. Follow the recorded instructions, and the information that you request will be sent to your fax machine.

Customer Service and Support

To access the IBM PC Company Automated Fax System, call:

- In the U.S., 1-800-426-3395.
- In Canada, 1-800-465-3299.

Help by Telephone

You can get support and information by telephone during the limited warranty period at no additional charge, through the IBM PC Support Line. Experienced technical-support representatives will be on hand to assist you in answering any questions you might have, such as:

- How to set up your computer
- How to install and set up your IBM options purchased directly from IBM or through an IBM reseller
- How to use the 30-day support for the preloaded operating system
- How to get service

Please have the following information ready when you call:

- Serial number of your computer and proof of purchase
- Description of the problem
- Exact wording of the error message
- Hardware and software configuration information for your system

Before you call, run PC-Doctor diagnostics to help identify the cause of your computer problem. See "Using the PC-Doctor Program" on page 112 for more information about PC-Doctor.

If possible, be at your computer when you call.

- In the U.S. and Puerto Rico, call 1-800-772-2227.
- In Canada, call 1-800-565-3344.

These lines are available 24 hours a day, 7 days a week. The answering technical-support representative can also fax or mail you technical or product information, such as:

- Sales information

Customer Service and Support

- Product brochures
- Locations of IBM resellers
- Services available from IBM

EasyServ

ThinkPad EasyServ is a courier repair service for IBM mobile products whereby your ThinkPad computer will be picked up, sent to IBM for repair, and then returned to the location of your choice. This service is available at no additional charge during the limited warranty period. Most computers can be repaired the day that it arrives at the IBM repair location.

Support personnel first try to solve your problem over the phone. If they are unsuccessful, you can arrange for EasyServ service by calling the PC Support Line.

If possible, you should use the original ThinkPad shipping materials that your computer came in, for re-sending it to IBM. If the box is not available, the courier will deliver a shipping carton and will return later to pick it up. This service is available only in the U.S. and Canada.

Getting Help Around the World

If you make frequent overseas trips or you are residing abroad, you can register with the International Warranty Service Office. The office will issue an International Warranty Service Certificate, which you can use wherever IBM or IBM resellers sell and service IBM PC products.

For more information on registering with the International Warranty Service Office, call 1-800-497-7426 in the U.S. or Canada.

Purchasing Additional Services

During and after the limited warranty period, you can purchase additional services, such as:

- Support for IBM and non-IBM hardware, operating systems, and application programs
- Network setup and configuration
- Upgraded or extended hardware repair services
- Custom installation

The availability of the service and its name might vary by country.

Enhanced PC Support Line

Enhanced PC Support is available for desktop and mobile IBM computers that are not connected to a network. Technical support is provided for IBM computers and IBM or non-IBM options, operating systems, and application programs on the supported products list.

This service includes technical support for the following:

- Installing and configuring your out-of-warranty IBM computer
- Installing and configuring non-IBM options in IBM computers
- Assistance with the preloaded operating system
- Using selected application software and games
- Tuning performance, such as memory management
- Installing device drivers remotely
- Setting up and using multimedia devices
- Identifying system problems
- Interpreting documentation

You can purchase this service for a single incident or multiple incidents. For more information about purchasing Enhanced PC Support, see "Ordering Support Line Services" on page 122.

Purchasing Additional Services

Ordering Support Line Services

The Enhanced PC Support Line, Client Support Line, and Network and Server Support Line services are available for products on the Supported Products list.

To receive a Supported Products list:

- In the U.S.:
 - Call 1-800-772-2227.
 - Select the automated fax system option.
 - Select the service for which you would like a Supported Products list:
 - For the Enhanced PC Support Line, select document 11682.
 - For the Network and Server Support Line, select document 11683.
- In Canada
 - Call 1-800-465-7999 or 1-800-465-7999.
- In other countries, contact your IBM reseller or IBM marketing representative.

For more information on how to purchase the Support Line Services:

- In the U.S.: call 1-800-772-2227.
- In Canada: call 1-800-465-7999.
- In other countries, contact your IBM reseller or IBM marketing representative.

Warranty and Repair Services

You can extend your period of ThinkPad EasyServ warranty service.

- In the U.S., for more information on warranty extensions, call 1-888-426-4343.

For more information on service offerings in the U.S. only, please refer to the following web page:

<http://www.pc.ibm.com/us/infobrf/ibserv1.html#info>

Purchasing Additional Services

- In Canada, for more information on warranty extensions: call 1-800-465-7999.
- In other countries, contact your IBM reseller or IBM marketing representative.

Purchasing Additional Services

Appendix A. Features and Specifications

This appendix describes the features and specifications for the computer.

Features

Features

Processor

Intel® Mobile Celeron™ processor with on-die external cache

Memory

Base: 32MB or 64MB

Option: 32/64/128MB DIMM

Total: Max. 256 MB

Storage devices

2.5-inch hard disk drive

Display

The color display uses TFT technology or HPA technology

Up to 1024-by-768 resolution on the 14.1-inch TFT LCD

Up to 800-by-600 resolution on the 12.1-inch TFT LCD or
13.0-inch HPA LCD

Up to 1280-by-1024 resolution on the external monitor

Brightness control

Contrast control (available only on HPA models)

Keyboard

84-key, 86-key, or 90-key

TrackPoint

Easy Launch buttons

Fn key function

Windows keys

Internal diskette drive

Features

To get the best performance from your diskette drive, use high-quality diskettes (such as IBM diskettes) that meet or exceed the following standards:

1-MB, 3.5-inch, unformatted diskette:

- ANSI (American National Standards Institute) X3.137
- ISO (International Standards Organization) 8860
- ECMA (European Computer Manufacturers Association) 100

2-MB, 3.5-inch, unformatted diskette:

- ANSI X3.171
- ISO 9529
- ECMA 125

Internal CD-ROM drive or DVD-ROM drive

24X max. speed for CD-ROM

4X speed for DVD-ROM

External interface

Serial connector (EIA-RS232D)

Parallel connector (Centronics)

External-input-device connector

External-monitor connector

PC Card slot (one Type I, Type II, or Type III PC Card)

Headphone jack

Microphone jack (supports a self-battery-powered condenser microphone)

Stereo line-in jack

Universal Serial Bus (USB) connector

Telephone connector

S-video jack

Specifications

Specifications

Size

Width: 329.5 mm (12.97 in.)

Depth: 271 mm (10.66 in.)

Height: 42.9 mm (1.69 in.) for TFT model; 44.4 mm (1.75 in.) for HPA model

Environment

Temperature (at altitudes less than 2438 m 8000 ft.):

- Operating with no diskette: 5°C to 35°C (41°F to 95°F)
- Operating with a diskette: 10°C to 35°C (50°F to 95°F)
- Nonoperating: -20°C to 60°C (-4°F to 140°F)

Note: When you charge the battery pack, its temperature must be at least 10°C (50°F).

Relative humidity:

- Operating with no diskette: 8% to 95%
- Operating with a diskette: 8% to 80%

Maximum altitude: 3048 m (10000 ft.) in unpressurized conditions

- Maximum temperature at 3048 m (10000 ft.): 31.3°C (88°F)

Heat output

Approximately 48 Kcal per hour

Electrical (AC Adapter)

Sine-wave input, at 50 to 60 Hz is required

The input rating of the AC Adapter: 100–240 V ac, 50/60 Hz

Battery Pack

Lithium Ion

- Nominal voltage: 10.8 V dc
- Capacity: 5.4 AH

Specifications

Nickel Metal Hydride

- Nominal voltage: 9.6 V dc
- Capacity: 4.5 AH

IBM Power Cords

To use the AC Adapter outside the country where you purchased your computer, you need an ac power cord that is certified for the country or region you are visiting. You can purchase one through an IBM authorized reseller or IBM marketing representative in that country or region.

Attention: Using an improper power cord might cause severe damage to your computer.

For 2-pin power cords:

IBM power cord part number	Used in these countries or regions
13H5264	Bahamas, Barbados, Bermuda, Bolivia, Canada, Cayman Islands, Colombia, Costa Rica, Dominican Republic, Ecuador, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Korea (South), Mexico, Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Saudi Arabia, Suriname, Taiwan, Thailand, Trinidad (West Indies), United States of America, Venezuela
13H5267	Abu Dhabi, Albania, Antigua, Bahrain, Brunei, Dubai, Fiji, India, Ireland, Kenya, Kuwait, Macao, Malaysia, Nigeria, Oman, People's Republic of China (including Hong Kong), Qatar, Singapore, United Kingdom
13H5270	Austria, Bosnia-Herzegovina, Belgium, Bulgaria, Chile, Croatia, Czech Republic, Denmark, Egypt, Finland, France, Germany, Greece, Hungary, Iceland, Indonesia, Israel, Italy, Macedonia, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey, Yugoslavia
13H5273	Japan
13H5276	Argentina, Australia, New Zealand, Papua New Guinea, Paraguay, Uruguay
13H5279	Bangladesh, Pakistan, South Africa, Sri Lanka

IBM Power Cords

For 3-pin power cords:

Note: The grounded adapter is required for full MPRII compliance. If a 3-pin power cord came with your computer, see “Safety Information” on page viii.

IBM power cord part number	Used in these countries or regions
02K0539	People's Republic of China (other than Hong Kong)
76H3514	Argentina, Australia, New Zealand, Papua New Guinea, Paraguay, Uruguay
76H3516	Aruba, Bahamas, Barbados, Bermuda, Bolivia, Brazil, Canada, Cayman Islands, Colombia, Costa Rica, Curacao, Dominican Republic, Ecuador, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Korea (South), Liberia, Mexico, Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Saudi Arabia, Suriname, Taiwan, Thailand, Trinidad (West Indies), United States of America, Venezuela
76H3518	Austria, Belgium, Bosnia-Herzegovina, Bulgaria, Croatia, Czech Republic, Egypt, Finland, France, Germany, Greece, Hungary, Iceland, Indonesia, Macao, Macedonia, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, Yugoslavia
76H3520	Denmark
76H3522	Bangladesh, Myanmar, Pakistan, South Africa, Sri Lanka
76H3524	Abu Dhabi, Albania, Antigua, Bahrain, Brunei, Dubai, Fiji, Hong Kong, India, Ireland, Kenya, Kuwait, Malaysia, Nigeria, Oman, Qatar, Singapore, United Kingdom
76H3528	Liechtenstein, Switzerland
76H3530	Chile, Ethiopia, Italy, Libya
76H3532	Israel
76H3535	Korea

Appendix B. Product Warranties and Notices

International Business Machines
Corporation

Armonk, New York 10504

Statement of Limited Warranty

This Statement of Limited Warranty The warranties provided by IBM in this Statement of Limited Warranty apply only to Machines you originally purchase for your use, and not for resale, from IBM or your reseller. The term "Machine" means an IBM machine, its features conversions, upgrades, elements, or accessories, or any combination of them. The term "Machine" does not include any software programs, whether pre-loaded with the Machine, installed subsequently or otherwise. Unless IBM specifies otherwise, the following warranties apply only in the country where you acquire the Machine. Nothing in this Statement of Limited Warranty affects any statutory rights of consumers that cannot be waived or limited by contract. If you have any questions, contact IBM or your reseller.

Machine: IBM ThinkPad i Series 1400/1500 and the Battery Pack

Warranty Period*: One Year

**Elements and accessories are warranted for three months. Contact your place of purchase for warranty service information. Some IBM Machines are eligible for On-site warranty service depending on the country where service is performed.*

The IBM Warranty for Machines

IBM warrants that each Machine 1) is free from defects in materials and workmanship and 2) conforms to IBM's Official Published Specifications. The warranty period for a Machine is a specified, fixed period commencing on its Date of Installation. The date on your sales receipt is the Date of Installation, unless IBM or your reseller informs you otherwise.

During the warranty period IBM or your reseller, if approved by IBM to provide warranty service, will provide repair and exchange service for the Machine, without charge, under the type of service designated for the Machine and will manage and install engineering changes that apply to the Machine.

If a Machine does not function as warranted during the warranty period, and IBM or your reseller are unable to either 1) make it do so or 2) replace it with one that is at least functionally equivalent, you may return it to your place of purchase and your money will be refunded. The replacement may not be new, but will be in good working order.

Extent of Warranty

The warranty does not cover the repair or exchange of a Machine resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused by a product for which IBM is not responsible. The warranty is voided by removal or alteration of Machine or parts identification labels.

THESE WARRANTIES ARE YOUR EXCLUSIVE WARRANTIES AND REPLACE ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESS OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

Items Not Covered by Warranty

IBM does not warrant uninterrupted or error-free operation of a Machine.

Unless IBM specifies otherwise, IBM provides non-IBM machines WITHOUT WARRANTIES OF ANY KIND.

Any technical or other support provided for a Machine under warranty, such as assistance via telephone with "how-to" questions and those regarding Machine set-up and installation, will be provided WITHOUT WARRANTIES OF ANY KIND.

Warranty Service

To obtain warranty service for the Machine, you should contact your reseller or call IBM. In the United States, call IBM at **1-800-IBM-SERV (426-7378)**. In Canada, call IBM at **1-800-465-6666**. You may be required to present proof of purchase.

IBM or your reseller provides certain types of repair and exchange services, either at your location or at a service center, to keep Machines in, or restore them to, conformance with their Specifications. IBM or your reseller will inform you of the available types of service for a Machine based on its country of installation. IBM may repair the failing Machine based on its country of installation. IBM may repair the failing Machine or exchange it at its discretion.

When warranty service involves the exchange of a Machine or part, the item IBM or your reseller replaces becomes its property and the replacement becomes yours. You represent that all removed items are genuine and unaltered. The replacement may not be new, but will be in good working order and at least functionally equivalent to the item replaced. The replacement assumes the warranty service status of the replaced item.

Any feature, conversion, or upgrade, IBM or your reseller services must be installed on a Machine which is 1) for certain Machines, the designated, serial-numbered Machine and 2) at an engineering-change level compatible with the feature, conversion, or upgrade. Many features, conversions, or upgrades involve the removal of parts and their return to IBM. A part that replaces a removed part will assume the warranty service status of the removed part.

Before IBM or your reseller exchanges a Machine or part, you agree to remove all features, parts, options, alterations, and attachments not under warranty service.

You also agree to:

1. ensure that the Machine is free of any legal obligations or restrictions that prevent its exchange.
2. obtain authorization from the owner to have IBM or your reseller service a Machine that you do not own; and
3. where applicable, before service is provided
 - a. follow the problem determination, problem analysis, and service request procedures that IBM or your reseller provides,
 - b. secure all programs, data, and funds contained in a Machine,
 - c. provide IBM or your reseller with sufficient, free, and safe access to your facilities to permit them to fulfill their obligations, and
 - d. inform IBM or your reseller of changes in a Machine's location.

IBM is responsible for loss of, or damage to, your Machine while it is 1) in IBM's possession or 2) in transit in those cases where IBM is responsible for the transportation charges.

Neither IBM nor your reseller is responsible for any of your confidential, proprietary or personal information contained in a Machine which you return to IBM or your reseller for any reason. You should remove all such information from the Machine prior to its return.

Production Status

Each IBM Machine is manufactured from new parts, or new and used parts. In some cases, the Machine may not be new and may have been previously installed. Regardless of the Machine's production status, IBM's appropriate warranty terms apply.

Limitation of Liability

Circumstances may arise where, because of a default on IBM's part or other liability, you are entitled to recover damages from IBM. In each such instance, regardless of the basis on which you are entitled to claim damages from IBM (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), IBM is liable for no more than:

1. damages for bodily injury (including death), and damage to real property and tangible personal property; and
2. the amount of any other actual direct damages, up to the greater of \$100,000 (or equivalent in local currency) or the charges (if recurring, 12 months' charges apply) for the Machine that is the subject of the claim.

This limit also applies to IBM's suppliers and your reseller. It is the maximum for which IBM, its suppliers, and your reseller are collectively responsible for.

UNDER NO CIRCUMSTANCES IS IBM LIABLE FOR ANY OF THE FOLLOWING: 1) THIRD-PARTY CLAIMS AGAINST YOU FOR LOSSES OR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); 2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR 3) ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS) OR INCIDENTAL DAMAGES, EVEN IF IBM, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Notices

Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, 500 Columbus Avenue, Thornwood, NY 10594, U.S.A.

Year 2000 Readiness and Instructions

A product is Year 2000 Ready if the product, when used in accordance with its associated documentation, is capable of correctly processing, providing and/or receiving date data within and between the 20th and 21st centuries, provided all other products (for example, software, hardware, and firmware) used with the product properly exchange date data with it.

This IBM PC hardware product has been designed to process four-digit date information correctly within and between the 20th and 21st centuries. If your IBM computer is on when the century changes, you should turn it off and then back on again once, or restart the operating system, to ensure that the internal clock resets itself for the new century.

This IBM PC product cannot prevent errors that might occur if software you use or exchange data with is not ready for the Year 2000. IBM software that comes with this product is Year 2000 Ready. However, software from other companies might come with this IBM PC product. Although IBM cannot take responsibility for the readiness of that software, these companies have stated that it is ready.

Notices

You should contact the software developers directly if you wish to verify readiness, understand limitations, or look for any software updates.

To learn more about IBM PC products and the Year 2000, visit our Web site at <http://www.pc.ibm.com/year2000>. The information and tools there can help you with your Year 2000 transition plan, especially if you have multiple IBM PCs. IBM encourages you to check periodically for updated information.

Trademarks

The following terms, in this publication, are trademarks of the IBM Corporation in the United States or other countries or both:

IBM
PS/2
ThinkPad
TrackPoint IV

Microsoft, Windows, Windows NT, and the Windows 95 flag logo are trademarks or registered trademarks of Microsoft Corporation.

Pentium®, Celeron™ and MMX™ are trademarks or registered trademarks of Intel Corporation in the U.S. and other countries.

Other company, product, and service names, which may be denoted by a double asterisk (**), may be trademarks or service marks of others.

Macrovision Copyright Protection Statement

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Electronic Emission Notices

Federal Communications Commission (FCC) Statement ThinkPad i Series 1400/1500

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM authorized dealer or service representative for help.


Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment.

Unauthorized changes or modifications could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party:

Notices

International Business Machines Corporation
New Orchard Road
Armonk, NY 10504
Telephone 1-919-543-2193

 Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

Canadian Department of Communications Compliance Statement

This equipment does not exceed Class B limits per radio noise emissions for digital apparatus, set out in the Radio Interference Regulation of the Canadian Department of Communications.

Avis de conformité aux normes du ministère des Communications du Canada

Cet équipement ne dépasse pas les limites de Classe B d'émission de bruits radioélectriques pour les appareils numériques, telles que prescrites par le Règlement sur le brouillage radioélectrique établi par le ministère des Communications du Canada.

European Community Directive Conformance Statement

This product is in conformity with the protection requirements of EC Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

A declaration of Conformity with the requirements of the Directive has been signed by IBM United Kingdom Limited, PO BOX 30 Spango Valley Greenock Scotland PA160AH.

This product satisfies the Class B limits of EN 55022.

Telecommunication Notice

Federal Communications Communication (FCC) and Telephone Company Requirements (Part 68 of the FCC Rules)

1. The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains in a margin at the top or bottom

Notices

of each transmitted page or on the first page of the transmission, the date and time it is sent, and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. In order to program this information into your computer, you should be sure to follow the installation instructions for your fax software package.

2. The built-in modem is built into the ThinkPad computer. It complies with Part 68 of the FCC Rules. A label is affixed to the bottom of the computer that contains, among other things, the FCC registration number, USOC, and Ringer Equivalency Number (REN) for this equipment. If these numbers are requested, look at the label and provide this information to your telephone company.
3. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have those devices ring when your number is called. IN most, but not all, areas, the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices you may connect to you line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.
4. If the built-in modem causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But, if advance notice isn't practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
5. Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
6. If you experience trouble with this built-in modem, contact your IBM Authorized Seller, or the IBM Corporation, 500 Columbus Avenue, Thornwood, NY 10594, 1-800-772-2227, for repair/warranty information. The telephone company may ask you to disconnect this equipment from the network until the problem has been corrected, or until you are sure the equipment is not malfunctioning.

Notices

7. No customer repairs are possible to the modem. If you experience trouble with this equipment, contact your Authorized Seller or the IBM Corporation for information.
8. The modem may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state public utility commission or corporation commission for information.
9. When ordering network interface (NI) service from the Local Exchange Carrier, specify service arrangement USOC RJ11C.

Fax Branding

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

In order to program this information into your fax machine, follow the setup instructions for **RingCentral****.

Notice for Australia

The following notice applies when using the telephony functions:

FOR SAFETY REASONS, ONLY CONNECT AUSTEL PERMITTED OR CERTIFIED EQUIPMENT.

Industry Canada Requirements

Notice

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications networks protective, operational, and safety requirement. The Depart-

Notices

ment does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of communication. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The **Ringer Equivalent Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Number of all the devices does not exceed 5.

Avis

L'étiquette du ministère de l'Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des

Notices

réseaux de télécommunications. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel à ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêchent pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunication ne permettent pas que l'on raccorde leur matériel à des jacks d'abonné, sauf dans les cas précis prévus par les tarifs particuliers de ces entreprises.

Les réparations de matériel homologué doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement

L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif terminal indique, pour éviter toute surcharge, le pourcentage de la charge totale qui peut être raccordée à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 5.

Notices

Regions where ThinkPad i Series 1400/1500 has ThinkPad Modem Integrated

Your ThinkPad i Series 1400/1500 computer does not include a modem if it was not purchased within one of the following regions:

- Australia
- Austria
- Belgium
- Canada
- Denmark
- Finland
- France
- Germany
- Hong Kong
- Ireland (tone only, no pulse dialing)
- Italy
- Latin America
- Netherlands
- New Zealand
- Norway
- Portugal (tone only, no pulse dialing)
- Singapore
- Sweden
- Switzerland
- UK
- US

Notice to European Users of the IBM ThinkPad Modem

This equipment has been approved to Council Decision 98/ 482/EC - "CTR 21" for pan-European single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN termination point. In the event of problems, you should contact your equipment supplier in the first instance.

Warning Notice to New Zealand Users of the IBM ThinkPad Modem

- The grant of a Telepermit for a device in no way indicates Telecom acceptance of responsibility for the correct operation of that device under all operating conditions.

In particular the higher speeds at which this modem is capable of operating depend on a specific network implementation which is only one of many ways of delivering high quality voice telephony to customers. Failure to operate should not be reported as a fault to Telecom.

In addition to satisfactory line conditions a modem can only work properly if:

1. it is compatible with the modem at the other end of the call and
 2. the application using the modem is compatible with the application at the other end of the call - e.g. accessing the Internet requires suitable software in addition to a modem.
- Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PC) associated with this device. The associated equipment shall be set to operate within the following limits for compliance with Telecom's Specifications:
 1. There shall be no more than 10 call attempts to the same number within any 30 minute period for any single manual call initiation.
 2. The equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next attempt.
 3. Where automatic calls are made to different numbers, the equipment shall go on-hook for a period of not less than 5 seconds between the end of one attempt and the beginning of the next attempt.
 4. The equipment shall be set to ensure that calls are answered between 3 and 30 seconds of receipt of ringing (S0 set between 2 and 10). This ensures:

Notices

- a. a person calling your modem will hear a short burst of ringing before the modem answers. This confirms that the call has been successfully switched through the network.
 - b. caller identification information (which occurs between the first and second ring cadences) is not destroyed.
- The preferred method of dialling is to use DTMF tones (ATDT...) as this is faster and more reliable than pulse (decadic) dialling. If for some reason you must use decadic dialling, your communications program must be set up to record numbers using the following translation table as this modem does not implement the New Zealand "Reverse Dialling" standard.

Number to be dialled:	0	1	2	3	4	5	6	7	8	9
Number to program into computer:	0	9	8	7	6	5	4	3	2	1

Note that where DTMF dialling is used, the numbers should be entered normally.

NOTE THAT FAULT CALLOUTS CAUSED BY ANY OF THE ABOVE CAUSES MAY INCUR A CHARGE FROM TELECOM.

Index

A

- attaching 71
- audio CD control panel, location 4
- audio problems 103

B

- battery life, extending 47
- battery pack
 - latch location 7
 - location 4
 - maximizing the battery life 87
 - replacing 43
- battery problems 100
- battery status 9
 - location 8
- BIOS Utility 24
 - Basic System Settings menu 27
 - Load Default Settings menu 30
 - Onboard Devices Configuration menu 29
 - starting 25
 - Startup Configuration menu 27
 - System Security menu 30
- built-in microphone, location 4

C

- caps lock lamp 9
- care and maintenance 44
- carrying the computer 46
- CD-ROM
 - inserting 17
 - problems 101
 - removing 18
- CD-ROM drive 3, 17
 - using 17
- CD-ROM eject button, location 3
- CD-ROM eject hole, location 3

- changing the startup sequence 27
- cleaning the computer 46

D

- diskette drive, location 6
- diskette standards 127
- display 126
 - changing output location 64
 - modes 66
- drive-in-use lamp 9
- DVD-ROM
 - inserting 17
 - problems 101
 - removing 18
- DVD-ROM drive 3, 17
 - using 17
- DVD-ROM eject button, location 3
- DVD-ROM eject hole, location 3

E

- Easy Launch buttons
 - location 4
- EasyServ 120
- enhanced PC support line 121
- error codes 92
- error messages 92
- external keyboard
 - attaching 59
- external keypad
 - attaching 59
- external monitor
 - attaching 63
 - location 5
 - problems 107
 - setting 85
- external mouse
 - attaching 59
- external-input-device connector

external-input-device connector (*continued*)
location 5

F

facsimile assistance 118
FAQ 84
features 126
Fn key
location 4
Fn key functions 13
Frequently Asked Questions 84

G

getting service 118

H

handling the computer 44
hard disk password 76
hardware specifications 128
headphone jack, location 6
hibernation mode
problems 97
hints 89
hot keys 13

I

identification numbers 116
indicator location 3
information
where to get 48
input problems 95
installing 72
International Warranty Service 120

K

key combinations 13
Keyboard Light
location 3
Keyboard Light switch
location 3

keyboard, specifications 126

L

LCD
display modes 66
latch location 3
problems 99
switching output location 64
limitations 89
line-in jack, location 6
list of options 116
location 3
lock 82

M

magnifying glass 53
mechanical lock 82
Media Center power button, location 4
Media Center status, location 4
memory 55
calculating 57
installing 55
removing 57
size 57
slot location 7
specifications 126
microphone-in jack, location 6
microphone, location 4
modem problems 104
modem, location 5

N

next track/chapter button, location 4
Notebook Manager program 31
notices and warranties
product 133
numeric keypad, using 15
numeric lock lamp 9

O

online support services 118
online user's guide 41

options
memory, increase 55

P

parallel port
location 5
password
changing 80
entering 79
removing 80
setting 77
types 76
using 76
PC Card 72, 73
problems 105
PC Card eject button, location 5
PC Card slot, location 5
PC-Doctor, using 112
play/pause button, location 4
power cords 130
power jack, location 5
Power Management Properties 14
power meter 14
power switch
location 4
power-on lamp 9
power-on password 76
press-to-select 51
previous track/chapter button, location 4
printer 71
printer problems 106
problems, recording 117
PS/2 mouse and keyboard connector
location 5

R

Recovery CD, using 113
reinstalling software 42
removing 73
repair services 116, 118
ruggedized mobile computers 47

S

S-video output
location 5
safety notice viii
scroll lock lamp 9
scrolling 53
security
mechanical lock 82
passwords 76
security keyhole, location 5
sensitivity 52
serial connector, location 5
service
how to get 118
setup password 76
size, machine specifications 128
Sleep Manager program 35
software problems 110
speakers, location 3
specifications 126, 128
battery pack 128
environment 128
heat output 128
input voltage 128
power cords 130
size 128
temperature 128
standards, diskettes 127
standby lamp 9
standby status, location 8
startup sequence, changing 27
status indicators 8
status indicators, location 3
stop/eject button, location 4

T

technical support 118
web 118
telephone assistance 119
temperature, machine
specifications 128
ThinkPad Software Selections CD,
using 112
tilt feet, location 7

- tips 89
- TrackPoint 10
 - changing cap 12
 - customizing 50
 - disabling 62
 - location 4
 - magnifying glass 53
 - press-to-select 51
 - scrolling 53
 - sensitivity 52
 - tips on using 11
 - using 10
- TrackPoint, setting 85
- troubleshooting
 - audio problems 103
 - battery problems 100
 - CD-ROM problems 101
 - charts 91
 - DVD-ROM problems 101
 - error codes 92
 - error messages 92
 - external monitor problems 107
 - guide 90
 - hibernation problems 97
 - indicator problems 100
 - input problems 95
 - LCD problems 99
 - LED problems 100
 - modem problems 104
 - no error codes 94
 - no error messages 94
 - option problems 109
 - other problems 111
 - PC Card problems 105
 - printer problems 106
 - software problems 110
 - standby problems 97
 - USB problems 103

U

- USB
 - location 5
 - problems 103

V

- volume control, location 4

W

- warranty
 - extensions and upgrades 122
 - product 133
 - service, international 120
- Web site 42